

DW *spectrum*[®] PROFESSIONAL



Built
for
Users.™

User Manual

DW • DIGITAL
WATCHDOG[®]
Complete Surveillance Solutions

Part 1: Working with DW Spectrum.....	12
Section 1.1 – DW Spectrum Site.....	12
Section 1.2 – DW Spectrum Users.....	13
Section 1.3 – DW Spectrum Server(s).....	14
Section 1.4 – DW Spectrum Client.....	14
Section 1.5 – DW Cloud	15
Part 2: Opening and Closing DW Spectrum Clients	17
Section 2.1 – Launching DW Spectrum Desktop Client	17
Section 2.2 – Launching in Configuration Mode.....	17
Section 2.3 – Automatic Session Timeouts.....	18
Section 2.4 – Launching from Command Line Interface.....	18
Section 2.5 – Retained Settings	18
Part 3: Connecting to a Site	18
Section 3.1 – Connecting to a Known Server.....	19
Section 3.2 – Connecting After Logging into DW Cloud	19
Section 3.3 – Connecting to Site from the Welcome Screen.....	20
Section 3.4 – Display Modes.....	21
Section 3.5 – Edit, Hide, or Favorite a Site Connection	21
Section 3.6 – Working Offline.....	21
Section 3.7 – Connecting as a Temporary User	22
Section 3.8 – Connecting to a Specific Server	23
Section 3.9 – Logging into DW Cloud.....	24
Section 3.10 – Opening the DW Spectrum Web Admin	25
Section 3.11 – Connecting to DW Spectrum via Mobile Client	25
Part 4: Server Certificate Validation.....	26
Section 4.1 – How to Change the Certificate's Validation Level	27
Section 4.2 – How to Check the Certificate's Details.....	27
Section 4.3 – How to Renew the Expired Certificate	28
Part 5: Initial Site Configuration.....	28
Section 5.1 – Setup a New Site or Add Server to an Existing Site.....	28
Section 5.2 – Configuring Storage, Devices, and Recording	29
Section 5.3 – Creating User Groups and Layouts	29
Section 5.4 – Site ID.....	29
Part 6: Updating DW Spectrum.....	30
Section 6.1 – To Configure Update Settings	30
Section 6.2 – Advanced Settings	30

Section 6.3 – Update to a Specific Version	31
Section 6.4 – Update Status Indicators.....	31
Section 6.5 – Online Update.....	31
Section 6.5 – Offline Update to the Latest Available Version.....	31
Section 6.6 – Offline Update to a Specific Build	31
Part 7: DW Spectrum User Interface	32
Section 7.1 – Viewing Grid for Layouts.....	32
Section 7.2 – Sliding Panels	33
Section 7.3 – Tooltips and Context-sensitive Help	33
Section 7.4 – Keyboard Shortcuts.....	33
Section 7.5 - Main Menu	33
Section 7.6 - Customizing Look and Feel	34
Section 7.8 - Searching and Filtering	35
Section 7.9 - Navigation Panel	36
Section 7.10 - Resource Panel	37
Section 7.11 - Playback Panel	39
Section 7.12 - Notification Panel	40
Section 7.13 - Notifications Tab.....	43
Section 7.14 - Motion Tab	44
Section 7.15 - Bookmarks Tab	46
Section 7.16 - Events Tab	47
Section 7.17 - Objects Tab	48
Section 7.18 - Working with Multiple Windows.....	50
Section 7.19 - Keyboard Shortcuts	51
Section 7.20 - Getting Context Help	53
Section 7.21 - DW Cloud Portal Interface	53
Section 7.22 - Setting Up 2 Factor Authentication	53
Section 7.23 - DW Spectrum Web Admin Interface	54
Part 8: Site Configurations (Site Administration)	54
Section 8.1 - Connecting to or Disconnecting Site from DW Cloud.....	55
Section 8.2 - Connect a Site to DW Cloud.....	55
Section 8.3 - Disconnect a Site from DW Cloud	55
Section 8.4 - Connecting or Disconnecting a Site to an Organization.....	56
Section 8.5 - Transferring Cloud Connected Sites to an Organization	56
Section 8.6 - Connect a Local Site to an Organization	57
Section 8.7 - Disconnect a Site from the Organization	57

Part 9: Services and Licenses	57
Section 9.1 - Subscription Service Model	57
Section 9.2 - License Model.....	58
Section 9.3 - DW Spectrum Services.....	58
Section 9.4 - DW Spectrum Licenses	59
Section 9.5 - Licenses and Hardware ID	59
Section 9.6 - Obtaining and Activating Licenses.....	60
Section 9.7 - Activate a License over the Internet.....	60
Section 9.8 - Activate a License (Trial or Commercial) Offline.....	60
Section 9.9 - Export a List of License Keys	61
Section 9.10 - Insufficient Licenses Available	61
Section 9.11 - Expired and Invalid License Keys.....	61
Section 9.12 - Deactivate a License	61
Section 9.13 - Remove a License	61
Part 10: Configuring Secure Connections	62
Section 10.1 - Obtaining and Installing an Authorized Certificate	62
Section 10.2 - Connecting to Cameras over HTTPS Only.....	63
Section 10.3 - Forcing Secure Connections.....	63
Section 10.4 - Enabling Encrypted Video Traffic.....	64
Section 10.5 - Enabling Archive Encryption	64
Part 11: Configuring the Email Server	65
Part 12: Configuring Server Settings	66
Section 12.1 - Background: Archive Distribution and Retention	67
Section 12.2 - Background: Archive Indexing	70
Section 12.3 – Background: Archive Backup	71
Section 12.4 – Configuring Server and NAS Storage.....	72
Section 12.5 – Configuring Backup and Redundant Storage	75
Section 12.6 – Configuring Analytics Storage	76
Section 12.7 – Reindexing and Fast-Scanning Archives	77
Section 12.8 – Analyzing and Predicting Storage Usage	78
Section 12.9 – Monitoring Servers	80
Section 12.10 – Using a Server's Web Interface.....	81
Section 12.11 – Session and Digest Authentication.....	82
Part 13: Configuring Multi-Server Environment	82
Section 13.1 – Moving One Server to a Different Site.....	83
Section 13.2 – Merging Sites	83

Section 13.3 – Backing up and Restoring the Site Database	85
Section 13.4 – Deleting a Server.....	86
Section 13.5 – Detaching a Server	86
Section 13.6 – Configuring Failover	86
Section 13.7 – Configuring Routing in a Multi-Server Environment.....	87
Section 13.8 – Time Synchronization in a Multi-Server Environment	88
Part 14: Device Management	89
Section 14.1 – Viewing Full Device List.....	90
Section 14.2 – Adding Devices.....	91
Section 14.3 – Automatic Device Discovery	91
Section 14.4 – Adding Devices Manually.....	92
Section 14.5 – Adding RTSP, HTTP, or Multicast Streams as Cameras	93
Section 14.6 – Adding a Webcam or Raspberry Pi Camera	93
Section 14.7 – Replacing a Camera	94
Section 14.8 – Diagnosing Offline Devices.....	95
Section 14.9 – Using Joysticks	96
Section 14.10 – Moving a Device to a Different Server.....	97
Section 14.11 – Deleting a Device	98
Section 14.12 – Setting Up Cameras and Devices	98
Section 14.13 – Obtaining Basic Device Information.....	99
Section 14.14 – Device Authentication.....	99
Section 14.15 – Renaming a Device.....	100
Section 14.16 – Camera Rotation	100
Section 14.17 – Setting Camera Aspect Ratio.....	100
Section 14.18 – Applying Parameters to Multiple Devices.....	101
Section 14.19 – Hotspots.....	101
Section 14.20 – Image Controls	104
Section 14.21 – Image Enhancement	106
Section 14.22 – Dewarping Controls	107
Section 14.23 – Viewing a Dewarped Camera.....	108
Section 14.24 – Pan, Tilt, and Zoom (PTZ) Controls.....	109
Section 14.25 – Saving and Restoring PTZ Positions.....	112
Section 14.25 – Setting Up PTZ Tours.....	113
Section 14.26 – Configuring Audio on a Device.....	115
Section 14.27 – Setting Up a Virtual Camera.....	115
Section 14.28 – Setting Up an I/O Module	117

Section 14.29 – Setting Up an Analog Camera	119
Section 14.30 – Setting Up Motion Detection	119
Part 15: Recording	120
Section 15.1 – Recording Indicators in the Resource Panel.....	121
Section 15.2 – Setting a Recording Schedule.....	121
Section 15.3 – Recording Modes	123
Section 15.4 – Configuring Minimum and Maximum Archive Storage.....	124
Section 15.5 – Copying a Recording Schedule	125
Part 16: Advanced Device Settings	125
Section 16.1 – Configuring Advanced Device Settings Using DW Spectrum Client	126
Section 16.2 – Configuring Device Using Web Page	126
Section 16.3 – Updating Camera's Firmware	127
Section 16.4 – Resetting or Rebooting a Camera	127
Part 17: Expert Device Settings.....	127
Section 17.1 – Configuring Expert Streaming Settings	128
Section 17.2 – Background: Dual Stream Processing	128
Section 17.3 – Preventing DW Spectrum from Changing Device Settings.....	130
Section 17.4 – Configuring ONVIF Profiles.....	131
Section 17.5 – Tuning up Camera Streaming.....	132
Section 17.6 – Adjusting Average Bitrate	132
Section 17.7 – Forcing Motion Detection to a Specific Stream	132
Section 17.8 – Disabling Recording of a Specific Stream.....	133
Section 17.9 – Disabling a Secondary Stream.....	133
Section 17.10 – Time Synchronization between Servers and Cameras.....	133
Section 17.11 – Assigning Logical ID.....	134
Section 17.12 – Adjusting PTZ Speed	134
Section 17.13 – Selecting PTZ Presets	134
Part 18: Plugins and Analytics	135
Section 18.1 – Analytics: Region of Interest (ROI)	137
Section 18.2 – Digital Watchdog Analytics	137
Part 19: Health Monitoring Metrics	137
Section 19.1 – Alerts.....	138
Section 19.2 – Site Metrics	138
Section 19.3 – Server Metrics.....	138
Section 19.4 – Camera Metrics.....	139
Section 19.5 – Storage Metrics.....	140

Section 19.6 – Network Metrics	141
Part 20: Event Rules	141
Section 20.1 – Supported Events and Actions	142
Section 20.2 – Using the Event Rules List	143
Section 20.3 – Using the Event Rules Form	144
Section 20.4 – Selection Lists in Event Rules	146
Section 20.5 – Event Scheduling.....	148
Section 20.6 – Global Notifications	149
Section 20.7 – Viewing and Exporting the Event Log	150
Section 20.8 – Event Field Placeholders	152
Part 21: Tracked Events.....	153
Section 21.1 – Analytics Event.....	154
Section 21.2 – Analytics Object Detected.....	155
Section 21.3 – Archive Integrity Check Failure (Site)	155
Section 21.4 – Devices Disconnected (default)	156
Section 21.5 – Devices IP Conflict (default)	156
Section 21.6 – Email Address Not Set (Site)	157
Section 21.7 – Email Not Set for Users (Site).....	157
Section 21.8 – Email Server Not Configured (Site)	157
Section 21.9 – Error While Sending Email (Site).....	157
Section 21.10 – Generic Event (default)	158
Section 21.11 – Input Signal on Device	159
Section 21.12 – LDAP Sync Issue (Site)	160
Section 21.13 – Licenses Not Configured (Site).....	160
Section 21.14 – License Issue (default).....	160
Section 21.15 – Local storage is used for analytic and motion data (Site)	161
Section 21.16 – Motion on Camera	161
Section 21.17 – Network Issue (default)	162
Section 21.18 – Plugin Diagnostic Event.....	162
Section 21.19 – ReIndexing Archive Canceled (Site)	162
Section 21.20 – ReIndexing Archive Complete (Site)	163
Section 21.21 – Remote Archive Synchronization (Site)	163
Section 21.22 – Server Certificate Error (Site)	163
Section 21.23 – Server Conflict (default)	163
Section 21.23 – Server Failure (default)	164
Section 21.24 – Server Started (default)	164

Section 21.24 – Soft Trigger.....	164
Section 21.25 – Storage Issue (default)	165
Section 21.26 – Storage Not Configured (Site).....	166
Section 21.27 – Site in Safe Mode (Site).....	166
Section 21.28 – Time Synchronization Issue (Site)	166
Part 22: Available Actions	167
Section 22.1 – Bookmark.....	167
Section 22.2 – Device Output.....	168
Section 22.3 – Device Recording	168
Section 22.4 – Do HTTP(s) Request	170
Section 22.5 – Execute PTZ Preset.....	171
Section 22.6 – Exit Fullscreen	171
Section 22.7 – Open Layout.....	172
Section 22.8 – Panic Recording	172
Section 22.9 – Play Sound.....	172
Section 22.10 – Repeat Sound.....	173
Section 22.11 – Send Email	175
Section 22.12 – Send Mobile Notification	176
Section 22.13 – Set to Fullscreen.....	176
Section 22.14 – Show Desktop Notification	177
Section 22.15 – Show on Alarm Layout.....	177
Section 22.16 – Show Text Overlay	178
Section 22.17 – Speak.....	179
Section 22.18 – Write to Log	180
Part 23: Users and Groups.....	180
Section 23.1 – Managing Users	181
Section 23.2 – Configuring Users.....	182
Section 23.3 – Adding Users	182
Section 23.4 – Configuring Users.....	183
Section 23.5 – Managing Temporary User Access.....	184
Section 23.6 – Enabling and Disabling Users	185
Section 23.7 – Deleting and Removing Users	186
Section 23.8 – Managing Groups.....	187
Section 23.9 – Built-In Groups and Permissions.....	188
Section 23.10 – Creating a Group.....	190
Section 23.11 – Configuring Groups	190

Section 23.12 – Groups Memberships Inheritance Example.....	191
Section 23.13 – Deleting a Group.....	192
Section 23.14 – Permissions Management	192
Section 23.15 – LDAP Users and Groups	195
Section 23.16 – Audit Trail of User Actions	198
Part 24: Layout Management	199
Section 24.1 – Viewing Grid.....	200
Section 24.2 – Layout Tab Controls	201
Section 24.3 – Creating and Sharing Layouts	202
Section 24.4 – Configuring Layouts	202
Section 24.5 – Set Aspect Ratio and Spacing.....	203
Section 24.5 – Selecting Items in Layout.....	203
Section 24.6 – Adding Items to Layout.....	205
Section 24.7 – Removing Items from Layout.....	206
Section 24.8 – Layout Background Images (E-Mapping)	207
Section 24.9 – Resizing Items	208
Section 24.10 – Expanding Items to Fullscreen Mode.....	209
Section 24.11 – Zooming an Item or Layout.....	209
Section 24.12 – Rotating an Item	209
Section 24.13 – Creating a Zoom Window	210
Section 24.14 – Saving and Locking Layouts.....	211
Section 24.15 – Deleting Layouts	211
Section 24.16 – Video Wall Mode	212
Section 24.17 – Configuring a Video Wall Display	213
Section 24.18 – Switching to Video Wall Mode.....	215
Section 24.19 – Configuring Video Wall on Several Computers	216
Section 24.20 – Deleting a Video Wall or Elements	216
Section 24.21 – Controlling Video Wall Displays	216
Section 24.22 – Pushing the Operator's Screen on a Video Wall	217
Section 24.23 – Managing Web Pages and Integrations	217
Part 25: Playback in DW Spectrum	218
Section 25.1 – Setting Item Resolution	219
Section 25.2 – Setting Layout Resolution	219
Section 25.3 – Configuring Live Buffer Size	220
Section 25.4 – Double Buffering.....	220
Section 25.5 – Disabling Blur for Intel HD Graphics.....	220

Section 25.6 – Hardware Video Decoding	220
Section 25.7 – Navigating and Searching Video	220
Section 25.8 – Parts of the Timeline	221
Section 25.9 – Using the Timeline	222
Section 25.10 – Using Thumbnails	224
Section 25.11 – Synchronizing Playback	225
Section 25.12 – Using the Calendar	225
Section 25.13 – Performing Motion Smart Search	226
Section 25.14 – Preview Search	227
Section 25.15 – Viewing Archive from Deleted Cameras	228
Section 25.16 – Using Bookmarks	228
Section 25.17 – Creating Bookmarks Manually	229
Section 25.18 – Searching Bookmarks	229
Section 25.19 – Exporting Bookmarks	230
Section 25.20 – Deleting Bookmarks	230
Section 25.21 – Playing Local Video Files	231
Section 25.22 – Timeline Navigation for Local Files	231
Section 25.23 – Configuring Local Media Folders	232
Section 25.24 – Exporting Video	232
Section 25.25 – Single Camera Export	233
Section 25.26 – Multi-Video Export	234
Section 25.27 – Password Protected Exports	235
Section 25.28 – Rapid Review Export	235
Section 25.29 – Viewing Exported Video	235
Section 25.30 – Adding a User Watermark	235
Section 25.31 – Validating Exports	236
Section 25.32 – Audio in DW Spectrum	237
Section 25.33 – Adjusting Volume	237
Section 25.34 – Using 2-Way Audio	237
Section 25.35 – Taking Screenshots	238
Section 25.36 – Tours	239
Section 25.37 – Showreels (Tour Cycle)	239
Part 26: Screen Recording	240
Section 26.1 – Setting Up Screen Recording	240
Section 26.2 – Performing Screen Recording	241
Part 27: Contacting Support	241

Section 27.1 – Collecting Basic Information 242

Section 27.2 – Collecting Logs 242

Section 27.3 – Providing Remote Access..... 244

Section 27.4 – Sending Anonymous Usage and Crash Statistics..... 244

Part 1: DW Spectrum Fundamentals

DW Spectrum has a unique Client-Server hive architecture that consists of software defined Media Servers that manage video data and device connections. Software client components are used to configure Media Servers, user settings, device settings, and operational settings of the video management system.

The following icons represent the DW Spectrum components that work together in a *Site*.

Icon	Name	Icon	Name	Icon	Name
	Site		User(s)		Server(s)
	Camera(s)		Client		DW Cloud


Section 1.1 – DW Spectrum Site


A “Site” can consist of a single, individual server or multiple merged servers. The term “Site” also includes all devices (IP cameras, I/O devices), streams (RTSP, HTTP, UDP), storage devices (HDDs, NAS, DAS, etc.), and client types (desktop, mobile, Web Admin, DW Cloud Portal) belonging to connected servers.

Multiple servers can be tied together as a Site – for example, when there are several locations with cameras, or if the total number of cameras is too large to process with just one computer, it can serve to merge the individual servers into a single collective and improve Site stability and user convenience.

- The maximum recommended number of servers per Site is 10 servers with 256 video streams per server.
- The maximum recommended number of supported users per Site is no more than 2,000 concurrent TCP client connections at a time (varies by hosting network capabilities).
- Sites can be connected as an Organization (See *Connecting Site to Organization*) to expand its overall size. Performance will vary depending on specific environmental factors and equipment use.

NOTE: It may be possible to configure lower streaming limits or to deploy a reduced feature set to meet operational objectives.

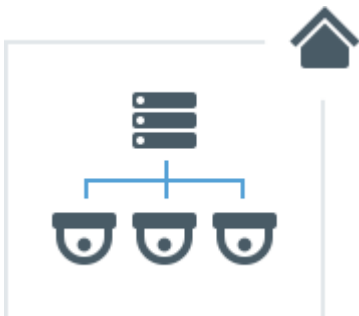Diagram of the Site	Description
	A Site can have just one (1) server by itself with no devices (cameras, I/O, etc.) connected.
	A Site can have just one (1) server with one or more devices connected. Typical configurations with small quantities of cameras and devices are supported by single server.

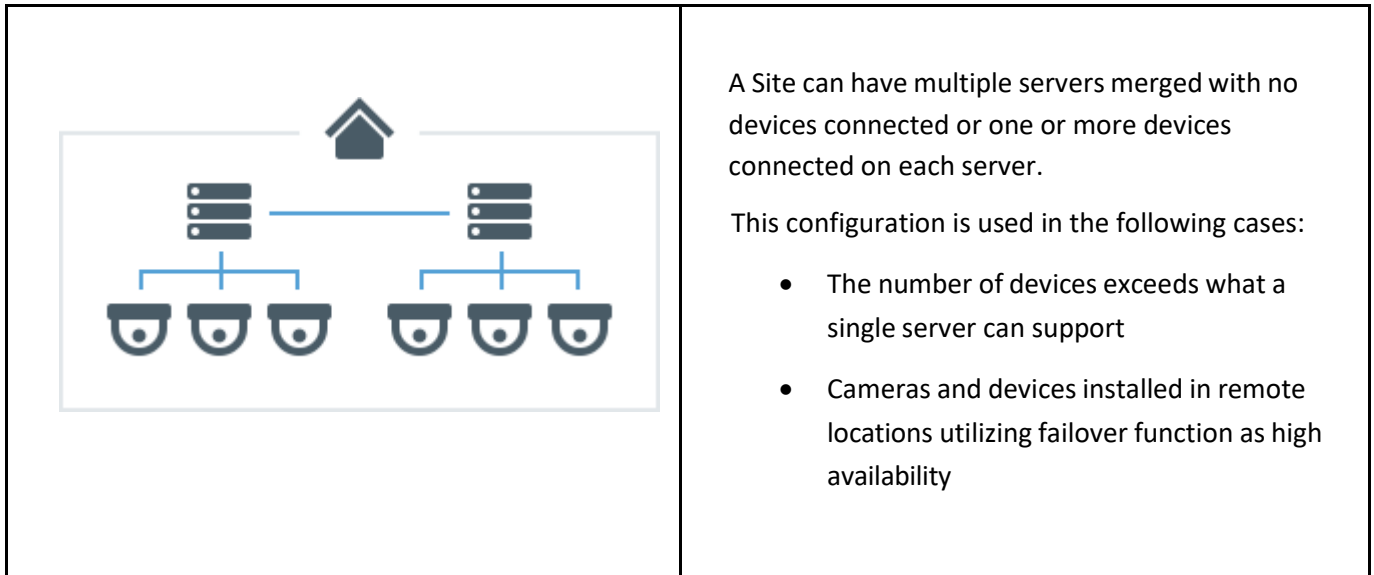

If there is only one server, there is little difference between the server and the Site, and they can be considered equivalent. However, with more servers merged in a Site the differences will become significant.

All servers in a Site are equal and share information about all Cameras, Users, and settings in the Site.

Video Archives (stored video recordings) are not shared equally across all servers, as all recorded video is stored locally, only on the server connected to the video source (camera).

If you replace one server in the Site with a new one (e.g., for an update or repair), all Site settings will be retained – but the video Archives that were recorded on the old server's storage drives will not be automatically transferred or copied to the replacement server.

Section 1.2 – DW Spectrum User(s)


Every Site contains a *User Database* that associates identity information (name, email, user type) with specific *Permissions*. Each user is created or added to the Site with a particular user type (Cloud, Local, LDAP, or Temporary) that cannot be changed once set. User profiles must be deleted and recreated to change the user type.

User Management can be done at the user level or by placing users into groups with configurable permissions and notification settings. Like the user type, the group type (built-in, custom, LDAP) defines how the group can be configured and the user types that can be members of the group. Groups can be nested to inherit permissions.

The *Site Administrator* (previously dubbed as “*Owner*” account) is defined during Site setup. This admin user has full control over the Site and all other users. They have super-admin rights and are the only user role that can create subsequent *Administrator* users. There can be only two Site Administrator (super-admin) accounts on any Site; one is a *Local User*, and the other is an optional *Cloud User* (available for DW Cloud connected Sites).

Administrators can add or create subsequent *Power Users* that can perform limited Site and user management tasks. All other users are viewers with a configurable set of permissions to view cameras, manage bookmarks, export from the Archive, interact with Sites and monitor Site health indicators. Users can change camera settings if granted the “*Edit Settings*” permission (see [Permissions Management](#)).

Cloud Users are unique as their core attributes (email and password) are stored in the *DW Cloud*. Cloud Users are granted access to or removed from Sites where the other user types are added to or deleted from a Site. Removing a Cloud User from a Site does not delete the Cloud User, however deleting a non-Cloud User from a Site completely removes the user and their [Audit Trail of User Actions](#).

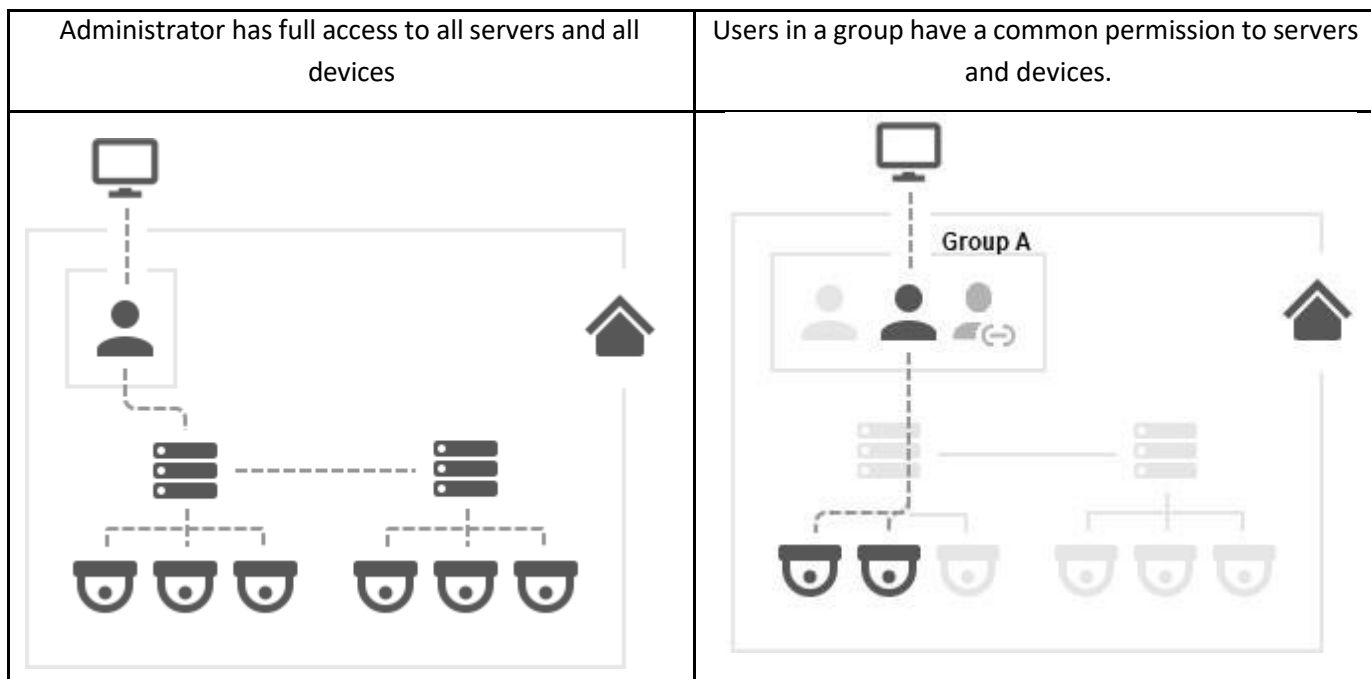

The use of the term "user" in this manual can mean the same thing as "account" or it can refer to a physical person. A physical person can have multiple accounts, and many physical people can share an account. For example, a person has different accounts to access different Sites or multiple people can share a single admin user account. However, it is recommended that each user have their own personal account as sharing a single account may pose cybersecurity risks.

See "[Users and Groups](#)" for details.

NOTE: The maximum recommended number of users per Site is 1,000.

Section 1.3 – DW Spectrum Server(s)

The use of the term "Server" in this manual can refer to either the server application (called the "*Media Server*") or the computer on which the media server application is installed.

NOTE: The maximum recommended number of video sources per server is 256.


Servers Can:

1. Receive video streams from cameras
2. Manage camera settings
3. Record video from cameras to internal or external storage
4. Process and analyze video – for example, detect motion
5. Manage user Database and access levels
6. Track certain events and react to them
7. Work with different hardware devices – for example, NVRs, I/O modules, or door locks

Section 1.4 – DW Spectrum Client

The use of the term "Client" in this manual refers to the DW Spectrum Client desktop application or the Web Admin Portal that can be used to connect to servers and show live or recorded video from cameras in the DW Spectrum Site. Clients are used to manage the site, server, and camera settings. A client can be used to connect to different sites but may only view one at a time. Multiple client instances can be connected simultaneously to one server at any time. If the client is connected to a single server in the Site, it has access to the entire Site through this server including all other merged servers and their

cameras, Site settings, and camera settings.

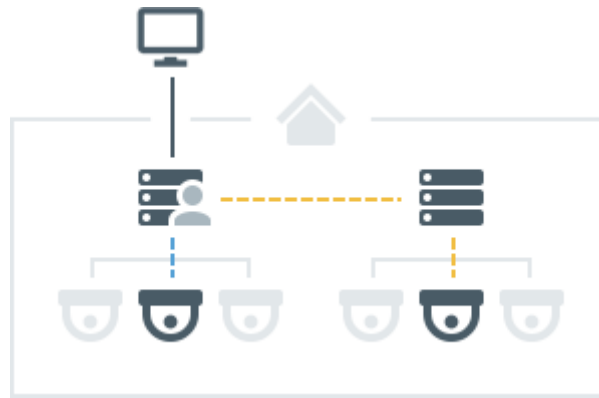

Common Client Application Types for Site Access and Management

- [DW Spectrum Desktop Client](#) – The desktop client application and recommended for most user interactions. Available on Windows, MacOS and Ubuntu Linux.
 - Connect to any server
 - View live streams
 - Playback recorded video and local video files
 - Playback up to 64 videos simultaneously
 - Advanced camera controls – PTZ, 2-way-audio, I/O ports, etc.
 - Built-in web browser
 - Manage users, cameras, Site, and server settings
 - View event logs and user behavior logs
- [DW Spectrum Mobile Client](#) – The mobile application available for smartphone and tablet access. Available on Android and iOS.
 - Connect to any server
 - View live streams
 - Play back recorded videos
 - Camera controls – PTZ, 2-way-audio
 - Smart Search
 - Push Notifications
- [DW Spectrum Server Web Admin](#) – Also called "Web Admin" or "Web Client". Can be opened in most modern web browsers to view the local Site.
 - Server specific
 - View live streams
 - Play back recorded videos
 - Access [Health Monitoring](#)
 - Manage users, cameras, Site, and server settings (see [Opening DW Spectrum Web Admin](#) for details)
- [DW Spectrum Cloud Admin](#) – Similar to the Web Admin interface, but with the extension of being able to view all and any Site that has been connected to the same DW Cloud account.

Section 1.5 – DW Cloud Portal

An important part of DW Spectrum is the DW Cloud platform. It is a cloud-connection service that is hosted on the Internet and that extends the functionality of DW Spectrum Sites.

DW Cloud Benefits

- Log in to multiple Sites with a single Cloud account.

- Connect to servers through the Internet without an external IP address.
- Add users to Sites via an email invite.

To access DW Cloud features, a Site must be connected to a DW Cloud account – which will convert it from a “*Local Site*” into a “*Cloud Site*”. Refer to the [Logging in to DW Cloud](#) section below to learn how to make a new DW Cloud account.

DW Cloud Account Benefits

- Log in to Cloud Sites easily with a single login.
- Log in to Cloud Sites from desktop and mobile clients.
- Log in to any Site affiliated with the same DW Cloud account.
- Connecting Sites to DW Cloud.
- Restore a password using your email address.

Users with DW Cloud accounts are also referred to as “Cloud Users.” Meanwhile, users with regular accounts or local accounts are referred to as “Local Users”.

Local accounts belong to the Site and cannot be moved elsewhere or used in service of separate Sites.

DW Cloud accounts are not limited to only one Site. Site Administrators cannot create a new account and add it to their Site, assign a user group, then grant permissions. All other parameters, such as the account name and password, are defined by the Cloud account Owner themselves.

In the diagram below, users 1–5 (grey) are Local User accounts – they exist only in the Site Databases and are managed by Site administrators. User 6 (blue) is a Cloud User – the account is the same for both Sites and is managed on the Cloud portal by the Cloud account owner. The Site Database has information about this account but cannot manage it.



Connecting a Site to a DW Cloud Account

To connect a Site to DW Cloud, log in to the Site using the Owner’s account

- Open the Main Menu and select the System Administration menu.
- Select the DW Cloud tab, then specify the Cloud account that the Site will be associated with. This account will also receive Site Administrator access permissions and be displayed in the interface as the Site owner.

After a Site is connected to DW Cloud, it has access to all Cloud features and can be disconnected from DW Cloud at any time. Upon being disconnected from DW Cloud, the Site will revert to a local Site again. The Cloud Owner and all other Cloud Users will be deleted, but other settings and video Archive will not be affected.

Benefits to Using the DW Cloud Portal

- DW Cloud accounts can be created in the DW Cloud Portal – a web service independent of any Site and available to everybody.
- In the DW Cloud Portal, you can see all Cloud Sites associated with a Cloud account, view video, and edit some of

the settings.

- Log in to all Sites associated with a Cloud account from the client welcome screen.

Part 2: Opening and Closing the DW Spectrum Client

Section 2.1 – Launching DW Spectrum Desktop Client

To open the latest desktop version of DW Spectrum Client or the DW Spectrum Mobile app, use the shortcut icon to launch the application.

Alternative Launch Methods

If an executable file is needed to open the client, locate the **applauncher** executable, which will launch the newest installed version of the desktop client.

Windows

- Open the **Windows Desktop** and double-click the **DW Spectrum shortcut icon**.
- Open the **Windows Start Menu > Programs > Digital Watchdog > DW Spectrum**
- Open from the **DW Spectrum installation folder**:
 - `C:\Program Files\Digital Watchdog\DW Spectrum\Client\<VERSION>\DW Spectrum Launcher.exe`) and open the **DW Spectrum executable file**.
- To automatically launch DW Spectrum when a computer starts up:
 - i. Open **Main Menu > Local Settings > General**.
 - ii. Check the **Run Application when PC boots up** checkbox.
 - iii. Click **Apply** to accept changes, **OK** to save changes and close the dialog, or **Cancel** to discard changes.

 **NOTE:** This option is only available on Windows.

Linux

- Click on DW Spectrum shortcut icon
- From the installation folder:
`/opt/digitalwatchdog/client/<VERSION>/bin/applauncher`

macOS

- Use the DW Spectrum shortcut icon located in Applications or Launchpad
- From the installation folder:
`/Applications/DW Spectrum.app/Contents/MacOS/applauncher`

 **IMPORTANT:** To display video and graphics properly, video drivers must be installed. If compatible video drivers are not installed, a warning will be displayed prompting an update to the driver installation. Windows based installations may be prompted with an option to use Microsoft Directx in place of the default rendering engine.

Section 2.2 – Launching in Configuration Mode

The DW Spectrum client detects PC Site configuration automatically. If the CPU and/or GPU are insufficient to render all graphics, the client will launch in *configuration mode*. This mode restricts functionality as follows to limit CPU load and graphics usage:

- Only one video can be viewed at a time
- Notifications are disabled in the client

- Movement of interface elements is disabled

To Close DW Spectrum Desktop Client

- Click on the "X" button in the top corner of the application window.
- Go to **Main Menu > Exit**.

Section 2.3 – Automatic Session Timeouts

The desktop client and Web Admin page can be set to automatically close a user session after a specified amount of time. All Site user sessions will close automatically after the specified amount of time regardless of activity level or interaction status within the application. Re-authentication will be required at log in.

Desktop Client

1. Open Main Menu > Site Administration > Security.
2. Check the **Limit session duration** checkbox.
3. Enter a timeout length of up to 99, and select **days, minutes** or **hours**.
4. Apply changes.

Web Admin / Cloud Portal

1. Open **Settings > Site Administration > Security**.
2. Check the **Limit session duration** checkbox
3. Enter a timeout length of up to 99, and select the unit of **days, minutes** or **hours**.
4. Apply changes.

 **NOTE:** Cloud Users can also be subject to the same session duration limit as Local Users by selecting the “*Apply the session duration limit to Cloud users*” checkbox. If this option is enabled, Cloud Users will be disconnected from the Site when they reach the session duration limit. However, reaching the session duration limit will not log users out of other active Cloud sessions or other Sites.

Section 2.4 – Launching from Command Line Interface

The Desktop Client can be launched with a command line parameter to define the initial layout. This allows programming pop-up like behavior and API access. Multiple parameters may be included but the Site address, credentials, and user layout open by default.

Section 2.5 – Retained Settings

Retained settings are restored automatically. To turn off this feature, disable **Main Menu > Local Settings > Automatically restore saved windows configuration**.

The following values are saved locally and restored when the desktop client is relaunched:

- Layouts and tabs opened in the main window
- Stream resolution of items on a layout
- Visibility and pin state of the Timeline and navigation panel
- Current tab in the notification panel

By default, automatically retained settings are only applicable to a single active desktop client window at a time. To manually retain and restore settings for multiple desktop client windows at a time, do one of the following:

- **To create save state** – Open *Main Menu > Save Windows Configuration*

- **To update save state** – *Open Main Menu > Windows Configuration > Save Current State*
- **To restore save state** – *Open Main Menu > Windows Configuration > Restore Saved State*
- **To delete save state** – *Open Main Menu > Windows Configuration > Delete Saved State*

Part 3: Connecting to a Site

To gain access to cameras and other devices, a user must be connected to a DW Spectrum Site.

Connection can be made via the following DW Spectrum components:

- The desktop client (on the [Welcome Screen](#) or [Specific Server](#) forms)
- [DW Cloud Portal](#)
- [Server's Web Admin](#)
- [Mobile Client](#)

Section 3.1 – Connecting to a Known Server

Sometimes the term "log in to a Site" is used interchangeably with "connect to a server". In fact, to establish connection with a DW Spectrum Server you must do both – connect to the server using its IP address and a specific port, then log in to the Site with a set of user credentials.

To connect to a server, you must specify the server (i.e. host) IP address and port, then your DW Spectrum account login and password.

In Desktop and Mobile Clients, the server address is entered into a designated field.

In the Web Admin, you enter the server IP address and connection port in the address line of the Internet browser to access the connection dialog.



Both Cloud and Local accounts can be used to connect to a server in this way. However, DW Cloud accounts will not work if the Site you are connecting to doesn't have connection to the Internet and you never logged in with your account to the Site before.

Local accounts should always work if a network connection is available. External connections will require an Internet connection and possibly port forwarding.

Section 3.2 – Connecting After Logging into DW Cloud

If a server belongs to a Site that is connected to DW Cloud, another way to connect is to log in to DW Cloud through the desktop client. You will see a list of all the Sites that your Cloud account has been added to and can log in to any of them by selecting a registered Site.

Your DW Cloud account will be used as your login.



In a merged Site, the server to which you will be connected is determined automatically based on which server has the best uplink. If your Site is connected to the Cloud, you still can connect to a specific server by entering its address and the appropriate credentials.

 **NOTE:** After a session has expired, an informative dialog box is presented after Cloud sessions are automatically disconnected in accordance with the [Automatic Session Timeouts](#) settings.

Section 3.3 – The Client Welcome Screen

When the DW Spectrum Client is first launched, the *Welcome Screen* (shown below) automatically detects and displays the Sites in local networks and Sites that have been recently accessed. Local Sites can be accessed with a username and password. If a user is logged into DW Cloud, Cloud Sites are also displayed.

Click on the "Log in to DW Cloud" tile on the welcome screen, or the Cloud icon in the application header, to open [DW Cloud Portal](#). See "[Logging in to DW Cloud](#)" for details.


 **NOTE:** When accessing a Cloud connected multi-server Site, the desktop client attempts to connect to the server with the best uplink. A specific server can be chosen in the Site to which the desktop client will attempt to establish a connection. If it is unreachable, it attempts to connect to another server.

The number of Site tiles displayed on the welcome screen is determined by the screen and window size.

Use the search bar above the tiles to search for a specific Site by certain attributes:

- Site name
- Server name
- IP address
- Site Owner (Cloud only)
- User's Email (Cloud only)

Unavailable Sites are grayed out and may be deleted from the display. If a Site is hidden, it will not be shown in the list of tiles unless the *Hidden* display mode is selected. The option to hide tiles becomes available when the Welcome Screen is excessively populated. Hiding Site tiles is not a security feature; it is intended solely for organizing the Welcome Screen.

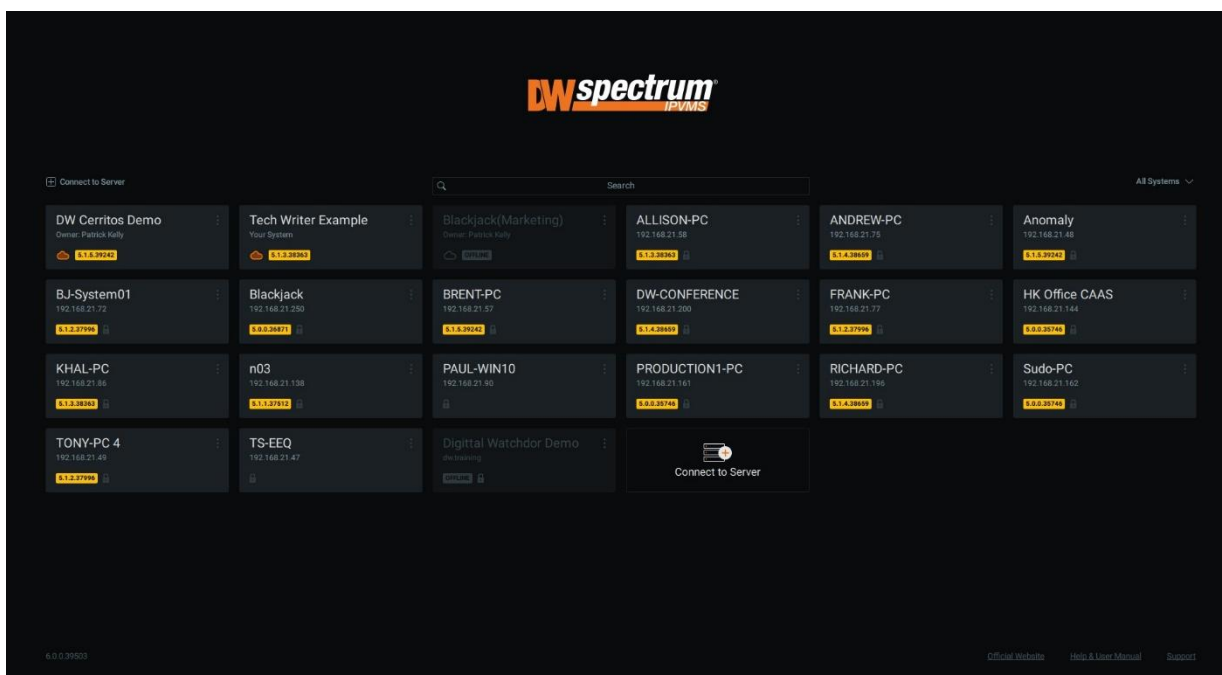

The client can connect to Sites running a different version of DW Spectrum. The product version is displayed in a yellow block within the Site tile if it is not the same version as the client. If a Site is incompatible with the client, the block will be red.

See "[Launching DW Spectrum in Compatibility Mode](#)" for information on resolving desktop client/Site version discrepancies.

 **NOTE:** Compatible hardware supports safe mode booting. The hardware boots up in safe mode if something has happened during the previous boot. Connecting to the server is possible, but no changes can be made to any configuration.

To Connect to a Site

Click on the tile for the desired Site. If it is compatible with the client, a connection dialog will open.

1. Enter a login and password.

 **NOTE:** Optionally, check **Remember me** to save the account credentials and connect automatically after clicking the Site tile.

2. Click **"Connect"**.

After 10 or more unsuccessful attempts to log in from a given IP address within 5 minutes, all log in attempts from that IP address will be denied for 1 minute.

Section 3.4 – Display Modes

The Welcome Screen has three display mode options which can be accessed in the upper-right corner.

- *All Sites* – displays all Sites on the network that have not yet been hidden or removed (default display mode).
- *Favorites* – displays all Sites added to the list of favorites.
- *Hidden* – displays all Sites marked to be hidden from other display modes.

Section 3.5 – Edit, Hide, or Favorite a Site Connection

For local Sites that are online, click on the tile to expand the connection details.

The Site tile can be hidden or favorited through the context menu by clicking on the three dots in the upper-right corner.

- *Hide* – moves the Site tile from the default all Sites display mode to the hidden display mode.
- *Add to Favorites* – moves the Site tile up in the list when in *All Sites* mode and adds the Site tile to the *Favorites* display mode for easy access.
- *Delete* – removes the Site completely (option only appears for offline and incompatible Sites). The tile won't appear on the welcome screen again unless the Site is online.

Section 3.6 – Working Offline

Even when not connected to a Site, the Welcome Screen main menu provides the following:

- *Connect to Server* – connect to a specific server using its IP address (see "[Connecting to a Specific Server](#)").
- *Browse Local Files* – use the welcome screen as a media player (see "[Playing Local Video Files in DW Spectrum](#)").
- *New* – launches a welcome screen in a new window.
- *Start Screen Recording* – toggles the recording of the entire screen (see "[Screen Recording \(Windows Only\)](#)").
- *Local Settings* – opens the local settings dialog to change language, display time and other settings specific to the client (see "[Customizing Look and Feel of DW Spectrum](#)").
- *About* – displays important Site and network configuration information (see "[Collecting Additional Information](#)").
- *User Manual* – open the user manual
- *Exit* – closes the window


Section 3.7 – Connecting as a Temporary User

Temporary users are granted limited-duration access to either local or Cloud-connected Sites. Anyone with the temporary user link can access the associated Site.

See "[Managing Users](#)" for limitations on temporary users and "[Adding Users](#)" to create a temporary user.

To connect to a Site or Server using a temporary user link:

1. Have the temporary user link provided by the Site administration team.
2. Open the desktop client, select **Connect to Server**, select the **Use Link** tab.
3. Enter the link into the dialog box and press **OK**.
4. The desktop client will open to the target Site.

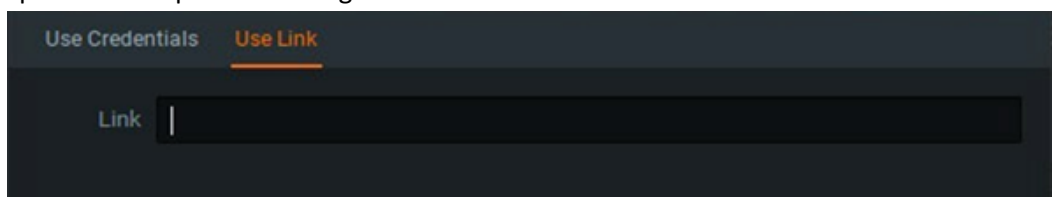

To connect to a Site or Web Admin using a temporary user link:

1. Enter the provided temporary user link into a browser.
2. Depending on local Site configuration there may be prompts to launch the desktop client or use the Web Admin.
3. Select Web Admin to open the Site.

Depending on permission granted to the temporary user, the Web Admin may offer less functionality than the desktop client.




Section 3.8 – Connecting to a Specific Server

If the Site is not connected to DW Cloud (see "[Connect Sites to DW Cloud](#)"), use an IP address, hostname, or a temporary user link to connect to a server.

To connect to Specific Server via IP or Hostname:

On the *Welcome Screen* or in the *Main Menu*, click **Connect to Server** to open the connection dialog shown below. The *Connect to Server* dialog enables connecting via an IP address and the use of different user credentials.

If the operation is canceled, the current user will still be connected to the server.

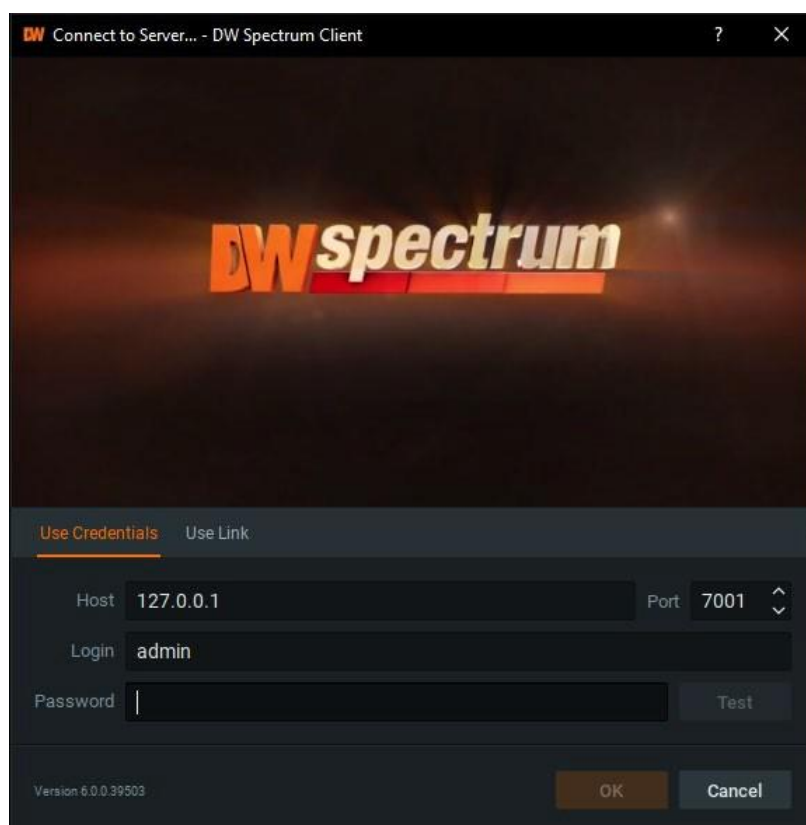

The following connection details are required:

- *Host* – IP address or address of the server (*localhost* or *127.0.0.1* for all-in-one installation).
- *Port* – IP port for access to the server (*7001* by default).
- *Login* – Account username used to connect to the server. If connecting for the first time, use "admin" as the login name.
- *Password* – Account password used to connect to the server. Use the same password that was set up during the initial installation.

- **Test** – Click this button to check connectivity to the server. The following may cause connection errors:
 - Server is not available
 - Specified IP address is incorrect or inaccessible
 - Specified port is incorrect
 - Server is stopped
 - Login and/or password are incorrect
 - Server and client are incompatible with each other because they are running different DW Spectrum versions. Compatibility mode will be suggested.

 **NOTE:** If the desktop client is not connected to a server, a user can only access *Local Files* (see "[Playing Local Video Files in DW Spectrum](#)").

To Log Out:

Open the **Main Menu** and choose **Disconnect from Server**.

Section 3.9 – Logging into DW Cloud

DW Cloud is a Cloud service hosted on the Internet that extends access to DW Spectrum Sites. See "[Working with DW Spectrum](#)" for more information about DW Cloud.

The Cloud icon  in the [Navigation Panel](#) opens a dialog to log in or log out of DW Cloud, or create a DW Cloud account.

To obtain all benefits of Cloud connectivity, the Site should be linked to DW Cloud. See "[Connect Sites to DW Cloud](#)" for more details.

To log into DW Cloud from the Desktop Client:

1. Click the  icon in the navigation panel.
2. Enter an email and DW Cloud password, then click on the **Log In** button.

Once connected, the entered email address will be displayed next to the Cloud icon. Click on it to open the DW Cloud portal, log out from DW Cloud, or change Cloud account settings.

 **NOTE:** It is possible to connect to a server using the DW Cloud login even if the Internet connection is temporarily unavailable. After several unsuccessful attempts to log in, connect to, or disconnect from a Cloud account, all login attempts will be denied for 1 minute.

To log into the DW Cloud Portal Interface:

1. Open the DW Cloud portal homepage and click **Log In**.
2. Enter DW Cloud account credentials and click **Log In**.
3. Click on a tile to connect with an available Site.
4. Choose a tab from the DW Cloud Portal banner including:
 - *View* – Shows the Resource Panel used to select Live stream viewing or archive playback.
 - *Layouts* – Display existing and available layouts (DW Spectrum Enterprise).
 - *Bookmarks* – View existing and available bookmarks (DW Spectrum Enterprise).
 - *Settings* – Manage users, Site and security settings, activate Licenses or Services, enable recording, create a motion mask, etc.
 - *Information* – Browse data on Site resources (cameras, I/O, network interfaces, storage).
 - *Monitoring* – Open a rolling graph of Site performance metrics (CPU, RAM, Network, Storage, I/O).

 **NOTE:** Tabs displayed in the DW Cloud Portal are dynamically populated according to configuration, permission settings, and user roles.

To Create a DW Cloud Account:

When a Site administrator adds a Cloud User who does not have an established Cloud account, the user will receive instructions to create their Cloud account.

1. Do one of the following:
 - Open the Cloud account creation dialog from the desktop client using the  icon in the navigation panel.
 - Open the DW Cloud website and find the **Create Account** button in the upper-right corner of the page.
 - Open the link provided in the invitation emailed to Cloud Users who do not have an established Cloud account.
2. Enter registration information and click **Create Account**.
3. An activation email will be sent to the email address specified.


Section 3.10 – Connect with the Web Admin

The *DW Spectrum Web Admin* (Web Admin) provides the following features:

- Owner-level server and Site controls
- Live stream viewing
- Playback of Archived video
- Camera management
- Server health monitoring and log viewing
- Storage management
- User management
- View and activate licenses
- Access to developer tools and API documentation

Menus and options are contextually aware and will change based on selections made, Site configuration, and user permissions.

- A menu positioned along the header area includes tabs for enabled functions (View, Layout, Bookmarks, Settings, Information, Monitoring, Services).
- The tabs displayed vary depending on product version and user permissions.
- The left panel provides for second-level menus choices, filters, or resource selection controls.
- Information refined by the menu selections is displayed in the center display panel.

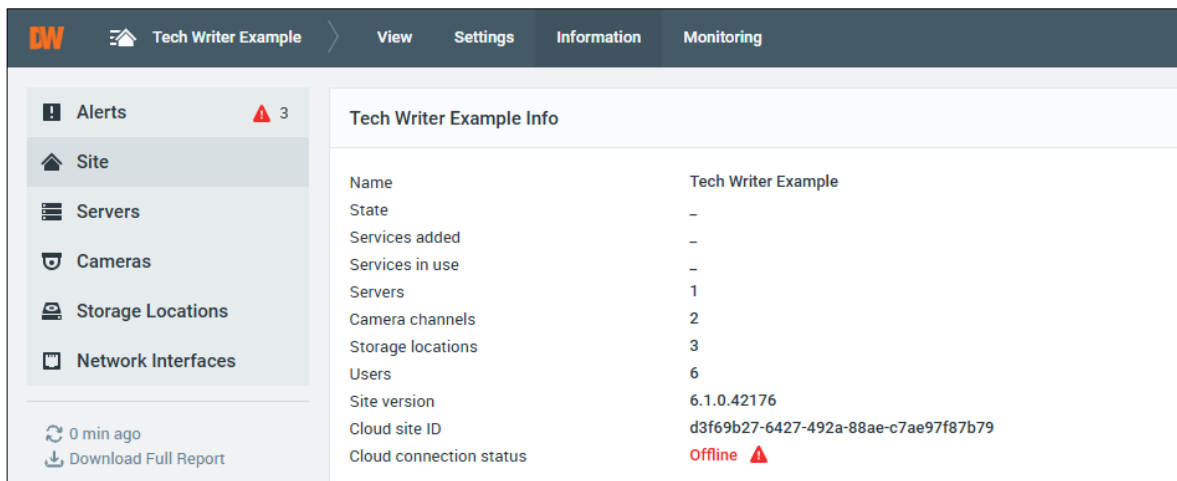

The screenshot displays the DW Spectrum Web Admin interface. The top header bar includes the DW logo, a home icon, the site name 'Tech Writer Example', and navigation tabs: View, Settings, Information, and Monitoring. The left sidebar contains a menu with icons and labels for Alerts (with a red triangle and '3'), Site, Servers, Cameras, Storage Locations, and Network Interfaces. At the bottom of the sidebar, there is a refresh icon with '0 min ago' and a 'Download Full Report' link. The main content area is titled 'Tech Writer Example Info' and contains a table with the following data:

Name	Tech Writer Example
State	–
Services added	–
Services in use	–
Servers	1
Camera channels	2
Storage locations	3
Users	6
Site version	6.1.0.42176
Cloud site ID	d3f69b27-6427-492a-88ae-c7ae97f87b79
Cloud connection status	Offline 

To Open the Web Admin from the Desktop Client:

1. In the Desktop Client, select **Main Menu > Open > Web Client**.
2. In the Desktop Client, select the Server in the [Resource Panel](#), then use the context menu (Right Click) to select **Server Web Page**.

 **NOTE:** If a Site contains multiple servers, the web interface will control the server to which the client is connected (as indicated by the  icon in the Resource Panel).

To Open the Web Admin from an Internet browser:


1. Enter the server IP address and port into the browser address bar (<https://<server IP address>:7001>).

 **NOTE:** If the default port (7001) does not work, open the Web Admin interface through the desktop client (right-click on the server in the resource panel and click **Server Web Page**).

2. In the log in dialog that opens, enter administrator login and password credentials.

To Open the Web Admin from the Windows Tray:

1. The Web Admin interface can be opened from the tray assistant. Right-click the DW Spectrum Tray Assistant and choose **Server Web Page**.

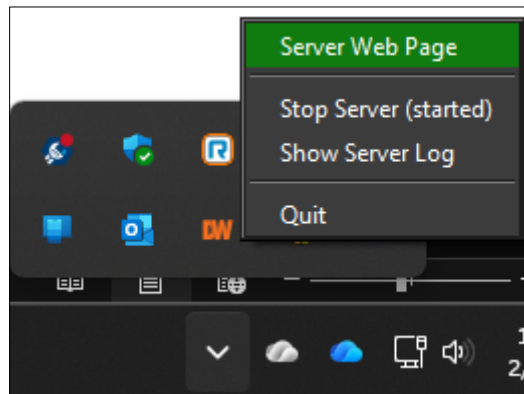

Section 3.11 – Connect with the DW Spectrum Mobile Client

The *DW Spectrum Mobile* Client provides the following features:

- View live streams from cameras
- Search through recorded Archive
- PTZ camera control
- Fish-eye camera dewarping
- Two-way audio
- Soft triggers

- Push notifications

The mobile client is available for Android and iOS platforms.

The comprehensive user guide for the mobile client is available as an additional PDF document, which is installed locally along with the desktop client user guide.

Part 4: Server Certificate Validation


DW Spectrum Server certificate validation occurs during communication between the DW Spectrum Server, DW Spectrum Clients (desktop and mobile client), and DW Cloud to enhance the security of DW Spectrum by ensuring the client is connecting to a trusted location.

While the client connects to the Site, the Site will provide the public keys from every server to the client for validation. No matter which level is configured, there will be no warning message displayed at all when connecting to a Site with a valid certificate and matching hostname.

 **NOTE:** A valid certificate must be issued by a public Certification Authority (CA) that contains the complete information of the certificate chain. A public certificate without a certificate chain will be considered invalid in DW Spectrum. See "[Obtaining and Installing an Authorized Certificate](#)" for details. Trusted *Man in the Middle* (MITM) certificates are trusted on the desktop client side.

For other types of certificates, the behavior will depend on the client's validation level:


- **Disabled** – The Client will skip the validation process and connect to the Site directly. The User will not see a warning message. However, it is still NOT recommended to turn the validation off since certificate validation is recommended as a part of the security hardening process of any Site.
- **Recommended** (default) – Allows users to connect to the Site with any certificate but may require the user's confirmation. A warning message may still appear in the following situations:
 - *Connected to an UNKNOWN Site* – When a client attempts to connect to a new Site for the first time, that means the client has no information about the servers' certificates before. When the Site provides a certificate that is custom/self-signed, or a public certificate without chain information, a "Connecting to Server for the first time?" prompt will appear stating that the SSL certificate could not be verified automatically. Once the client approves this connection, the certificate will be stored at the client's end. It is expected that no warning message will pop up again for any further connections until the certificate expires/changes.

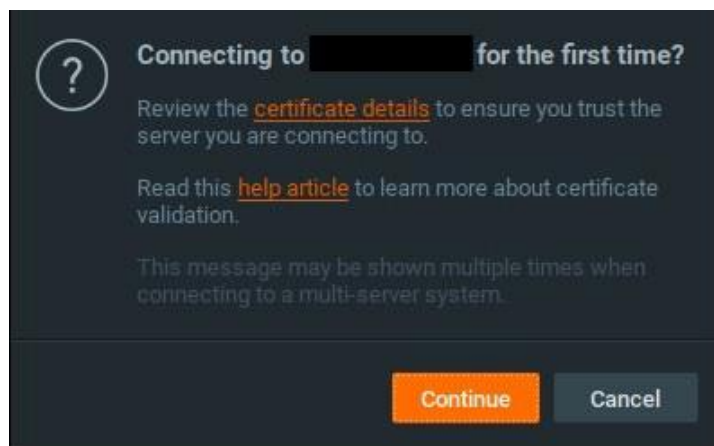

- *Connected to a KNOWN Site* – When a user attempts to connect a known Site whose certificate cannot be verified successfully (for example, mismatched with the client's pinned certificate, expired certificate, etc.), the client will display the warning message: "Cannot verify the identity of # Server". The user will be prompted to take further action and check the certificate's problems. The user can check the **I trust this/these Servers** checkbox and click **Connect Anyway** to connect to the servers. This

message will be seen every time the user attempts to connect to the Site until the issue with the certificate has been fixed.

- **Strict** – With this mode, servers that use the default self-signed certificates will be rejected by the client, forcing the user to connect to servers with only a valid certificate and correct hostname. The user will see the warning message below when they attempt to connect to the Site with an invalid certificate or a mismatched hostname.

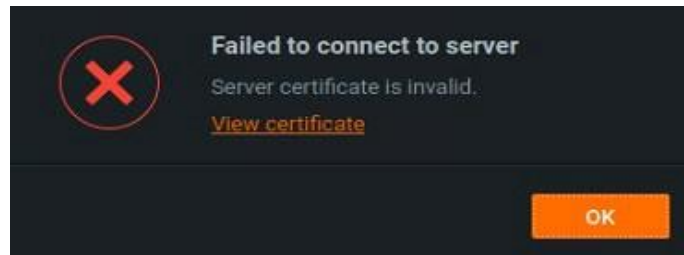

Section 4.1 – How to Change the Certificate's Validation Level

To change the validation level in the desktop client:

1. Open the **Main Menu > Local Settings > Advanced** tab.
 2. Open the **Server certificate validation** dropdown and select a validation level: *Disabled*, *Recommended*, or *Strict*.
 3. Apply changes.
- **NOTE:** The server certificate validation level can also be modified in the mobile client.

Section 4.2 – How to Check the Certificate's Details

To check the server's SSL certificate validity and information:

Desktop Client


1. Open **Server Settings > General**.

 **NOTE:** Any available pinned/custom certificate will be listed here.

2. Click the certificate to view its details.

Web Admin

1. Enter the server IP address in the Internet browser and click the **Not secure** indicator in the address bar.
2. Click on the certificate's status to open its details.
3. Review the certificate's information, such as issuer and expiration date.

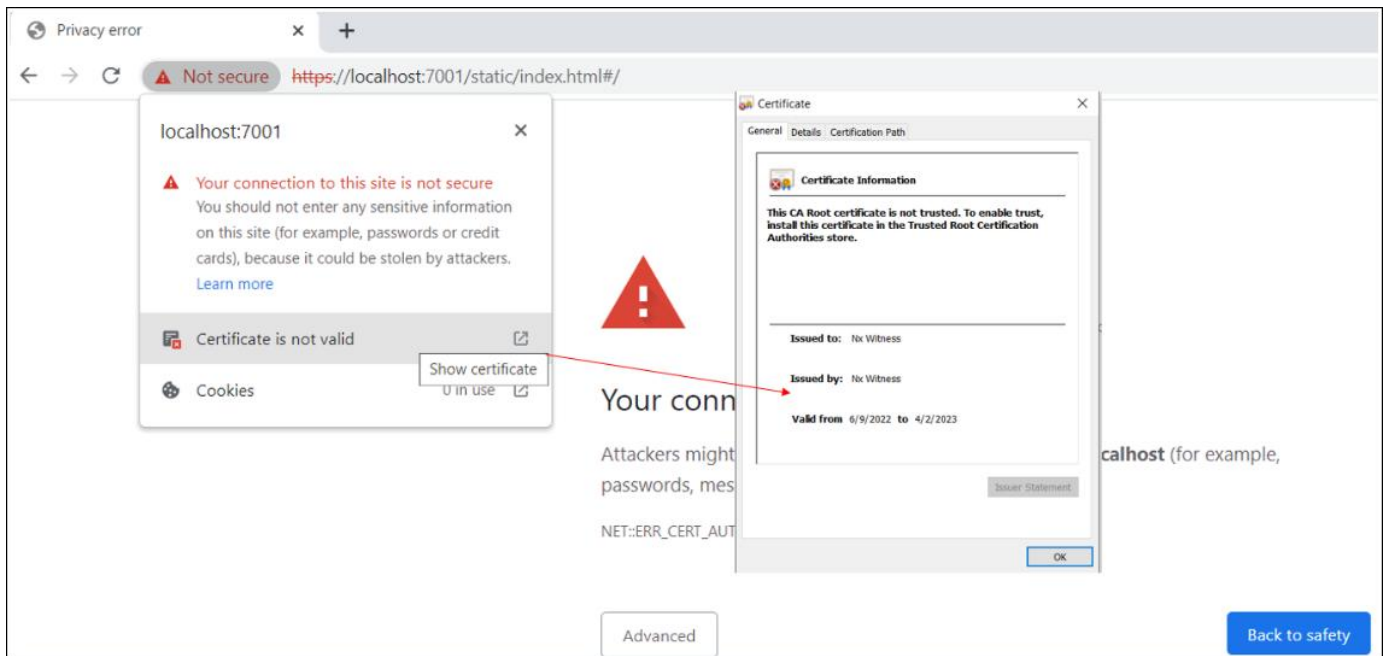

Section 4.3 – How to Renew the Expired Certificate

Self-Signed Certificates Created by DW Spectrum Server

- Restart the server to renew its certificate and try again.

Public Certificates or Other Self-Signed Certificates

- Contact the administrator to renew the server certificate.

Part 5: Initial Site Configuration

When DW Spectrum is installed, some initial configuration is required. A newly installed server will be displayed as a *New Site* on the welcome screen.

Section 5.1 – Setup a New Site or Add Server to an Existing Site

1. Click on the tile for the new Site to launch the setup wizard.
2. Choose one of the two options:
 - **Setup New Site** – specify a Site name and *Administrator* password. Sometimes, the **New Server** tile may not be displayed if the desktop client did not detect the server. When this happens, use the "Connect to Server" [Main Menu](#) item (see "[Connecting to a Specific Server](#)"), and provide the server IP and port, and use **admin/admin** as the login/password combination for the new Site.
 - Use the advanced Site settings to configure the following additional parameters:
 - Enabling and disabling auto-discovery (see "[Automatic Device Discovery](#)").
 - Enabling and disabling device setting optimization (see "[Preventing DW Spectrum from Changing Device Settings](#)").
 - Enabling and disabling anonymous usage statistics (see "[Sending Anonymous Usage and Crash Statistics](#)").
 - [Configuring Secure Connections](#)
 - **Add to Existing Site** – if a Site contains multiple servers (see "[Configuring Multi-Server Environment](#)"), specify:
 - Site URL – this can be auto-discovered. If it is not, the URL format is `http://<host>:<port>`, where <host> is the name or IP address of the server and <port> is the server port (7001).

- Login and password for the existing Site.

Section 5.2 – Configuring Storage, Devices, and Recording

Whether it is a new Site, or a server is merging with an existing one, the following settings will be required:

- [Configuring Server and NAS Storage](#) – storage on each server must be configured to allow the necessary space for Site backend data and for archive recording data.
- [Device Management \(Cameras, Encoders and I/O Modules\)](#) – Devices must be properly added and configured to achieve optimal recording conditions.
- [Enable Recording](#) – Enough licenses or services must be available for each device on each server (see "[Services and Licenses](#)").

Section 5.3 – Creating User Groups and Layouts

Once storage, device, and recording configuration is complete, configure the following:

- [Users and Groups](#)
- [Layout Management](#)
- [Permissions Management](#)

Section 5.4 – Site ID

The Site ID is a unique identification value that is required for internal processing of the DW Spectrum Site.

- All servers in a merged Site have the same ID value. This parameter cannot be viewed or edited; it is required for internal processing when servers are merged.
- If *Setup New Site* is selected, the Site ID is assigned during initial configuration.
- If *Add to Existing Site* is selected, the Site ID is taken from the existing Site. To enable

Cloud connectivity features, refer to [Connect the Site to DW Cloud](#).

If the reseller provides a *Software as a Service* (SaaS) Model, see [Connecting the Site from an Organization](#).

To use the full functionality of DW Spectrum, obtain services or activate licenses. See "[Services and Licenses](#)" for details.

Section 5.5 – Compatibility Mode

Compatibility mode launches a compatible version of the client application to connect to a server that is running a different version of DW Spectrum. In Compatibility Mode, the client downloads another version of itself to match the server version using the same method as an auto-update.

This would be necessary, for instance, when DW Spectrum is installed at multiple sites (factory, store, warehouse, etc.) and only one installation has been updated to the current version. In that case, the Site will have different versions, and one desktop client should connect to another Site (i.e. client at a store connects to the Site in a factory). Sites of different versions are highlighted in red in the log in dialog and in yellow on the Welcome Screen.

When a client is connected to a server, all component versions are checked, and if the component versions differ from one another, a warning is displayed prompting the user to restart in Compatibility Mode. Click **Restart** to connect to the server in compatibility mode.

In some instances, it may be necessary to download additional files for the compatibility pack. Once the download is complete, the client should be restarted.

 **IMPORTANT:** The best practice is to have the same product version installed on all Site components.

If some of the components (server or client) in a multi-server Site have different versions installed, there may be operational issues.

Part 6: Updating DW Spectrum

DW Spectrum provides users with one-click updates for an entire Site without the need to individually log into multiple devices.

Updates can be performed over the Internet using the latest build available, a specific build number, or locally from a downloaded file or a file on a USB drive. For Internet updates at least one Site component must have an Internet connection, whether it is the client or another server.

By default, the client and each server downloads the update independently from each other. But, if the server does not have Internet access, the update can be downloaded via another server with an active connection. If all available servers are without Internet access, the client will provide each server with the desired update file.

The desktop client can be updated without needing to update the server. This allows Digital Watchdog to deliver quicker updates for desktop client specific issues.


When the download is distributed, servers are tracked with a "ready", "skipped", or "failed" status. The administrator who initiated the update receives specific notifications such as *"Failed to push upgrade package to all servers. Not all servers will be upgraded. Continue?"* This way, updating the Site does not fail because one or more individual servers is offline or unavailable. Download progress is reported graphically on the *Updates* tab for each server.

Updates can also be done manually. If a new product version does not support the current operating Site for a server, the update process will not start and upgrades for unsupported operating Sites can be blocked.

Update files are stored for both the current and target version, allowing clients to update themselves when an installation is started but not finished, or when an old client tries to connect to a DW Spectrum Site. Servers will delete files for the current version when a new update is started. Similarly, files for the target version are deleted when the target version changes, for example because the update is canceled, or another target version is set. Desktop clients do not delete update files and are not used to update other clients.

Section 6.1 – To Configure Update Settings

Open the **Main Menu > Site Administration > Updates** tab for update controls. The tab shows that the latest version is installed or shows which version number is currently installed.

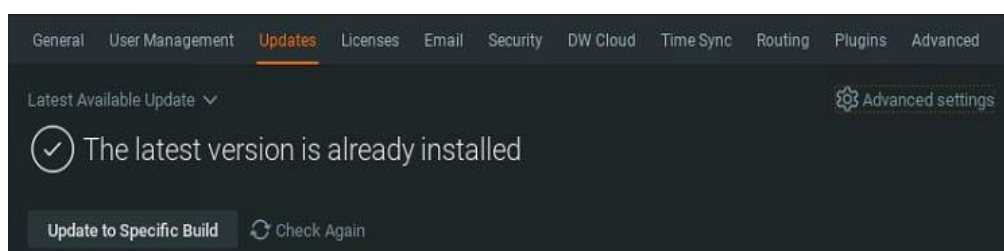

Section 6.2 – Advanced Settings

Click on **Advanced settings** in the upper-right corner to configure update settings:

- *Notify about available updates* – If enabled, the Site will perform automatic update checks so that when a new version of DW Spectrum is released, a notification will open in the desktop client.
- *Automatic Client Updates* – Enabled by default. Connecting clients will be automatically updated to the new version when it's available.

- *Check for updates* – On-demand update checking. This function is unavailable when the *Automatic client updates* toggle is disabled.

Section 6.3 – Update to a Specific Version

In the upper-left corner is a drop-down for choosing which version to install:

- *Latest Available Updates* – Selects the latest product version available.
- *Specific Build* – Opens a dialog where a specific *Version* and *Password* can be entered (available from the support team).
- *Browse for Update File* – Search for a local update package that has been downloaded (see offline updates below).

Section 6.4 – Update Status Indicators

In the *Updates* tab, DW Spectrum will indicate if a software version is up-to-date or if there is an issue with the current software build:

- A yellow exclamation mark on the server icon in the resource panel indicates that the server version is incompatible with versions of other servers in the Site. These incompatible servers must be updated separately.
- If the version number is shown in green, the current version is the latest one installed on the Site.
- If the version number is shown in yellow, it is not the latest build but can be updated.
- If the version number is shown in red, it is not the latest build and cannot be updated. (Usually because the update for the server is not found. The server OS could no longer be supported, or the package for such a platform was not published).

Section 6.5 – Online Update

1. Open the **Main Menu > Site Administration > Updates** tab.
2. Click on **Download**.
3. Wait for the update to download and then click on **Install Update**.

Section 6.5 – Offline Update to the Latest Available Version

1. Open the **Main Menu > Site Administration > Updates** tab.
2. Click **Get Update File** and choose **Copy Link to Clipboard**.
3. Save the link to an external drive so it can be transferred to a computer with Internet access.
4. Paste the copied link into a browser on a computer with Internet access and use it to download the update file.
5. Save the update file to an external drive, then copy it onto the offline client PC.
6. On the offline Client PC, open the **Main Menu > Site Administration > Updates** tab.
7. Click the arrow on the **Latest Available Update** menu and choose **Browse for Update File**.
8. In the file browser that opens, navigate to the external drive where the update file is saved and open it to start the update process.


Section 6.6 – Offline Update to a Specific Build

It may be necessary to accept a newer version of the *End User License Agreement* (EULA) to proceed with installation. An update can be canceled while it is being downloaded, but not while it is being installed. After all

online servers receive "Install" status; a confirmation dialog appears and prompts the client to restart the updated version.

1. Open the **Main Menu > Site Administration > Updates** tab.
2. Click on the **Latest Available Update** menu and choose **Specific Build**.
3. In the dialog that opens, enter the build number and password (provided by the support team), then click **"Select Build"**.
4. In the **Main Menu > Site Administration > Updates** tab, click **Get Update File** and choose **Copy Link to Clipboard**.
5. Follow steps 3 through 8 from [Section 6.5 – Offline Update to the Latest Available Version](#).

Part 7: DW Spectrum User Interface

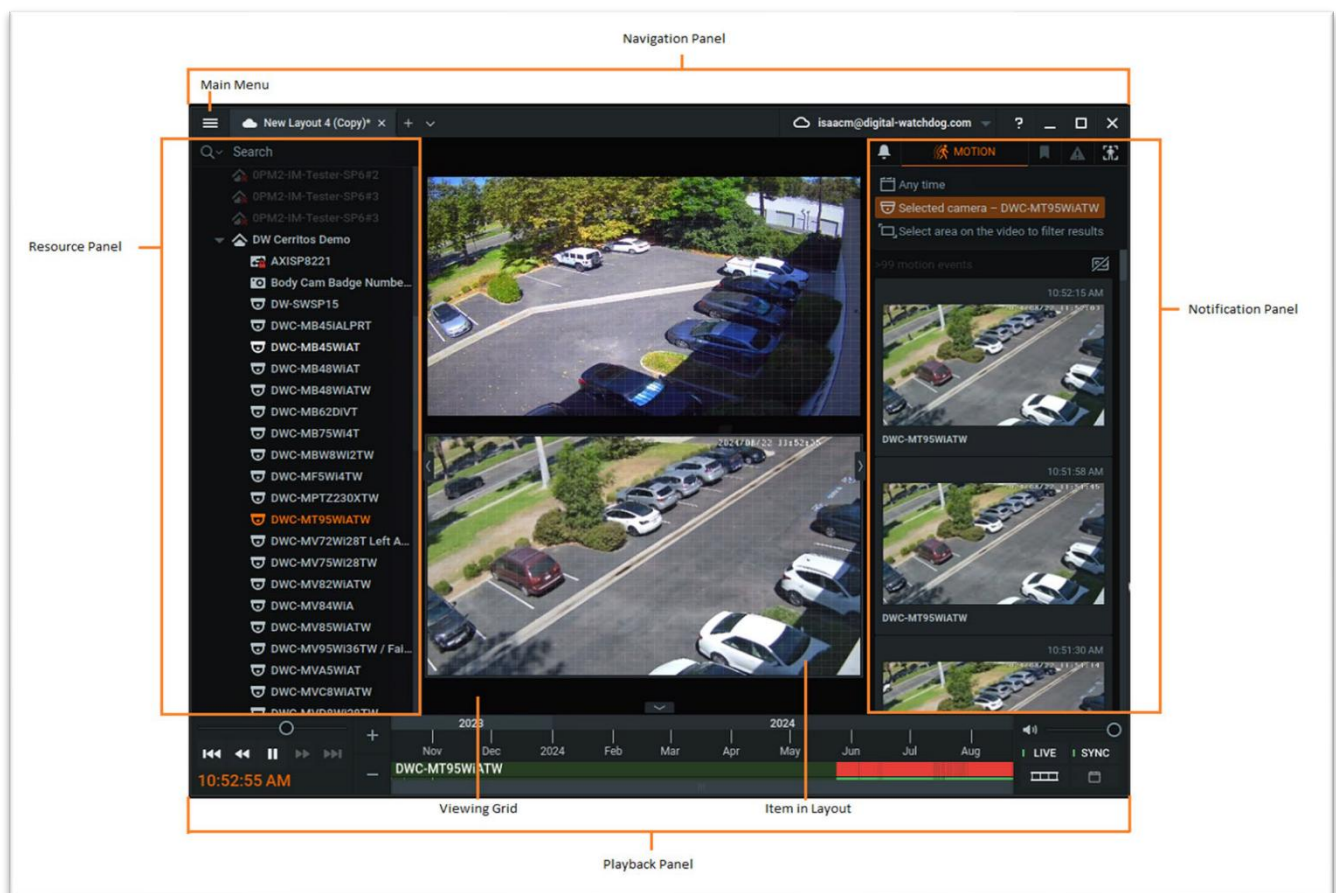

Section 7.1 – Viewing Grid for Layouts

The central [Viewing Grid](#) can simultaneously display up to 64 individual *items* – live camera streams, recorded video files, web pages, etc.

An arrangement of items in the viewing grid is called a [layout](#). Layouts can be named and saved. Multiple layouts can be opened at once, each displayed in a separate tab.

Section 7.2 – Navigation Panels

Panels on each side of the Viewing Grid provide management and display tools. These panels can be resized by dragging the inner edge towards or away from the viewing area and hidden or opened using directional arrows.

- [Navigation Panel](#) (top) – provides access to the main menu , tabs for each layout, the DW Cloud connection form, the help Site, and standard window sizing controls.

- [Playback Panel](#) (bottom) – controls playback of local videos and live streams.
- [Resource Panel](#) (left) – displays all servers, devices (cameras, analog encoders, DVRs/NVRs, IO modules), layouts, showreels, web pages, other Sites, and local files (video and image files) available to the current user (see "[Searching and Filtering in DW Spectrum](#)" for details about searching and filtering in the resource panel).
- [Notification Panel](#) (right) – contains tabs that display tiles for notifications, motion detection, bookmarks, events, and analytics objects. See "[Searching and Filtering in DW Spectrum](#)" for details about searching and filtering in the notification panel.

Each interface element has a *Context Menu* that provides shortcuts to key actions related to that element. Throughout this manual, there are instructions to use these context menus to access necessary tools. Right-click on an interface element to open its context menu.

Section 7.3 – Tooltips and Context-sensitive Help

Throughout the desktop client application, click on the contextual help icon  to toggle the mouse pointer into a question mark, then click on an element to view related help information. Tooltips are also provided through the application.

Section 7.4 – Keyboard Shortcuts

Preset hotkeys can be used to quickly navigate or to execute common tasks. For more information, see the [keyboard shortcuts](#) section in this guide.

Section 7.5 – Main Menu

The *Main Menu* provides access to fundamental DW Spectrum settings for server connections, display characteristics, user permissions, device controls, and layout configurations.

 **NOTE:** Items listed in the Main Menu will vary depending on User Permissions and Site settings.

Click on the **Main Menu** button  in the upper left corner of the navigation panel to access the following:

- **Connect to (Another) Server (Ctrl + Shift + C)** – disconnects the current Site connection and allows the user to switch to viewing a different Site. For more information, see "[Connecting to Site from the Welcome Screen](#)".
- **Disconnect from Server (Ctrl + Shift + D)** – disconnects the current Site connection and returns the user to the Welcome Screen.
- **New** – select from the following options to create a new instance or viewing tab in the DW Spectrum desktop client.
 - **Layout** – creates a new empty tab in the tab navigator (see "[Layout Tabs](#)")
 - **Window** – opens a new window of DW Spectrum (see "[Working with Multiple DW Spectrum Windows](#)")
 - **Welcome Screen** – opens the welcome screen in a new window of DW Spectrum (see "[Working with Multiple DW Spectrum Windows](#)")
- **Open** – select from the following options to open local video files, view a folder's contents or launch the Web Admin.
 - **File(s) and Folder** – open and play back selected local video files or all video files in a folder, respectively (see "[Playing Local Video Files in DW Spectrum](#)").
 - **Web Admin** – opens a web browser to an DW Spectrum Web Admin login dialog (see "[Opening DW Spectrum Web Admin](#)")
- **Start Screen Recording (Alt + R)** – toggles screen recording of an entire window (see "[Screen Recording \(Windows Only\)](#)")
- **Site Administration (Ctrl + Alt + A)** – opens a tabbed dialog for Site-related settings (see "[Site-Wide Configurations](#)")

- **User Management** – opens a dialog for managing users and user groups (see "[Users and Groups](#)")
- **Local Settings** – opens a dialog for local client settings (see "[Customizing Look and Feel of DW Spectrum](#)")
- **Audit Trail** – opens a log that displays all user sessions, actions, and device activity (see "[Audit Trail of User Actions](#)")
- **Bookmark Log (Ctrl + B)** – opens a log to view, search and manage bookmarks (see "[Searching Bookmarks](#)")
- **Add** – select to add new devices, users, or web pages viewing.
 - **Device** – opens the dialog to specify or search for a connected device, by server (see "[Adding Devices Manually](#)")
 - **User** – creates a new user profile
 - **Video Wall** – creates new video wall (see "[Video Wall Management](#)")
 - **Integration** – creates a web page frame that can interact with the desktop client
 - **Web Page** – creates a new layout item for a web page. For more information, see "[Managing Web Pages and Integrations](#)"
 - **Showreel** – creates a new tab containing a showreel layout (see "[Showreel \(Tour Cycle\)](#)")
 - **Virtual Camera** – creates a new virtual camera device (see "[Setting Up a Virtual Camera](#)")
- **Merge Sites** – allows for merging of multi-server Sites (see "[Configuring Multi-Server Environment](#)")
- **About (F1)** – displays product version, hardware, and driver information (see "[Collecting Additional Information](#)")
- **User manual** – Opens the user manual
- **Save Window Configuration** – allows for retaining and restoring settings for multiple desktop client windows at a time (see "[Retained Settings](#)" for more information)
- **Exit (Alt + F4)** – closes DW Spectrum client session

Section 7.6 - Customizing Look and Feel

The DW Spectrum desktop client can be customized in a specific way. These settings are local and apply to the current client instance only.

To Customize the Look and Feel:

Open the **Main Menu > Local Settings > Look and Feel** to set the following global display characteristics:

- **Language** – select the preferred display language from the pull-down menu. DW Spectrum must be restarted for this change to take effect.
- **Time Mode** – when the client and server are in different time zones, use this to select whether *Server Time* or *Client Time* will apply in client displays (e.g. Timeline, timestamps in event logs and trail, etc.). See "[Time Synchronization in a Multi-Server Environment](#)".
- **Show additional info in tree** – check this box to include the IP address of devices and servers.
- **Show aim overlay for PTZ cameras** – check this box to enable the alternative UI for PTZ controls, this mode is off by default (see "[Alternate PTZ Controls](#)").
- **Tour cycle** – sets the time, in seconds, that each item in a [Tour](#) will be displayed.
- **Background Image** – toggle this switch to add an image, such as a logo or map of camera placement, that will display on the viewing grid under all layouts. Once an image is selected, use this switch to toggle the background image on and off.
 1. Click **Browse** to select an image file
 2. Open the **Mode** dropdown and select the desired display mode: *Stretch*, *Fit*, or *Crop*.
 3. Set the **Intensity** level (0%, completely transparent, to 100%, completely opaque)

Click **OK** to save changes and exit the dialog or click **Apply** to save change and remain in the setting dialog or click **Cancel** to discard changes and exit the dialog. If any changes require a restart, a prompt will appear asking to **Restart Now**, **Restart Later**, or to **Cancel**.

 **NOTE:** The viewing grid background applies to all layouts – a background image can be applied to a single layout (see "[Layout Backgrounds \(E-Mapping\)](#)").

Section 7.7 - Showing and Hiding Panels

Panels in the user interface can be shown or hidden at will.

Use the arrow buttons at the perimeter of the viewing grid to show or hide individual panels.

Press **F11** to simultaneously hide all panels and zoom DW Spectrum to fill the screen. Press **F11** again to show all panels – The product window remains maximized.

[Fullscreen Mode](#) can be used to simultaneously hide all four sliding panels and expand the display of a single Item to fill the entire layout.

Section 7.8 - Searching and Filtering

DW Spectrum enables users to search and filter data ([Audit Trail of User Actions](#), *Event Log*, *Device List*, *Users*, etc.). Use the search box to activate a search. Search results appear immediately as characters are entered. This is because camera ID strings contain so many characters they could flood search results without this limitation.

The search functionality in the resource panel is a little different than anywhere else in DW Spectrum. The resource panel display can be filtered in two ways, by type and by text, and these two filters can be applied separately or together. By using this function, the following items can be searched: servers, devices (I/O modules, cameras, etc.), layouts, showreels, video walls, web pages, users, local files, and groups.

 **NOTE:** The display of server and device IP addresses will change according to the setting of the *Show additional info in tree* option, see the [Customizing the Look and Feel](#) section for more information.

Filtering by Resource Type

Only one resource type can be selected at a time. The type filter can be applied by clicking on the magnifying glass () in the search field to open a dropdown menu. When a filter is applied, the tree structure changes – all elements become grouped by type, and are displayed without nested elements of a different type (for example, cameras under layouts under users).

Select a group from the search results (**Shift + Click**) or select multiple items separately (**Ctrl + Click**). Items can be added from the search results to the existing layout (**Enter**) or add all selected items to a new layout (**Right-click > Open in New Tab**). Note that the cursor must be in the search field for these add-to-layout functions to be available.

Filtering by Text

Any text entered in the search field filters the existing resource display. Multiple keywords are treated as a Boolean "AND". For example, entering **abc def** returns only resources which have **abc** and **def**. If the filter returns

many results, only the first 64 results will be displayed. Camera ID fields are only searched if a query is 4 symbols or longer.

Search Syntax

Search syntax in DW Spectrum search fields is generally the same across all DW Spectrum resources.

The standard search syntax includes the following:

- Single word search (not case-sensitive)
- Two-word search (not case-sensitive and the search terms' order does not matter)

Search Fields That Use the Standard Search Syntax

- [Server Web Admin](#)
- [Desktop Client](#)
 - Resource panel
 - Event rules (Indexed field: source)
 **NOTE:** Events with more than one camera set will show up in any search results if one of the cameras match the search term, but the exact camera name will not be visible until the list of cameras for that event is clicked.
 - Event log (Indexed field: description)
 - Camera list (Indexed fields: name, vendor, model, firmware, IP, and MAC address)
 - Audit trail (Indexed fields: camera name, user, IP, activity, description, session ends)
- [Cloud Portal](#)

Search Fields That Do Not Use the Standard Search Syntax


The following places in the desktop client have an exception or additional search features.

- User Manual
 - Two-word search terms will provide results for both search terms together and separately.
 - An asterisk (*) can be used in any position to represent any combination of symbols.
 - A question mark (?) can be used to substitute a single character.
 - A hyphen (-) can be used in front of the second search term to search for lines that contain the first term but not the second term.
- [User Management](#)
 - Unlike two-word searches across other resources, only results matching the exact order of search terms will show up.
 - A question mark can be used to substitute a single character.
 - An asterisk can be used in any position to represent any combination of symbols.
- [Bookmark Log](#) – (Indexed fields: name, description, and tags)
 - Quotations can be used to find results with the search terms in the order specified.
- [Notification Panel](#), [Bookmarks tab](#) (Indexed fields: name, description, and tags) and [Objects tab](#) (Indexed fields: object type and object text attributes)
 - Quotations can be used to find results with the search terms in the order specified.

Section 7.9 - Navigation Panel

The *Navigation Panel* provides access to important tools and features and navigation of Layout tabs.

 The navigation panel contains the following controls:

 Main Menu	Configure fundamental behavior such as Site Administration , Users and Groups , Local Settings, etc.
	All open tabs are displayed and can be navigated through

<u>Layout Tabs</u>	
 <u>Cloud Connect Button</u>	Connects to DW Cloud. This button indicates the current DW Cloud connection status and allows the user to connect to or disconnect from DW Cloud and open the <u>DW Cloud Portal</u>
 <u>Help Button</u>	Toggles the cursor into a (?) that will open a related help topic when clicked on a user interface element
 Standard window sizing buttons	Minimize, maximize, exit

Section 7.10 - Resource Panel

The *Resource Panel* displays all servers, cameras and devices, layouts, [Showreels](#), [Video Walls](#), web pages, local files and other Sites available to the current user according to their set permissions.

 **NOTE:** To access the resource panel from the Web Admin, open the **View** tab.

Resource Panel Display

Levels can be expanded to show additional information. For example, servers at the top-level expand to show each server in the Site, and expanding a server shows all the devices connected to it. Use **Ctrl + F** to search through the resource panel. The **+** and **-** hotkeys can be used to expand/collapse resource panel sections, and the arrow keys can be used to navigate and select resources.

Resources that are placed in the active layout are bolded in the resource panel list. The currently selected resource is shown in blue in the resource panel. The display of server and device IP addresses can be toggled on or off in the [Look and Feel](#) dialog.

Each resource and resource type has a related context menu. Highlight the name and press **F2** as a shortcut to rename a resource.

 Servers	Lists the servers registered in the Site. A server may have several network interfaces, so it is possible for different IP addresses to be displayed for the same server. Server icons indicate the following statuses:
	Client is connected to this server
	Server is offline
	Server version is incompatible with other servers in the Site (see " <u>Updating DW Spectrum</u> ")
	Server is unauthorized. The password does not match those of the other servers, so it is unable to connect to the Site. To fix this issue, open the <i>Server Web Page</i> in the server context menu, open the server settings, select the corresponding server and click on Reset to Defaults , and then reconnect to the Site (see " <u>Using a Server's Web Interface</u> ").

Devices (various icons): Each server shows a list of the attached devices. Hover the mouse cursor over a device icon in the resource panel to show a thumbnail of a frame taken by that device (thumbnails update every 2-3 seconds). Devices attached to a server can include:

	Cameras
	Virtual Cameras
	I/O Modules
	Multi-Channel Cameras
	Recorders
	Groups: Two or more of the above devices organized into a group. To create a group, select two or more resources, right-click the selection, and click Create Group

Device Icons:

		Device is offline (see " Diagnosing Offline Devices ")
		Device is unauthorized (see " Configuring Device's Authentication ")

Device Status Icons:

	Device is currently in recording mode
	Device is configured for recording but is not recording now
	Indicates camera is not recording but there a recorded Archive is available
	Device is experiencing network issues (see " Device Disconnection/Malfunction " or " Working Around Device Issues (Expert Settings) ")

 **NOTE:** "Preview is outdated" message is displayed over the video preview thumbnail of a device if the thumbnail has not been updated in over 15 minutes.


Viewing Icons

 Layouts	Contains resources (devices and local files). Owned by the user.
--	--

 Cloud Layouts	Layouts that are available to the user from within the Cloud portal.
 Shared Layouts	Layouts created by an administrator and made available to a user or groups of users.
 Locked Layouts	Layouts that cannot be changed (see " Locking Layouts ").
 Showreels	Cycle display through a sequence of layouts (see " Showreel (Tour Cycle) ").
 Integrations	Show the viewing cells containing an integration (see " Adding a Web Page as an Integration ").
 Web Pages	Show the viewing cells containing a web page (see " Adding a Web Page as an Item ").
 Video Walls	Control multiple displays remotely (see " Video Wall Management ").
 Other Sites	Shows servers in the local network that belong to different Sites, and the available Cloud Sites (see " Configuring Multi-Server Environment ").
 Local Files	Displays the following file types: • Local Video files (see "Playing Local Video Files in DW Spectrum"). • Exported Video Files (see "Exporting Video"). • Exported Multi-Video Files (see "Multi-Video Export"). • Screen Recordings (see "Screen Recording"). • Images. • Screenshots (see "Taking Screenshots").

Section 7.11 - Playback Panel

The *Playback Panel* provides Archive and local file playback controls, extensive search capabilities, and seamless transition from live to Archived footage.

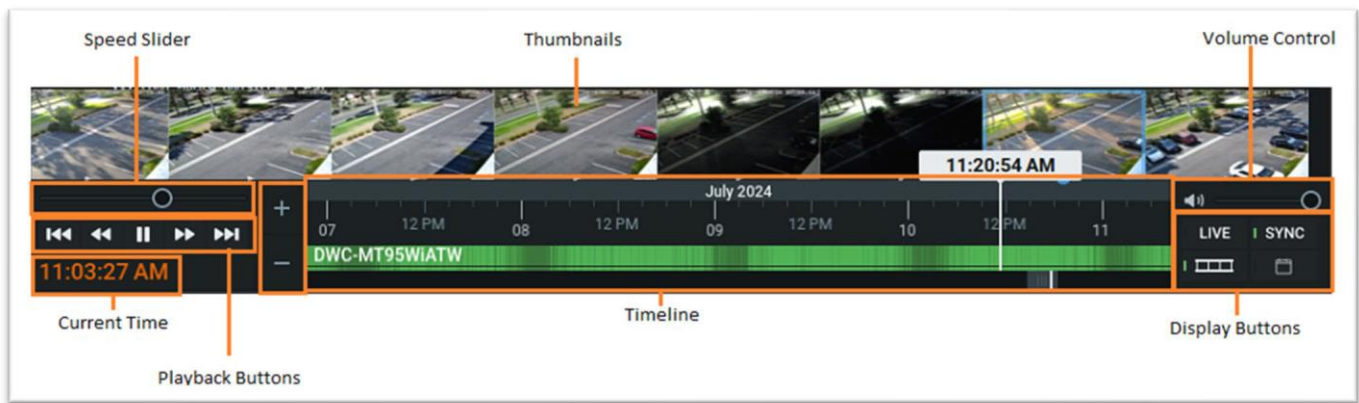

- **Current Time** – displays the current time from the computer.
- **Playback Buttons** – start, stop, and control playback speed.
- **Speed Slider** – alternate control for playback speed.
- **Timeline** – controls navigation through Archive footage. See "[Using the Timeline](#)".
- **Thumbnails** – drag the upper edge of the Timeline upward to display preview thumbnails. See "[Using Thumbnails](#)".
- **Display Buttons:**
 - **LIVE** – switches selected camera(s) to live playback mode. See "[Parts of the Timeline](#)".
 - **SYNC** – performs time synchronization of all cameras displayed on the current layout. See "[Synchronizing Playback](#)".
 -  – Show/hide thumbnails above the Timeline.
 -  – Show/hide calendar for navigating through Archives. See "[Using the Calendar](#)".
- **Volume Control** – adjusts audio volume of the client application. See "[Adjusting Volume](#)".

 **NOTE:** Users must have the Play Audio permission, either directly assigned, or through group membership to play audio.

Section 7.12 - Notification Panel


The notification panel provides centralized access to Site information, with separate tabs for:

- **Notifications** – alerts users to system and device events.
- **Motion** – enables motion detection search.
- **Bookmarks** – use to find and view bookmarked archive video.
- **Events** – lists recent system, device, and analytic events.
- **Objects** – enables object identification and analytics search.

Detected events can be searched, filtered, and controlled without leaving playback mode and without opening another window that might interfere with the layout display.

The notification panel has three main sections:

- **Tabs** – use to navigate between the Notifications, Motion, Bookmarks, Events, and Objects features in the Notification panel.
- **Filters** – use to refine search results.
- **Tiles** – provides thumbnail and abbreviated information relevant to the corresponding tab.

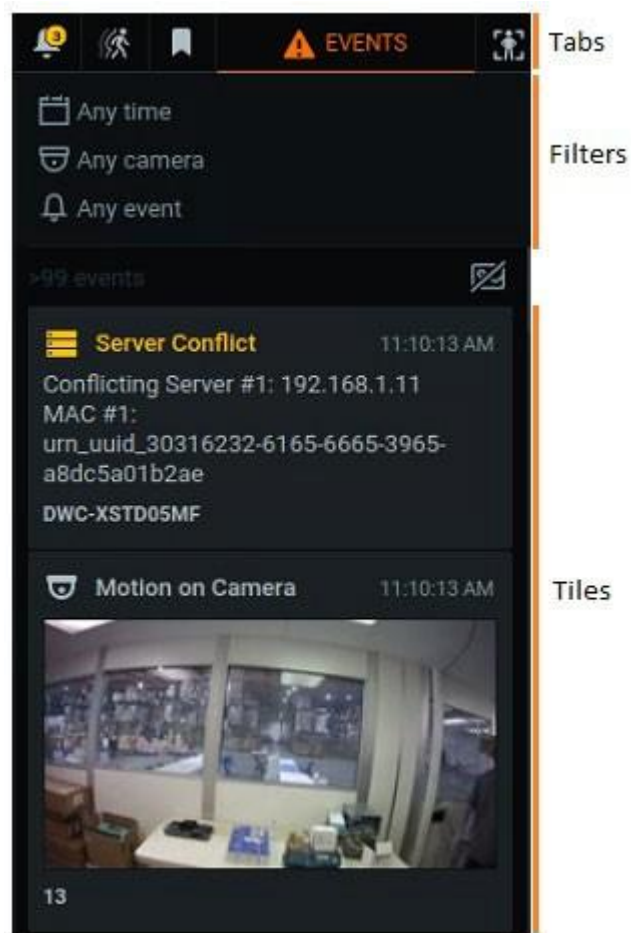

Panel Behavior

The notification panel can be minimized/maximized by clicking on the arrow on the outer edge.

Right-clicking on the background in any tab opens a generic context menu:

- *Event Log* – see "[Viewing and Exporting the Event Log](#)"
- *Event Rules* – see "[Event Rules](#)"
- *Filter* – see "[Global Notifications](#)"

Tab Behavior

Only one tab can be active at a time. Each tab can be searched and filtered independently by time, camera, or other parameters applicable to the given tab. Tab visibility depends on the state of the Site and user permissions. For example, the motion tab is only available if the user has permission to view Archive; the objects tab is only visible if there is an analytics plugin on the Site which can detect objects, or if there is a Database of detected objects from a previously attached plugin.

Filters

The filter section has a set of controls which will differ by tab. The state of filter controls is independent and persistent for each tab when configured in the notification panel. The filter options to choose from are time, camera, area for motion detection, event type for events, object type, and area selector for objects. See "[Searching and Filtering in DW Spectrum](#)" for more details.

Click on a filter control to open a menu of options. When a filter is applied it will be highlighted. Some filters can also be added by selecting an item outside of the notification panel, such as clicking on a

camera tile or selecting an area on a camera tile to filter motion detection. Click on the **X** to clear a filter.

- **Time selector** – The following options are available:

- Any time (default)
- Last day
- Last 7 days
- Last 30 days



NOTE: If a segment is selected on the Timeline, that segment becomes the time filter and is applied to all tabs.

- **Camera selector** – The following options are available:

- Any camera (default)
- Current camera
- Cameras on layout
- Choose cameras

- **Area selector** – Available to the objects and motion tabs only, with the prompt to "Select area on the video to filter results" if an area is not selected, or in filtered state "In selected area". In the motion and objects tab, selecting an area simultaneously selects the related camera.

- **Event selector** – Available for the events tab only and has a two-level menu where the second level menu options are dependent on the top-level selection. Available events are:

- Any event
- Motion on Camera
- Input Signal on Camera
- Soft trigger
- Plugin Diagnostic Event
- Generic Event
- Analytics Event
- Camera Issues
- Server events

- **Plugin selector** – Only available while in the objects tab. Its options depend entirely on the third-party products integrated with the DW Spectrum Site.

- **Object selector** – Only available while in the objects tab. Its options depend entirely on the third-party products integrated with the DW Spectrum Site.

Event Counter

The event counter shows the number of events displayed in the tiles section. Click the image button () to toggle



thumbnails on and off, and in the objects tab, click the information button () to toggle thumbnail information on and off.

Tile Behavior

The tile display always shows the most recent tile on top. If the source camera is not in the current layout, double-click to add it to the current layout or open it in a new layout tab using the context menu. If the source camera is open in the active layout and **SYNC** mode is turned on, the Archive playback for all items in the layout will be synchronized to that camera's Timeline. Clicking on a tile opens the related Archive and moves the Timeline marker to the start of the bookmark.

All tiles have one of four priority types, as indicated with color:

- Default
- Success

- *Alert*
- *Critical*

The notifications and event tabs handle tiles differently depending on the event type. A notification tile may open because of an event and then close, or may open and only close when the triggering event ends or the triggering Site state changes. However, notifications with the "[Force Acknowledgment](#)" setting cannot be closed until the required action is complete.

Search Field

Input text to filter out results so only the tiles that meet the search criteria are displayed.

Responding to a Notification

In the Notifications tab, hovering the cursor over a notification displays additional information according to the notification type.

Clicking on a notification displays additional information and triggers a corresponding action. For example, clicking on a "Network issue on device" notification displays the last frame received from that device and opens the *Device Settings* dialog.


Section 7.13 - Notifications Tab

Users can select to receive any notifications, one of two types of notifications, or a customized list of selected notifications by clicking on the notification type.

Types of Notifications

- [Event Notifications](#) are generated when an event rule is true and valid.
- [Site Notifications](#) are generated when specific Site conditions are present.
 - *Site Notifications* are pinned to the top of the tile section display and include the state of a Site component.
 - Most tiles will open the related settings or dialog screen when clicked.
 - Resolution suggestions are provided where possible.

 **NOTE:** Users can disable selected notifications using the *Notification Suppression* dialog.

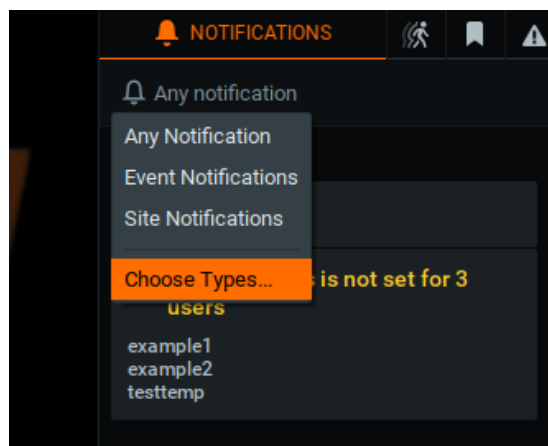

Cross-Site Notifications

Sites that are connected within a common [Organization](#) will display notifications and informers from all Sites in the organization when cross Site notifications are enabled.


Key features of the cross-site notification service:

- Users must be logged into the Cloud to receive cross Site notifications.
- The desktop client will only display communications from Sites that the current user has access to.
- The cross Site notification selector is only displayed while logged into the Cloud and when compatible Sites are available.
- Cross Site notifications must be enabled each time the desktop client is restarted – this setting is not saved.
- Notification footers are prefixed with the Site ID instead of the camera IP Address provided with local Notifications.
- Cross Site Notifications are initiated by the event action [Show Desktop Notification](#) and adhere to other event rules (distribution, timing).

 **NOTE:** If 2FA is required on a Site that is generating a cross-site notification, and the receiving user is not authenticated, then the user will be provided with an informative dialog and the option to authenticate and enable receipt of notifications from the Site generating (2FA) notifications.

Enable or Disable Cross Site Notifications:

1. Select the notifications tab in the right panel.
2. Select *All Sites* to enable or *Current Site* to disable cross Site notifications.

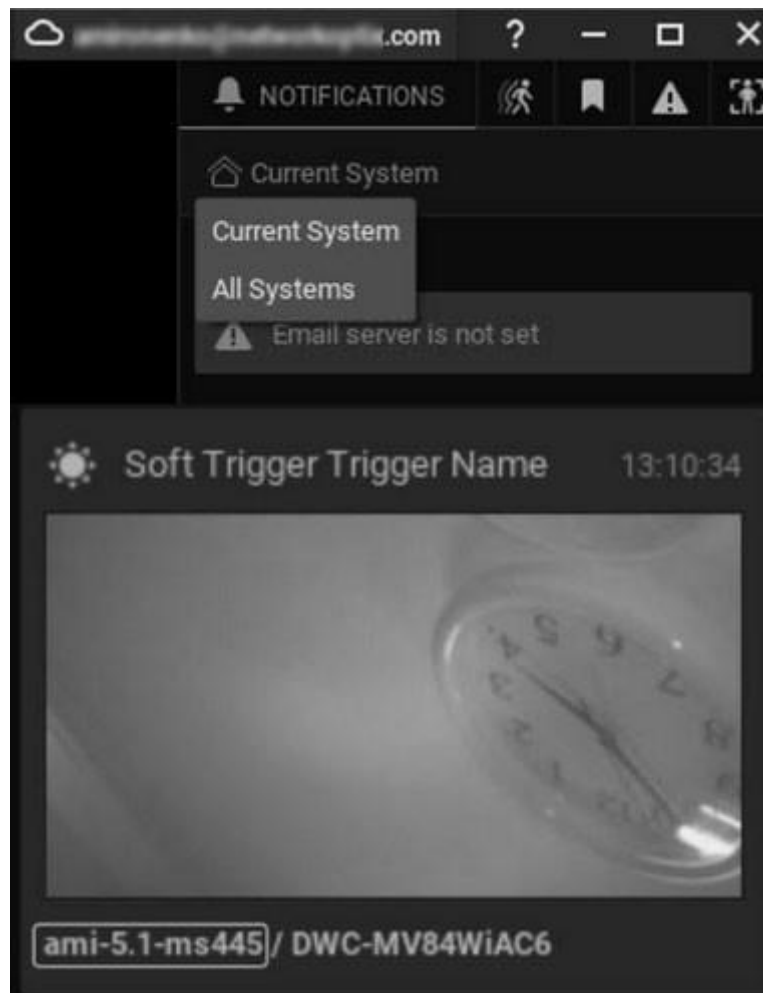

Site Notifications

The following Site Notifications serve to inform users when current settings or operational factors may limit Site features or performance.

Notifications Common to All Versions

Notification Title	Additional Information	Click on Notification Action
Email address is not set	Email delivery of notifications to the logged in user are not possible.	Opens Edit User dialog window dismiss the notification.
Email server is not set	The Site cannot send Email notification until an outgoing Email server is configured.	Opens the Email server configuration dialog or dismiss the notification.
Some user have not set their email addresses	Provides a list of users without valid email addresses. user--1 user--2	Opens the user dialog window for the first user in the list or dismiss the notification.
Error while sending email	Outgoing message were not processed by the Email server.	Opens the Email server configuration dialog or dismiss the informer.
Storage is not configured	Provides a list of server where storage is not configured. server--1 server--2	Opens storage management dialog or dismiss the notification.
Rebuilding the archive index is complete	Provides a list of server where archive index has been rebuilt.	Opens storage management dialog or dismiss the notification.
Rebuilding the archive index is canceled by user	Provides a list of server where archive index rebuild was canceled before completion.	Opens storage management dialog or dismiss the notification.
Archive integrity problem detected	Event occurs when archive files are removed, renamed, manually changed, or when a file has a incorrect time data.	Dismiss the notification
Site has no internet access for time synchronization	No online server in the site has internet access for time synchronization	Opens time settings dialog or dismiss the notification.
Backup storage is not configured	Provides a list of server where backup storage is not configured. server--1 server--2	Opens storage management dialog or dismiss the notification.
Camera recording schedule is invalid	Some cameras are set to record in a mode they do not support.	Opens camera settings window dismiss the notification.
Storage for analytical data not set	A storage location for analytical data has not been configured.	Opens storage management dialog or dismiss the notification.
System partition is used for analytics data	Analytics data can take up large amounts of space. We recommend choosing another location for it instead of the system partition.	Opens storage management dialog or dismiss the notification.
Intercom call	Incoming intercom call (signal) received	Opens intercom dialog
Intercom call missed	An incoming intercom event was not	

	answered.	
Recording disabled	Recording is disable	

Notifications Common to Enterprise Version		
Notification Title	Additional Information	Click on Notification Action
Local recording services overused	The number of services in use exceeds the number of services available	
Cloud storage services overused	The number of services in use exceeds the number of services available	
Paid integration services overused	The number of services in use exceeds the number of services available	
Site suspended	The Site has been suspended – contact your channel partner for assistance	
Site shutdown	The Site has been suspended – contact your channel partner for assistance	
Site will stop functioning soon	Site is schedule to be suspended or shutdown in less than 30 days	
Cloud storage backup disabled	Cloud backup is configured, yet disabled	
Paid integration services disabled	A paid integration services is available, yet currently disabled and not in use	

Professional Version		
Notification Title	Additional Information	Click on Notification Action
Remote archive synchronization failed	Remote archive synchronization has been started for resource: {device.ID}	
No licenses	No licenses are available and recording is prohibited.	Opens the license configuration dialog or dismiss the notification.

Deprecated Notifications – May Appear in Historical Logs		
Site Notification Title	Additional Information	Click on Notification Action
Archive Backup Finished		N /A
Remote archive synchronization failed	Remote archive synchronization has been started for resource: {device.ID}	N /A
Remote Archive Synchronization	Started synchronization of data on remote device to the Site archive.	N /A
Site in Safe Mode.	Site operating in safe mode after experiencing an unanticipated event.	N /A

Disable Notifications


Individual event notification can be disabled by the user without effecting the event rules or notifications

received by other users of the Site. This can reduce use distractions related to certain domains at the risk missing a relevant notification and thus should be used with caution.

To select the displayed notifications for a user, first select the Alerts tab in the [Notification Panel](#) and then open the label below the notifications tab and select one of the following choices from the menu:

- Any notification to automatically select the *Show all notifications* checkbox atop the list of notifications
- Event notifications to automatically select all event notifications and deselect all Site notifications.
- Site notifications to automatically select all Site notifications and deselect all event notifications.
- Choose Types... to open the individual notification selection dialog.


 **NOTE:** The checkbox for *Show All Notifications* must be disabled/unchecked to allow individual notification type selection.

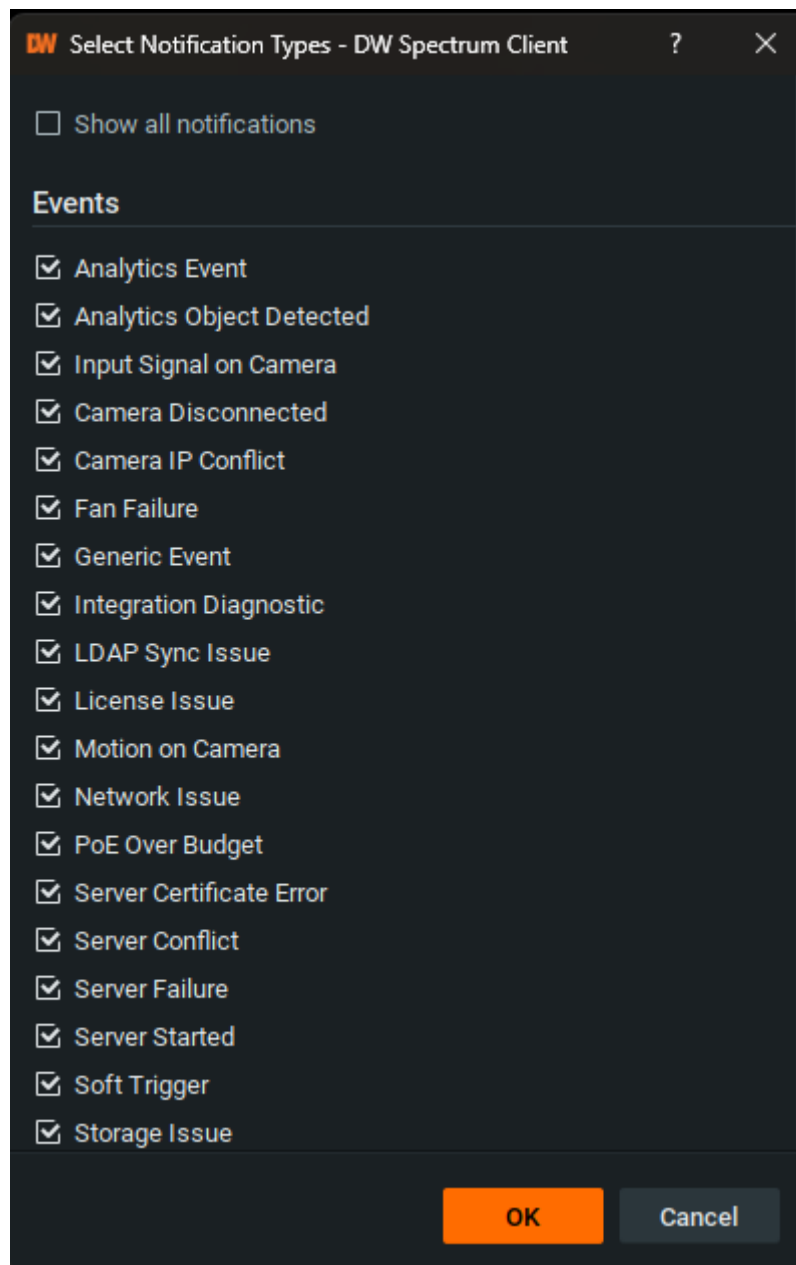


Section 7.14 - Motion Tab

When the *Motion* tab is active, the client enters *Motion Search* mode. Conversely, any other method of entering motion search mode will launch the motion tab. In this mode, items in the active layout are overlaid with a semi-transparent motion smart search grid. The default filter display is any time and the currently selected camera.

 **NOTE:** Motion search is limited to a single device at a time.

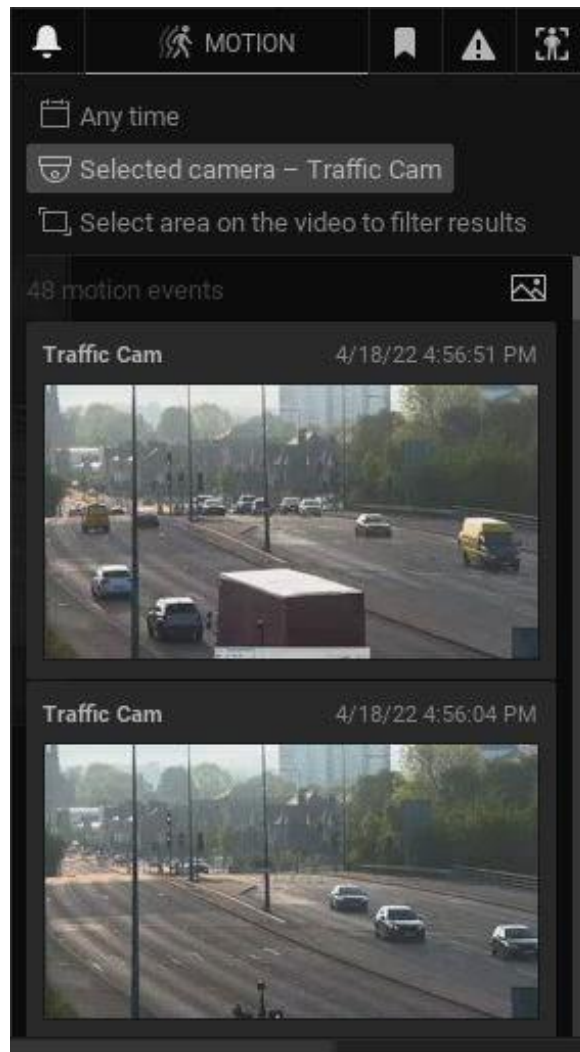

By clicking and dragging on an item display, a red rectangular area is created in which motion will be detected for that camera. Multiple search areas can be created by holding down the **Ctrl** key while drawing. Selecting a detection area also sets the filters to the states *Selected Camera* and *Selected Area*.

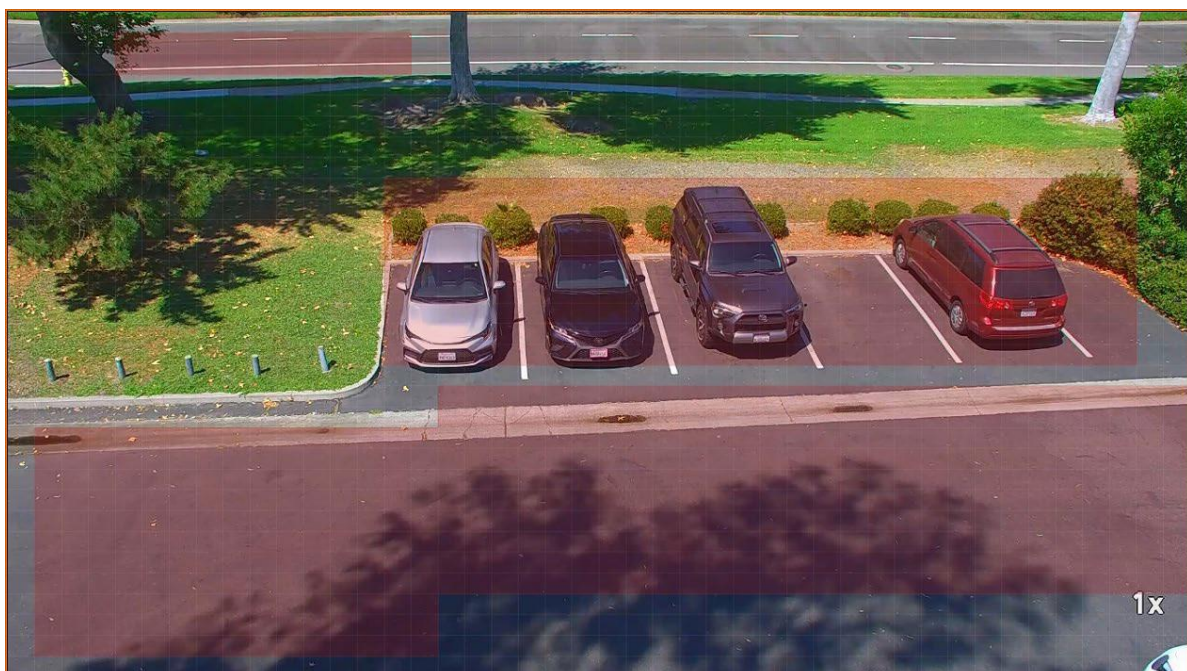

Archive segments on the Timeline that have motion in the selected area are highlighted in red. There can be a motion detection area in as many items on the layout as desired. When switching to a different camera, the motion search display switches accordingly.




To Enter Motion Search mode from Layout:

1. Right-click on the item and click the **Show Motion/Smart Search** option from the context menu.
2. Click the **Smart Motion Search** button () in the top right of the item tile.
3. Press the **M** key.


Section 7.15 - Bookmarks Tab

The *Bookmarks* tab in the notification panel provides a visual interface for searching and viewing bookmarks. All information from the bookmark dialog is displayed with a thumbnail image for approximately the middle of the bookmarked video.

When a camera tile is selected, bookmarks in the Archive will be shown in descending order by Archive timestamp. Clicking on a bookmark will move the Timeline marker to the start of that bookmark. The default filter display is any time for any camera on the layout. The search field can search through the bookmark name, description, and tags (see "[Searching and Filtering in DW Spectrum](#)" for more details).

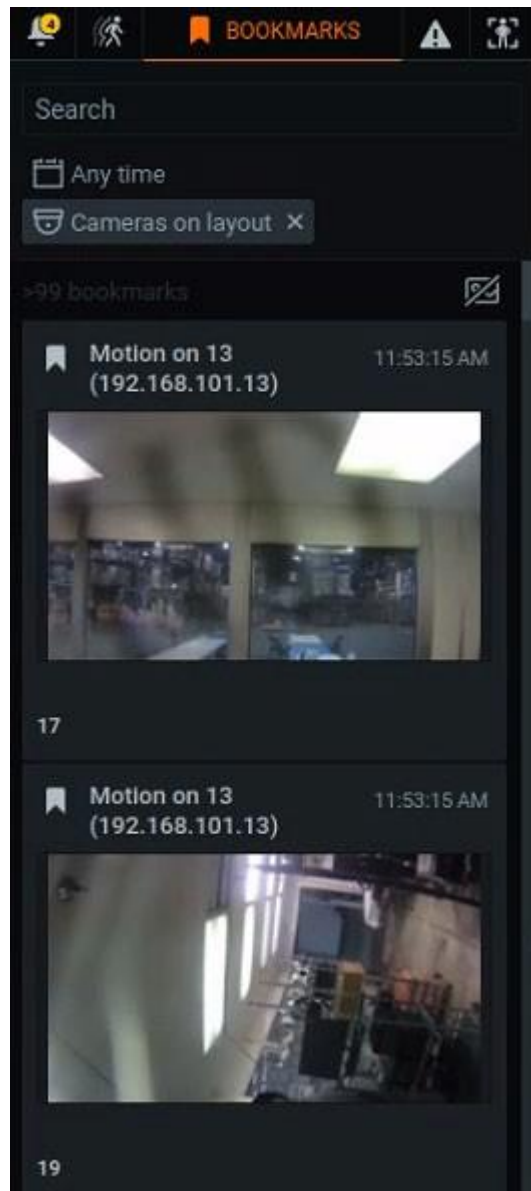


 When the Bookmarks tab is active, blue bookmark segments will display in the Timeline (see "[Using Bookmarks](#)" for more details.)



Section 7.16 - Events Tab

The *Events* tab is only available to users who have permission to view the event log. It provides a visual display of the events log content (see "[Viewing and Exporting the Event Log](#)"). The default filter display is any time, any camera, and any type of event.

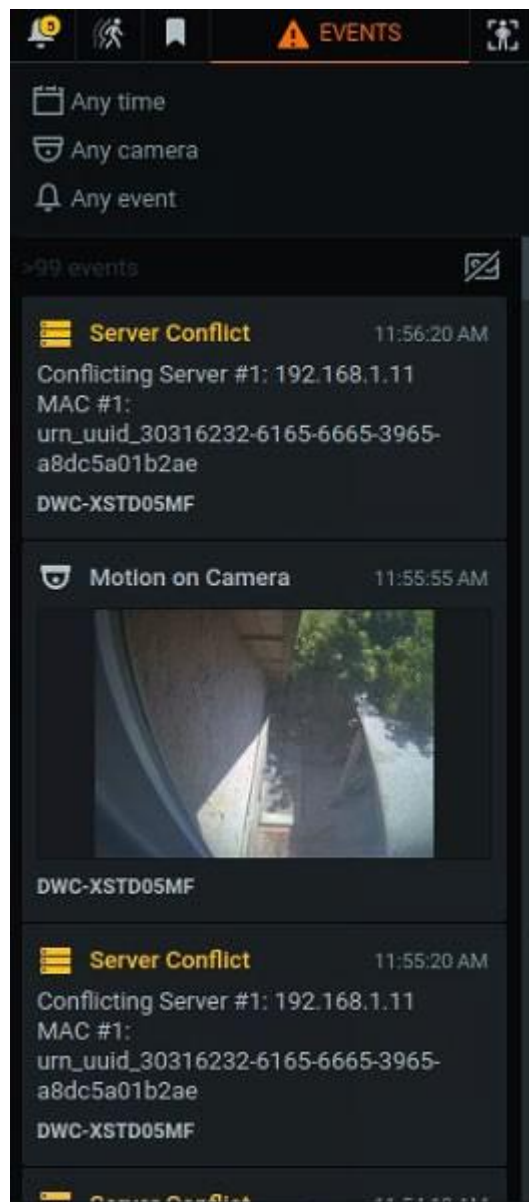


Section 7.17 - Objects Tab

The *Objects* tab provides access to the configuration controls and display of object-based analytic searches. Options and controls are dependent on the permissions granted to the current user and the abilities of the available plugin.

- Visibility of the *Objects* tab depends on the existence and type of analytics in the Site and the user's permission level.
- When an analytics plugin is enabled, newly detected objects will appear as tiles if a camera is open and being viewed, or a camera is recording.
- Previously detected objects stored in the Archive will also appear as tiles.
- Detections not recorded to the Archive will be lost after closing the desktop client.
- Detected objects are outlined by bounding boxes that can be seen in the thumbnail that appears when hovering over the tile.
- The color used for bounding boxes can vary between object types and analytics plugins.
- Some analytics plugins allow the bounding box color for object types to be customized.

- The object filter can be used to filter for a specific object type, but defaults to "Any type".
- Depending on the analytics plugin being used, different selectable object types (car, human, bicycle, etc.) may be available.
- The Search tool can search through object types and object text attributes (color, make, travel speed, etc.). See "[Searching and Filtering in DW Spectrum](#)" and "[Analytics: Region of Interest \(ROI\)](#)" for more details.

 **NOTE:** The device filter in Advanced Search inherits the device filter from the Objects tab and is limited to one device when using a Cross-Site Layout.

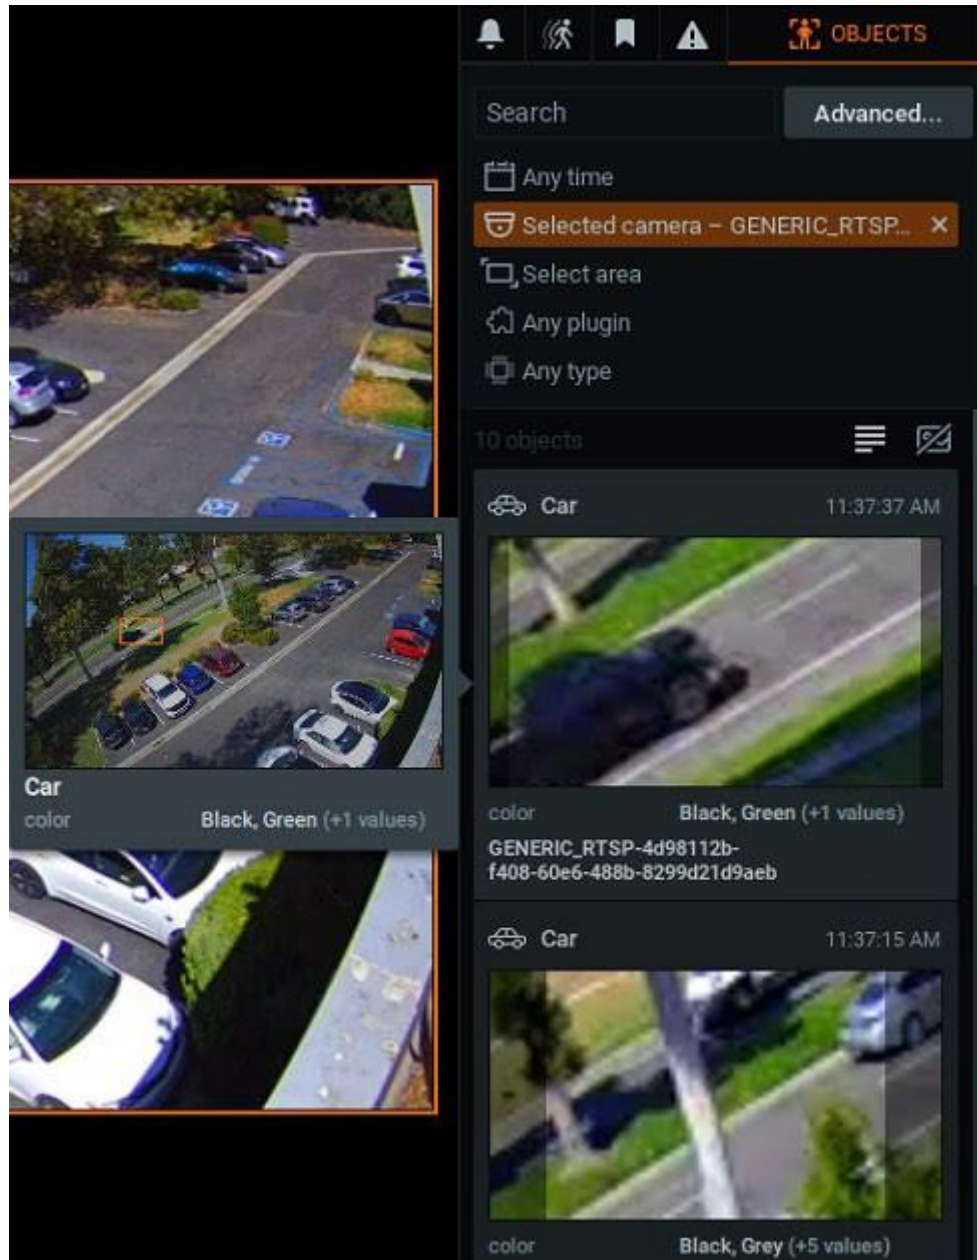

 **NOTE:** Fields from an *Analytics Event* can be used to automatically fill in certain parameters when creating an *HTTP Request* (see "[Do HTTP\(s\) Request](#)" for more information.)

The default filter displays at any time and the cameras on the layout. The area selector filter is always available and defaults to "Select area" when filtering is not applied. Click and drag over any device to create an area and change the filter to "In selected area" for the selected camera.


Detected objects are indicated with yellow segments in the Timeline.



Advanced Object Search

For more granular control over the filtered object type, click **Advanced** to open the *Advanced Object Search* dialog. This dialog displays objects from the objects tab in two or more columns (depending on window size) and allows for easier switching between enabled plugins via the tabs at the top and configuring other selected options such as object type in the menu on the left. To see the selected search result in the main window, click the play icon and view a bookmarked position in the Archive.


- Advanced Object Search provides filters and options that enable the viewing of specific results.
- Available plug-ins and integrations are listed across the dialog header in a tab-style selection control.
- The left side panel contains all of the Advanced Object Search parameters for the active plugin or integration.
- Additional panels in the Advanced Object Search Dialog include the results panel (center) and the preview panel (right side).
- The results presented in the center panel can be either a card view (image and metadata) or a table view that removes the images makes room for additional results.
- The preview panel includes available metadata provided by the plugin or integration service.
- Data and columns in the table view can be organized by using the Settings (gear) icon on the table view.
 - Settings/Gear icon is only available when Object Type is selected
 - Choices for Table view and Card view are independent (you may show “Color” in Card view, but not in Table)
 - Only shows Attributes that are available for the currently selected Object Type. When 2 object types share some attribute (i.e both Vehicle and Animal have “Color”) - the attribute will be visible for both.
- Hover over a card to display additional playback options (speed, jump points) that may be available.
- The preview panel will play the entire duration that the object is visible, including 4 seconds before and after the after object was detected.
- Left side panel can be re-sized to present an alternate view of the filter and tiles.

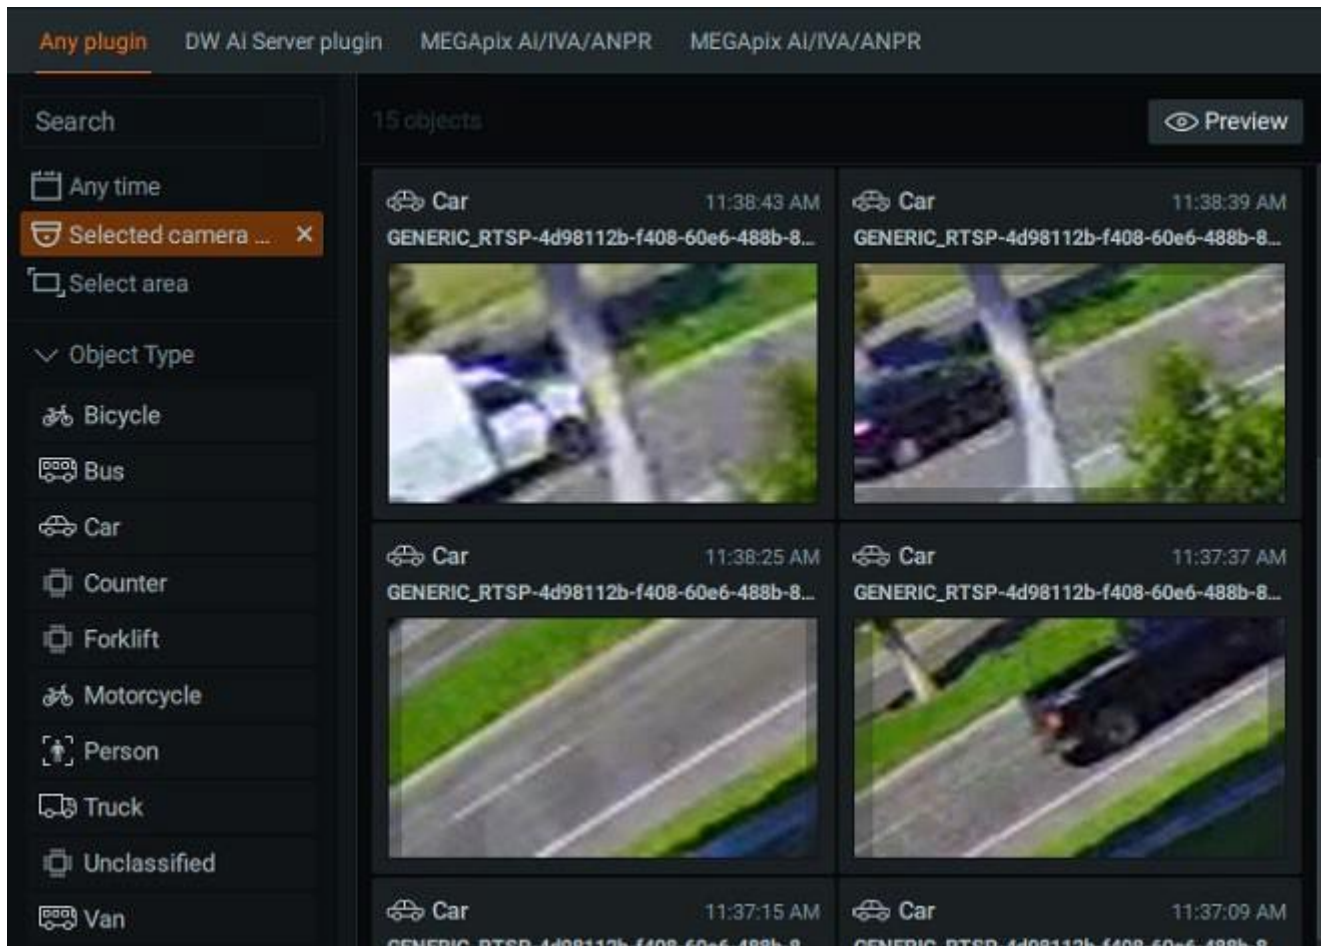

When a result is selected and *Preview* is clicked, a sidebar will open within the dialog, showing that portion of the Archive. Click *Show on Layout* to go back to the main window and view that position in the Archive.

Using Advanced Search

1. Select the [Objects Tab](#) from within the [Notification Panel](#).
2. Click on the **Advanced** button to open the Advanced Object Search dialog.
3. Select the active plug-in from header menu or select **All Plugins** – all plugins may not support all select object attributes.
4. Configure the search and filter parameters – results will update as parameters are adjusted.

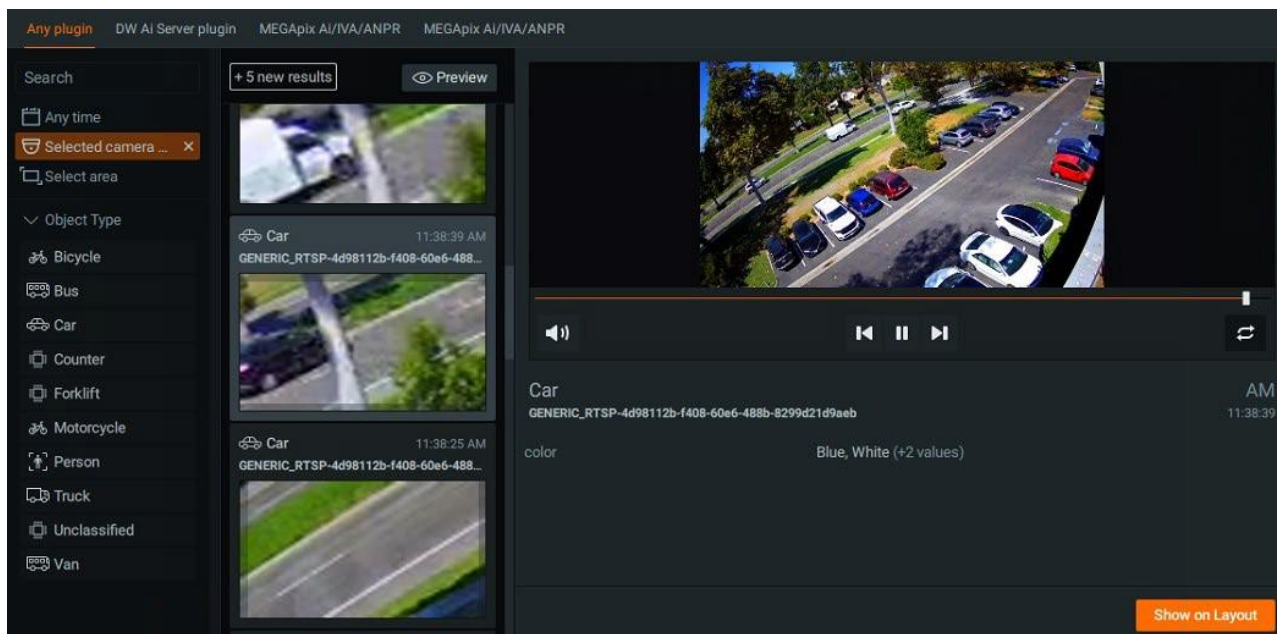

Viewing Advanced Search Results

1. Toggle the viewing option between Card (image based) and List (text based) formats.
2. Click on the Settings (gear icon) to adjust the fields shown in the results panel.
3. Select a card or list item to open the preview panel.
4. Click **Show on Layout** to return to the main view and align the playback with the search result.

Section 7.18 - Working with Multiple Windows

Multiple DW Spectrum client windows can be open at once.

To open a new window, click the **Main Menu > New > Window**. Items can be selected from the resource panel or viewing grid and dragged to the new window (only administrators can add items to a predefined layout).

An item can also be opened directly in a new window:

1. Select desired Items in the resource panel or on the viewing grid.
2. Select **Open in New Window** from the context menu.

The video wall feature provides further control of multiple displays and broadcast capability (see "[Video Wall Management](#)").

Section 7.19 - Keyboard Shortcuts

These keyboard shortcuts are for Windows and Ubuntu Linux, but most will also work for Mac OS by replacing "Ctrl" with "Command" key. Keyboard shortcuts only affect the active item.

Action	Windows Shortcut	macOS Shortcut
About	F1	F1
Alarm / Event Rules	CTRL + E	CMD + E
Archive selection end	]	]
Archive selection start	[	[

Action	Windows Shortcut	macOS Shortcut
Bookmark Log	CTRL + B	CMD + B
Exit item's fullscreen mode	Esc	Esc
Check File Watermark	Alt + C	Option + C
Close layout	CTRL + W	CMD + W
Connect to another Server	CTRL + Shift + C	CMD + Shift + C
Create new Layout	CTRL + T	CMD + T
Device List	CTRL + M	CMD + M
Disconnect from Server	CTRL + Shift + D	CMD + Shift + D
Duplicate item on layout	CTRL + drag-and-drop	CMD + drag-and-drop
Enable Smart Search	Shift + Left click + drag area	Shift + Left click
Enable/disable Image Enhancement	Alt + J	Option + J
Event Log	CTRL + L	CMD + L
Exit Desktop client	Alt + F4	Option + F4
Fisheye dewarping (toggle)	D	D
Hide all panels and switch to Fullscreen Mode	F11	F11
Hotspot toggle	H	H
Information on Item (toggle)	I	I
Maximize/minimize item	Enter	Enter
Move entire scene	Alt + arrows	Option + arrows
Move PTZ/fisheye camera angle	?, ?, ?, ?	?, ?, ?, ?
Mute	U	U
Next layout in tour	?, ?, PgDn, Space, or Enter	
Next recorded chunk	X	X
Open Bookmarks tab (from Notification Panel)	CTRL + B	CMD + B
Open Events dialog	CTRL + E	CMD + E
Open local file	CTRL + O	CMD + O
Open Motion tab (from Notification Panel) Smart Search Toggle	M Alt + M to toggle	M Option + M to toggle
Open new window	CTRL + N	CMD + N
Open Notifications tab (from Notification Panel)	N	N
Open Objects tab (from Notification Panel)	O	O
Play/Pause video	Space	Space
Playback slow down (on play) / previous frame (on pause)	CTRL + ?	CMD + ?
Playback speed up (on play) / next frame (on pause)	CTRL + ?	CMD + ?

Action	Windows Shortcut	macOS Shortcut
Playback – forward 10 seconds	?	?
Playback – rewind 10 seconds	?	?
Previous layout in tour	?, ?, PgUp, Backspace	
Previous recorded chunk	Z	Z
PTZ (toggle)	P	P
Remove item from layout	Delete	Delete
Rename Resource	F2	F2
Rotate item	Alt + Click-and-drag	Option + Click-and-drag
Rotate with 15-degree step	CTRL + Alt + Click-and-drag	CMD + Option + Click-and-drag
Save layout	CTRL + S	CMD + S
Save layout as	CTRL + Shift + S	CMD + Shift + S
Screen Recording (toggle) – Windows Only	Alt + R	Option + R
Screenshot from selected item	Alt + S	Option + S
Search Resource Panel	CTRL + F	CMD + F
Select camera on layout	Shift + ?, ?, ?, ?	Shift + ?, ?, ?, ?
Shift selection in Resource Panel	?, ?	?, ?
Start tour on layout	Alt + T	Option + T
Switch Layout	CTRL + Tab	CMD + Tab
Switch to LIVE	L	L
SYNC on/off	S	S
Site Administration	CTRL + Alt + A	CMD + Option + A
Volume down	CTRL + ?	CMD + ?
Volume up	CTRL + ?	CMD + ?
Windowed mode/Fullscreen	Alt + Enter	Option + Enter
Zoom in/out on PTZ or a fisheye camera	[+]or [-] + Mouse Scroll Wheel	[+]or [-] + Mouse Scroll Wheel
Zoom window (create)	W	W

Section 7.20 - Getting Context Help

DW Spectrum includes a context-sensitive help Site.

To launch the help Site, click on the **Help** button "?" in the navigation panel, then click on the desired interface element. This manual will open in a web browser to the topic most relevant to the clicked element.

Press the **F1** key to open the *About DW Spectrum* dialog, which displays important Site and network configuration information (see "[Collecting Additional Information](#)").


Section 7.21 - DW Cloud Portal Interface

DW Cloud is an important part of DW Spectrum that extends functionality of DW Spectrum Sites.

Once a Site is linked to DW Cloud, the Site can be accessed from virtually any Internet browser. Depending on the Site configuration, the DW Cloud can display bookmarks and Cloud layouts that contain devices from different Sites. See "[Connecting Site to DW Cloud](#)" and "[Logging in to DW Cloud](#)".

The Cloud portal menus and options are contextually aware and will change based on selections made, Site configuration, and user permissions.

- The header includes tabs for enabled functions (View, Layout, Bookmarks, Settings, Information, Monitoring, Services).
- The tabs displayed will vary depending on the version of software and permission of the active user.
- The left panel shows second-level menus choices, filters, or resource selection controls.
- Information refined by the menu selections is displayed in the center display panel.

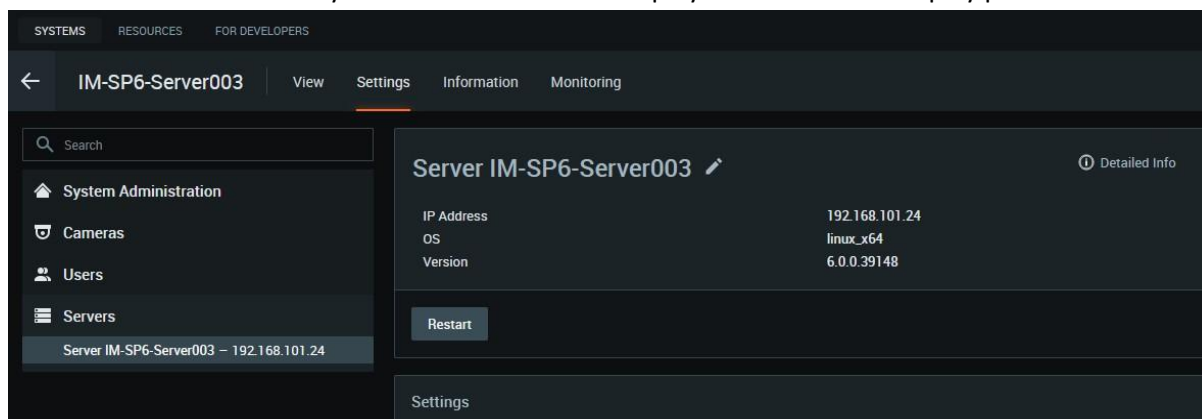

Section 7.22 - Setting Up 2 Factor Authentication

Improve the security of a DW Cloud account and prevent unauthorized access by enabling *Two-Factor Authentication* (2FA). Logging into an account with 2FA turned on requires a verification code generated by a mobile authentication app (e.g. Google Authenticator, Microsoft Authenticator, or Duo Mobile) in addition to the *DW Cloud* password

To Turn on Two-Factor Authentication (2FA):

1. Install Google Authenticator, Microsoft Authenticator, or Duo Mobile on the user's mobile device.
2. Open DW Cloud Portal and log in to the user's account.
3. Open the [Account Settings](#) dropdown menu and click **Security**.
4. Enable **Two-factor Authentication**.
5. Enter the user's DW Cloud account password.
6. Open the mobile authentication app and scan the QR code.
7. Enter the TOTP verification code generated by the mobile authentication app.
8. Click **Verify** to complete the setup process.

 **NOTE:** For additional security, enable *Ask for verification code on every log in with DW Cloud account*, or generate single-use backup codes to keep somewhere safe that can be used to log in if access to the mobile authentication app is lost.

To Require Cloud Users to have Two-Factor Authentication (2FA) Enabled:

1. Open DW Cloud and log in as a Site Administrator.
2. Navigate to the **Site Administration > Security** page.
3. Select the option "*Mandatory two-factor authentication for cloud users*". Cloud users without two-factor authentication will not be able to log into the Site. This setting does not affect local and LDAP users.

To Turn Off Two-Factor Authentication (2FA) for a Cloud User:

1. Open DW Cloud Portal and log in to your account.
2. Open the [Account Settings](#) drop-down menu and click **Security**.
3. Click the **Disable** box.
4. Enter the TOTP verification code generated by the mobile authentication app.
5. Click the **Disable** box to complete the action or select **Cancel**.

To Generate Backup Codes:

Backup codes can be used when DW Spectrum Mobile cannot be used.

1. Open DW Cloud Portal and log in to your account.
2. Open the [Account Settings](#) drop-down menu and click **Security**.
3. Click the **Generate Backup Codes** button.
4. Click the **Copy All** button to copy the backup codes to the clipboard.
5. Paste the backup codes into a recovery file and save it to a secure location.

 **NOTE:** Any previously generated backup codes will be invalidated.

To Authenticate Using Backup Codes:

1. Open DW Cloud Portal and log in to your account.
2. When prompted for the verification code, click the link at the bottom of the dialog box labeled **No access to authentication app?**
3. Enter one of the previously generated and saved backup codes
4. Click the **Log In** button.

 **NOTE:** Each Backup code can only be used one time. Remember to regenerate new codes if they are frequently used to access Sites.

Section 7.23 - DW Spectrum Web Admin Interface

The DW Spectrum Web Admin provides a method to access local Sites using a simple and lightweight browser interface.

The Cloud portal menus and options are contextually aware and will change based on selections made, Site configuration, and user permissions.

- The header includes tabs for enabled functions: *View, Settings, Information, Monitoring*.
- The left panel shows second-level menus, filters, or resource selection controls.
- Information refined by the menu selections is displayed in the center display panel.



Part 8: Site-Wide Configurations (Site Administration)

The Site Administration dialog (**Ctrl + Alt + A**) is used to manage users, configure devices, maintain licenses or allocate services, set up outgoing email services, and create events DW Spectrum will track.

The dialog contains the following tabs and sections:

- *General*
 - [Event Rules](#) – opens the dialog to configure events and corresponding actions
 - [Event Log](#) – opens the list of past events
 - [Device Camera List](#) – opens the list of devices in the Site
 - [Audit Trail](#) – opens the list of users' actions. Can be enabled and disabled
 - [Bookmarks](#) – opens the bookmark log
 - *Site Settings* – selectable options displayed on the general tab:
 - [Enable Automatic Device Discovery.](#)
 - [Send anonymous usage and crash statistics.](#)
 - [Preventing DW Spectrum from Changing Device Settings.](#)
 - Custom language for Cloud notifications.
- [User Management](#) – access the configuration dialogs for users and groups
- [Updates](#) – tools to manage versions and updates
- [Licenses](#) – view, activate and manage Site licenses
- [Email](#) – enable the Cloud email service or configure an outgoing email server
- *Security:*
 - [Use only HTTPS to connect to cameras](#)
 - [Force servers to accept only encrypted connections](#)
 - [Encrypt video traffic](#)
 - [Adding a User Watermark](#)
 - [Enable audit trail](#)
 - [Limit session length](#)
 - [Archive encryption](#)
- [DW Cloud](#) – create or connect to a Cloud account
- [Time Sync](#) – synchronize server time
- [Routing](#) – shows Site servers and their IP addresses
- [Plugins](#) – list of the analytics plugins on the Site, in alphabetical order by device manufacturer
- *Advanced:*
 - [Backup and Restore](#) – creates or restores a backup Database of the Site configuration (server and

- camera settings, users, event rules, etc.)
- o [Logs Management](#) – enables users to specify log levels and download log files

Section 8.1 - Site DW Cloud Connections

Connecting a Site to a Cloud account will enable DW Cloud features and additional connection methods. Sites can be connected using the desktop client or the [DW Spectrum Web Admin interface](#).

Users logged into DW Cloud can access all the Sites connected to their DW Cloud account (see "[Connecting to Site from the Welcome Screen](#)").

The following can be done with the Cloud:

- Login to any Cloud Site without reentering credentials
- Share access to DW Cloud with other Cloud Users
- Share Sites with users and add users to groups. This action is logged in the [Audit Trail of User Actions](#)

Section 8.2 - Connect a Site to DW Cloud

It is necessary to have a DW Cloud account first (see "[Creating a DW Cloud Account](#)".)

Desktop Client

1. Open the **Main Menu > Site Administration** and click the **DW Cloud** tab
2. Click **Connect Site to DW Cloud** and log into the DW Cloud account to which the Site will be connected

Web Admin

1. Open the [Web Admin](#) and log in
2. **Open Settings > Site Administration > General**
3. Click **Connect to DW Cloud** and log in to the DW Cloud account to which the Site will be connected


Once connected, the Site will be displayed in the [DW Cloud Portal](#) and will be accessible when logged into the Cloud.

Section 8.3 - Disconnect a Site from DW Cloud

 **IMPORTANT:** Disconnecting a Site will remove access for all Cloud Users that Site is shared with.

Desktop Client

1. Log in as a Site administrator
2. Open the **Main Menu > Site Administration** and go to the **DW Cloud** tab
3. Click **Disconnect Site from DW Cloud** and authenticate when prompted
4. Confirm disconnection and the removal of all Cloud Users from the Site

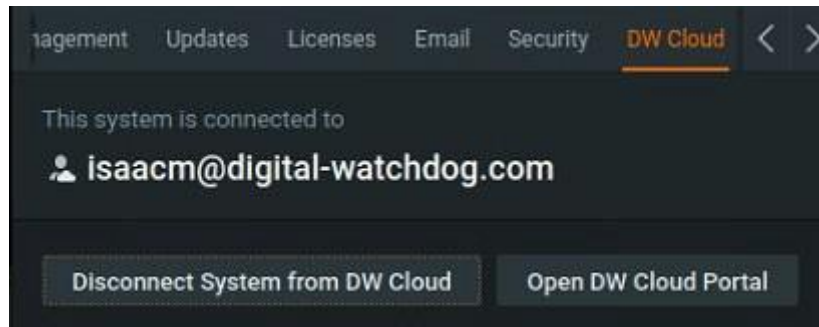

Web Admin / Cloud Portal

1. Open the [Web Admin](#) and login as a Site administrator
2. Click the **Settings** tab in the header menu
3. Select **Site Administration** > **General** on the left panel
4. Click **Disconnect Site from DW Cloud** and authenticate if prompted
5. Confirm disconnection and the removal of all Cloud Users from the Site

Section 8.4 - Site Organization Connections

Connecting a Site to an *Organization* will upgrade DW Spectrum to support *Subscription Services*. Key considerations before connecting a Site to an organization:

1. Each recording license key will be converted into a 24-month credit for a local recording service.
2. It is not possible to recover license keys once they are converted into subscription service credits.
3. Sites that are disconnected from an organization will require new recording license keys.

Contact your local DW Spectrum reseller or Digital Watchdog customer service team for more information on the benefits of using organizations.

There are two ways to connect a Site to an organization:

- Transfer Ownership of a Cloud connected Site from a Cloud account to an organization.
- Connect a local Site to an organization.

Both methods require a Site administrator and an organization administrator to complete the transfer.

Section 8.5 - Transferring Cloud Connected Sites to an Organization

Prerequisites:

- An organization must be available.
- The Site to be transferred must be accessible via the Cloud portal.

Transfer Process:

1. Open the Cloud portal and connect to the Site to be transferred.
2. Switch to the **Settings** tab in the Cloud portal.
3. Click **(change) Owner** under the Site name.
4. Select **To Organization** in the **Transfer Ownership** dialog.
5. Select the organization to which the Site will be transferred.
6. Confirm the transfer action.
7. A Site administrator and the organization administrator are required to authenticate.

Section 8.6 - Connect a Local Site to an Organization

Desktop Client

1. Log in to the Site as an administrator.
2. Open the **Main Menu > Site Administration** and click the **DW Cloud** tab.
3. Click **Connect Site to DW Cloud** and log in to DW Cloud.
4. Click the **Connect Site to Cloud** button.
5. Select the organization to which the Site will be connected.
6. A Site administrator and the organization administrator are required to authenticate.

Web Admin

1. Login to the Site as an administrator
2. Open the [Web Admin](#) and login.
3. Go to **Settings > Site Administration > General**.
4. Click **Connect to DW Cloud** and login as an organization administrator
5. Select the **Organizations** tile.
6. Select the organization the Site will be connected to.
7. A Site administrator and the organization administrator are required to authenticate.

Once connected, the Site will be displayed in the [DW Cloud Portal](#) and will be accessible by Cloud Users granted access to the Site.

Section 8.7 - Disconnect a Site from the Organization

 **IMPORTANT:** Disconnecting a Site will remove access for all Cloud Users that Site is shared with and termination of all used services.

The process of disconnection is the same as [Disconnecting a Site from DW Cloud](#).

Section 8.8 – Changing Cloud Owner

This topic provides instructions to change the owner of a Cloud Site to another account.

Key Concepts:

- This process will assign a new owner to an existing Cloud Site.
- Ownership of a Cloud Site cannot change if the Site is part of an Organization.
- The to-be Cloud System must be an existing user of the Site to transfer.
- The current owner will be removed from the Site during the transfer process.
- Previous owner must be added as a new user to regain access to the Site.

Instructions for the CURRENT Cloud Site Owner:

1. Navigate to the DW Cloud portal and log in as the current Site Owner.
2. Select the **Settings** tab in heading menu.
3. Select the **General** tab under the *System Administration* heading on the left.
4. In the middle of the screen, you'll see the system name followed by the text "owner - you (change)".
5. Click on **(change)** to open the new owner selection dialog.
6. Select the To user (new owner) field and enter or select the new Cloud Owner email address.
7. Select Transfer and authenticate as the current Cloud Site owner.

8. The new owner of the Cloud Site will receive an email to accept the ownership transfer.

Instructions for the NEW Cloud Site Owner:

1. Open the email account associated with your DW Cloud account.
2. Locate the automated email generated when the current Owner requested ownership transfer.
3. Navigate to the DW Cloud portal and log in with the new Site owner account.
4. Select the **Shared with me** tab in the heading menu,
5. Select the Site where ownership is being transferred.
6. Select **Accept** to finalize the transfer; or **Reject** to refuse the Site ownership transfer.
7. The previous Cloud System Owner receives an email after the transfer is accepted.

 **NOTE:** Optionally add the previous Site owner as a new user, and set their permissions, if they will retain access to the Site.

Section 8.9 – Upgrade to Enterprise


This topic outlines the process to upgrade an existing Cloud-Connected Professional Edition Site to an Enterprise Edition Site.

Key Concepts

- Once a Professional Edition Site is upgraded to an Enterprise Site, it cannot be undone.
- The Professional to Enterprise upgrade can only be performed in the Cloud Portal.
- Upgrades can only be performed by Organization Administrators.
- Each Professional License will be converted into 24-months of Subscription credits.
- Only the Enterprise Editions provides these features, and more:
 - Unified notifications across all Sites in an Organization.
 - Unified user management and Site access controls.
 - Access to management tools for Subscription Services.
 - Video Wall licenses are included with Enterprise Edition.
 - Unlimited Site scalability using the Organization structure.
 - Designed to support new features, services, and integrations.

How to Upgrade from Professional to Enterprise Edition

1. [Change the Cloud Owner](#) of the Professional Site to an Organization Administrator.
2. Log in to the DW Cloud Portal as an Organization Administrator.
3. Navigate to the Professional Edition Site that will be upgraded to Enterprise Edition.
4. Select the **Settings** tab in heading menu.
5. Select the **General** tab under the *System Administration* heading on the left.
6. Click the **Upgrade to Enterprise** button found just below the Site name.
7. Review the summary of benefits and support options; click **Next**.
8. Select an Organization to join from the list provided; click **Next**.
9. Accept the transfer terms by clicking the **Transfer** button.
10. A confirmation screen will be presented after successful transfer.

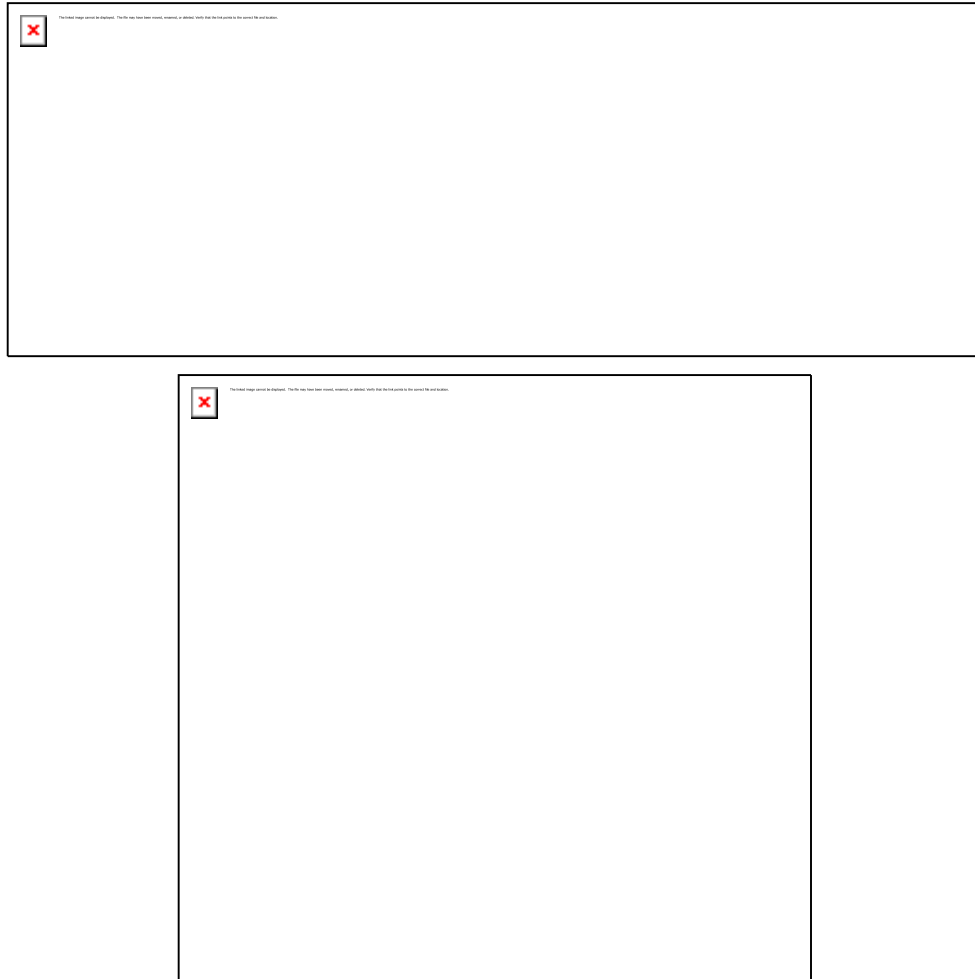

Part 9: Services and Licenses

DW Spectrum allows users to create layouts displaying live video feeds and perform Site configuration tasks immediately after installation. Some advanced features related to recording, archiving and analyzing video require either a License Key or a Subscription Service.

The highlights listed below outline the primary differences between the licensing and services model to assist with planning and preparation for Site migration. Please contact the customer service team for more information.

Section 9.1 - Subscription Service Model

- Services are pooled within an organization and easily moved between devices within the same organization.
- Recording services are considered in use when attached to a camera; there is no billing for services not attached to a camera.
- Each recording license is converted into 24 months of local recording service when a Site [connects to an organization](#).
- Organization-wide reports show overall services usage and changes to services over time.
- The total number of available services can quickly be adjusted to match the needs of a changing Site configuration.

Section 9.2 - License Model

- Each installation comes with four free, 30-day license keys to record video.
- License keys are activated and linked to servers using unique hardware identifiers.
- Keys must be activated over the Internet or by using an offline, email-based activation service.
- License keys can become invalid when the linked hardware is offline; these can be recovered.
- License keys are considered in use when assigned to a server, even if the function enabled by the license is not active.

 **NOTE:** Live streams that are not connected to either a subscription service (Enterprise Edition) or a perpetual recording key (Professional Edition) will be interrupted every 10 minutes by a banner displaying "Live Streaming Time Limit Reached" and a 30-second countdown timer.

Section 9.3 - DW Spectrum Services


Live video from any source can be viewed in DW Spectrum without any services being available. However, a recording service is required for each channel that will have recording enabled.

The following conditions must be set before a Site can use available services:

1. The Site must be part of an organization. See "[Connecting a Site to an Organization](#)".
2. There must be services available to the Site.

One recording service is marked as in-use for each camera where recording is enabled. Sites that are connected to an organization have a tab labeled Services within the Site Administration dialog. This tab displays the state of the services, the names of available services, and a count of total and used services for each service type.

 **NOTE:** Remove services from Site devices before an organization administrator changes the amount of total available services to prevent the Site from auto-selecting the devices where services are removed.

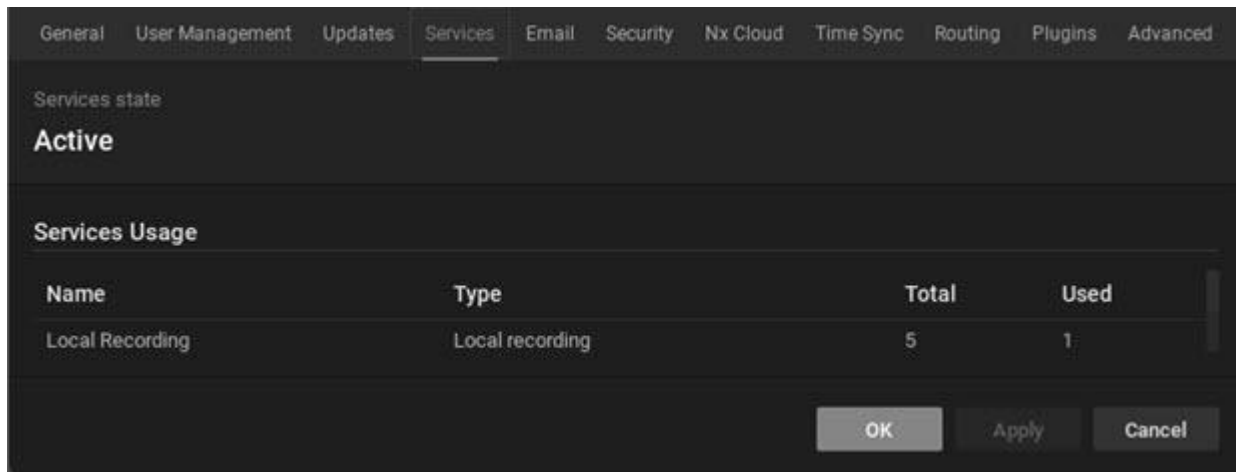

Services Usage			
Name	Type	Total	Used
Local Recording	Local recording	5	1

Services provided to an organization can be set to the following states:

State	Functional Description
Active	This is the fully operational state for Sites in an organization. All users can access their Sites via the Cloud portal, the desktop client, and the Web Admin (when on the same local network as the Site). Recording services are running as configured within the camera settings.
Suspended	Limits access to Sites while keeping all services running.

	User access via the Cloud portal is not permitted. Only the desktop client or Web Admin interface can be used to access Sites over the local network.
Shutdown	Stops all services and disables all Cloud portal access. Site can only be accessed by using the desktop client or Web Admin (when on the same local network as the Site).

Section 9.4 - DW Spectrum Licenses

The Professional Edition of DW Spectrum uses perpetual License Keys to provides a suite of services, include on that enables the recording of a device stream.

One License is required to record video from a device – One License enables one video stream from an IP camera, an RTSP stream, or an HTTP link to be recorded, therefore one Recording License is needed per Camera.

License Types

- A trial license is a complimentary, time-based license which expires after a certain length of time.
- A Professional License will not expire.
- I/O modules require a specific type of license. See "[Setting Up I/O Modules](#)".
- A specific type of license is also required for video walls. Each license allows a video wall to be extended to 2 monitors. For instance, 4 licenses allow a video wall to be displayed on 8 monitors. See "[Video Wall Management](#)".

Section 9.5 - Licenses and Hardware ID

Every DW Spectrum license, when activated, is locked to the hardware ID of the computing device upon which it is installed. The hardware ID is a unique 34-digit identifier generated when the server is installed on a Windows, Ubuntu Linux, or ARM device. The hardware ID is based on the following:

- Motherboard
- MAC address

After installing DW Spectrum on a server, any modification in the components above will result in a change to the hardware ID and invalidation of licenses attached to that device (see "[Expired and Invalid License Keys](#)").

To Determine Hardware ID:

1. In the DW Spectrum desktop client, open **Main Menu > Site Administration**.
2. Go to the **Licenses** tab.
3. Select a license attached to the server.
4. Click the **Details** button.
5. The *License Details* dialog that opens will display the *License Type*, *License Key*, *Hardware ID*, and the number of Archived streams allowed on that device.
6. To copy the license information click the **Copy to Clipboard** button.

 **NOTE:** Licenses cannot be accessed through the Web Admin page.

The following sections describe how to obtain, activate, and deactivate licenses:

- [Obtaining and Activating Licenses](#)
- [Expired and Invalid License Keys](#)

Section 9.6 - Obtaining and Activating Licenses

DW Spectrum comes with four trial licenses. A trial license is active for 30 days.

 **IMPORTANT:** Licenses for servers in a multiple server Site are activated on the server to which the client is currently connected. If this server is offline, those licenses will be invalid until the server is back online.

 **NOTE:** Licenses that are activated on different servers will be combined if the servers are merged into a single Site.

To Activate a Free License:

To get additional licenses, contact your local DW Spectrum reseller or Digital Watchdog customer service.

Desktop Client

1. Open the **Main Menu > Site Administration** and click the **Licenses** tab.
2. Click **Activate Free License**.

Web Admin / Cloud Portal

1. Open **Settings > Licenses**.
2. Click **Activate Free License**.

 **NOTE:** There will be a warning when a free license is about to expire.

Section 9.7 - Activate a License over the Internet

The server the client is connected to (as indicated by the current server  icon in the resource panel) will have the license key bound to it. If a license key must be activated on a different server, disconnect and connect to the correct one. If DW Spectrum is not connected to the Internet, then licenses can be activated offline.

Desktop Client

1. Select the **Licenses** tab in **Site Administration**.
2. Go to the **Internet Activation** tab.
3. Enter or paste in the license key value and click **Activate License**.

Web Admin / Cloud Portal

1. Open **Settings > Licenses**.
2. Enter or paste in the license key value and click **License**.

Section 9.8 - Activate a License (Trial or Commercial) Offline

In situations where an DW Spectrum Site is installed on a device that does not have Internet access, users will be required to perform an offline (or manual) license activation. Launch the DW Spectrum client and connect to the server that requires offline activation. The DW Spectrum desktop client is required – mobile or Web Admin pages do not have the ability to locate licensing information.

1. Click the **Licenses** tab in **Site Administration**.
2. Click the **Manual Activation** tab.
3. Click the **Copy** button to copy the hardware ID.
4. Email Digital Watchdog customer service to request an activation key. Include the hardware ID and the

license key that you received in the email.

5. After receiving the activation key, click **Browse** to import it to the target computer.

Section 9.9 - Export a List of License Keys

A list of license keys can be exported in either a CSV or HTML file. This file may be necessary, for instance, if re-activation is needed. To do so, click *Export* (near the upper right corner) and select the target file.

DW Spectrum allows for license deactivation as well. See "[Expired and Invalid License Keys](#)".



NOTE: When recording is enabled for a device, the license is considered in use even if the device is not currently recording (as indicated by the empty circle icon to the left of the device in the Resource Panel).

Section 9.10 - Insufficient Licenses Available

An error message or information banner will appear when there are insufficient licenses to support the selected configuration.

Section 9.11 - Expired and Invalid License Keys

Under some circumstances, a license may become invalid, such as when a server is removed from the Site or goes offline. When the server comes back online or reconnects to the Site, the license will become active again.

However, if a server change results in a hardware ID update, all licenses tied to the previous hardware ID will become invalid and can only be reactivated by contacting support. If a hardware change is planned, the best approach is to contact support prior to the update so licenses can be intentionally deactivated before the hardware change, while they are still active and valid, and reactivated once the new hardware ID is established.



NOTE: A trial license cannot be deactivated nor reactivated once it expires.

Under certain conditions, such as when a recording license is invalidated, or when a server fails in a failover-enabled Site (see [Configuring Failover](#)), a 30-day grace period is granted to prevent gaps in recording and allow enough time to resolve the server or license issue. Once the original server comes back online, or the license issue has been resolved, the recording will continue normally with the original license(s).

Similar functionality exists for video wall licenses, where a seven day grace period is granted to prevent any interruptions in the video wall and allow enough time to resolve the license issue (see [Video Wall Mode](#)).

Section 9.12 - Deactivate a License

Users can deactivate and move a license a maximum of 3 times. The operation must be performed from the desktop client and requires an active Internet connection. Trial licenses cannot be deactivated.

1. Click the **Licenses** tab in **Site Administration**.
2. Select a license, click **Deactivate** and confirm the action in the dialog that opens.
3. Enter your name, email address, and select the reason for deactivation from the drop-down list to confirm and explain the action.

The license key can now be activated on another computer.

Section 9.13 - Remove a License

If a license is no longer needed, it can be removed. Only invalid (red) licenses can be removed.

1. Click the **Licenses** tab in **Site Administration**.
2. Select the license to be removed and click the **Remove** button.

Part 10: Using Encryption for Site Security

DW Spectrum provides HTTPS encryption for client-server data exchange and, separately, for RTSP video traffic streams.

HyperText Transfer Protocol (**HTTP**) is a universally agreed upon convention for network information exchange that is easy to intercept and read. HyperText Transfer Protocol Secure (**HTTPS**) is a safer connection that includes encryption to protect the information exchanged over networks. The encryption is performed using a Secure Sockets Layer (SSL) or TLS (Transport Layer Security) certificate. When an SSL/TLS certificate is issued it means the sending and receiving websites have been authenticated, and a secure connection has been established between the web Server and the browser that connects to it. When you have a secure connection, the website's URL is prefixed with "https" instead of "http," and a padlock icon will display on the address bar.

By default, DW Spectrum encryption is disabled. Without encryption, API requests and the Server Web Admin interface can be intercepted and analyzed, and video streams (live and playback) can be intercepted and viewed.

The **Allow only secure connections** checkbox forces all servers in the Site to accept only secure HTTPS connections. When it is enabled, you have the option to also force video traffic encryption.

The **Encrypt video traffic** checkbox applies encryption to RTSP/S format, HLS format, and requests that start with a /media prefix.



NOTE: Encrypted video transfer requires intensive CPU processing, so overall Site performance can be severely impacted, particularly on smaller or weaker hardware such as ARM devices.



IMPORTANT: Due to self-signed certificates, explicit HTTP integrations, or other configuration settings, all integrations configured to work with HTTP need to be tested, and may need to be updated for compatibility with this feature. For example, you will need to disable HTTPS support in order to merge a secured Site with one that does only supports HTTP. Similarly, some third-party products may not support RTSPS and may therefore cause integration issues.

DW Spectrum includes many protections for Site communications over both secure (e.g. LAN/WAN/VPN) and insecure (e.g. Internet) networks:

- [Authorized Certificate](#) on the server
- [Secure Connections to Cameras over HTTPS](#)
- [Secure Connections](#) between client and server
- [Video Traffic Encryption](#)
- [Archive Encryption](#)

The basic security configuration can be done at the [Initial Site Configuration](#) stage. Click **Advanced Site settings** and choose **Security Level**:

Standard

- "Encrypt video traffic to desktop and mobile client" is disabled
- Camera credentials are shown in the camera settings dialog
- Server IP is shown in API responses

High

- “Encrypt video traffic to desktop and mobile client” is enabled
- Camera credentials are not shown in camera settings
- Server IP is not shown in API responses

 **IMPORTANT:** The security level cannot be changed after the initial configuration.

Section 10.1 - Authorized Certificates

By default, the DW Spectrum Server is installed with a generated self-signed certificate with the lowest security level. Connecting to the server with a web browser using HTTPS while using this certificate will cause a warning message to appear stating that the connection to the site is not secure (see "[Server Certificate Validation](#)").

Even though a secure connection is used, the self-signed certificate is not recommended. Instead, it is recommended to obtain a certificate from an authorized certificate provider and install it on the server that is used for access from outside of the local network.

Obtaining and Installing an Authorized Certificate

1. Obtain a certificate from any certificate provider (for instance, see the list of top ones here: <https://www.techradar.com/news/best-ssl-certificate-provider>).
2. Create a file **cert.pem** with the Private Key and Entire Trust Chain (see the instructions on the certificate provider's web site).
3. Place the **cert.pem** file in the following folder:
 - o Windows: C:\Windows\Site32\config\Siteprofile\AppData\Local\Digital Watchdog\Digital Watchdog Media Server\ssl
 - o Linux: /opt/digitalwatchdog/mediaserver/var/ssl
4. Restart the server.

For servers within the local network, it is recommended to install the self-signed SSL certificate into the *Trusted Root Certificate Authorities Store* (<https://learn.microsoft.com/en-us/windows-hardware/drivers/install/trusted-root-certification-authorities-certificate-store>)

Viewing a Server's Security Certificate

1. Right-click on a server and select **Server Settings**
2. Find the *Certificate* field and click on the **DW Spectrum** hyperlink
3. A dialog displaying the following information about the SSL certificate will appear:
 - Certificate signer (e.g. self or trusted CA)
 - Fingerprints
 - Certificate data
 - Expiration date

Setting Server Certificate Validation

This option prevents the desktop client from connecting to untrusted servers and those lacking a valid security certificate. This is set individually for each instance of the desktop client.

1. Open the **Main Menu > Local Settings > Advanced** tab.
2. Click on the **Server certificate validation** dropdown menu and choose one of the following options:
 - *Disabled* – Any certificate is allowed. No warnings are displayed.

 **IMPORTANT:** This may lead to privacy issues.

- *Recommended* – Confirmation will be requested to pin self-signed certificates.
 - *Strict* – Only trusted – not self-signed – certificates are allowed.
3. Apply changes.

 **NOTE:** If a certificate is invalid, the "[Server Certificate Error](#)" event will be triggered.

Section 10.2 - Connecting to Cameras over HTTPS Only

This setting will ensure the server only connects to cameras using HTTPS, preventing management traffic between the camera and Server from being intercepted and analyzed.

To Connect to Cameras Using HTTPS Only:

1. Open Main Menu > Site Administration > Security tab
2. Check the **Use only HTTPS to connect to cameras** checkbox
3. Apply changes

 **IMPORTANT:** Any cameras on the Site that do not support HTTPS will be dropped and appear offline.

Section 10.3 - Forcing Secure Connections

Forcing secure connections ensures clients only connect to servers in the Site using HTTPS to prevent management traffic (user accounts, device access credentials, Web Admin) from being intercepted.

This setting is enabled by default.

To Force Secure Connections:

Desktop Client

1. Open the **Main Menu > Site Administration > Security** tab
2. Check the **Force servers to accept only encrypted connections** checkbox
3. Apply changes

Web Admin / Cloud Portal

1. Open **Settings > Site Administration > General**.
2. Check the **Allow only secure connections** checkbox.
3. Apply changes.

 **NOTE:** This setting is turned on by default and will affect the following:

- [Generic Events](#) should be reconfigured in the external Site.
- All integrations configured to work with HTTP need to be updated and tested.
- API Calls – All external Sites that use API for integrations should be re-configured to use HTTPS and then tested.

Once HTTPS is enabled, the browser may initially show a warning about a bad certificate or insecure connection during the first attempt to log in to a server's web page ("Your connection is not private. Attackers might be trying to steal your information..."). This is not the case. The warning is a safety feature due to the self-signed certificate on the server. The connection will, in fact, be more secure.

 **NOTE:** Most browsers will generate a prompt or confirmation dialog to proceed using an HTTPS connection. While the specific text will vary by browser version, a common sequence is to click on the word **Advanced**, then click the **Proceed** to [xxx.x.x.x] (unsafe) link to log in. The local machine and application define when this authorization must be repeated.

Section 10.4 - Enabling Encrypted Video Traffic

This setting prevents video streams from being intercepted and viewed by third parties. This option is only available on Sites that are configured to use [Secure Connections](#).

Enabling Encrypted Video Traffic

This setting prevents video streams (Live and Playback) from being intercepted and viewed by third parties. This option is only available for sites that are configured to use Secure Connections.

Desktop Client

1. Open the **Main Menu > Site Administration > Security** tab
2. Check the **Encrypt video traffic to desktop and mobile clients** checkbox
3. Apply changes

Web Admin / Cloud Portal

1. Open Settings > Site Administration > General
2. Check the **Encrypt video traffic to desktop and mobile clients** checkbox
3. Apply changes

 **IMPORTANT:** Encrypting video traffic will significantly increase CPU usage on the server and should not be used if a Site has servers installed on low power computers.

Section 10.5 - Enabling Archive Encryption

DW Spectrum stores recorded video without access controls, that can be viewed by anyone with access to the files. Enabling archive encryption will prevent the recorded archive from being viewed outside of a DW Spectrum Client instance.

To Enable Archive Encryption:

1. Open the **Main Menu > Site Administration > Security** tab.
2. Toggle the **Archive encryption** switch.
3. Set a password to encrypt the Archive. The encryption password will be required to restore the Archive on another Site but will not be required to enter the encryption password to view the video Archive within the Site.

 **IMPORTANT:** This password cannot be reset. If it is lost, the Archive will be unrecoverable.

Part 11: Configuring the Email Server

An email service must be configured for the Site to be able to send emails (see "[Mail Notifications](#)").

DW Spectrum provides a Cloud-based solution to send email notifications to users, or a private SMTP service can be configured to deliver email notifications using an authorized email account and


corresponding password.

 **NOTE:** Review the terms and conditions published by the SMTP email service provider to ensure the account is not rate limited or employ a rolling password that could delay or prevent email notifications from being sent.

To Enable the Cloud Email Service

1. Open the **Main Menu > Site Administration > Email** tab.
2. Select **Route via Cloud** in the drop-down menu.
3. Enter a signature and support URL for the notification messages.
4. Click **Apply** to commit changes and keep dialog open or click **OK** to save and close the dialog.
5. Message delivery will immediately be enabled.

 **NOTE:** When using the *Route via Cloud* service, only Cloud Users added to the Site will receive emails. Local Users and additional recipients (configured in the Event Rules menu) will not receive emails.

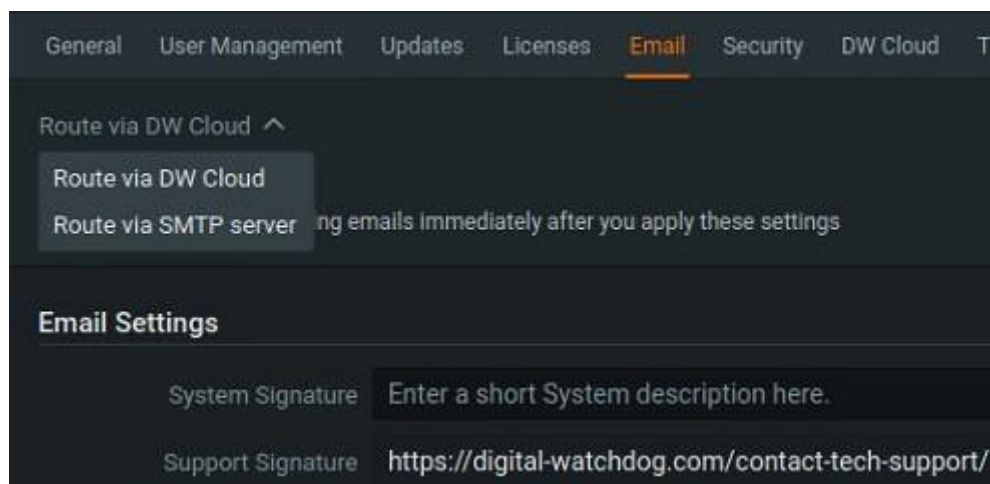

To Configure SMTP Connection Settings

1. Open the **Main Menu > Site Administration > Email** tab.
2. Enter the following:
 - *Mail from* – Email address to use for outgoing mail
 - *Username* – Email or login of the outgoing account on the email server
 - *Password* – Password for the outgoing email account
 - *Server Address* – Email server address or Gateway
 - *Security Protocol* – Choose secure connection using TLS, secure connection using SSL, or an insecure connection
 - *Site Signature* – User defined Site description that will identify the Site in outbound emails
 - *Support Signature* – Support website for the DW Spectrum installation
3. Click the **Check** button to test the email server connection.
4. Click the **Apply** button to save changes to the email server configuration.

Part 12: Server Settings & Archive Management

In addition to the settings that are entered during initial configuration, administrators can view and edit these other server parameters.

See the following topics for advanced information concerning DW Spectrum storage behavior:

- [Archive Distribution and Retention](#)
- [Archive Indexing](#)
- [Archive Reindex and Scan](#)
- [Archive Backup](#)

To configure server parameters, select the desired server in the resource panel, open its context menu, and choose **Server Settings**.

General Tab

- **Name** – the server can be renamed here or in the resource panel
- **IP Address** – cannot be changed (IP address display in the resource panel can be turned on or off using the [Show additional info in tree](#) flag)
- **Ping** – initiates a server status check. If the server is not responding, this can help check availability of the computer on which the server is hosted
- **Port** – this value can only be changed from the Web Admin
- **Certificate** – the server utilizes this SSL certificate to authenticate its identity

- **Autodetect USB and web cameras** – if enabled, DW Spectrum automatically discovers built-in and USB webcams
- **Failover** – setup and turn failover on or off (see "[Configuring Failover](#)"). At least 2 servers are required
- **Server Web Page** – provides a convenient link to the server web page

Storage Management Tab

- **Storage Locations** – add and configure main, external and backup storage locations (see "[Configuring Server and NAS Storage](#)", [Configuring Backup and Redundant Storage](#) and [Configuring Analytics Storage](#)").
- **ReIndex Archive or ReIndex Backup** – restores recorded footage if it has been moved (see "[ReIndexing and Fast-Scanning Archives](#)").



NOTE: Displayed statistics will refresh periodically – a manual refresh button is also provided along the right side of the header menu.

Storage Analytics Tab

- To view detailed storage statistics (see "[Analyzing and Predicting Storage Usage](#)").

Backup Tab

- Storage backup duplicates the footage in Archive and saves it to other available locations (see "[Configuring Backup and Redundant Storage](#)").

Section 12.1 - Archive Distribution and Retention

Video from a camera is always written on the server to which the camera is connected. Cameras can be moved between servers, but the recorded video stays where it was and never moves with the camera. New video is written on the new server. Recorded video is called *Archive*.

If a server has multiple drives, the video Archive is divided between them to improve reliability and balance the load on each drive. Nevertheless, even when different parts of the Archive are stored on different drives or on different servers, video playback is seamless.

Other data is storage space occupied by data that isn't from the VMS. This storage space is never recorded on. In addition, a certain amount of the total capacity is *reserved space* that will not be used for recording. Numbers vary depending on the software version and server configuration; typically, 10-30 GB is reserved for local storage, and 50-100 GB is reserved for external storage.

Available Space

The remaining disk storage is considered *available space* – whether it is currently recorded on or is currently free space. Archive is recorded according to available space.

If there is no free space on a given storage device, the Site will automatically delete outdated recordings to free space for new Archive. By default, the oldest Archive is deleted first. However, there are two special properties a given camera can be granted that affect Archive retention. One prevents Archive from being deleted before a certain number of days has elapsed. The other requires that Archive be deleted after a certain number of days has elapsed. These are the only cases in which the Site will actively determine storage deletion.

Schematically, storage life cycle can be illustrated like this:



Storing Archive on Multiple Drives

Servers can have any number of storage devices. Recording to some can be disabled manually, or automatically if they are too small or are the main OS partition. USB drives are disabled by default but can be enabled manually (though for ARM devices they can be enabled by default).

Enabled drives can be one of two types – *main* or *backup*. Main storage is used to record Archive, backup is used to store extra copies of some recordings. A drive can be assigned only one type at a time, but because it is possible to change a drive's type, different types of recordings (main and backup) can exist on one drive.


If there are multiple storage locations of the same type (main or backup) on a server, recorded Archive will be split between them in proportion to their available space, as shown below:



NOTE: When there are multiple storage locations of the same type on a server, recorded Archive is distributed separately by type in proportion to the available space for each type.

Write **bitrate** (the amount of data that is processed per unit of time) will correlate with the amount of the available space – in the illustration above disk 1 will have a higher bitrate than the others.

Remember that the distribution of recorded data is dependent on the amount of available space, not free space. If two similar drives are installed, but part of drive #2 is occupied by some other data, recording speed will be higher for drive #1 because the amount of available space for this drive is higher. Also, because Archive recorded by the Site does not reduce the amount of available space, recording speed doesn't depend on how much available space is currently used.

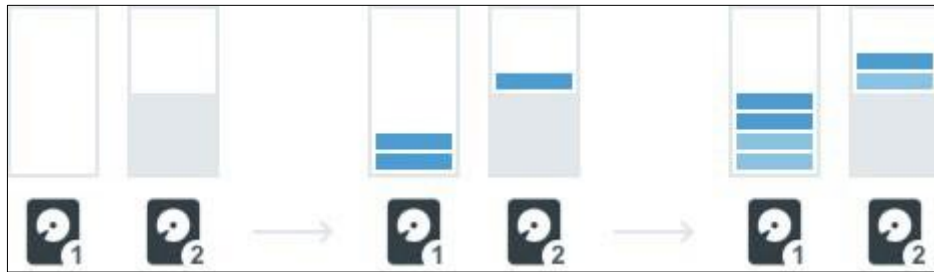

For example, two similar drives are installed, and both are already full. A third drive is added with the same amount of available space as the first two but is completely empty. The distribution of recorded data is dependent on the amount of available space, so new recordings will be distributed evenly between all three drives. Even though there is plenty of free space on the third drive, outdated footage on the first two drives will be deleted to free up space for new recordings – Archive must be split evenly between all three drives because they have the same amount of available space.




This is done to balance drive usage and to avoid a situation where all cameras are being written to one drive, which might not have enough speed to record so much data.

Servers Sharing the Same Drive

It is possible to set up recording from multiple servers to the same drive. However, it is very important to split the drive into different partitions and attach separate partitions to each server so that Archive written by one server cannot be deleted by another.

By adding one partition to multiple servers, they both will treat free space on that drive as available and will use it for recording. Data recorded by one server will be considered “other data” by the other server, and will reduce the amount of available space but will not be overwritten. However, if multiple servers use the same folder and the Archive for any one of them is reindexed (see "[Reindexing Archive](#)") Archive footage from the other servers can be deleted.


If different servers have different recording speeds, it will lead to a situation where storage is divided unequally. After storage is filled with Archive, each server will manage only the space that is occupied by its own data, as shown in the diagram below.

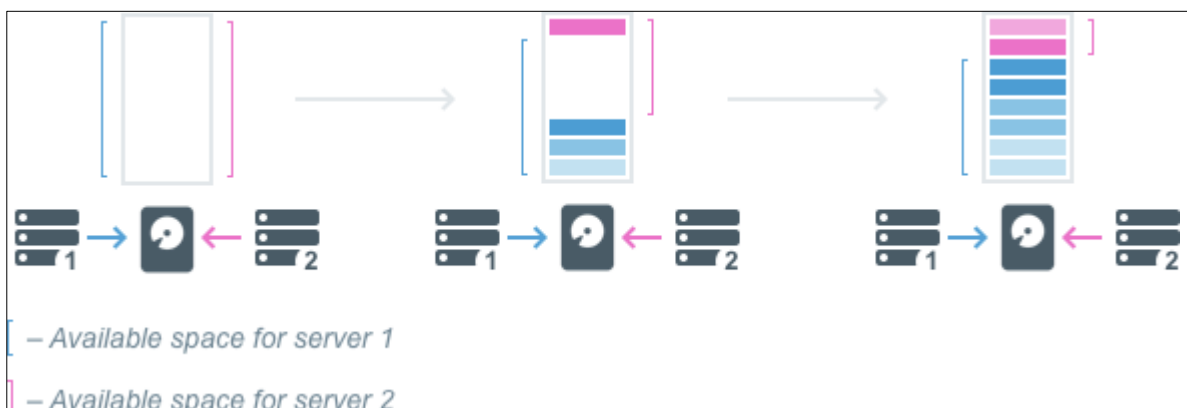

Section 12.2 - Archive Indexing

The *Archive Index* is a special Database that stores mapping information for video Archive. This Database includes which cameras are Archived, for which times, and in which chunks exactly the Archive is stored. *Chunks* are the building blocks of video storage, see "[Find Archive on a storage device](#)".


The client application pulls storage chunks to the Timeline based on the information in the Archive Index Database. By clicking on the Timeline to play a given recorded segment, the client sends the server a request for that video. The server checks the Archive Index to determine where video for that moment is stored – on which drive and in which exact chunks. The server reads that video and sends it to the client to display.

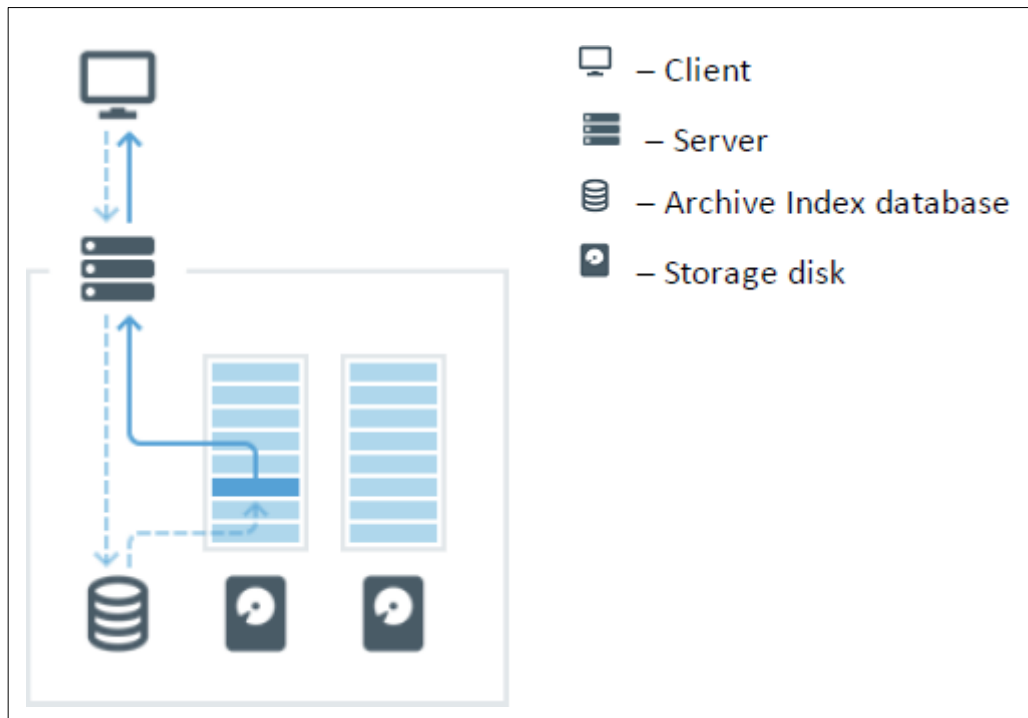

There can be situations when information in the Archive Index does not reflect the actual video Archive. For example, if Archive has been deleted or manually relocated, the information about that Archive will still be in the Index Database, but the server will not be able to read it because it is no longer where the Archive Index last found it.



Similarly, sometimes there is no information in the Archive Index about Archive that does exist in storage. This can happen if the Index Database file is corrupted or deleted, or when Archive video is added to a storage location manually.

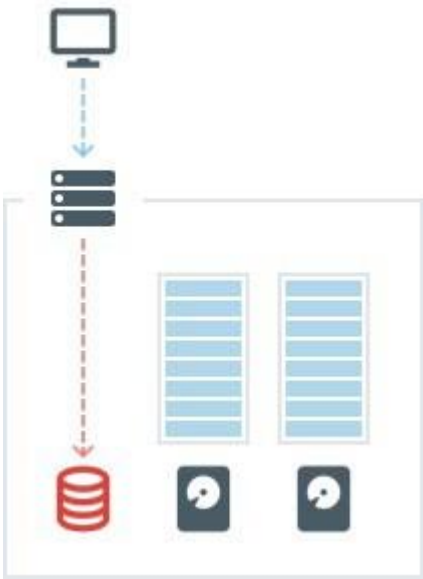

These problems can be fixed by *Archive reindexing*. During this process, the server will scan all recordings on all drives and update the Archive Index Database with the current information. Archive reindexing is initiated from the storage management dialog for each server, and can be performed for main or backup storage locations (see "[ReIndexing and Fast-Scanning Archives](#)").

Section 12.3 – Archive Backup

Some disks on a server can be designated as *Backup Storage*. When designated, the selected disks will store a copy of the Archives recorded to the main storage on the same server.

NOTE: Only Archives from main storage of a given server will be backed up. If there is Archive on some other server to be backed up, backup storage should be configured for that server as well.

With backups enabled, the bandwidth restrictions can be configured in three ways: *No Limit*, *Schedule*, or *Fixed*

(see "[Configuring Backup and Redundant Storage](#)" for details).




Because large amounts of data are being copied during backup, bandwidth can be limited, or backups can be performed only at specific times to minimize the negative impact of loading the network.

With the *No Limit* bandwidth option enabled, the existing Archive will be backed up. Afterward, live streams will be continuously recorded in backup storage.



Outdated Archive is deleted from backup drives in the same way as main ones, but independently of the main storage. In other words, if the backup storage has higher capacity, the maximum Archive age on it will also be greater.

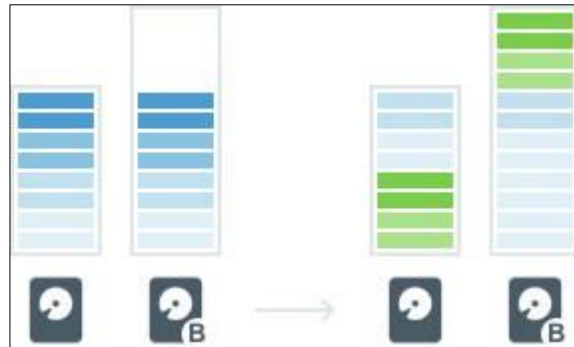

The opposite is also true – if backup storage is smaller, Archive age will be lower.



To save storage space, a Site can be configured to only backup Archive from certain cameras or only certain streams (see [Configuring Backup and Redundant Storage](#) for details). Camera recording is backed up only if the camera is selected in backup settings and backup storage is configured on the server to which that camera is connected.

Section 12.4 – Server Attached and NAS Storage Configuration

Each server can use an unlimited number of local and network storage paths. If more than one storage location is used, the media server will automatically balance space consumption across drives (see "[Background: Archive Distribution and Retention](#)"). Each local hard disk partition is considered a storage location. If enabled, *network attached storage* (NAS) and USB storage are also supported. Usage is directly related to storage availability.

Displayed statistics will refresh periodically – a manual refresh button is also provided along the right side of the header menu.

Storage Considerations:

- Each local hard disk partition is considered a possible, least preferred, storage location.
- It is recommended to NOT use a primary drive for any archive, index, or analytical data storage – Use an independent partition on a separate physical drive for best results.
- A local drive with a single partition containing an operating environment can be used for recording.
- 10% of available space is preserved on each storage location.
- Storage locations must be detected by the operating environment and be available to DW Spectrum applications.
- Storage device activity levels (read, write, scan, clear) are directly related to storage availability, as less capacity generates more frequent reuse of a smaller space.
- Cloud storage can only be used as a backup location.
- When local storage is added to a server, and an extended partition is created with 5 times the storage capacity than the primary storage, or if the total sum of available (non-primary) storage capacity is **5 times** that of the primary storage, the primary partition will be disabled for recording and DW Spectrum will record data to the extended partition(s).
- If a primary partition is used, the "Local storage is used for analytic and motion data (Site)" event will be triggered.

Storage Types:

- **Local Storage** – hard drive in the server PC. Detected automatically by the DW Spectrum Server once detected in the OS. Can be used for Archive and analytics data.
- **USB Storage** – hard or portable drive connected via USB. Detected automatically by the DW Spectrum Server once detected in the OS. Can be used for Archive, but not analytics data.
- **External Storage (Network)** – any storage connected over the network (Samba, CIFS, NFS). Should be added manually (see below). Can be used for Archive, but not for analytics data.

See "[Configuring Analytics Storage](#)" for more information.

Data Types Stored:

- **Video Archive** – the recorded audio-video streams provided by a device or camera.
- **Index Data** – Motion, Bookmarks, and other proprietary metadata resides on the same drive as the corresponding archive.
- **Analytical Data** – By default, the largest local, non-primary is used for analytical data storage (see "[Configuring Analytics Storage](#)").

Read-Write Policies:

- **Exclusive** – the server can read all folders, erase old data from all folders, and write-only to its own folder.
 - This is default setting for all local storage.
- **Shared** – the server can read all folders, but can only write or erase old data within its own folder.
 - This setting cannot be applied to local storage.
- **Isolated** – the server can only read, write, or erase data in its own folder.
 - This is the default option for all non-local storage locations.

Additional Notes:

 **IMPORTANT:** When using a NAS device as additional storage, make sure the device is available and accessible through the same subnetwork on which the computer server is installed.


- Local storage cannot use the Shared policy.
- Cloud storage can only be configured with the Isolated policy.
- The read-write policy for reserved storage makes the location available for configuration.
- A warning message and alert icon will be displayed when non-local storage has conflicting read-write policies applied by different servers within a Site.
- 10-30 GB of free space is always reserved on each local storage location. For NAS storage, this amount may vary between 50 and 100 GB depending on storage capacity (recommended value is 1-3%).
- If only one Site partition (where the OS is installed) is present, then DW Spectrum will use this partition for recording.
- When another disk is added and an extended partition is created with 5 times the storage capacity than the Site storage, or if the total sum of available (non-Site) storage capacity is **5 times** that of the Site storage, the Site partition will be disabled for recording and DW Spectrum will record data to the extended partition(s).
- It is recommended to NOT use a Site partition for any Archive, Index or analytics data storage; Instead, use an independent partition on a separate physical drive.
 - If a Site partition is used, the "[Local storage is used for analytic and motion data \(Site\)](#)" event will be triggered.

To Configure Server Storage:

 **NOTE:** USB storage is not enabled by default. DW Spectrum will show a warning when a user is attempting to record to a removable drive (USB).

1. Do one of the following:
 - *Desktop Client:* Open the server context menu and go to **Server Settings > Storage Management** tab.
 - [Web Admin](#) / [Cloud Portal](#): Open **Settings > Servers** and select a server.

DW Spectrum will display all known and discovered resources available as local storage.
2. Use the drop-down menu to select the purpose and policy for each storage location.
3. Use the switch/toggle to enable or disable each storage location.
4. In the example shown below:
 - The computer has 3 partitions.
 - Disk C currently disabled and is not used because it is a Site that hosts the server's operating system.
 - Disk D is the main storage partition
 - SMB disk 'backuptest/backup' is configured as Backup storage.
 - The Site disk drive will be used if it is the only storage location on a server or the total sum of available storage space (excluding the Site partition) is less than 5x the Site partition size.

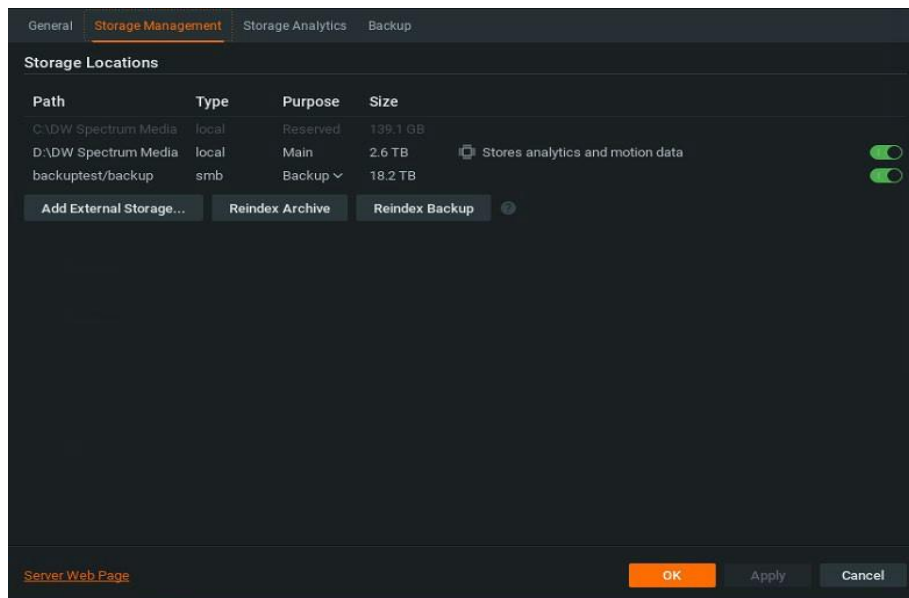

Additional Notes:

- There must always be at least one **Main** storage location. Once a main storage location is configured, any other storage location you may have can be set as **Main** or **Backup**.
- At least one drive must be defined as Backup for archive backup to be possible.
- DW Spectrum will check all storage locations for validity and confirm the ability to write to each. If a drive is not available or has insufficient space, a warning will be displayed.
- Displayed statistics will refresh periodically and may have a small lag – a manual Refresh button provided in the header menu.
- Some cameras record directly to their own internal storage, DW Spectrum must periodically download archive from the camera's internal storage to DW Spectrum servers. See "Remote Archive Synchronization".
- Recycling bins and similar concepts (Trashboxes, trash bins) **must be disabled** as a part of the configuration step. DW Spectrum Server will start overwriting data when the "Reserved Space" limit is reached. To do that, it sends standard SMB-delete requests to the NAS drive. NAS will put files in the bin if the recycle bin is enabled. The DW Spectrum Server will not get the necessary space, sending new delete commands instead. Eventually, it will end up with a full drive and the inability to record data until the recycle bin is emptied.

To Add Network Storage:

External storage must use one of the supported storage protocols: CIFS, SMB, NFS, or iSCSI.

IMPORTANT: Make sure NAS is available and accessible through the network on which the server is installed.

1. Do one of the following:
 - *Desktop Client:* Open the server's context menu and open **Server Settings > Storage Management** tab.
 - [Web Admin](#) / [Cloud Portal](#): Open **Settings > Servers** and select a server.
2. Click **Add External Storage**.
3. Choose the desired option from the **Protocol** menu, and enter the storage path (**URL**), **Login**, and **Password** for the external storage device.
4. Click OK to accept the entries and add the new device to the list of storage locations.
5. Click the button at the end of the row to toggle it on or off.

To Find Archive on a Storage Device:

The storage structure on a partition is as follows:

- <drive>/DW Spectrum Media/\$Resolution/\$ID/\$YYYY/\$MM/\$DD/\$HH

where:

- \$Resolution – can be *hi_quality* (high resolution streams) or *low_quality* (low resolution streams)
- \$ID – if reported, the MAC address of the recorded device, otherwise the camera ID
- \$YYYY – year recorded
- \$MM – month recorded
- \$DD – day recorded
- \$HH – hour recorded

Section 12.5 –Backup and Redundant Storage

Storage Backup duplicates the footage in the Archive and saves it to other available locations, Backup locations can be local HDDs, SSDs, NAS, IPSAN, DAS, or even off-site Cloud-based locations such as FTP sites.

- The DW Spectrum Enterprise Edition can select a cloud storage service for video clip backup.
- Each server only performs backups from its own storage Archive.
- Every Server in a multi-server Site must specify a location for storage backup to use this feature.
- Backups can be executed in real-time or as scheduled.
- Backups can be configured to copy captured low-resolution streams, or all streams.
- Backups can be configured for specific cameras.

Once a backup has been executed, backup Archives can still be directly played and accessed via the client. For example, a Site might have local storage for 7 days of footage and backup storage for 30 days. If local storage is backed up once per week, video can still be played from all backed up video.

 **IMPORTANT:** To configure either backup or redundant storage, at least one main and one backup storage location must be defined as described in "[Configuring Server and NAS Storage](#)".

 **NOTE:** The analytics Database cannot be stored in a backup storage location.

To Configure Storage Backup:

Verify the storage location has been added to the server. Backup settings cannot be changed if a backup storage location is not defined or is not currently attached. A small alert displays under the *Backup Archive* section of **Server Settings > Storage Management** if there is no backup storage drive or if no cameras have been selected.

1. Right-click on a server in the resource panel and choose **Server Settings**.
2. Select the **Backup tab** within the **Server Settings** dialog
3. Select the cameras for backup by toggling the switch on the right side. Toggle the **New added devices** option to automatically begin backing up a device once it has been added to the Site.
4. Use the **What to backup** menu to select what aspect of the camera's Archive should be backed up:
 - *All Archive*
 - *Motion*
 - *Objects*
 - *Bookmarks*
 - *Motion and Objects*

- *Motion and Bookmarks*
 - *Objects and Bookmarks*
 - *Motion, Bookmarks, and Objects*
5. Use the **Quality** menu to select which streams to backup:
- *All streams*
 - *Low-res*
6. Use **Bandwidth Limit** to set the bandwidth limit for backups:
- *No Limit* – Footage is written to both main and backup location(s) immediately and simultaneously with no bandwidth restriction.
 - *Schedule* – Backup is performed only during the selected days and hours. Fill in the cells of the schedule using the following options: **Unlimited**, **No backup**, and **Limited to** (limit to a certain speed in megabits per second – Mbit/s – but too tight a bandwidth constraint can cause the entire backup to fail). The footage will be backed up since the last time backup was completed. If network bandwidth is insufficient, the backup may not be fully completed within the specified time frame. In this case, the date and time of the footage that was backed up will be clearly indicated (*Archive backup complete until...*).
 - *Fixed* – The bandwidth is locked at a specified speed across all days and times.



NOTE: If *Skip Current Queue* is clicked, the backup process will ignore existing footage and only backup recordings after that point.

After the backup is finished, an internal Archive integrity check occurs so that if an Archive file is changed or removed, users who are actively viewing that Archive will be notified. See "[Archive Integrity Check Failure](#)".

To Configure Redundant Storage:

With this structure, each Server will back up footage to all other servers in the Site. This will reduce the overall amount of stored footage but provides healthy redundancy.



NOTE: Each Server backs up the archive for selected cameras, but if a camera is moved to a different server, backup will include only the portion archived before the camera was moved.

1. Make sure each Server is available and accessible through the network.
2. On each server, create a shared folder (**\\server\shared**) on a separate HDD to prevent Site malfunction.
3. Make **\\server\shared** accessible through the network with the WRITE permission.
4. Go to **Server Settings** and add all shared folders as NAS devices.
5. Set to **Backup** for each one added.
6. Repeat the above steps on all servers.
7. Configure backup parameters as described above. It is best that servers perform their backup at different times, otherwise recording speed may be too low. When many servers use the same drive for recording it can lead to I/O errors or insufficient write speed.

Section 12.6 – Configuring Analytics Storage

By default, DW Spectrum utilizes the largest available local storage for storing analytical data. However, there may be instances where using a different drive is preferred.



NOTE: Network storage cannot be used for storing analytic data.

Particularly in Sites with a high volume of events, it is better to use a faster drive specifically for this purpose. For example, **SSD** or **NVMe** drives offer significantly faster read/write speeds compared to common HDDs, enabling them to effectively handle the incoming analytic events.

DW Spectrum can predict the storage usage based on the current data recorded. See "[Analyzing and Predicting Storage Usage](#)" for details.

To Change the Analytics storage location:

1. Open the **Server Settings** menu, and click the **Storage Management** tab.
2. Hover the mouse cursor over the available drives and select *Use to store analytics and motion data*.
3. If any data has been recorded to the previous drive, choose to **Delete** or **Keep the current analytics data**.

To Fix an Analytics Storage Database Error:

The error "Storage Issue: Analytics storage DB error. Insufficient permissions on the mount point" typically occurs on Ubuntu servers when trying to store analytics data on a drive that the DW Spectrum Server cannot properly access due to having inadequate permissions. The server is likely missing the following permissions to the storage drive:

- Read (the capability to view the contents of the file)
- Execute (the capability to run a file or view the contents of a directory)

Fix the storage issue by enabling the option *forceAnalyticsDbStoragePermissions* in the DW Spectrum Web Admin interface. This option grants the DW Spectrum Server the necessary read and execute permissions for that storage drive.

By default, the option is enabled, but it may not be enabled if the server has been upgraded from a previous version. To enable it manually:

1. Open the DW Spectrum Web Admin advanced page (i.e., `http://<server ip>:<server port>/#/settings/advanced`).
2. Login to the administrator account to gain access.
3. Check the box for **forceAnalyticsDbStoragePermissions**.
4. Click the **Save** button at the bottom of the page.



NOTE: If the server still does not have the appropriate permissions after enabling *forceAnalyticsDbStoragePermissions*, the error "Storage Issue: Analytics storage DB error. Insufficient permissions on the mount point" will still appear in the notification panel.

Section 12.7 – Reindexing and Fast-Scanning Archives

The DW Spectrum Server creates a Database that stores an Index mapping the relationship between Archive filenames and the physical location of the Archive files on the storage drive.

When an Archive is damaged, administrators will receive a notification when attempting to view that Archive, stating the storage path where the problem was detected.



NOTE: Archives can be saved to one or more backup storage locations to protect against the possibility of complete loss or removal.

The reindex procedure restores the relationship between the Database and Archive files, and can take up to several hours depending on the size of the Archive. The Site can still be used during this process and will continue recording while the Archive is being reindexed as long as the storage drive has enough capacity to do both simultaneously (performance may be affected).

Reindexing should be performed when the Index is broken, which can occur when:

- A camera is deleted

- A storage device is moved, renamed, or deleted
- An Archive file is removed, renamed, has an incorrect timestamp, or is otherwise corrupted.

To ReIndex an Archive:

1. Do one of the following:
 - *Desktop Client:* Right-click on a server in the resource panel, choose **Server Settings** and go to the **Storage Management** tab.
 - *Web Admin / Cloud Portal:* Open **Settings > Servers** and select a server.
 2. Click **ReIndex Archive** to restore the Index for all main storage locations. Click **ReIndex Backup** to restore the Index for all backup storage locations.
 3. A message will open with the warning "**Hard disk load will increase significantly**". Depending on the size of the Archive, reindexing can take up to several hours. The Site will continue recording while the Archive is being reindexed, but performance may be affected.
 4. Click **OK** to continue. When the window closes, reindexing will start in the background. A progress bar will indicate status, and a message will appear when reindexing is either complete or has been canceled.
-  **NOTE:** ReIndexing can be canceled at any point, which will trigger the "[ReIndexing Archive Canceled](#)" event. However, an incompletely Indexed Archive may be partially or entirely inaccessible. **It is strongly recommended that the Archive reindex process be completed.**
5. When reindexing is complete, a "[ReIndexing Archive Complete](#)" event is triggered.
- To protect against the possibility of complete loss or removal, Archives can be saved to one or more backup storage locations. See "[Configuring Backup and Redundant Storage](#)".

To Fast Archive Scan:

A fast Archive scan checks that the Database is intact and matches the Archive. This process usually only takes a few seconds and occurs automatically when the server is initially started or restarted at any point afterward, an Archive file closed improperly, or the Index files cannot be read. During a fast Archive scan, recording will be paused and resumed after the process is complete.

There are a few situations where a fast Archive scan may take much longer than anticipated, such as when there is an extremely large Archive, the server Database was moved while the server was offline, or an Archive from another server was transferred over to this server prior to its initial launch.

Section 12.8 – Predict and Analyze Storage Usage

Due to differing stream bitrates, different cameras may require different amounts of storage space to save data for the same time interval. DW Spectrum uses special algorithms to balance storage needs so that cameras with high storage needs do not prevent Archive from other cameras from being recorded. DW Spectrum storage analytics are available in the desktop client to help users estimate and predict storage usage.


 **NOTE:** For any given camera, administrators have the option of setting a minimum or maximum number of days that data is Archived (see "[Configuring Minimum and Maximum Archive Storage](#)").

Some common ways storage analysis can be used:

- Identify camera(s) that stream at extremely high bitrates.
- Estimate the amount of time a server can store data from a given device in days and hours.
- Assess the storage space that each camera consumes.
- Predict the amount of time a server can store recordings if additional storage is added.

To View Storage Statistics for a Server:

Open **Server Settings** from the server context menu and open the **Storage Analytics** tab. The **Current Statistics** tab shows the total number of cameras, total space used for Archive and total streaming rate at the bottom of the list, and there is a link to open the server web page on the lower left corner of the page.

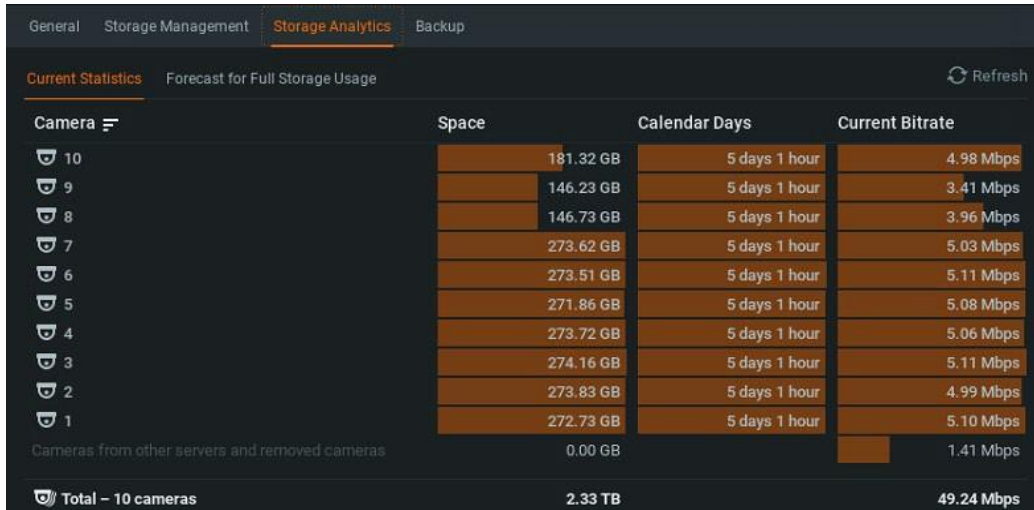

The screenshot shows the 'Storage Analytics' tab with the 'Current Statistics' sub-tab selected. A table lists 10 cameras with their respective storage space, calendar days, and current bitrate. At the bottom, a summary row shows 'Total - 10 cameras' with a total space of 2.33 TB and a total bitrate of 49.24 Mbps. A 'Refresh' button is located in the top right corner of the table area.

Camera	Space	Calendar Days	Current Bitrate
10	181.32 GB	5 days 1 hour	4.98 Mbps
9	146.23 GB	5 days 1 hour	3.41 Mbps
8	146.73 GB	5 days 1 hour	3.96 Mbps
7	273.62 GB	5 days 1 hour	5.03 Mbps
6	273.51 GB	5 days 1 hour	5.11 Mbps
5	271.86 GB	5 days 1 hour	5.08 Mbps
4	273.72 GB	5 days 1 hour	5.06 Mbps
3	274.16 GB	5 days 1 hour	5.11 Mbps
2	273.83 GB	5 days 1 hour	4.99 Mbps
1	272.73 GB	5 days 1 hour	5.10 Mbps
Cameras from other servers and removed cameras	0.00 GB		1.41 Mbps
Total - 10 cameras	2.33 TB		49.24 Mbps

Each of the columns can be sorted in ascending or descending order:

- *Camera* – Camera name
- *Space* – the amount of storage currently consumed by recordings from a given camera
- *Calendar Days* – the amount of time recorded data is available for this camera
- *Current Bitrate* – the current bitrate at which the camera is streaming

To Predict Storage Needed for a Server:

1. Click on the **Forecast for Full Storage Usage** tab in **Server Settings > Storage Analytics**. The total number of cameras and total space required for Archive is shown at the bottom of the list.

Each of the columns can be sorted in ascending or descending order:

- *Camera* – camera name
 - *Space* – the amount of storage that will be required
 - *Calendar Days* – the amount of time that can be recorded on the available main storage
2. In the **Base forecast on data recorded during** field, set the window of history that will be used to calculate future storage needs from the options:
 - *Last 5 minutes.*
 - *Last 60 minutes.*
 - *Last 24 hours.*
 - *Longest period available.*
3. Use the **Additional Storage** field or slider to select an amount of storage that would be added, in terabytes (TB).

The amount of space and Archive duration will update as values in the two settings change.

 **NOTE:** Forecast data is only available for cameras with recording enabled.

 **NOTE:** Displayed statistics will periodically refresh – a manual refresh button is provided along the right side of the header menu.

Section 12.9 – Monitoring Servers

DW Spectrum provides a real time *Server Health Monitor* display that can be added to layouts, opened in separate tabs or a new window.

Access to Site health monitors is granted to all [Built-In Groups](#). The built-in group *Site Health Monitor* is configured to only allow viewing of Site health monitors and notifications. [Custom Groups](#) can be granted access to Site health monitors by using the [Permission Resource](#) control or adding the *Site Health Monitor* Group as a member of the custom group.

To Monitor Server Health in the Desktop Client:

- Click and drag the server from the [Resource Panel](#) into a new or existing layout.
- Open the server context menu and choose **Monitor**, **Monitor in New Tab**, or **Monitor in New Window** to open the monitor.
 - Multiple servers can be selected at once by using **Ctrl + Click** to select before opening as previously described.



The following traces are displayed by default and can be toggled off and on by clicking the checkbox in the legend at the bottom of the display:

- CPU load
- RAM memory usage
- Hard disk partition usage (for example, C: and D:)
- Network interfaces usage

The following details can be toggled to always be displayed by clicking the (i) icon in the upper right corner of the graph or by opening the graph context menu and selecting **Show on Item > Info**:

- Server name and current up-time
- Percentage of individual component usage displayed on the right side
- Legends and chart color key

To Monitor Server Health in Web Admin or Cloud Portal:

1. Connect to the server
2. Select **Monitoring** from the header menu
3. Choose to view the *Graph* or *Log*

 **NOTE:** Review the "[Health Monitoring](#)" topic for additional options to monitor the performance of

Site components.



Section 12.10 – Using a Server's Web Interface

DW Spectrum provides a simple and convenient way to control servers remotely through the server's web interface.

To access a server's web interface from a browser, see "[Opening DW Spectrum Web Admin](#)".

 **NOTE:** In merged Sites, a server web page may be inaccessible if it is located on a different network. See [Adding a Web Page as an Item](#) for information on accessing these web pages via proxy.

To Access a Server's Web Interface from the DW Spectrum Client:

1. Right-click on a server and choose **Server Settings** from the context menu.
2. Click on the **Server Web Page** link on the bottom left of the dialog.
3. The **Server Web Page** can also be chosen directly from the server's context menu.

Menus and Settings Available in the Web Interface View

- [See all connected servers and devices](#)
- View live and recorded video

 **NOTE:** See "[Searching and Filtering in DW Spectrum](#)" for information about searching and filtering connected servers and devices.

Settings – Site Administration (General).

- Rename Site
- [Merge Sites](#)
- [Connect to DW Cloud](#)
- [Allow only secure connections](#)
- [Encrypt video traffic](#)
- [Limit session duration](#)
- [Disable audit trail](#)
- [Disable automatic device discovery](#)
- [Preventing DW Spectrum from Changing Device Settings](#)

Settings – Site Administration (Licenses)

- [Activate licenses](#)
- View license information

Settings – Cameras

- [Select image aspect ratio](#)
- [Select image rotation](#)
- [Enable audio](#)
- Edit authentication credentials
- [Configure motion detection](#)

Settings – Users

- [Delete or Remove Users](#)
- [Modify User information \(name and Email\)](#)
- [Change User password](#)

Settings – Servers

- Change port
- Restart Server
- [Restore factory defaults](#)
- [Detach from the Site](#)
- [Choose Main or Backup storage](#)
- [Add external storage](#)
- [ReIndex main storage](#)
- [ReIndex backup storage](#)

Information

- [View Health Monitoring information and download a report](#)

Settings – Footer Links

- Download DW Spectrum
- API documentation
- Download SDK

Section 12.11 – Session and Digest Authentication

DW Spectrum offers different authentication methods for the different aspects of DW Spectrum. HTTP bearer session authentication is the default option due to its improved security over HTTP digest authentication. Digest authentication is deprecated in DW Spectrum but still usable if enabled on a user-by-user basis.

To Enable HTTP Digest Authentication for a User:

1. Open **Main Menu > User Management** and do one of the following.
 - a. Click **Add User** to add a new user with Digest Authentication.
 - b. Click on an existing user to edit their Digest Authentication settings.
2. Click the three vertical dots on the bottom left of the dialog and select **Allow insecure (digest) authentication**
3. Within the user properties dialog, tick the box to **Allow (insecure) digest authentication**.
4. A notification will show when Digest Authentication is enabled for a user.
5. Apply the changes.

 **NOTE:** A warning will appear in the security tab (**Main Menu > Site Administration**) stating that digest authentication is not secure and the number of users with access to it.

 **NOTE:** The Username must be lowercase when using Digest Authentication.

Part 13: Configuring Multi-Server Environment

DW Spectrum allows many servers to work together, in one or more Sites, for complete scalability.

Servers are identified and merged according to a **localSystemId** value that is assigned to a Server during initial configuration in the Setup Wizard. If "Setup New Site" is selected in the Setup Wizard, a new localSystemId is generated. If "Add to Existing Site" is selected, the localSystemId is taken from the remote Site.

If servers are in different subnets, it is necessary to specify the other server's IP to allow them to merge in separate networks (behind NAT or over the Internet).

When servers are merged, they constantly synchronize all settings so it doesn't matter which Server the client is connected to. If video from a remote Server is requested, the client tries to connect directly to it and if it fails, the current Server will act as a proxy between the client and the Server with the video data.

Licenses are combined as well: if 4 licenses were activated on Server A and 10 licenses were activated on Server B, the Site will have 14 licenses total after the servers are merged.

Based on lab testing results, the maximum recommended scale for a single Site is approximately 10 servers and 1,000 users. However, this will vary significantly depending on specific environmental factors and the equipment in use.

It is recommended to contact the Presales Team for assistance with large-scale deployments and performance optimizations.

The following topics this section describes how to manage multi-Server environments to maintain maximum Site reliability and performance:

- [Moving One Server to a Different Site](#)
- [Merging Sites](#)
- [Detaching a Server](#)
- [Configuring Failover](#)
- [Configuring Routing in a Multi-Server Environment](#)
- [Configuring Time Synchronization in a Multi-Server Environment](#)

Multi-Server Architecture

Each Server has a unique identifier, the "systemid," that allows servers to group together. If a server discovers another server, with the same Site name, in a local network, they will be merged automatically.

If Site names are different, the Sites will be added to the Resource Panel under  *Other Sites*.

If servers are in different subnets, it is necessary to specify the other server's IP to allow them to merge in separate networks (behind NAT or over the Internet).

When servers are merged, they constantly synchronize all data so it doesn't matter which server the client is connected to. If a video is requested from a remote server, the one the client is connected to will be proxying the video traffic.

Licenses are shared as well: if 4 licenses were activated on Server A and 10 licenses were activated on Server B, the Site will have 14 licenses total after the servers are merged.

Services are set at the Organization level and can be activated on any (Site) device within the Organization.

 **NOTE:** DW Spectrum creates a database backup automatically before merging Sites. See "[Backing up and Restoring the Site Database](#)".

Section 13.1 – Moving Servers to a Different Site

Use this action to join a single server with a different Site in the same local network.

Using the Client to Join a Server:

1. Expand  *Other Sites* in the resource panel and locate the destination Site where the server will be moved to.

2. Expand the desired Site and locate the server that will be moved to the connected Site.
3. Open the context menu of the server to be moved and choose **Merge to Currently Connected Site**.
4. Enter the admin password of the destination Site.


 **NOTE:** This method is not an option for joining several servers in a different Site to the current Site. Also, this method won't work if the server that should be connected is outside the local network. For these cases use "[Merging Sites](#)".

Section 13.2 – Merging Sites

Two Sites of the same type – Site A contains several servers, and they are all to be joined to Site B – or a local Site and a Cloud Site – remote servers joining a current Site – can be merged. Sites that have one or more servers with the same server ID in common cannot be merged. This happens when DW Spectrum Site files are copied over to another server without removing the unique identifiers from the original Site. **IMPORTANT:** Servers from a local Site can be merged to a Cloud Site, but not vice versa.

Cloud-connected Sites can be merged as long as the same user has the Owner role on both Sites. A merge of Cloud Sites can only be initiated from the [Cloud Portal](#) while logged into the Cloud administrator (Owner) account.

See the diagram below for a visual representation of available options when trying to merge two Sites.

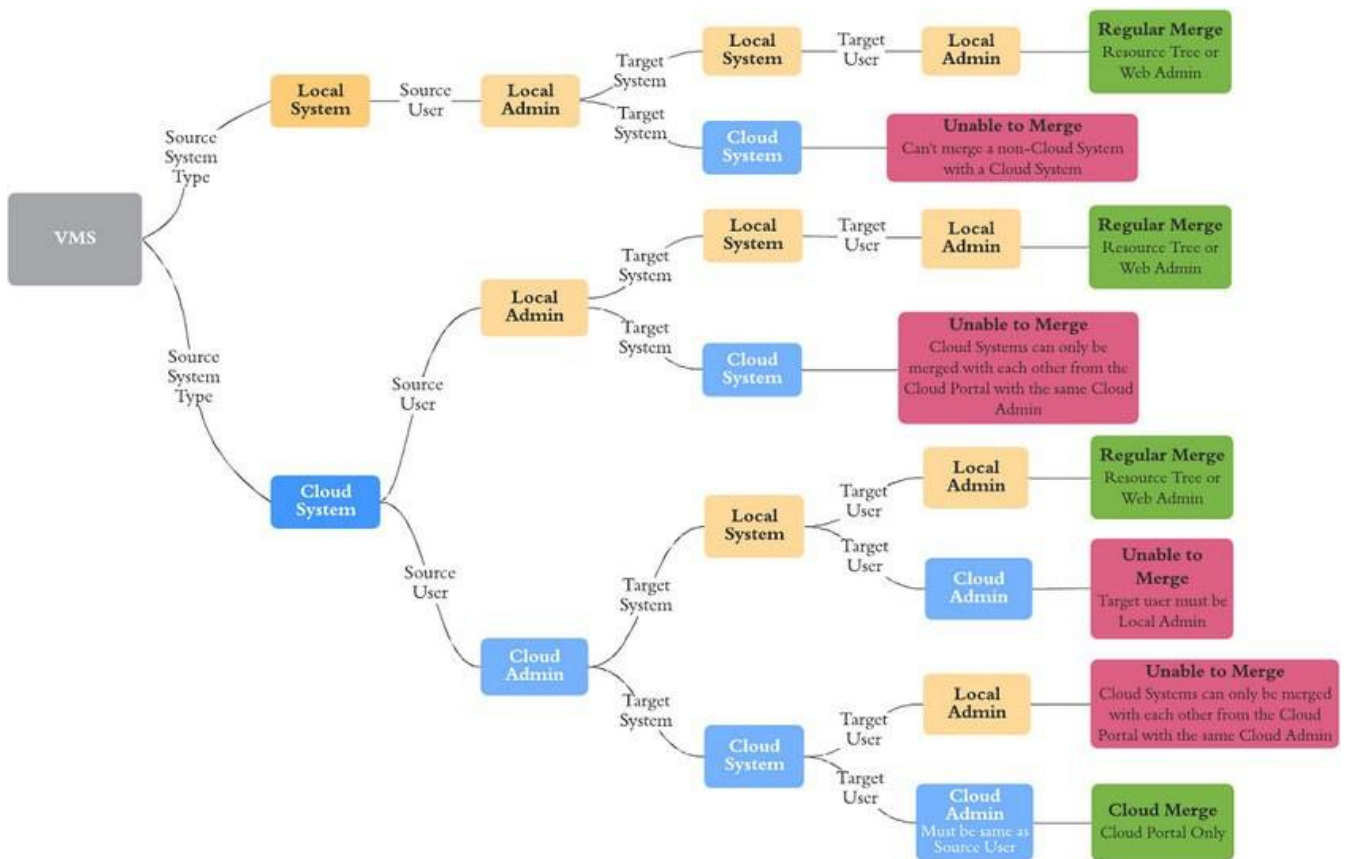

To Merge Local Sites: Desktop Client

1. Launch DW Spectrum client and connect to any server in Site A.
2. Right-click on the Site name in the resource panel and choose **Merge Sites** from the context menu.
3. In the *Merge Sites* dialog, enter the URL of the server to be merged (any server in Site B or a remote server) in the **Server URL** field. Sites in the local network can be found in the drop-down menu. For a remote server, type `http://<ip>:<port>`, where:

- **<ip>** – IP address of the server (the client should be able to connect to this server)
 - **<port>** – network port of the server (default 7001)
4. Enter the **Password** for Site B (or the remote server) and click **Check**.
 5. Select the Site that the others will merge into:
 - Site A – Site B will be merged with Site A
 - Site B – Site A will be merged with Site B
 6. Click **Merge with <Site Name>**.

Web Admin

7. Open a web browser and enter the IP address and port using **http://<ip>:<port>**, where:
 - **<ip>** – IP address of the server (the client should be able to connect to this server)
 - **<port>** – network port of the server (default 7001)
1. Login with a local admin username and password.
2. Click the **Site** tab and click **Merge Sites**.
3. Choose a Site from the drop-down list (or enter the target Site's information and click **Find Site**) then click **Next**.
 - Other Site URL (<server_ip>:<server_port>)
 - Other Site Owner login/password
4. Fill in the current password (for this Site) field.
5. Select which Site's name and administrator password will be kept.
6. Click **Merge Sites**.

 **IMPORTANT:** DW Spectrum creates a Site Database backup automatically before merging Sites. See "[Backing up and Restoring the Site Database](#)".

To Merge Cloud Sites:

Cloud Portal

1. Open DW Cloud.
2. Click on the Site to start the merge with. That Site's page will open.
3. Click **Merge with Another Site**.
4. Choose the Site to be merged from the drop-down menu.
5. Select which Site name and settings will be kept and click **Next**.
6. Enter the Cloud account password and click **Merge Sites**.

Desktop Client and Web Admin

See "[Merge Local Sites](#)".

Section 13.3 – Backing up and Restoring the Site Database

You can create a backup of the database of Site settings, User rights and settings, and device configurations, which can be restored in case of failure. If a User creates the backup in the Client, the file is saved as a ***.db** file. DW Spectrum creates a database backup automatically every 7 days, whenever the product version is updated, and when Sites are merged (see "[Merging Sites](#)"). If the backup is created automatically, the file is saved as a ***.backup** file. More details about backups can be found on the Support Portal.

The Site database does not include archives, Server data, or local settings.

The default database backup location:

Windows

```
C:\Windows\System32\config\systemprofile\AppData\Local\Digital Watchdog\Digital Watchdog Media Server\backup
```

Linux

/opt/digitalwatchdog/mediaserver/var

 **NOTE:** It is best to backup and restore the database on the same computer.

To Backup the DW Spectrum Database:

1. Go to **Main Menu > Site Administration > Advanced**.
2. In the **Backup and Restore** section, click **Create Backup**.
3. In the dialog that opens, choose a file location and enter a file name for the backup.
4. Click **Save**.

To Restore DW Spectrum Settings from a Backup:

1. Go to **Main Menu > Site Administration > General**.
2. In the *Backup and Restore* section, click **Restore from Backup**.
3. In the dialog that opens, find the desired database backup file (*.db), then click **Open**.
4. Click **OK** in the confirmation dialog to restore the database.

Servers will restart automatically when the Site is restored from backup.

 **NOTE:** It may be necessary to restart DW Spectrum clients after restoring a database.

Section 13.4 – Deleting a Server

In some instances, it may be necessary to delete a server from the Site.

A server can only be deleted when it is offline. To delete a server, locate it in the resource panel, **right-click** to open the context menu and select **Delete**.

 **IMPORTANT:** All devices that are hosted on a deleted server will be deleted as well. Recorded data will remain in the server's storage.

A server will automatically discover all devices and start operating once it is back online, and Archives from previously attached cameras will remain available. However, storage settings and device configurations are not saved and will have to be re-entered.

Section 13.5 – Detaching a Server

Detaching a Server can be useful if it is necessary to isolate a Server from the current Site. This operation is rarely performed.

 **NOTE:** If licenses have previously been activated on the server being detached, they will be disabled with the error "Server not found."

To Detach Server from the Site Using a Server's Web Interface:

1. Login to the [Web Admin](#) interface of the server that should be detached from the current Site.
2. Open the **Settings** tab and click **Detach from the Site**.
3. Enter the server password and confirm the action.

 **IMPORTANT:** All DW Cloud Users including the Cloud Site Owner will be deleted when a server is unlinked from the Cloud Site. **Only the local Owner and Local Users will remain.**

To Detach Server from the Site by Restoring a Server's Factory Defaults:

1. Log in to the [Web Admin](#) interface of the server to be detached.
2. Go to the **Settings** tab and click **Reset to Defaults**.
3. A confirmation dialog box will appear and a server password may be required.

Section 13.6 – Configuring Failover

Automatic failover allows a server to automatically discover and attach devices from a failed server in the same Site. When a server experiences a power, network, or storage failure, devices are transferred to the first available failover-enabled server, and the client is automatically reconnected.

 **NOTE:** A 30-day grace period is granted to the failover-enabled server to allow the cameras to continue recording seamlessly (see [Expired and Invalid License Keys](#)).

Failover requires that at least two servers be enabled. However, to adequately protect a Site, all servers should be failover-enabled. This is to protect any given server and because failover success depends on the device capacity of the individual servers.

For example, in a Site with three servers:

- Server A has a maximum capacity of 256 cameras and is actively recording 160 cameras
- Server B has a maximum capacity of 256 cameras and is actively recording 128 cameras
- Server C has a maximum capacity of 256 Cameras and is actively recording 176 cameras.

Therefore, Server A has a failover capacity of 96 devices (256 -160), Server B has a failover capacity of 128 devices (256-128), and Server C has a failover capacity of 80 devices (256-176).

If any one of these servers were to fail, both the other servers would be required to capture all the disconnected devices. For example, a failure of Server A would require space for 160 devices. Server B has failover capacity for 128 devices and Server C has failover capacity for 80 devices, so neither alone would be sufficient. Similarly, A (96) plus C (80) are needed for the 128 cameras on B if it were to fail, and A + B are needed for the 176 devices on C.

Failover takes approximately 1 minute to complete in the instance of a network or power failure. Archive playback from the failed server will not function until the server holding the Archive becomes available.

To Configure Failover on a Server:

The *Failover Priority* setting is a Site-wide option and is synced across all servers in the Site.

1. Right-click on the desired server in the resource panel and choose *Server Settings*.
2. In the *General* tab of the *Server Settings* dialog, enable **Failover**.
3. Enter the maximum number of cameras that can be attached to the server (256 maximum on Intel/AMD CPUs, 12 maximum on ARM CPUs).
4. Set the **Server Location ID**. By default, this value is 0 for all servers with failover enabled. Servers that share the same location ID can failover to one another but not to servers with different location IDs. This ensures that failover occurs between appropriate servers (for example, set servers near one another to the same location ID and servers that are further away to a different location ID).
5. Click *Apply* or *OK*.
6. Repeat steps 1 – 5 to enable additional failover servers.

To Configure Failover Priority for a Specific Camera:

“Failover Priority” can specify the most important streams that will be transferred first, followed by those

with lower priority.

By default, all cameras in a Site are set to "Medium" failover priority. To turn off the failover feature for a given camera, set it to "Never".

1. In the **General** tab of the **Server Settings** dialog, click the **Failover Priority** button.
2. Expand each server to list the attached cameras. The default setting is medium.
3. Click the desired camera and click one of the buttons – **Never**, **Low**, **Medium**, or **High** – at the bottom to set the desired priority.
4. Repeat steps 2 – 3 for all cameras that should be given a failover priority.
5. Click *OK* to apply changes in the failover priority dialog.
6. Click *OK* or *Apply* in the server setting dialog.

Section 13.7 – Routing with Multiple Servers

The automatic routing mechanism built into DW Spectrum enables users to seamlessly work with large sites as a single cluster.

DW Spectrum starts by trying to discover all available server IP addresses, including public ones. However, discovery is not always possible in some network environments; there may be custom network configurations that require custom routing settings. Some servers may have multiple IP addresses – such as a server with a public IP address connected via a 100 Mb NIC, and a 1 Gb local network connection – that may necessitate restricting traffic flow. If it is not necessary to provide public access to this server, it may be useful to restrict traffic flow through the public IP.

To add, enable, or disable routing, open **Main Menu > Site Administration** and click the **Routing Management** tab.

The left panel displays a list of all connected servers. Click on a server in this list to show all available interfaces on the right side of the dialog.

- To add an address manually, click the **Add** button and enter a URL using the format `http://<ip>:<port>`:
 - **<ip>** – the desired IP address or DNS name of server.
 - **<port>** – network port server is listening on (default 7001).
- To allow/deny traffic via a specific network interface, click the toggle button for that connection.

Section 13.8 – Time Synchronization with Multiple Servers

In large Sites, different components may reside in different locations or even in different time zones. Time settings are important for the following Site components:

- Servers
- Desktop Clients
- Cameras

To Control Time Synchronization between Servers:

Some Archive may become unavailable if the time difference between servers is greater than 10 seconds. DW Spectrum can be set to take the current time either from the Internet or from a given server to which all other servers will synchronize.

1. Open **Main Menu > Site Administration**.
2. Click the **Time Synchronization** tab. The current Site time is displayed at the top.
 - To synchronize Site time with the Internet, enable the **Sync time with the Internet** selector. Time cannot

be synchronized if there is no Internet connection or if the time server is offline.

- To synchronize with local time on a given server, disable the **Sync time with the Internet** toggle and click on the name of the desired server.
- To allow each server to use its own local time, choose the **Do not sync time among servers** option (not recommended).

3. Confirm changes.

To Control Time Displayed on Desktop Clients:

It is important to configure the time in the desktop client if it and the servers are in different time zones.

The desktop client can display its local time or server time when browsing the Archive, event logs, [Audit Trail of User Actions](#), etc.

To specify:

1. Open **Main Menu > Local Settings > Look and Feel**.
2. In **Time Mode**, choose: *Server Time* or *Client Time*.
3. Confirm changes.


 **NOTE:** This should be done on each desktop client independently.

For Sites where time is not synchronized, offsets are displayed for both server time and VMS (global Site) time.

The time offset is relative to the server the cursor is hovered over.

For Sites where time is synchronized with a local server, offsets are shown for server OS time only, relative to the server OS time on the selected server.

Additionally, the time can be synchronized with attached cameras. See "[Time Synchronization between Servers and Cameras](#)".

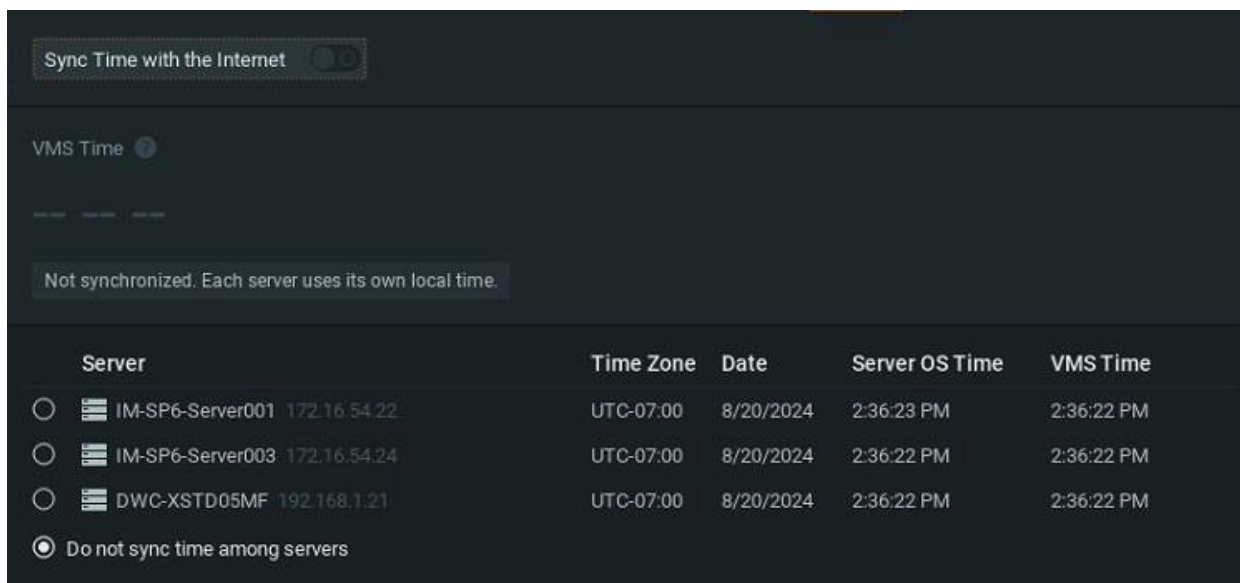

Server	Time Zone	Date	Server OS Time	VMS Time
IM-SP6-Server001 172.16.54.22	UTC-07:00	8/20/2024	2:36:23 PM	2:36:22 PM
IM-SP6-Server003 172.16.54.24	UTC-07:00	8/20/2024	2:36:22 PM	2:36:22 PM
DWC-XSTD05MF 192.168.1.21	UTC-07:00	8/20/2024	2:36:22 PM	2:36:22 PM

Part 14: Device Management

The following types of devices are supported in DW Spectrum:

- Cameras
- Encoders
- DVRs

- I/O modules
- NVRs
- Virtual Cameras

The devices are listed in the [Resource Panel](#) and can be accessed, configured and grouped there.

The following settings are required for a device to be able to record:

- [Setting a Recording Schedule](#)
- [Recording Mode](#)
- [Authentication](#)

This section describes the following functions related to devices:

- [Viewing Full Device List](#)
- [Adding Devices](#)
- [Diagnosing Offline Devices](#)
- [Using Joysticks](#)
- [Moving a Device to a New Server](#)
- [Deleting a Device](#)
- [Setting Up Cameras and Devices](#)

 **IMPORTANT:** Most device parameters can only be configured by power users or administrators (see ["Users and Groups"](#)).

Section 14.1 – Viewing Full Device List

The *Devices List* (or “*Cameras List*” if only cameras are present in the Site) enables viewing and management of all devices registered in the DW Spectrum Site.

To Open the Device List:

Open the **Site Administration** dialog and select **Camera List (Ctrl + M)**.

Recording	Name	Vendor	Model	Firmware	IP/Name	MAC address	ID	Server
 Continuous	 1	Digital Watchdog	DWC-MV72Wi28TW	A7.2.2_2020.12.15	192.168.101.1	00-00-F1-25-54-40		IM-SP6-Server001 (172.16.54.22)
 Continuous	 12	Digital Watchdog	DWC-MV72Di28T	A8.2.1_2021.06.08	192.168.101.12	00-00-00-00-00-00		IM-SP6-Server003 (172.16.54.24)
 Continuous	 4	Digital Watchdog	DWC-MV72Wi28TW	A7.2.2_2020.12.15	192.168.101.4	00-00-F1-25-55-BA		IM-SP6-Server001 (172.16.54.22)
 Continuous	 5	Digital Watchdog	DWC-MV72Wi28TW	A7.2.2_2020.12.15	192.168.101.5	00-00-F1-25-55-BB		IM-SP6-Server001 (172.16.54.22)
 Continuous	 11	Digital Watchdog	DWC-MV72Di28T	A8.2.1_2021.06.08	192.168.101.11	00-00-00-00-00-00		IM-SP6-Server003 (172.16.54.24)
 Continuous	 6	Digital Watchdog	DWC-MV72Wi28TW	A7.2.2_2020.12.15	192.168.101.6	00-00-F1-25-55-CB		IM-SP6-Server001 (172.16.54.22)
 Motion + Lo-Res	 DWC-XSTD05MF	Digital Watchdog	DWC-XSTD05MF	A15.3.3_2023.10.26	192.168.1.21	A8-DC-5A-01-B2-AE		DWC-XSTD05MF (192.168.1.21)

- **Recording** – current recording state of the device (*Not recording, Continuous, Motion only, Motion + Lo-Res*). See ["Recording Mode"](#).
- **Name** – Device name
- **Vendor** – Device manufacturer/maker. When interacting with a 3rd party device via ONVIF protocol, *ONVIF Device* is displayed.
- **Model** – Model of the device
- **Firmware** – The current firmware version
- **IP/Name** – Device IP address
- **MAC Address** – Device MAC address. If the MAC address cannot be determined, a unique identifier is shown (i.e. `urn:uuid:207f19b2-d5a6-407f-8fec-6265a311058b`)
- **ID** – 1 to 999999 digits for Logical ID (see ["Expert Device Settings"](#)).

- **Server** – Server hosting the device

The following controls are available:

- **Sort data** – Data in each of the columns can be sorted in ascending or descending order by clicking on the header.
- **Filter data** – Text entered in the *Search* field applies to all data in the list. Results refresh as characters are entered. To disable filtering, clear the field.
- **Select data** – To select multiple rows use **Ctrl + Click** or **Shift + Click**. Use **Ctrl + A** to select all devices.

The following tools are available from the **Camera List** context menu:

- **Open** – Choose *Open*, *Open in New Tab*, or *Open in New Window*.
- **Delete** – Disconnects the selected device(s) for the server host.
- **Check Camera Issues** – Opens the "[Event Log](#)" for the selected device.
- **Camera Rules** – Opens the "[Event Rules List](#)" for the selected device
- **Camera Settings** – Opens the camera settings dialog for the chosen device. If multiple cameras are selected before clicking this setting, the dialog that opens will be feature restricted.
- **Select All** – Selects all the cameras in the list
- **Export Selection to File** – Opens the *Export* dialog. Enter a file name and select a format (HTML or CSV text file).
- **Copy Selection to Clipboard** – Copies the column data for each selected camera to clipboard, from which it can be pasted into a text editor or spreadsheet application.

 **NOTE:** A camera can be renamed by opening the camera settings dialog for a single device and editing the title.

Section 14.2 – Device Groups

Devices can be placed in Groups to organize how they are displayed in the [Resource Panel](#), this is very useful for Sites with many devices.

Device Groups:

- Are only used for the visual display and organization of resources within the Desktop Client.
- Cannot be used for device settings or permission management.
- Can be nested 8-levels deep with the same Group name used at each level.
- Cannot have a blank name; the Group name must be at least one character and leading spaces will be removed.
- Do not support a single device being within multiple device groups.
- Only Site Administrators and Power Users can create and modify device groups.

To Create a Device Group:

1. **Right Click** on a device or group in the Resource Panel to open the context menu, or use the hotkey (**CTRL+G**) while a device or Group is selected.
2. Rename the Group or press **Enter** to accept the Site generated name.

To Add or Move Devices Between Groups:

Use drag-and-drop to move the device to the desired group.

To Remove a Device from a Group:

Use drag-and-drop to move the device underneath the Server.

To Delete a Device Group:

Right Click on a group to open the context menu and select **Delete** or use the **DEL** hotkey.

NOTE: Devices are moved up one group level when their current group is deleted.

Section 14.3 – Adding Cameras and Streams

This section provides information on how to add various devices (cameras, encoders, I/O modules) to the DW Spectrum resource list.

Choose one of the following methods:

- [Automatic Device Discovery](#)
- [Adding Devices Manually](#)
- [Adding Streams as Cameras](#)
- [Adding a Webcam or Pi Camera](#)
- [Replacing a Camera](#)
- [Deleting a Device](#)

See also:

- [Setting Up a Virtual Camera](#)
- [Setting Up an I/O Module](#)
- [Setting Up an Analog Camera](#)
- [Device Groups](#)

Section 14.4 – Automatic Device Discovery

As soon as a server is started and connected to a Site, it automatically performs device discovery in its network for devices that are accessible via broadcast. Once a device is discovered, it is displayed in the [Resource Panel](#).

By default, this feature is turned on but can be disabled during the [Initial Site Configuration](#) or later (see below).

If a device does not transmit media data, it is considered offline, and all devices it is hosting are automatically switched to the offline status.

Some devices require that a password be created or entered upon the first attempted access. They will be displayed in the resource panel, but an error message will be displayed when attempting to view streams from those devices.

If a device was deleted and reconnected, it will be re-discovered. See "[Deleting a Device](#)" for details.

 **NOTE:** Once a device is discovered, DW Spectrum adjusts the manufacturer's preset image quality settings and streaming configuration for optimal performance in the DW Spectrum Site. See "[Preventing DW Spectrum from Changing Manufacturer Settings](#)" to disable these changes.

If auto-discovery is turned on, once a device is discovered it cannot be deleted unless physically disconnected from the network. If deleted, it will be discovered and added back automatically.

To avoid that and add only desired devices, auto-discovery can be turned off.

To Disable Automatic Device Discovery:

Desktop Client

1. Open the **Main Menu > Site Administration > General** tab.
2. Uncheck **Enable devices and servers auto discovery** in the *Site Settings* section.
3. When finished, press *OK* to apply or *Cancel* to discard changes.

Web Admin / Cloud Portal

1. Open **Settings > Site Administration > General**.
2. Uncheck the **Enable auto discovery of cameras and servers** checkbox.
3. Apply changes.


! IMPORTANT: Once auto-discovery is disabled, new devices and servers will no longer be auto-discovered. They will have to be added manually.

Section 14.5 – Adding Devices Manually

If a device is not accessible via broadcast – if it is in a different network or can only be accessed via the Internet – it will not be discovered automatically. In this case DW Spectrum provides the option to add devices manually by scanning a range of IP addresses, or specifying a single IP address, hostname, or generic RTSP/HTTP/UDP link (see "[Adding Multicast, RTSP or HTTP Streams as Cameras](#)").

To Add One or More Devices:

- Open the **Add Device** dialog by doing one of the following:
 - Open **Main Menu** and select **Add > Device**.
 - **Right-click** on the desired server in the resource panel to open its context menu.
- Select the desired server in the **To** field.
- If required, specify authentication parameters in the **Login** and **Password** fields. Once a device is added, click the **Edit Credentials** button in **Camera Settings > General** to change this password.
 - Some devices may be discovered without specifying credentials, but it is often necessary to specify at least the default login and password.
 - Other devices may not require credentials for discovery but will require credentials when they are accessed for the first time. In this case, they will be displayed in the resource panel, but request credentials to view streams from these devices.
- If needed, specify a **Port**. The default **Auto** setting is recommended. Most devices are discovered on port 80.
- Choose one of the following:
 - Select the **Known Address** tab (to add a single device):
 - i. Enter either the IP address, hostname of the device, or an RTSP, HTTP, or UDP link for the device in the **Address** field.
 - ii. Hover the mouse over the  icon near the address field to see some syntax examples.

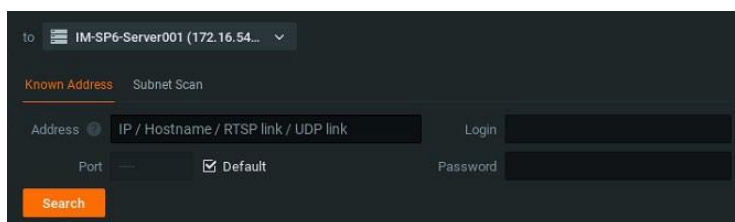

- Select the **Subnet Scan** tab (to add several devices at once):
 - i. Enter the desired **Start IP** and **End IP** values. (By default, addresses 0-255 of the same subnet are suggested so that the entire network will be scanned.)
 - ii. Click **Scan** to initiate the search. This can take some time, especially when an IP range is

being scanned.

- iii. If any devices are located, they will be displayed showing the brand, model and IP address. If a device is already registered it will appear in the list as *Added*. Previously added devices, that were later removed, may be re-added.

- Select the desired devices and click on **Add all devices**. The total number of devices being added will be displayed in a banner at the top of the window.


Section 14.6 – Adding Streams as Cameras

Occasionally, a camera may not be automatically discovered or will not work properly in DW Spectrum because it is not fully compatible with ONVIF. These devices can instead be added using their RTSP, HTTP, or UDP multicast stream address. Once added, that camera can be viewed and recorded in DW Spectrum, including audio output over RTSP for devices that record audio.

Two streams can be added to an RTSP/HTTP camera, enabling dual streaming and adaptive scaling (see "[Dual Stream Processing](#)"). Dual-stream cameras from RTSP, HTTP, or UDP streams allow for the integration of third-party legacy IP cameras, DVRs, and NVRs with full DW Spectrum adaptive scaling capabilities for reduced CPU and network usage.

- ❗ **IMPORTANT:** The exact RTSP/HTTP/UDP URL of the stream must be used. This information can be found in the camera manual, on the camera web page, or by contacting the manufacturer.

Follow the steps described in "[Adding Devices Manually](#)" for a single device to add the desired stream value in the **Address** field. Once added, the camera will be displayed in the resource panel as a "GENERIC_*stream type*_stream name". Then click **Edit Streams** in **Camera Settings > General** to add or edit either stream value. Not all RTSP devices are compatible with the quality and FPS selection capability in the client.

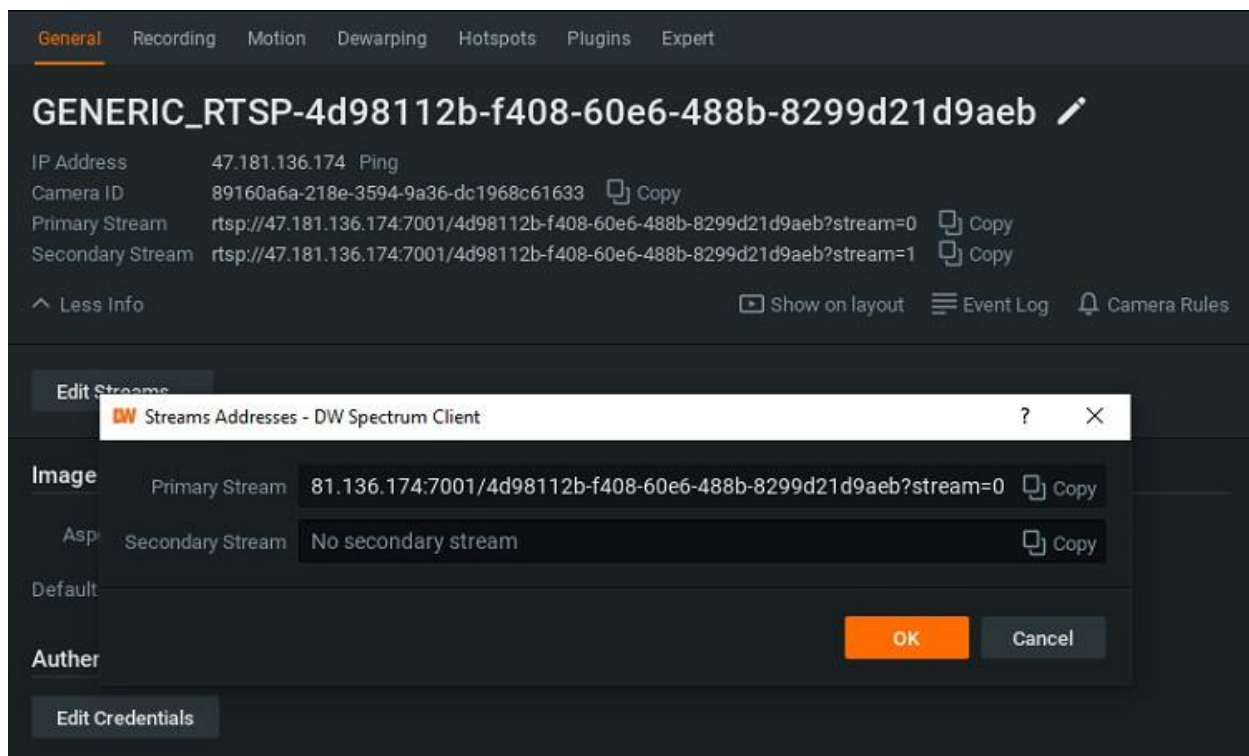

 **NOTE:** If the lowest resolution is greater than 1024x768, software motion detection will not be available.

Section 14.7 – Adding a Webcam

Non-IP cameras, such as USB webcams, are supported on Windows and Ubuntu Linux operating systems with dual-streaming and audio support when the *Autodetect USB and web cameras* option is

enabled (see "[Configuring Server Settings](#)").

These cameras will be automatically detected and added as a DW Spectrum resource available for live and recorded viewing.

When the DW Spectrum Site is installed on a Raspberry Pi machine with a Raspberry Pi camera module, the Site will function as a server with a smart IP camera, capable of operating as a stand-alone Site for demonstrations or as part of a larger Site.

 **NOTE:** Audio is not supported for the Raspberry Pi camera.

Section 14.8 – Replacing a Camera

The camera replacement feature is used to replace an existing camera with another one while allowing the new camera to continue using the original Archive. This can be useful for situations where the old camera is broken, an upgrade is needed, or camera models from different parts of a building need to be switched.

- Camera replacement is only supported for single-sensor cameras and can only be replaced by another single-sensor camera on the same server.
- This action can only be initiated by users with the Administrator and Power Users.
- Camera replacement cannot be undone – a repaired camera should never be reinstalled on its previous server.
- Available options and a summary of the data transfer plan will be presented for acceptance before the transfer is started.
- The following data and settings can be transferred:
 - Archive.
 - Camera's name.
 - Access rights.
 - Analytics.
 - Event rules.
 - PTZ settings.
 - General settings.
 - Recording settings.
 - Advanced settings.
- The following data and settings cannot be transferred:
 - Motion Detection settings.
 - Two-Way audio.
- The Camera Replacement feature does not support the following device types:
 - Multi-sensor cameras
 - Virtual cameras
 - Speakers
 - NVRs
 - Unauthorized cameras
 - I/O modules
 - Offline cameras that appeared after an Archive Reindex and Scan was performed
 - Cameras that were replaced before the most recent software update


How to Replace a Camera:

1. Make sure the camera to be replaced is disconnected and appears offline in the Site.

2. Right-click the desired offline camera in the Resource Panel.
3. Select the **Replace Camera** option.
4. Select a camera to replace the current one.
5. Apply changes.

When Transferring Data Between Cameras:

Before the transfer starts, the following dialog will be displayed:

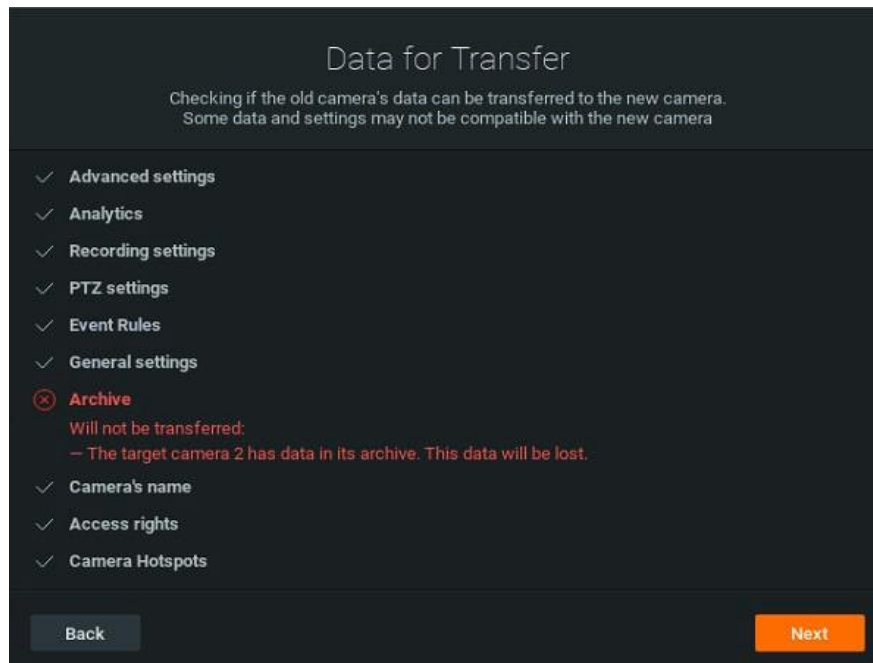

Not all data and settings can be transferred to the new camera as the new camera may have technical limitations. Motion detection and 2-way audio settings will not be transferred.

The following data and settings can be transferred:

- Camera's name
- Access rights
- Analytics
- Event rules
- PTZ settings
- General settings
- Recording settings
- Advanced settings

 **NOTE:** If the original camera is reconnected, the option to undo the replacement will be enabled.

Deleting a Device

To Delete a Device:

1. Expand the server hosting the desired device in *Resource Panel*.
2. Find and select the device.
3. **Right-click** for the context menu and choose **Delete** (or the **Del** button on a keyboard).
4. Click **Delete** to confirm.

If a camera is disconnected or deleted, its archived footage becomes unavailable. However, it can be restored (see ["Viewing Archive from Deleted Cameras"](#)).


 **NOTE:** If a device is online it will be auto-discovered again unless it was added manually. To avoid auto discovery, either unplug the device or [Disable automatic device discovery](#).

If the device is back online, it will start working immediately and its recorded archive will be available. However, a User will need to reconfigure the **Device** as its settings have been erased.


Section 14.9 – Diagnosing Offline Devices

DW Spectrum can perform basic diagnostics to determine why a camera is offline. If the problem cannot be fixed without outside tech support, run a diagnostic test prior to contacting support, and provide them with the results.

A camera that is offline will have an offline icon () in the resource panel and will display **NO SIGNAL** in layout. Diagnostics can be invoked by pressing the **Diagnostics** button on the item:

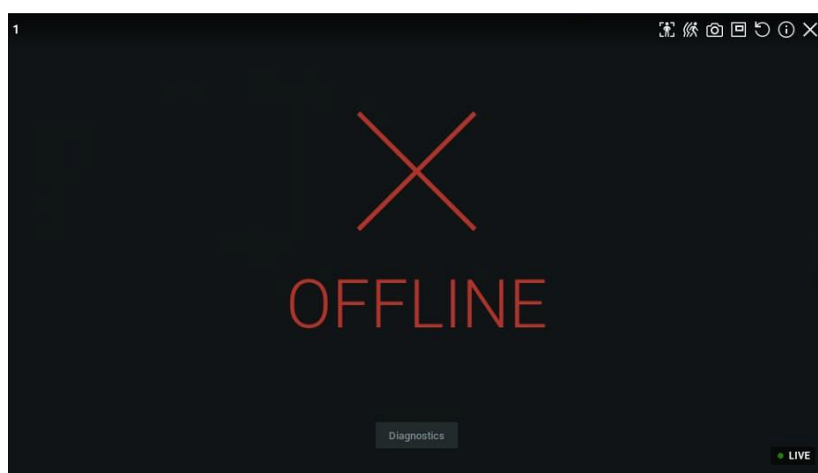

Once diagnosis is complete, the analysis and recommended actions will be displayed:

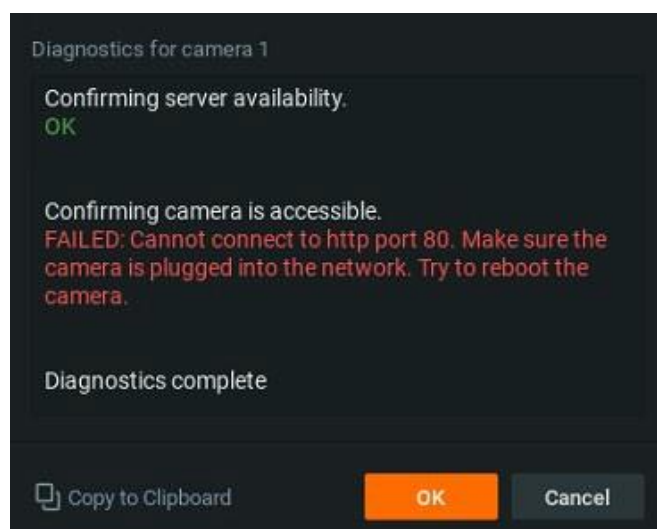

Follow the instructions to resolve the issue. If unsuccessful, contact support (see "[Contacting Support](#)").

 **IMPORTANT:** Make sure to click *Copy to Clipboard* and paste the data into the message prior to sending it to support.

Section 14.10 – Accessory Devices (Joysticks)

A joystick is a peripheral device that provides programmable hotkeys and accurate analog control over the pan, tilt, and zoom functions of compatible PTZ cameras in DW Spectrum.

This functionality is officially supported on **Microsoft Windows only**. Using a joystick with a different operating Site may work but issues might occur.

The following joysticks are officially supported:

- Axis T8311
- Hanwha Techwin SPC-2000

Other USB joysticks are also supported, but may provide limited functionality.

Initial Setup for a Joystick with the Desktop Client

1. Close the desktop client.
2. Plug the joystick into the computer. Windows will automatically detect the device and install the necessary drivers.
3. Open the desktop client.
4. Open a PTZ camera and click on the PTZ icon.
5. Use the joystick to pan, tilt, and zoom the camera.

Common Joystick Usage

- Stick movement – controls PTZ
- Stick rotation – controls zoom in/out

 **NOTE:** When controlling a PTZ IP camera via analog joystick controls, expect latency from physical movement of the joystick to the resulting PTZ action of the camera. PTZ actions are only applied to items that are selected on the scene in the desktop client.

Advanced Configuration

Supported joysticks can access additional configuration settings in the desktop client by opening **Main Menu > Joystick Settings**, in which there are two tabs: **Basic Actions** and **With Modifier**.

Basic Actions


Adjust PTZ sensitivity and configure joystick buttons in this tab. To adjust the sensitivity of PTZ controls, move the slider to the left to reduce sensitivity and move the slider to the right to increase sensitivity.

 **NOTE:** If the joystick has only two axes, zoom sensitivity control is not shown.

Each joystick button has a drop-down menu associated with it where it can be assigned one of the following actions:

- Focus Near
- Focus Far
- Autofocus
- Go to PTZ position (requires selecting the hotkey/PTZ position)
- Open Layout (requires selecting a specific layout)
- Set to Fullscreen
- Next Camera on Layout
- Previous Camera on Layout
- Modifier (requires additional configuration in the With Modifier tab)

 **NOTE:** All changes must be saved by clicking **Apply** or **OK** before exiting the settings dialog.

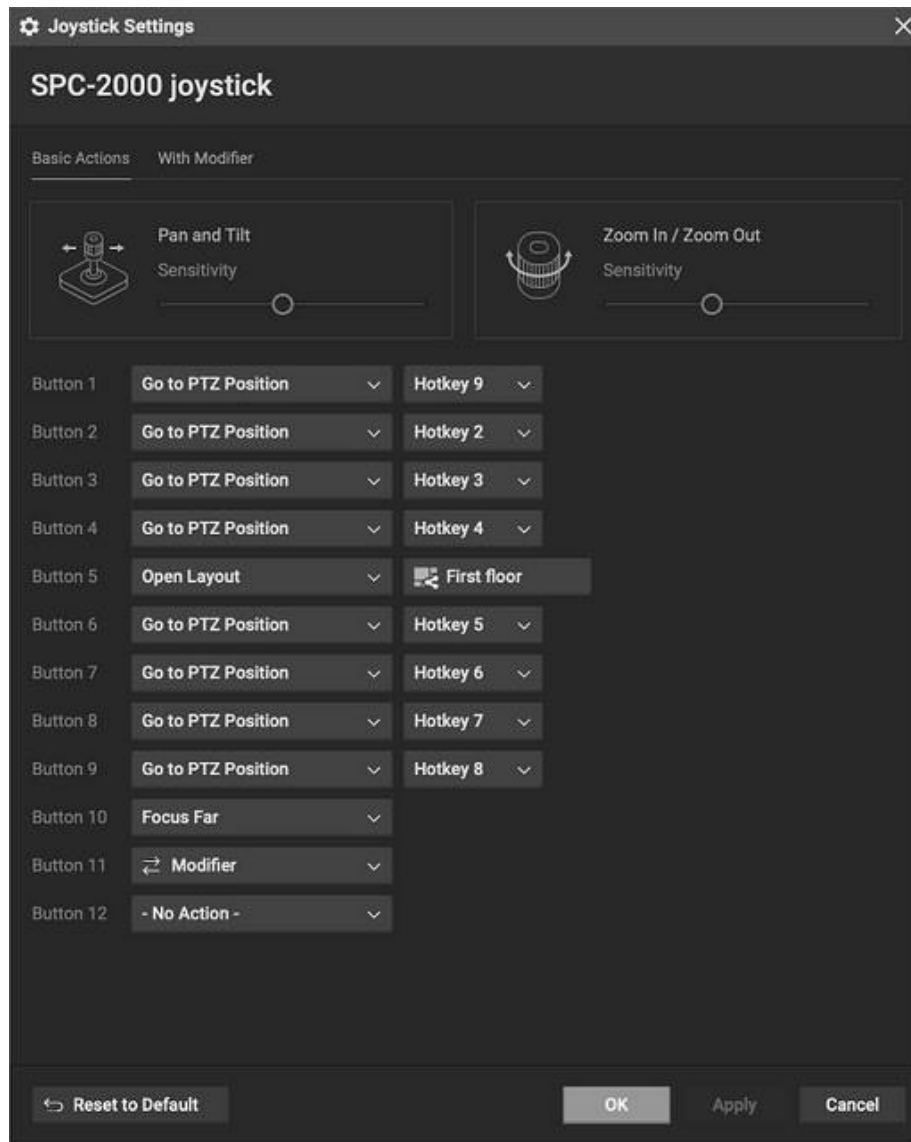

With Modifier

The **With Modifier** tab is disabled unless at least one of the joystick buttons is set as a modifier in the **Basic Actions** tab. Select a secondary action for each joystick button in this tab. The secondary action will activate while the modifier button is held down.

For example, button 1 can be configured to open a layout any time button 11 is held down. Button 1 will still go to a PTZ position when button 11 is not held down.

 **NOTE:** All changes must be saved by clicking **Apply** or **OK** before exiting the settings dialog.

Section 14.11 – Changing Device Server

The resource panel can be used to move a device from one server to another. When a device is moved from one server to another, all predefined parameters are retained and Archive will be combined seamlessly.

However, the device must be on the same local network as both servers to remain online, in which case recording will restart automatically and the live stream can be viewed. If the servers are not attached to the same network, moving a device will take it offline. In this case, the option to **Move** it anyway, **Skip** (may be a specific camera if more than one is selected), or **Cancel** the operation will appear.

 **NOTE:** An offline camera() still uses a license, even though the device is not recording.

Moving a device is helpful when too many devices are used on the network and an additional server is needed for load balancing and redundancy purposes, as it allows for load-balancing to be performed manually.

To Move Device(s) to Different Server:

1. Select the desired device(s) in the resource panel.
2. Drag and drop the selected devices over the name of the desired server.

 **NOTE:** Devices can also be automatically moved in the event of a server failure (see "[Configuring Failover](#)" for details).

Section 14.12 – Deleting a Device

To delete a device:

1. Expand the server hosting the desired device in the *Resource Panel*.
2. Right-click the device to open the context menu and choose **Delete** (or press the **Del** key).
3. Click **Delete** to confirm.

If a camera is disconnected or deleted, its Archived footage becomes unavailable. However, it can be restored (see "[Viewing Archive from Deleted Cameras](#)").

 **NOTE:** If a device is online, it will be auto-discovered again unless it was added manually. To avoid auto discovery, either unplug the device or [Disable automatic device discovery](#).

If the device comes back online, it will start working immediately and its recorded Archive will be available. However, a user will need to reconfigure the device as its settings have been erased.

Section 14.13 – Setting Up Cameras and Devices

Cameras and devices have internal settings specified by the manufacturer and Site settings that DW Spectrum applies outside of the device. For instance, camera resolution is set within the camera while camera hotspots are defined within the desktop client. Device settings and options available in the Site will vary depending on device model, firmware installed, and compliance with industry standards.

Users must be a member of a group having **Edit Device** permissions or have been granted permission to **Edit a Device** to perform the tasks outlined in this topic (see "[Users and Groups](#)").

 **NOTE:** It is possible to configure image controls, audio, recording schedule, authentication credentials, etc. for several devices simultaneously. See "[Applying Parameters to Multiple Devices](#)".

Device Setup

[Obtaining Basic Device Information.](#)

[Device Authentication.](#)

[Renaming a Device.](#)

[Setting Camera Orientation.](#)

[Setting Camera Aspect Ratio.](#)

[Hot Spot and Camera Linking.](#)

[Events Log.](#)

[Event Rules List.](#)

Image Control

[Image Enhancement.](#)
[Pan, Tilt, and Zoom Controls.](#)
[Dewarping Controls.](#)
[Saving and Restoring PTZ Positions.](#)
[Setting Up PTZ Tours.](#)

Configuration Settings

[Configuring Audio on a Device.](#)
[Setting Up a Virtual Camera.](#)
[Setting Up an I/O Module.](#)
[Setting Up an Analog Camera.](#)
[Setting Up Motion Detection.](#)
[Setting a Recording Schedule.](#)
[Recording Modes.](#)
[Configuring Minimum and Maximum Archive Storage.](#)

Section 14.14 – Obtaining Basic Device Information

The **Camera Settings > General** tab displays the unique camera ID and RTSP URLs for primary and secondary streams for each camera. Editable fields for streams, image quality, and related parameters are also available for ONVIF-compliant cameras.

- *Camera name* – this field is editable
- *Vendor*
- *Model*
- *Firmware*
- *IP address* – click the **Ping** button to test device accessibility.
- *Web Page* – this link launches the device web page in a browser to view and edit all device parameters. Depending on the device, the device web page can also be launched and edited from within the DW Spectrum client (see "[Configuring Device Advanced Settings Using DW Spectrum](#)").
- *MAC address*
- *Camera ID* – a UUID that the Site assigns to each camera (ex. f93369eb-e530-27b7-78ba-16978cbd3061). Virtual cameras also receive a unique camera ID.
- *Primary stream URL*
- *Secondary stream URL*

Section 14.15 –Authenticating Devices

All devices come with a predefined login and password combination. During the discovery process, DW Spectrum attempts to use the manufacturer's default credentials to access a device and acquire media streams. However, default login and passwords can vary between models or product lines, or may have already been changed.

If DW Spectrum cannot access a device using the default authentication, the device is shown as **Unauthorized** () in the resource panel and the following message will appear when a user attempts to view a live stream: "UNAUTHORIZED Please check authentication information."

Some devices require that a non-default password be created if they are discovered using default credentials. In this case, the device is displayed within the resource panel, but an "unauthorized" message will be displayed when trying to view streams from such devices.

To Enter Authorization Parameters:

1. Open **Camera Settings > General**.
2. Click on the **Edit Credentials** button.
3. Enter **Login** and **Password** in the *Authentication* section and click *Apply* or *OK*. To discard changes, click *Cancel*.

Section 14.16 – Renaming a Device

When a device is discovered automatically, it is displayed in the resource panel as either "model" or "manufacturer + model". As a result, all cameras with the same manufacturer and model will have the same name – only the IP address will differ. Display of the IP address is optional (see "[Show additional info in tree](#)").

A device can be renamed for easier identification.

In the resource panel right-click on the device and use the context menu option **Rename (F2)**, or from **Camera Settings > General** click on the pencil icon in the camera name field to make it editable.

Section 14.17 – Camera Rotation

DW Spectrum can compensate for devices that are mounted upside down or rotated by 90, 180, or 270 degrees. Rotation correction requires the transcoding of video exported from a camera.

 **NOTE:** Users must have the proper permissions to edit device settings granted directly or by group membership (see "[Users and Groups](#)").

To Specify Device Orientation:

Desktop Client

1. Open **Camera Settings** and click the **General** tab.
2. In the **Image Control** section, select the desired rotation adjustment from the **Default rotation** options: *0 degrees, 90 degrees, 180 degrees, 270 degrees*.
3. Apply changes.

Web Admin / Cloud Portal

1. Open **Settings > Cameras** and select a camera.
2. Open the **Rotation** dropdown menu.
3. Select the desired rotation adjustment from the default options: *0 degrees, 90 degrees, 180 degrees, 270 degrees*.
4. Apply changes.

Section 14.18 – Setting Camera Aspect Ratio

Occasionally, cameras will report an incorrect aspect ratio. If DW Spectrum cannot make an automatic it can be done manually.

 **NOTE:** This correction will require transcoding of videos that are exported from the camera.

To Specify an Aspect Ratio: Desktop Client

1. Open **Camera Settings** and click the **General** tab.
2. In the **Image Control** section, click on the **Aspect Ratio** dropdown menu.
3. Select the desired aspect ratio from the available options: **16:9**, **1:1**, or **4:3**. Select **Auto** for DW Spectrum to determine the aspect ratio.
4. Apply changes.

Web Admin / Cloud Portal

1. Open **Settings > Cameras** and select a camera.
2. Click on the **Aspect Ratio** dropdown menu.
3. Select the desired aspect ratio from the available options: **16:9**, **1:1**, or **4:3**. Select **Auto** for DW Spectrum to determine the aspect ratio.
4. Apply changes.

 **NOTE:** If the aspect ratio is set to **Auto** in the **Camera Settings** dialog, the aspect ratio of the secondary stream will be modified to match the aspect ratio of the primary stream.

Section 14.19 – Configure Multiple Devices

To simplify the configuration process, the same parameters can be applied to multiple devices at once. Not all settings and devices can be changed this way.

1. Select the desired devices from the resource panel or layout.
2. Open the device context menu and go to **Device Settings**. The following settings can be configured when multiple devices are selected:
 - Authentication credentials
 - Aspect Ratio
 - Default rotation
 - Audio (enabled or not)
 - License Activation (Recording on or off)
 - Recording Schedule
 - All **Expert** tab settings except **Logical ID** (see "[Expert Device Settings](#)")
3. Enter the desired parameters.
4. Apply changes.

Section 14.20 – Defining Hotspots

Hotspots are clickable icons placed over a video stream that allows users to quickly navigate to another device or shared layout. This feature is useful for tracking an object of interest as it travels between the view of multiple cameras or to quickly view a location from different perspectives.

Hotspot Features:

- Hotspot are moveable, freely positioned icons that reside on a video stream overlay.
- Hotspot icons can include an optional directional pointer and color tint.
- Only Administrators and Power Users can create, edit, or delete Hotspots.
- While there is no limit to number of Hotspots created for a camera, only so many will Hotspot icons fit over a video stream.

- All users who can view the device or camera can toggle the Hotspot layer (see "[Users and Groups](#)").
- Hotspots respond to mouse hover, mouse click, and will present a context menu on mouse right-click.
- Hotspots are disabled by default and must be enabled for each device or camera in the Site (see "[Setting Up Cameras and Devices](#)").
- Hotspots are only available in the Desktop Client and do not exist in other DW Spectrum clients or services.
- Each instance of a camera or video stream can be independently be configured to have the Hotspot layer active and displayed, or disabled and hidden.
- Hotspots remain in a fixed X-Y position over the display and are not affected by [Image Controls](#) or [Pan, Tilt, and Zoom movements](#).
 - Use a PTZ preset to record the camera position that is aligned with precisely placed Hotspots.
- ❗ **IMPORTANT:** Using PTZ controls to change the position of a camera can affect the accuracy of the hotspot as hotspots do not track camera movements.

To Add or Edit a Hotspot Using the Desktop Client:


1. Open **Camera Settings** by doing one of the following:
 - Navigate to **Main Menu > Site Administration > Camera List** and either double click a camera, or right click on a camera in the *camera list*, and select **Camera Settings...**
 - Right-click on a camera name in the resource panel or right-click on a camera stream placed in a layout to open the context menu, then select **Camera Settings...**
2. Select to the **Hotspots** tab in the *Camera Settings* dialog.
3. Set the switch for *Hotspots* to the on (visible and active) position.

Disabled	Enabled
	

4. Click the **Add** button and the next sequential Hotspot number is added to the center of the Camera display.
5. Drag the Hotspot to any available, non-overlapping location on the Camera display.
6. Select a Hotspot to configure from the list:
 - Select a target for the from the list of resources presented.
 - Choose a color tint for the Hotspot
 - If the **Pointed** icon feature is enabled, set the direction of the target.
7. Select a Hotspot from the list to configure it, and then a
 - a. Repeat this step to reconfigure any Hotspot labeled *Select Camera*.
8. **Apply** changes to remain in the Hotspot dialog or click **OK** to apply settings and exit the *Camera Settings* dialog.



NOTE: All created hotspots that are not linked to a camera will be removed when the *Hotspot* dialog is closed.

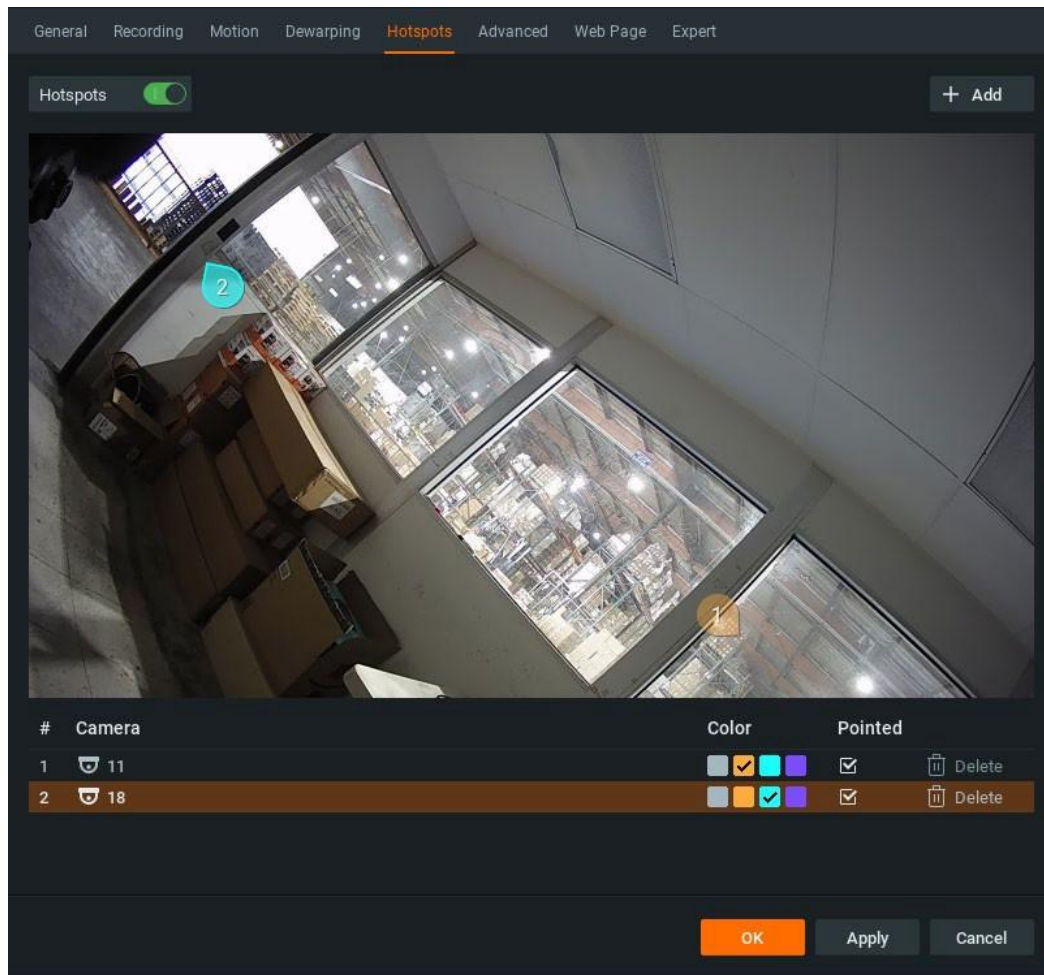

Using Hotspots

- If not displayed, activate the Hotspot layer using [Keyboard Shortcut](#) ("H") or by Clicking the Hotspot icon in the display title bar.
- Hovering the mouse pointer over a camera Hotspot will present a preview of the target.
- Hovering the mouse pointer over a Layout icon will display the title of the shared Layout. Layout Hotspots do not provide a preview or thumbnail.
- Clicking on a camera Hotspot will highlight the target camera on the active layout, or add the target camera to the active layout if it is not already present.
- Right Clicking will open a contextual menu based on where it is opened:
 - The context menu for a camera hotspot includes the option to open the camera, open the camera in a new tab (of the active client), or open the camera in place (replace current grid item with the target camera).
 - The context menu for a shared layout hotspot offers to open the target layout in a new tab.

To Delete a Hotspot Using the Desktop Client:

1. Open camera settings by doing one of the following:
 - **Main Menu > Site Administration > Camera List** and double click a camera.
 - Open **Camera Settings...** using the context menu on the viewing grid or a camera name in the resource panel.
2. Change to the hotspots tab in the *Camera Settings* dialog.
3. Click **Delete** to remove the associated hotspot.

IMPORTANT: Deleted hotspots cannot be restored.

Section 14.21 – Image Controls

Item windows display basic device information and icons for powerful built-in functions. The information and icons shown depend on whether the item is showing live or recorded video.

Upper Left

The upper left corner displays the camera name for live streams, or the file name for recorded video.



Upper Right

The upper right corner contains the following buttons:

	Motion Smart Search		Pan, Tilt, and Zoom Controls if supported by the device
	Screenshot		Hotspot
	Create a Zoom Window		Rotate
	Dewarping Controls		Information
	Object Search		Close

Bottom Right

The bottom right corner indicates **LIVE** for live streams, or displays the date and running time for Archive, and an icon for the current [Recording Mode](#).


	Constant Recording (green circle)
	Motion Recording (red circle)
	Low Resolution always and High Resolution for motion (red circle with green diagonal stripe)
	Not Recording (gray circle)

If enabled and supported by the device, there may also be:

	2-Way Audio button
	Custom Soft Triggers

Bottom Left

Click on the information icon  or right-click on any selected item to open the context menu, and choose **Show On Item > Info (Alt + I)** to display the following item information:

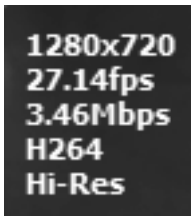

- Resolution of the stream in pixels
- Frames per second (FPS) of the stream
- Bitrate of the stream in megabits per second (Mbps). The letter after the bitrate value is the video traffic delivery method indicator – Direct Connect, NAT traversal (N) and Proxy (P)
- Codec (e.g., H.265, H.264, or MJPEG). If "[Hardware Decoding](#)" (Intel Quick Sync, Nvidia NVDEC) is enabled, the stream will display the (HW) indicator to the right of the stream codec.
- Stream in use – Hi-Res or Lo-Res

Messages in Place of Camera Feed

- *OFFLINE* (see "[Diagnosing Offline Devices](#)")
- *NO DATA* – No recording was performed; no data is available
- *Loading* – Awaiting data from server
- *Unauthorized* – Incorrect/missing login or password

Section 14.22 – Image Enhancement


Image enhancement applies a set of adjustments to improve overall image quality. Select an image and open the image enhancement dialog using the context menu or hotkey (**Alt + J**).

Automatic Image Enhancement:

Use the default adjustment parameters that DW Spectrum calculates using a standard gamma correction algorithm or set the parameters manually. In most cases, the default settings are adequate.

Set Image Enhancement Parameters Manually

1. Right-click on the desired image and select **Image Enhancement (Alt + J)** in the context menu.

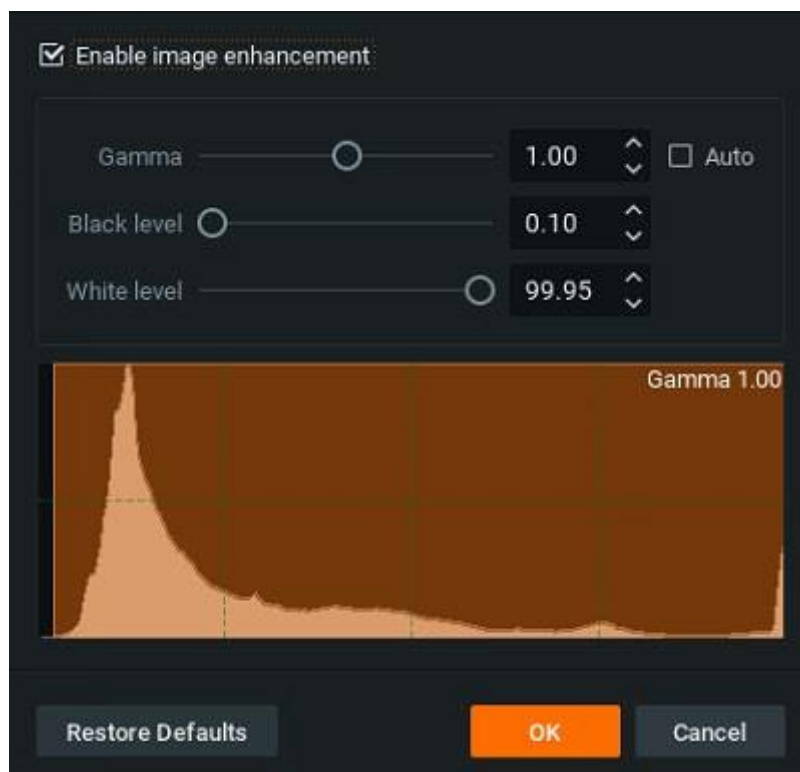

2. In the *Image Enhancement* dialog that opens, click the **Enable image enhancement** checkbox to turn on image enhancement. This will show any changes as they are made.

 **NOTE:** This setting is persistent and will be applied to all images where manual adjustment is enabled.

3. Set the following parameters:

- Gamma – the lower the value the lighter the image will be. Check Auto to allow the gamma value to change to an optimal level as the other settings change.
- Black level and White level – note the change in the graph under the sliders. It is best to cover as much of the graph possible. If too much of the graph is clipped on the left or right sides, important graphic information will be lost.

4. Click **Restore Defaults** at any point to restore the default enhancement settings.

5. Click **OK** to save changes or **Cancel** to discard them.

 **NOTE:** The current state of image enhancement is always applied to screenshots, and optionally to exported video (it can be turned off in the export settings).

Section 14.23 – Dewarping Controls


Some specialty lenses known as fisheye lenses capture a very large viewing area but also create a highly distorted image. DW Spectrum provides a powerful dewarping algorithm that can be applied to flatten a fish-eye image, making it much easier to view.

Dewarping requires some initial configuration. Once configured a viewer can click on the dewarping icon  when the camera is in a layout to toggle dewarp mode.

To Configuring Camera Dewarping:

Configuring camera dewarp can only performed by users with the proper permissions to edit device settings (see mode "[Permissions Management](#)").

1. Keep the camera open in layout to view how its image changes as the dewarp settings are adjusted.
2. Select the desired camera and open the **Camera Settings** dialog from the context menu.
3. In the **Dewarping** tab, click on the **Dewarping** toggle to enable the distortion correction parameters.
 - *Dewarping* – select dewarping type: Fisheye or 360° Equirectangular. If 360° Equirectangular, the only parameters are α and β for horizon correction.
 - *Mount* – indicate the mounting position of the camera to apply the proper dewarping algorithm for the camera's orientation: **Ceiling**, **Wall**, or **Floor/Table**. A wall mount setting allows for only a 180 degree panoramic view while ceiling and floor/table allow for a 360 degree panoramic view.
 - *Angle* – if the camera is not mounted in an exact vertical or horizontal position, the mounting angle can be adjusted by -30.0 to +30.0 degrees to fix the distortion.
 - *Lens Projection* – improve fisheye dewarping precision by selecting the most suitable lens projection type:
 - *Equidistant*
 - *Stereographic*
 - *Equisolid*

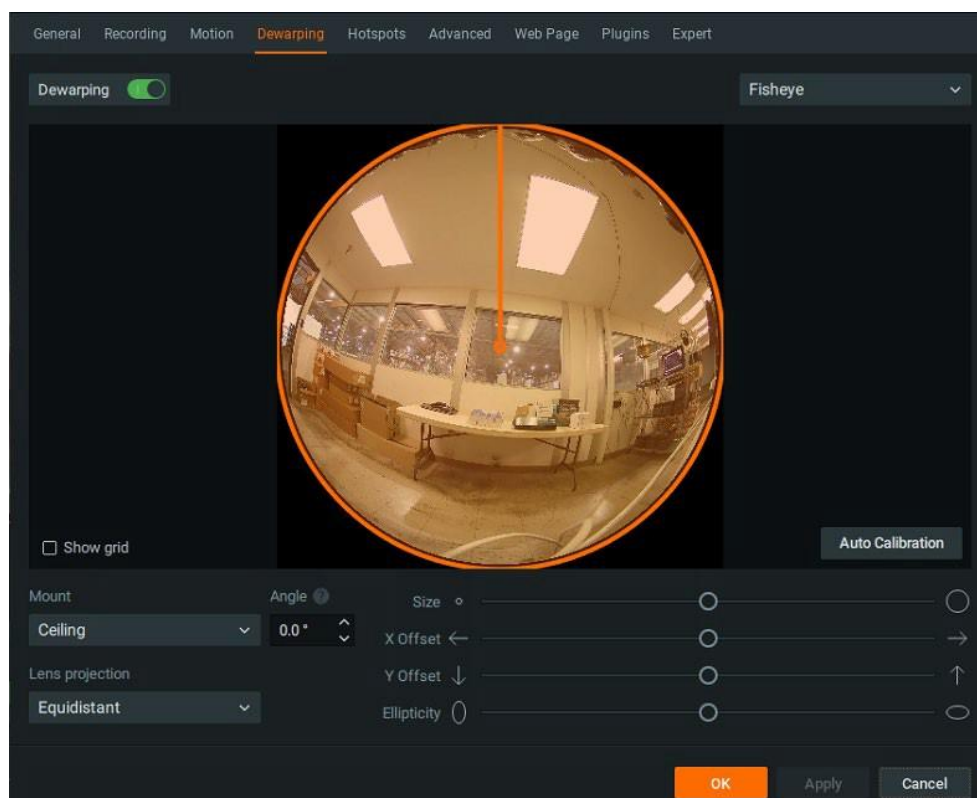

 **NOTE:** The equidistant dewarping setting can also be used to dewarp compatible 360° panoramic images and videos.

4. If necessary, position the orange calibration circle over the camera's field of view as accurately as possible. Click and drag to move the circle and use the mouse wheel to resize it.
5. Click **Auto Calibration** to apply the dewarping algorithm.
6. If needed, the distortion settings can be manually adjusted:
 - *Size* – use the slider, or mouse wheel, to change the size of the orange circle.
 - *X Offset* – use the slider to change the position of the circle horizontally.
 - *Y Offset* – use the slider to change the position of the circle vertically.
 - *Ellipticity* – use the slider to adjust the shape of the lens.
7. Click **Apply** or **OK** when finished. To discard changes, click *Cancel*.

 **NOTE:** Using PTZ controls on a de-warped image does not cause the camera to move or change PTZ position, only the calculated view is changed.

Section 14.24 – Viewing a Dewarped Camera

Once dewarp is configured and enabled, the dewarping  icon will appear on the camera image and PTZ-style controls can be used to move around the dewarped image without changing the camera position (see "[Keyboard Shortcuts](#)"). Dewarping mode is disabled while motion search is active, the dewarping state remembered and reinstated when motion search is no longer active.

- Zoom windows created from a dewarped image are dewarped automatically.
- The current dewarping state is applied to screenshots, and it is possible to apply dewarping to a screenshot after it is captured: open the **File Settings** dialog from the context menu and select **Dewarping**.
- The option to apply dewarping to exported video can be turned on or off in the [Export Video dialog](#) using **Apply Filters**.
- Dewarping a camera will set its resolution to **High**.

To View a Dewarped Camera:

1. Click the dewarping  icon to toggle dewarping mode on and off:



2. Click the **Change Dewarping Mode** button in layout to show the image as a **90**, **180**, or **360** degree panoramic view, as indicated by the button.

3. PTZ-style controls can be used to move about the dewarped image without changing the camera position (see "[Pan, Tilt, and Zoom Controls](#)").

 **NOTE:** Using PTZ controls on a de-warped image does not cause the camera to move or change PTZ position, only the calculated view is changed.

To Dewarp Fisheye or 360° Panorama Content:

1. Right-click on the image or video file to open the context menu and select **Camera Settings**.
2. Click on the **Dewarping** toggle to enable (slider turns green) the distortion correction parameters.
3. Configure dewarping as described above.

 **NOTE:** 360 degree panoramic mode is not available to cameras that are configured as wall mounted. 360° panorama content must use equidistant projection.

Section 14.25 – Pan, Tilt, and Zoom (PTZ) Controls

DW Spectrum will present a PTZ guide the first time PTZ controls are activated on a Site, unless the alternate UI for PTZ has been enabled. Once viewed, the PTZ guide will only be shown after navigating to **Main Menu > Local Settings > Advanced** and clicking on the "**Reset All Warnings**" button.

To the extent supported by a particular ONVIF camera, PTZ controls (Pan, Tilt, and Zoom) are available when the camera is in live mode. PTZ controls are also available on Archived footage for fisheye cameras that have dewarping enabled (see "[Dewarping Controls](#)").

Cameras that support **ONVIF Absolute Move** have the following features:

- [Saving and Restoring PTZ Positions](#)
- [Setting Up PTZ Tours](#)
- Relative PTZ

When PTZ requirements are met and enabled, the PTZ icon  will display on the corresponding camera item. See [Adjusting PTZ Speed](#) and [Selecting PTZ Presets](#) for more configuration options.


Manufacturer "Native" PTZ Settings

Native PTZ camera presets – those provided in-camera – for a specific camera can be used by checking **Use camera native presets** in **Camera Settings > Expert**. To ignore manufacturer settings in favor of DW Spectrum settings, check **Use Site presets** instead.


Default UI for PTZ controls

Depending on the camera model, one of the following modes is available upon clicking the PTZ icon .

Simple (Zoom only) – Use the mouse wheel or +/- keys to zoom.

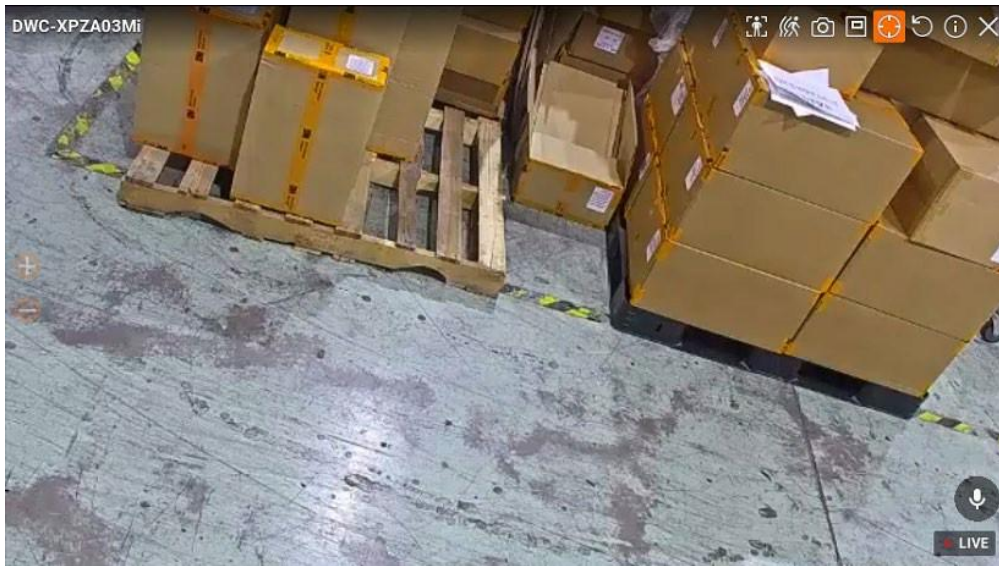


Regular (Zoom and Point) – In addition to the zoom functionality from *Simple* mode, press the arrow keys or drag over any part of the video to point (pan/tilt) the camera.

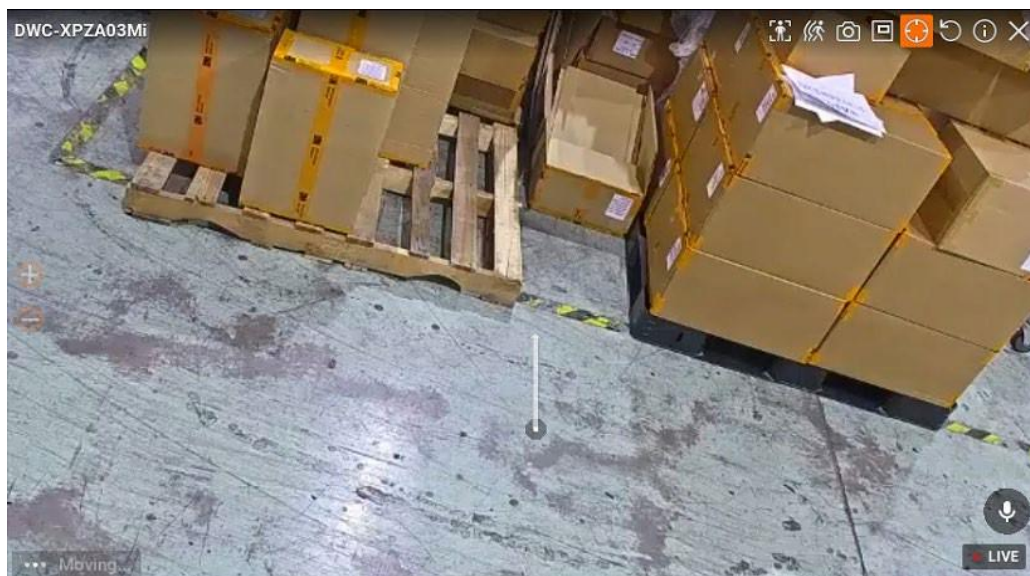

Advanced PTZ (Zoom, Point and additional features) – In addition to the zoom and point functionality from *Regular* mode, *Extended* mode requires custom product integration and ONVIF Absolute Move support from the camera. Extended mode allows the following additional controls:

- **Shift + Click** anywhere in the field of view to re-center at that position.
- **Shift + Click and drag** and draw a zoom rectangle that can be positioned until the mouse button is released.
- **Shift + Double-click** to zoom out all the way.

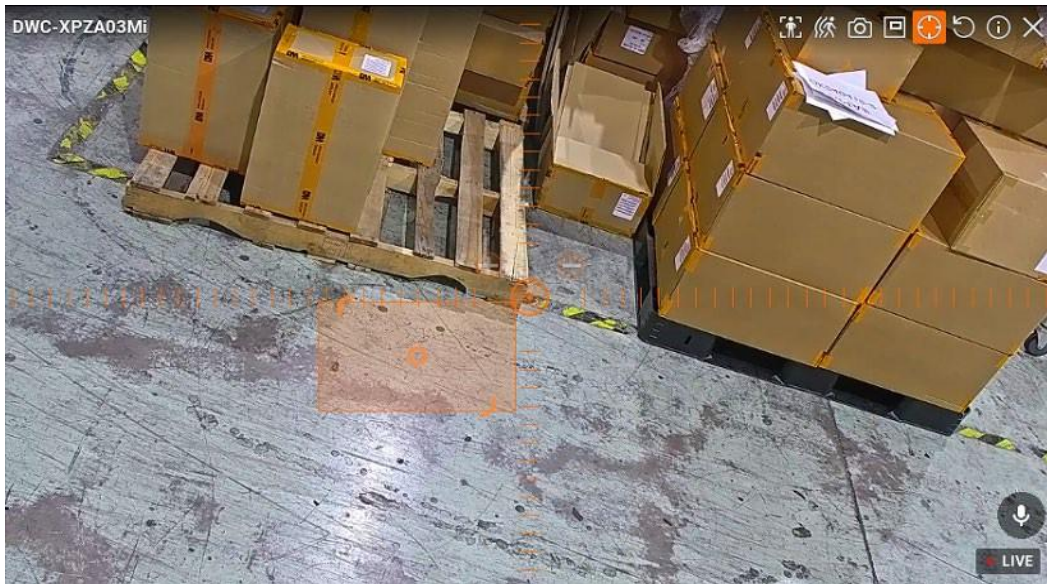


Alternate PTZ Controls

Enable the alternative UI for PTZ controls by selecting the checkbox next to "[Show aim overlay for PTZ cameras](#)".


NOTE: The PTZ guide will not be shown if the alternate UI for PTZ is enabled.

Depending on the camera model, one of the following modes is available when clicking on the PTZ icon .


Simple (Zoom only) – As shown in the image below, only the + and - buttons are available to zoom in and out.

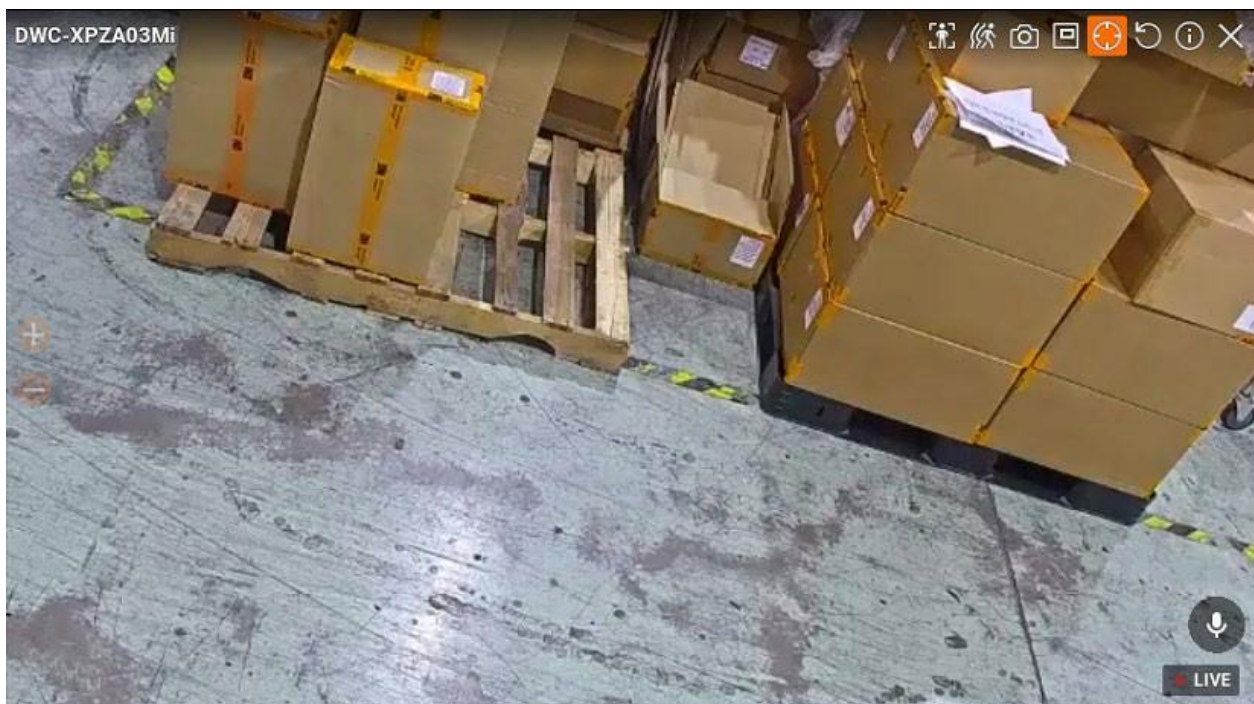

Regular (Zoom and Point) – Use the + and - buttons to zoom in and out. Use the center circle as shown below to click and drag the center of the image to the desired position.

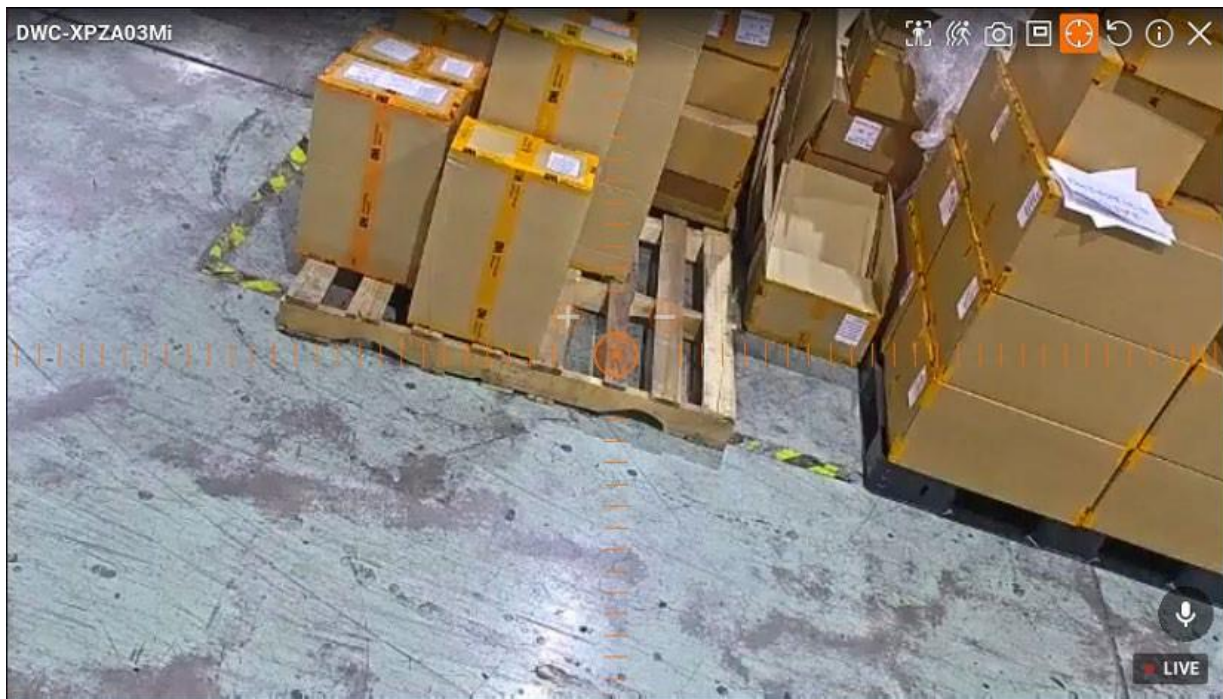

Extended (Zoom, Point and additional features) – Requires custom product integration and ONVIF Absolute Move support from the camera. Allows zooming, repositioning, and the following additional controls:

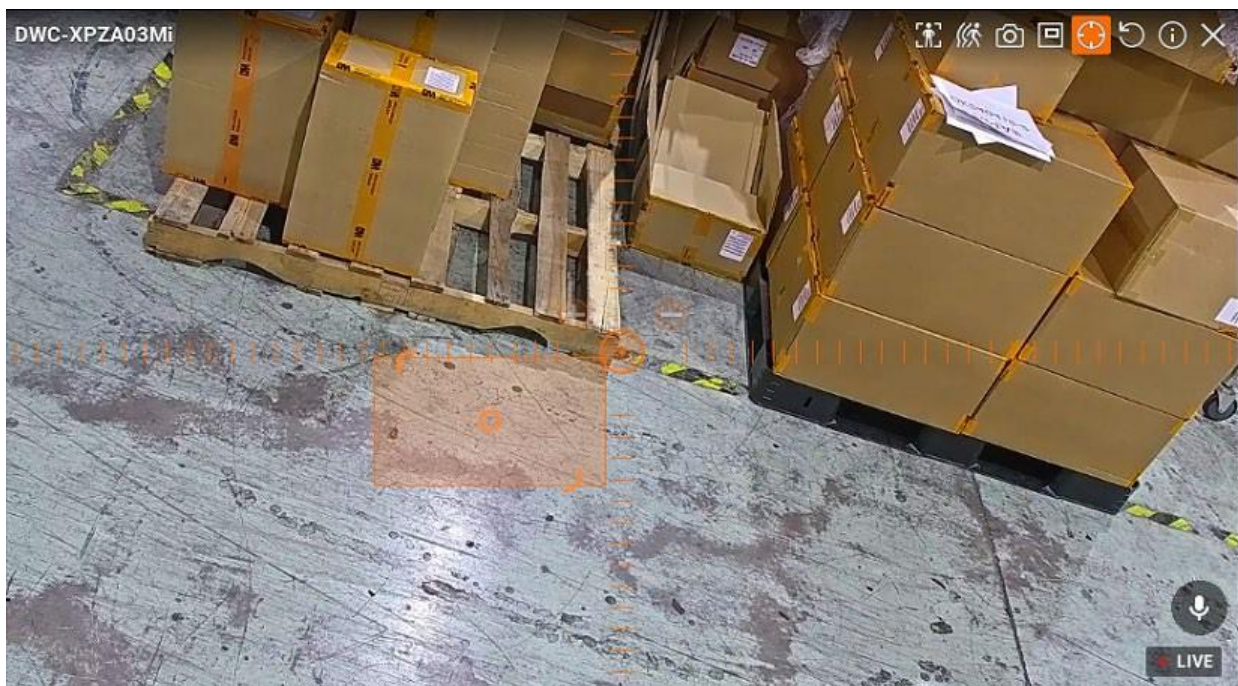

- **Click** anywhere in the field of view to re-center at that position.
- **Click and drag** and draw a zoom rectangle that can be positioned until the mouse button is released.
- **Double-click** to zoom out all the way.

Once a PTZ position is set, press  again to hide PTZ controls.

Section 14.26 – Saving and Restoring PTZ Positions

It is possible to establish predefined PTZ positions that can be restored in just a few clicks or with a keyboard shortcut.


Once defined, a preset PTZ position can serve as the home position for a device, or several presets can be sequenced to create a PTZ tour (see "[Setting Up PTZ Tours](#)"). There is also an "[Execute PTZ Preset](#)" action for event rules.

To Save a PTZ Position:

1. Click on the PTZ icon  in layout and go to the desired position.
2. From the camera item in layout, open the context menu and select **PTZ > Save Current Position**.
3. Enter a name or accept the default name.
4. Optionally, select a hot key for the position (**0-9**).

To Edit a Saved PTZ Position:

1. From the camera in the layout, open the context menu and select **PTZ > Manage**. The *Manage PTZ* dialog can be moved so the camera is clearly visible in the layout.
2. The **Name** and **Hotkey** fields in the *Manage PTZ* list are editable.

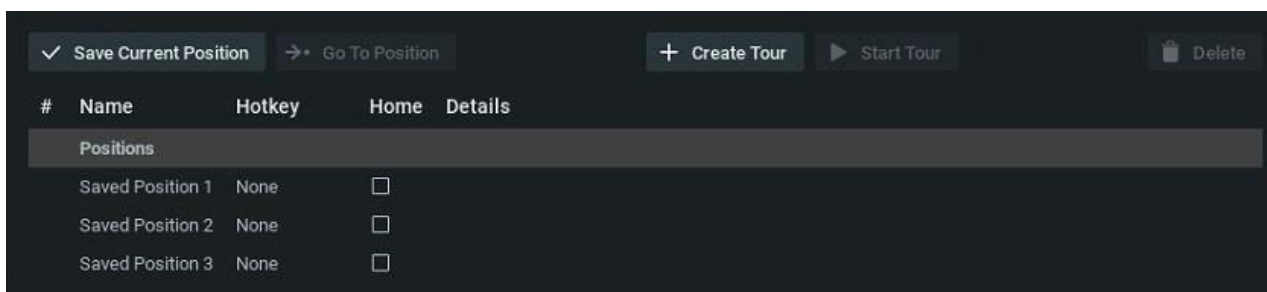

3. Click the **Home** checkbox to select the position the camera will return to when the PTZ position is not changed for 2 minutes. (Click the **Go To Position** button to preview a preset position.)
4. A new preset can be added by clicking on the PTZ icon  in layout and clicking **Save Current Position** in the *Manage PTZ* dialog.
5. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

To Restore a PTZ Position:

Open the camera context menu and choose **PTZ > <position name>** or press the related hotkey (**0-9**). The active position will be indicated in the PTZ context menu.

To Delete a PTZ Position:

1. Open the camera context menu and select **PTZ > Manage**.
2. Select a desired preset and click **Delete**.

 **NOTE:** If a preset position is included in a PTZ tour, deleting it will make the tour invalid. The tour will remain in the list in the *Manage PTZ* dialog but will not be available from the PTZ context menu.

3. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

Section 14.27 – Setting Up PTZ Tours

A **PTZ tour** is a sequence of saved PTZ positions, useful for observing a broad field of coverage with a single camera. The following requirements apply:

- Can only be applied to a PTZ or fisheye camera
- Must contain at least two positions

- The same position should not be used consecutively or as both the first and last position. A warning will appear if a tour contains multiple instances of the same position. Instead, define slightly different or overlapping PTZ presets.

To Create a PTZ Tour:

1. Right-click on the camera item in the layout and select **PTZ > Manage** from the context menu.

2. Save at least two positions.
3. Click the **Create Tour** button. A *Tours* section will open at the end of the position list, with a default name *New Tour <#>*.
4. In the *Details* form, click the + button to add the first position to the tour. Continue to click + until all the desired positions have been added.
5. Each tour position can be edited as follows:
 - Click on the **Stay Time** field to select how long the camera will stay in that position.
 - Click on the **Speed** field to set how quickly the camera will move from one position to the next.
 - Click on the **Position** field to select a different position.
 - Use the **up and down arrows** at the right to change the order of a position in the tour.
 - Click the + button to add a position.
 - Click the - button to delete a position.
6. Click *Apply* to save the tour and click the **Start Tour** button to test it.
7. Optionally, rename the tour using the list **Name** field or assign it a **Hotkey**.
8. Optionally, check the **Home** box. The home tour will be activated on a camera automatically if there is no active PTZ tour.
9. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

To Start a PTZ Tour:

1. Open the context menu for a camera in the layout and select **PTZ**.
2. Select the desired tour from the list of saved tours below the list of saved positions.
3. Alternatively, open the context menu, select **PTZ > Manage**, highlight the desired tour in the list and click on *Start Tour*.

To Stop a PTZ Tour:

A PTZ tour cannot be toggled on and off; it must be replaced with a static PTZ position. Either enable PTZ controls on the camera item and choose a PTZ position manually or choose a saved PTZ position (select one from the context menu or use a hotkey).

Section 14.28 – Configuring Device Audio

DW Spectrum allows for audio recording from devices that have a microphone built in or connected – either directly to the camera, or another camera's microphone (see "[Audio in DW Spectrum](#)").

A user must have the Play Audio permission and the device must have audio enabled for the audio service to fully function. Users with the "Edit Settings" permission and members of the Built-In Administrators and Power User groups can enable or disable audio on a device.

To Configure Audio: Desktop Client

1. Open the context menu by right-clicking the camera and select **Camera Settings > General** tab.
2. Check the *Enable audio* checkbox and choose between the two options:
 - **Use audio stream from this camera** – use the audio input from the current camera.
 - **Use audio stream from another camera** – select a camera or device with audio input to use instead of the current camera's audio input.
3. Apply changes.

Web Admin / Cloud Portal

1. Open **Settings > Cameras** and select a camera.
2. Check the *Enable audio* checkbox and choose between the two options:
 - **Use audio stream from this camera** – use the audio input from the current camera.
 - **Use audio stream from another camera** – select a camera or device with audio input to use instead of the current camera's audio input.
3. Apply changes.

 **NOTE:** Only devices connected to the same server can provide their audio stream to another camera.

Section 14.29 – Setting Up a Virtual Camera

Offline video files can be imported (from wearable cameras, action cameras, drones, etc.) into DW Spectrum Archive and be associated with a *Virtual Camera* that can be viewed and processed like any other camera in the Site. Frames per second (FPS) and bitrate recording options are inactive with virtual cameras.

 **NOTE:** To be processed as a virtual camera, imported media must have been produced with timestamp data.

As with any other camera, virtual cameras can be opened, deleted, and renamed. Virtual camera images

can be rotated 0, 90, 180, or 270 degrees, dewarped, analyzed, and searched to detect motion. Like camera streams recorded by DW Spectrum, videos uploaded using the virtual camera feature remain in the Archive after the camera is removed from a Server.

 **IMPORTANT:** Motion detection for virtual camera footage must be enabled when it is uploaded, or it will not be available afterward.

Once storage blocks for a given period are filled with virtual camera content, they cannot be overwritten. For example, if file "A" was recorded from 11:32 to 11:37, and file "B" was recorded from 11:35 to 11:38 on the same day, if one of the two has already been uploaded, the other file will not be, as they occupy some of the same storage blocks in Archive. If the selected file covers a period for which the video is already uploaded, it can be uploaded to a different virtual camera instead.

To Add a Virtual Camera:

1. Do one of the following:
 - o Open the **Main Menu** and select **Add > Virtual Camera**.
 - o Open a server context menu and select **Add > Virtual Camera**
2. In the dialog that opens, select a server from the pull-down menu.

 **IMPORTANT:** Make sure the server has enough storage space for the files being uploaded (see "[Analyzing and Predicting Storage Usage](#)"). If there is not enough available storage, the oldest existing Archive may be deleted. Or, if the virtual camera footage is older than anything in Archive, it will be uploaded and then deleted by the storage management subSite.

3. Enter a name for the virtual camera in the *Name* field.

 **NOTE:** If a name is not entered, the default name "Virtual Camera" will be used with an integer that increments by 1.

4. Click *OK* to save or *Cancel* to exit without saving.
5. In the *Camera Settings* dialog that opens, files can be uploaded immediately or later.

To Upload Files to a Virtual Camera:

Once added, the virtual camera will be displayed in the server resource panel, and files can be uploaded.

 **IMPORTANT:** Once uploaded, virtual camera files cannot be overwritten.

1. From the camera's context menu choose **Camera Settings**.

 **IMPORTANT:** Make any changes to settings, including motion detection or fixed Archive length, before uploading any files.

2. Use the **Default rotation** option to rotate the virtual camera footage by *90*, *180* or *270 degrees*.
3. Use the **Ignore time zone in uploaded files** option to make the uploaded file use the desktop client's local time instead of the time information found in the file.
4. Check **Enable audio** to include any audio tracks in the original footage.
5. Use the **Fixed Archive Length** fields to assign high or low priority to the virtual camera (see "[Configuring Minimum and Maximum Archive Storage](#)").
 - o If there is not enough room in server storage, setting a **Min Days** value will cause Archived content with lower priority to be deleted to upload files from the higher priority virtual camera. This setting can be crucial for a virtual camera, since the oldest footage is deleted first, and the virtual camera footage may be much older than material already in Archive.
 - o **Max. Days** sets an Archive duration after which records will *not be saved* for the virtual camera.
6. If desired, check **Detect motion in uploaded video**, which will parse motion detection during file upload.

 **NOTE:** This option adds significant processing time.

- If motion detection is checked, **Sensitivity** can be adjusted (see "[Setting up Motion Detection](#)").
- 7. Select **Upload File** to select a single file or **Upload Folder** to select all video files in that directory.
 - If there is limited storage space on the server, a prompt to continue or cancel will appear. The upload can be canceled at any time after it has been started from *Camera Settings*. If the upload is canceled, any files that have already been uploaded will remain in storage.
 - The upload will begin and run in the background once the file or folder is selected. An upload progress bar displays at the top of the *Camera Settings* dialog, and progress percentage is also shown in the resource panel.
- 8. Once the upload is complete, the video will launch and play automatically.
 - If only virtual cameras are open in the layout, the Timeline will scale to show only the time interval spanning Archive from those cameras. This is especially helpful when virtual camera footage is old and would be difficult to locate with the Timeline fully expanded to the present.
 - If an audio track exists but is not audible, ensure **Enable Audio** in **Camera Settings > General** is checked.

Section 14.30 – Setting Up an I/O Module

DW Spectrum handles I/O devices as it does cameras, with some specific functionality adaptations. Like all other devices, I/O modules are discovered automatically or with the user's help and then displayed in the resource panel.

However, to work with an I/O module, an *I/O Module License* must be active (otherwise the "Device Disabled" message will be displayed). After the license is activated, the module will be displayed with the available inputs and outputs.

I/O module permissions vary depending on the user's role (see "[Permissions Management](#)").


- Any user in the Site that has access to the I/O module can view its inputs and outputs.
- Administrators, power users, and custom groups or users with the "Edit camera settings" permission can configure I/O modules.
- Administrators, power users, advanced viewers, and custom groups or users with the "User Input" permission can trigger IO module outputs.

To Set Up an I/O Module:


1. Right-click on the device in the resource panel and click on **I/O Module Settings**.
2. Go to the **I/O ports** tab and enter the following parameters:
 - *Type* – Input or Output.
 - *Default State* – Default state of the circuit depending on the I/O Module: *Open circuit* or *Grounded*.
 - *Name* – Name of the port.
 - *On click (output only)* – Select the desired action to occur on button click.
 - *Impulse* (requires Duration) – The length of time the signal will be generated (in 100ms increments). Clicking the button changes the port state to Duration time.
 - *Toggle state* – Clicking the button changes the port state until clicking the button again.
 - *Duration* – Time in milliseconds.

General Recording <u>I/O ports</u> Motion Fisheye Advanced Expert							
#	Id	Type	Default state	Name	On click	Duration	
1	A1	Input	Open circuit	Light Switch			
2	A2	Input	Open circuit	Fan Switch			
3	A3	Output	Open circuit	Lights	Toggle state		
4	A4	Output	Open circuit	Fan	Toggle state		
5	B1	Input	Open circuit	Input 5			
6	B2	Input	Open circuit	Input 6			
7	B3	Input	Open circuit	Input 7			
8	B4	Input	Open circuit	Input 8			

After the I/O module is configured, input ports will appear on the left and output ports on the right. The state of each port can be seen. The I/O module will be displayed as shown below:

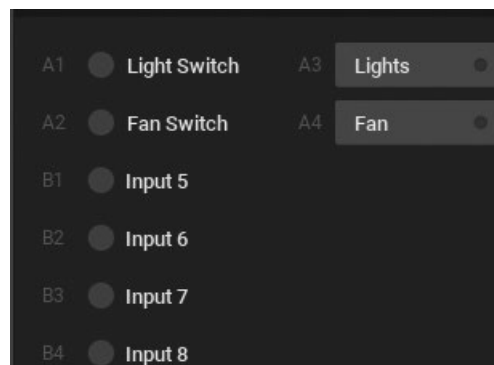

When using multiple inputs and outputs, the tile interface is recommended – enabled in the lower left corner. This option will generate a tiled interface for the I/O in the viewing grid, offering a different visual experience for triggering ports and seeing their state.

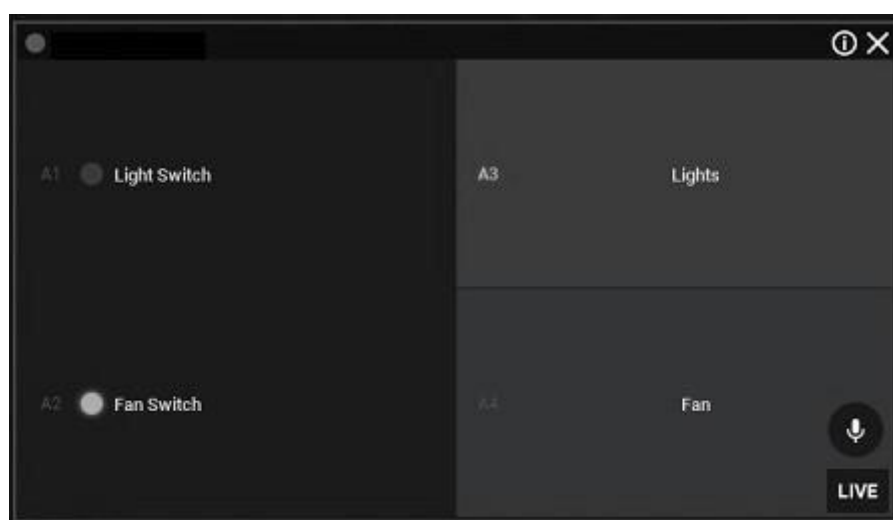

The following actions can be performed with an I/O module:

- *Record Audio from I/O Module* – Only if a microphone is connected. See "[Recording Modes](#)" and "[Audio in DW Spectrum](#)" for details.

- *Playback Audio Archive Recorded from I/O Module* – Only if a microphone was connected during recording, similar to viewing Archive from cameras (see "[Parts of the Timeline](#)").
- *View Inputs State* – Information regarding the input's state depending on the configured settings. For example, the sensor turns green when grounded, or could be set to turn green when open.
- *Trigger Output* – Click the corresponding button to send an output signal for the amount of time specified in the *Pulse Time* setting unless the output is manually turned on/off.
- *Create Rules* – Using the device's input and output ports as described in [Input Signal on Device](#) and [Device Output](#).

Section 14.31 – Working With Intercoms

An intercom is a visitor-side two-way communication device containing a camera and a microphone. Connected intercoms constantly send audio and video to its DW Spectrum Site. DW Spectrum does not send audio to intercoms unless the user is in an ongoing call with a visitor using an intercom.

The only supported intercom in DW Spectrum is the Hanwha Techwin TID-600R.

Intercom Soft Triggers

The TID-600R intercom has three preconfigured soft triggers:

- Push to Talk requires the operator to activate a soft trigger to begin sending audio (see [Using 2-Way Audio](#)).
- Door – opens the relay for the door associated with the intercom.
- Heater – turns on the heater function.

Intercom Layouts

When saving a layout containing an intercom or receiving a call, an intercom layout will appear in the Resource Panel called *TID-600R Layout* with the following icon . An intercom layout cannot be deleted unless the intercom is removed from the DW Spectrum Site first.

Receiving and Ending Calls

When the visitor initiates a call by clicking a button on the intercom, you will see a notification labeled *Calling...* in the Notification Panel. Click anywhere on the notification to be taken to the intercom layout (it will be automatically created if it does not already exist), where you can click the Push to Talk soft trigger and begin sending audio to the intercom. Release the Push to Talk soft trigger or close the layout when done speaking to the visitor.

Section 14.32 – Setting Up an Analog Camera

Typically, analog cameras are connected to analog recorders. If a recorder is connected to the network, it can either be discovered automatically or added manually.

The following types of analog cameras are supported:

- Analog cameras plugged into an encoder – These cameras behave like any other camera in the Site, allowing them to function according to a [Recording Schedule](#) and use [Motion Detection](#).
- Analog cameras plugged into a recorder (DVR) – These cameras are recorded somewhere else, so DW Spectrum only pulls the desired stream from the recorder, and cannot be configured with a recording

schedule or motion detection.

Section 14.33 – Setting Up Motion Detection

The DW Spectrum Server can perform software motion detection, allowing for adaptive scaling – dynamic resolution switching – that yields bandwidth savings and optimizes the processor load.

By default, the secondary stream will only be used for motion detection if its resolution is lower than 1024x768. If the secondary stream resolution is higher than this, the primary stream will be used if its resolution is lower than 1024x768.

If both the primary and secondary stream's resolution is higher than 1024x768, then no motion detection will be enabled.

 **IMPORTANT:** If the secondary stream is high-resolution, motion decoding may use most or all of the server CPU. See "[Forcing Motion Detection to a Specific Stream](#)" to adjust for this issue.

Software-side detection also makes it possible to define regions in which motion detection is performed, with a range of sensitivity levels that include complete **motion masking**, where motion detection is blocked. For cameras that perform in-device motion detection, DW Spectrum does not implement software motion detection. With **hardware motion detection**, a motion mask can be applied, but no other sensitivity levels are available. In some cases, it may be possible to use the **Camera Settings > General** tab to instead configure device parameters (see "[Configuring Device Advanced Settings Using DW Spectrum](#)").

Motion Detection Indicators

DW Spectrum shows a temporary red outline on grid cells where motion is detected. This feature is especially useful for highlighting motion that is easily detected by cameras but often overlooked by humans – for example, trees moving in the wind, the motion of shadows, sudden changes in light level, etc.

To Configure Motion Detection:

1. Do one of the following:
 - *Desktop Client:* Open **Camera Settings** and go to the **Motion** tab, then click the **Motion Detection** button to enable detection (green) for the device.
 - *Web Admin / Cloud Portal:* Open **Settings > Cameras** and select a camera and Click the **Enable motion detection** button.
-  **IMPORTANT:** Cells in the motion detection grid are briefly highlighted in red when motion is detected. The brighter these indicators are, the higher the level of motion detection that is set.
2. Click on a number in the *Sensitivity* section, where **0** is no sensitivity to motion (motion mask), **1** is minimal sensitivity, and **9** is maximum sensitivity.
3. The motion detection grid is 42 x 32 cells. Use the following actions to apply the selected sensitivity to cells:
 - Click and drag to select a rectangular area.
 - Click on a cell (the entire area that the cell is associated with will be filled, not just the individual cell).
4. The sensitivity level remains active until a new one is selected. Continue to select and apply sensitivity levels as desired. If necessary, click **RESET** to return the entire field to the default level of 5.

5. Apply changes.



The above image contains the following motion detection regions:

- Grey (un-numbered) is motion mask
- Blue (1) has very low sensitivity to motion
- Yellow (5) will capture motion with moderate sensitivity (5 is the default setting)
- Orange (7) will be highly sensitive to motion, red (9) offers the maximum sensitivity

Part 15: Recording

Video archiving begins once recording is enabled, and image quality parameters and a recording schedule is set.

IMPORTANT: FPS and quality settings in the recording schedule dictate live stream settings.

Audio can be recorded as well as image if the device has or is connected to a microphone, and the **Enable Audio** checkbox in **Device Settings > General > Audio** is checked (see "[Configuring Audio on a Device](#)"). A recording schedule can be set for an I/O module as well (see "[Setting Up I/O Modules](#)").

When recording is enabled, DW Spectrum automatically seeks an available license or service. If one is available, the stream from that device will be recorded. If not, a warning will appear stating that the license or service limit is exceeded and only schedule copy will be available.

See [Setting a Recording Schedule](#) for details on the scheduling interface.

Section 15.1 – Recording Indicators in the Resource Panel

When recording is enabled, the device is marked with a small red circle to the left of its name in the resource panel:

	Camera is recording
	A recording schedule is established but the camera is not currently recording; a license or recording service is still being used.
	Camera is not recording but recorded Archive is available.

Section 15.2 – Setting a Recording Schedule

The *Recording Schedule* defines when and at what quality a device will be recorded, using a weekly calendar divided into 1-hour blocks.

The recording schedule is always based on VMS time. When *Motion Detection* is enabled, regions of the image that will register motion, and how sensitive those regions are, can be set (see "[Setting up Motion Detection](#)").

 **NOTE:** If recording is *not* enabled, motion detection will only be active when the camera is being viewed in a layout.

 **NOTE:** Remember that image quality settings in the recording schedule dictate image quality in live playback as well.

 **IMPORTANT:** If no license is available, the "License is required" error will appear above the recording schedule and prevent recording from being enabled. The recording schedule and settings will be inaccessible until a valid license is added.

To Set a Recording Schedule: Desktop Client

1. Select the desired camera(s) in the resource panel or in the layout.
2. Choose **Camera Settings** from the context menu and click the **Recording** tab.
3. Click the **Recording** button in the upper left to enable recording.
 **NOTE:** The total number of licenses available and the number of licenses in use is displayed below this button. If there are not enough licenses, click the **Activate License** button and proceed with activation.
4. Set the frames-per-second (**FPS**) rate and **Quality** (*Low, Medium, High, or Best*) that will apply to the device(s). When available for the selected device, the **Bitrate** can be adjusted by clicking on *More Settings*.
 **IMPORTANT:** If changes to streamed settings are prohibited at the Site level (see "[Preventing DW Spectrum from Changing Device Settings](#)"), image quality settings in the recording schedule are ignored (the **FPS** and **Quality** fields will be disabled).
5. Click the eye icon to toggle the respective values of **Quality** and **FPS** in the recording schedule calendar.
6. Adjust the length of time that will be added to the recording before (**Pre-Recording**) and after (**Post-Recording**) motion or an object is detected. Pre-recording can be set up to 90 seconds, and post-recording can be set up to 300 seconds.
7. Use the *For...* fields to assign high or low priority to the camera's Archive.
 **IMPORTANT:** It is best to leave **Minimum** and **Maximum** set to **Auto** unless otherwise required (see "[Configuring Minimum and Maximum Archive Storage](#)").
8. Select the recording type – *Motion, Objects, or Motion & Objects*. This selection will change the type of recording modes to choose from.
9. Select the desired recording mode:
 - *Record Always.*
 - *Motion Only / Objects Only / Motion & Objects Only.*
 - *Motion + Lo-Res / Objects + Lo-Res / Motion & Objects + Lo-Res.*
 - *Do Not Record.*

An orange outline around the button indicates the active recording mode (see "[Recording Modes](#)").

10. Once the above parameters are set, click hour blocks in the calendar to apply a recording mode

IMPORTANT: Set FPS, quality and bitrate values first, and then apply them to the calendar. Stream setting values are not in effect until time block(s) are selected.

- Click and drag to select multiple time blocks.
- Click on an hour to select that block of time for an entire week.
 - Click on the name of a day to select an entire day.
 - Click **All** to select the entire week.

NOTE: Use **Alt + Click** to copy the recording mode in one block so it can be applied to another block.

11. Repeat the above steps as desired to schedule other recording modes.

NOTE: The quality settings are independent of the recording mode. (This is illustrated in the example below, where some Motion + Lo-Res blocks are at 15 FPS/High quality and others are at 10 FPS/Low quality.)

12. Apply changes.

General **Recording** Motion Dewarping Hotspots Advanced Web Page Plugins Expert

Recording ☒

Recording Schedule (based on server time)

All 12 AM 1 AM 2 AM 3 AM 4 AM 5 AM 6 AM 7 AM 8 AM 9 AM 10 AM 11 AM 12 PM 1 PM 2 PM 3 PM 4 PM 5 PM 6 PM 7 PM 8 PM 9 PM 10 PM 11 PM

	12 AM	1 AM	2 AM	3 AM	4 AM	5 AM	6 AM	7 AM	8 AM	9 AM	10 AM	11 AM	12 PM	1 PM	2 PM	3 PM	4 PM	5 PM	6 PM	7 PM	8 PM	9 PM	10 PM	11 PM
Sun	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	
Mon	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	
Tue	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	
Wed	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	
Thu	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	13 Bst	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	15 Hi	
Fri	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	
Sat	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	

Schedule Settings

FPS 15

Quality High

More Settings

☒ Record Always ☐ Motion Only ☐ Motion + Low-Res ☐ Do Not Record

☒ Motion ☐ Objects ☐ Motion & Objects

Keep Archive For...

Min -- ☒ Auto

Max -- ☒ Auto

Motion & Objects Recording

Pre-Recording 5 s

Post-Recording 5 s

Copying Schedule

Copy Schedule to...

OK Apply Cancel

This example uses the following settings:

- Mon – Thu, 9:00 AM-7:59 PM – Record Always, 15 FPS, High quality.
- Mon – Thu, 8:00 PM-11:59 PM – Motion + Lo-Res, 15 FPS, High quality.
- Fri & Sat, 24 hours – Motion + Lo-Res, 10 FPS, Low quality.

- Sun – Thu, 12:00 AM-8:59 AM – Motion Only, 13 FPS, Best quality.

Section 15.3 – Recording Modes

The recording schedule provides the following modes, which can be applied in 1-hour blocks:

	<i>Record Always</i> – Always records
	<i>Motion Only</i> – Recording will start if motion occurs. Requires that the camera support hardware or software motion detection.
	<i>Motion + Lo-Res</i> – Records at low resolution unless motion occurs, at which point it automatically switches to recording at high resolution. The camera must support dual streaming to be able to use this mode. If it does not, the following warning will be displayed:

	<i>Dual-Streaming and Motion Detection is not available for this camera (see "Dual Stream Processing" for details).</i>
	<i>Do Not Record</i> – Never records, unless configured as part of an event.

Remember, image quality settings in the recording schedule dictate image quality during live playback. For example, if the recording quality in the schedule is set to 4 frames per second and low quality, DW Spectrum will stream the live image at those settings – even if the camera is capable of higher quality playback. However, when recording is turned off in the schedule, DW Spectrum will stream live at the maximum possible quality and frames per second settings for the device.

Section 15.4 – Configuring Archive Storage

DW Spectrum provides the ability to set a maximum and minimum storage duration for the Archive of any given camera, from the current time going backwards.

Before configuring a *Keep Archive For* setting, it is important to understand the impact it will have. The default *Auto* setting means that Archived footage for a given camera is treated according to the standard algorithm – the oldest data is deleted first; no controls are placed on when or which Archived footage is deleted.

The *Min* and *Max* fields assign priority to a given camera – high priority for Min, low priority for Max. If more than one camera is assigned high or low priority, storage results may not be predictable. Typically, the *Min* setting is used for environments with limited storage capacity and a few high-importance cameras, or when a regulation requires that certain footage be stored for a minimum amount of time. *Max* is typically used for environments where storage is limited and there is no need to store records beyond a certain age from certain cameras.

It is not possible to enter a Max value less than the Min value, and vice versa.

Minimum (Days, Hours, Minutes)

Min sets a minimum Archive length, in number of days, hours or minutes from the current date, for which DW Spectrum gives highest priority to retention of records from a given camera over retention of records from any camera that has the default (*Auto*) Archive setting.

For example, a *Min. Days* value of 120 for a given camera means DW Spectrum will attempt to preserve the past 120 days of records from that camera.

- IMPORTANT:** Be careful when setting a minimum days value. If more than one camera is assigned a Min. Days value, those cameras will have the same priority level – in which case storage results cannot be entirely guaranteed for any of them. If there is insufficient storage space, to retain footage as specified with Min, DW Spectrum will first delete records from cameras that do not have a minimum Archive length set, and then the Site may stop recording incoming signals from low and average priority cameras. If storage space is at capacity, no other camera streams will be recorded.

Maximum (Days, Hours, Minutes)

Max sets an Archive duration after which records will not be saved for a given camera.

To Configure Minimum and Maximum Storage Duration:

1. Open the camera's context menu from the resource panel or layout and open **Camera Settings > Recording** tab (or the **General** tab for [Virtual Cameras](#)).
2. In the *Fixed Archive Length* section, uncheck the **Auto** checkbox.
3. In **Min**, enter the amount of time for which Archive should be retained.
4. In **Max**, enter the amount of time after which Archive will be automatically deleted from storage.
5. Click **Apply** to accept, **OK** to save and close the dialog, or **Cancel** to discard changes.


Section 15.5 – Copying a Recording Schedule

Once a recording schedule is configured for one device the settings can be copied to other devices.

 **NOTE:** A license is required for each device to which the recording schedule is copied. As devices are selected, a dynamic message will indicate how many licenses are in use and how many are available.

To Copy a Recording Schedule:

1. Open the context menu for the camera where the desired schedule is defined and select **Camera Settings**.
2. In the **Recording** tab, click the **Copy Schedule to** button.

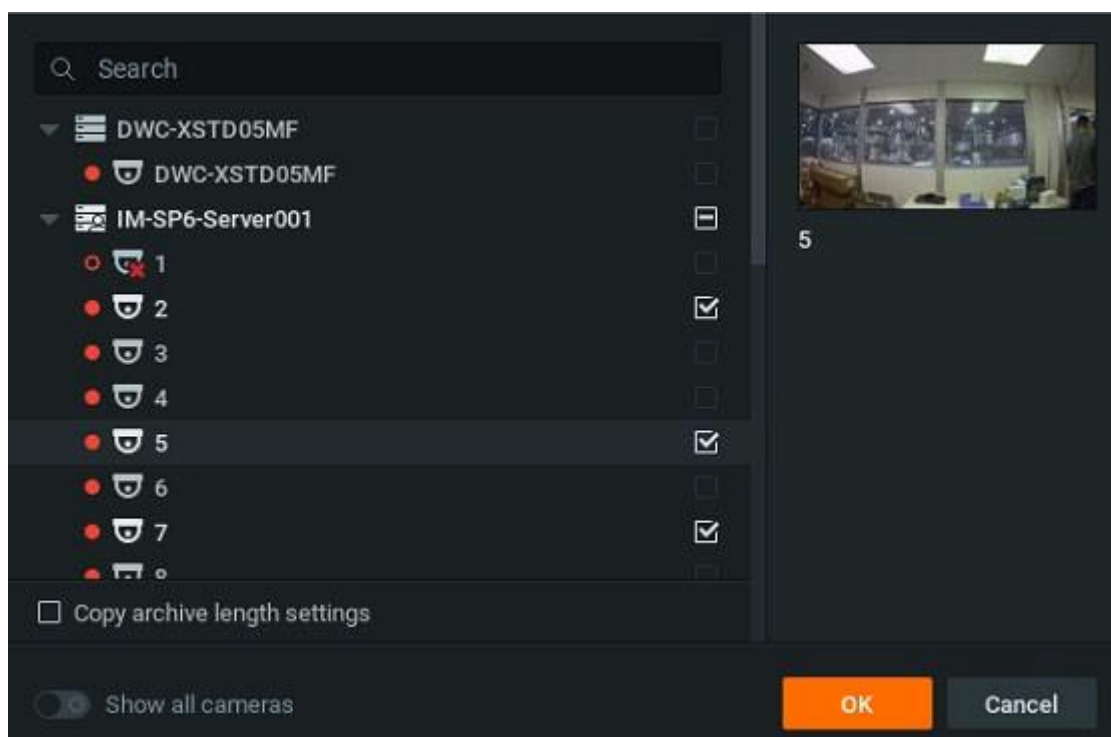

3. In the *Select Cameras* dialog that opens, select the camera(s) to copy the schedule to, or select a server to copy the schedule to all cameras on that server.
 - o Use the *Filter* box to filter the device search (see "[Searching and Filtering in DW Spectrum](#)"). Hover the mouse cursor over a camera name to see a thumbnail of the camera's image.
4. Check **Copy Archive length settings** if necessary (see "[Configuring Minimum and Maximum Archive Storage](#)").
5. Apply changes.

Part 16: Advanced Device Settings

DW Spectrum provides advanced controls to view and configure manufacturer parameters such as video stream configuration, image or audio settings, or network configurations either from within the desktop client or by opening the manufacturer's device web page.

This section describes the following features:

- [Configuring Device Advanced Settings Using DW Spectrum](#)
- [Configuring Device Using Web Page](#)
- [Updating Camera's Firmware](#)
- [Resetting or Rebooting a Camera](#)

More device settings are explained in the "[Expert Device Settings](#)" section.

Section 16.1 – Configuring Advanced Device Settings Using DW Spectrum Client

To Edit Basic Proprietary Settings:

1. Open **Camera Settings** and click the **Advanced** tab.
2. Available controls are determined by the specific camera model. Settings are grouped by category:
 - *Video Streams Configuration* – Use to control **Codec** and **Resolution** for the primary and secondary streams in addition to **Bitrate** and **FPS** for the secondary stream. These values can be separately **Reset to Defaults** for each stream.
 - *Imaging* – Adjust **Exposure** and **Extra Settings** (such as line frequency), if available for the camera.
 - *Audio* – Typically includes audio-in sensitivity and audio-out volume.
 - *Maintenance* – Use to perform various levels of camera reboot. See "[Resetting Camera](#)" for details.



NOTE: If no device settings are displayed, the camera is not ONVIF-compliant and cannot support custom configuration.

In addition, DW Spectrum also provides a **Web Page** tab in the **Camera Settings** dialog. This tab launches the device's web page, where additional proprietary device parameters such as in-camera events, security controls, and network settings can be configured – see "[Configuring Device Using Web Page](#)".

Additionally, firmware for certain camera models can be updated internally, see "[Updating Camera's Firmware](#)".

Section 16.2 – Configuring Device Using Web Page

For all camera vendors, DW Spectrum provides direct access to a camera's web page where users can configure the camera's settings without leaving the desktop client. If the device cannot be accessible from the computer the desktop client is running on, DW Spectrum Server acts like a proxy server to retrieve the device's web page content and display it within the desktop client.



NOTE: Only camera web pages that work in Chrome are supported.

In some cases, if a custom integration with a camera has been implemented, DW Spectrum pulls proprietary device parameters such as authorization, network settings, and displays controls in the desktop client where they can be configured directly. See the below image for one example of such a web page (can vary depending on the manufacturer).

By default, the web page is available on the standard port (80). In case of using a non-standard port, it should be configured in a device's "Expert" tab (see "[Device Expert Tab](#)").

- The DW Spectrum can be open most browser-based configuration interfaces that are embedded in devices.
- Any configuration service or interface embedded or hosted within a device must be compatible the Google Chrome.

- Configuration options provided by device hosted interfaces may differ from those available within DW Spectrum clients and portals.
- The Server functions as a proxy Server to retrieve the device web page content and display it within the Desktop Client.
- Use either the Web Page in the device settings dialog or a [Web Pages and Integrated](#) into web-page integrated to a layout or scene.

From the General Tab:

1. Select a camera and open the **Camera Settings > General** tab.
 2. If the device requires authentication, enter camera credentials in the **Authentication** section (see "[Configuring Device Authentication](#)"). The user must have the "Edit camera settings" permission to perform this function.
 3. Click on the **Web Page** link. The browser will open the device's web page. From here the user can control settings such as display size, JPEG refresh rate, PTZ and focus speed, etc.
-  **NOTE:** To check device accessibility, click the **Ping** button prior to opening the web page.

From the Web Page Tab:

1. Select a camera and open the **Camera Settings > Web Page** tab
2. The device's web page will open within that tab.
3. Enter authentication parameters if required.

Section 16.3 – Updating Camera's Firmware

DW Spectrum allows for firmware updates from within the application (for *Digital Watchdog cameras only*).

 **IMPORTANT:** To enable this feature, the camera must have Internet access.

To update a camera's firmware:

1. Open **Camera Settings > Advanced**.
 2. Go to **Maintenance > Firmware Upgrade**.
-  **NOTE:** If the list is empty, the camera is not ONVIF compliant, and does not support configuring.
3. Click on **Check Upgrade**. The details of the Digital Watchdog FTP server (*Address, Port, Login and Password*) are predefined.
 4. If the camera has Internet access, the application will check for any available updates automatically.
 5. If a newer version of firmware is found, click *OK* to run the updates. The application will automatically reboot once updates are completed.

It is also possible to upgrade camera firmware from its web page. See "[Configuring Device Using Web Page](#)" for details.

Section 16.4 – Resetting or Rebooting a Camera

ONVIF-compliant cameras can be reset to manufacturer defaults.

 **IMPORTANT:** Reboot is performed instantly once selected.

1. Open **Camera Settings** and select **Advanced**.
2. Click on **Maintenance** under **Category**. (If the category list is empty, the camera is not ONVIF-compliant.)

3. Click on one of the following:
 - *Site Reboot* – reboots the camera but saves current settings.
 - *Soft Factory Reset* – reboots the camera and restores all settings related to the image but not the IP address.
 - *Hard Factory Reset* – reboots the camera and restores all settings (network, authorization, IP address, etc.).

A camera can also be rebooted from its web page. See "[Configuring Device Using Web Page](#)".

Part 17: Expert Device Settings

DW Spectrum provides expert settings that can resolve some issues on the device side.

- [Configuring Expert Streaming Settings](#)
- [Time Synchronization between Servers and Cameras](#)
- [Assigning Logical ID](#)
- [Adjusting PTZ Speed](#)
- [Selecting PTZ Presets](#)

! IMPORTANT: Improper configuration may lead to serious Site malfunction! Do not change these settings without being sure of their potential impact on the Site's performance.

Section 17.1 – Streaming Settings

DW Spectrum Server automatically configures the optimal streaming parameters to configure how devices will stream data.

However, in some cases the automatic settings may work improperly and require manual tuning. This section describes how to set various streaming parameters manually.

! IMPORTANT: By default, DW Spectrum captures 2 streams from cameras (see "[Background: Dual Stream Processing](#)"). Before changing the settings manually, please understand how the dual-streaming works.

- [Preventing DW Spectrum from Changing Device Settings](#)
- [Configuring ONVIF Profiles](#)
- [Tuning up Camera Streaming](#)
- [Adjusting Average Bitrate](#)
- [Forcing Motion Detection to a Specific Stream](#)
- [Disabling Recording of a Specific Stream](#)
- [Disabling a Secondary Stream](#)

Section 17.2 – About Dual Stream Processing

Most IP cameras can provide multiple data streams, each at a different resolution and frame rate. DW Spectrum requests two data streams: one high resolution and one low resolution, and switches between them for the best image quality with the least impact on processing and network efficiency.

This *adaptive scaling* is one of the most valued features of DW Spectrum:

- *Primary (High-Resolution)* – Streams provide better image quality but require significant CPU capacity and network bandwidth to view.
- *Secondary (Low-Resolution)* – Streams require far less computing power than typical high-resolution streams but provide much lower image resolution at a slower frame rate.

When a camera supports dual streaming, the Site tries to configure the low-resolution stream at or near 640x360 resolution at 7fps (though some cameras may set secondary stream resolution up to 720p). The secondary stream is used for constant recording, for motion detection if the resolution is lower than 1024x768, and to save bandwidth and CPU during playback.

However, if the secondary stream resolution is larger than 1024x768, the media server will check the primary stream resolution. If the resolution of the primary stream is lower than or equal to 1024x768, it will be used for motion detection. If it's higher than 1024x768, motion detection will be disabled unless **Force motion detection for the stream** is enabled in the **Camera Settings > Expert** tab.

Default DW Spectrum dual stream settings work well with most cameras. If not, a set of individual controls can be used to manually control stream processing. It is important to understand how these settings behave individually and together, as adjusting them can seriously affect server and display performance.

 **IMPORTANT:** Do not change image or stream quality settings without being sure of the likely impact on the Site's performance.

Dual Streaming on the Server

The server uses the low-resolution stream whenever possible for software motion detection and records both streams to Archive unless a different behavior is specified. However, some cameras cannot comply with default Site behavior, usually for one of these reasons:

- Requested settings are not available from the camera
- The lowest resolution stream is higher than 1024x768
- A secondary or low-resolution stream is not provided at all
- A low-resolution stream is provided as primary and a high-resolution stream as secondary

 **NOTE:** If data is not received from the secondary stream for more than 10 seconds, the server will re-initialize the camera.

Dual Streaming on the Client

In the client, stream resolution for viewing live or Archive video is selected automatically.

- High resolution is displayed under the following conditions:
 - Network bandwidth and CPU load are within normal range.
 - An item is opened into full screen display.
- Low resolution is displayed under the following conditions:
 - If network bandwidth between client and server is insufficient.
 - Image quality is of limited importance: items smaller than 172 pixels, during fast forward or fast rewind playback.
 - When high resolution processing compromises display quality or raises CPU usage to a high level (frames are delayed or dropped during decoding if too many streams are open in a layout).

Settings That Affect Motion Detection

Motion detection is performed on the lowest resolution stream detected, to a threshold of ≤1024x768. Above that, motion detection will not be performed.

- *Motion Detection* – Toggles motion detection on and off for a given camera (see "[Setting a Recording Schedule](#)").
- *Disable secondary stream* – If enabled, motion detection will not be performed for the camera, and the secondary stream will not be Archived (see "[Disabling a Secondary Stream](#)").
- *Force motion detection for stream* – Occasionally, a camera will report its configuration incorrectly and swap the primary and secondary streams. If the secondary stream is high-resolution, motion detection processing

will create a very high CPU load. To correct this, motion detection can be forced for a specific stream (see "[Forcing Motion Detection to a Specific Stream](#)").

Settings That Affect Recording and Playback

When certain settings are applied, the server may or may not Archive high-resolution or low-resolution streams.

- *Motion + Lo-Res* – Archives the high-resolution stream when motion is detected and the low-resolution stream when there is no motion, so high-resolution will not always be available for playback (see "[Setting a Recording Schedule](#)").
- *Disable secondary stream* – If checked, motion detection won't be performed for the camera, and the secondary stream won't be Archived (see "[Disabling a Secondary Stream](#)").
- *Do not record primary stream / Do not Archive secondary stream* – Use to completely disable archiving of one or both streams (see "[Disabling Recording of a Specific Stream](#)").
- *Video Streams Configuration* – Depending on the camera, camera stream settings may be configured in either of these tabs (**Camera Settings > Advanced** or **Camera Settings > Web Page** tab). To control stream settings from one of these tabs, do one of the following:
 - Open **Camera Settings > Expert** and enable **Keep camera stream and profile settings** to prevent the internal optimization performed by DW Spectrum, and causes FPS and image quality settings in the recording schedule to be ignored. See "[Preventing DW Spectrum from Changing Device Settings](#)".
 - Open **Site Administration > General** and disable **Allow Site to optimize device settings**. Refer to "[Configuring Device Advanced Settings Using DW Spectrum](#)" and "[Configuring Device Using Web Page](#)" for how to use **Restore Defaults** (Expert Tab) to discard manual adjustments and return to native presets.

If performance has dropped significantly after a layout was opened and some cameras on layout have a fixed high-resolution setting, the message "*Set layout resolution to "Auto" to increase performance*" will display across that layout so streaming quality can be improved.

Section 17.3 – Automatic Optimization Control

When DW Spectrum discovers a camera, it captures the manufacturer's preset image quality settings and streaming configuration, then adjusts these settings to optimize the device for the DW Spectrum Site. Manufacturer settings can also be adjusted manually, such as FPS, quality, and bitrate when a recording schedule is defined, or stream settings for a variety of reasons (see "[Dual Stream Processing](#)").

However, in some cases, it may be preferable to keep the native settings. For instance, pre-existing FPS, bitrate, and resolution settings may want to be maintained when connecting DW Spectrum to another VMS Site, or the ONVIF implementation for a given camera diverges from standard ONVIF enough to make it preferable, or even necessary, to keep the manufacturer settings.

The automatic optimization that DW Spectrum performs can be disabled to use native stream and profile settings instead.

To Disable Automatic Optimization for a Single Camera:

1. Open **Camera Settings** and click the **Expert** tab.
2. Check **Keep camera stream and profile settings**.
3. Apply changes.

 **IMPORTANT:** Enabling this flag means FPS and image quality settings in the recording schedule will be ignored.

 **NOTE:** This setting is not available for RTSP/HTTP streams.

To Disable Automatic Optimization for All Cameras:

This can be done during the [Initial Site Configuration](#). Afterward, it can be done as follows:

Desktop Client

1. Open the **Main Menu** and click the **Site Administration > General** tab.
2. Uncheck the **Allow Site to optimize device settings** checkbox.
3. Apply changes.

 **NOTE:** For each camera in the Site, use the web page to set desired image settings.

Web Admin / Cloud Portal

1. Open the **Settings > Site Administration > General** tab.
2. Uncheck the **Allow Site to optimize device settings** checkbox.
3. Apply changes.

Section 17.4 – Configuring ONVIF Profiles

DW Spectrum automatically discovers devices and configures the optimal streaming parameters to fetch data from devices using the ONVIF protocol.

The communication is configured according to the **ONVIF Network Interface specification**.

DW Spectrum supports different ONVIF Network Interface specifications:

- **Media** – the older one (is supported by all ONVIF devices)
- **Media2** – the newer one.

If the device reports that Media2 is supported, DW Spectrum will try to use it. The audio and video communication are configured through **stream profiles**.

A profile describes the set of parameters related to audio/video transport from a device to the DW Spectrum Server:

- A/V Codec
- Bitrate
- Resolution
- Additional parameters.

Usually, cameras provide two independent stream profiles:

- Primary stream (Hi-Res)
- Secondary Stream (Lo-res) – used for motion detection, browsing Archive, etc. (see "[Dual Stream Processing](#)" for details).

Cameras may provide additional stream profiles (more than two) but DW Spectrum uses only primary and secondary.

In some cases, the profiles can be fetched and identified incorrectly, making it necessary to configure stream profiles manually.

To access those settings, use the camera's context menu to open **Camera Settings > Expert > Media Streaming**:

- **Primary and Secondary Stream Profiles** – specify the stream profiles for primary and secondary streams.

The available profiles may vary depending on the vendor or model of the device used.

By default, DW Spectrum configures the optimal parameters for the stream profiles, but it can be turned off and the settings on camera can be used unchanged (see "[Preventing DW Spectrum from Changing Device Settings](#)").

- **Use Media2 to fetch profiles** – Media2 can work incorrectly. In this case, select one of the following options:
 - **Never** – always use Media to configure stream profiles
 - **Use if supported** – use Media2 if the device supports it
 - **Auto** – use the built-in method to discover if the device supports Media2.

Profile M Key Concepts:

- The ONVIF Analytical Plugin integrates ONVIF Profile M analytics into DW Spectrum for compatible devices.
- Profile M enables real-time event subscriptions and ability to process ONVIF event notifications.
- The Primary functions are event parsing and topic tree management for analytics events.
- Real-time Pull-Point Notification Interface supports the latest and most common ONVIF subscription types.
- The Plugin subscribes to all events, without any filtering, to receive any kind of event supported by a camera.
- Filtering is done inside plugin, allowing only those event types, which were mentioned in user-created event rules

 **NOTE:** The profile M plugin is not a client and the exact functionality provided is defined by the available devices.

Profile G Key Concepts:

- Profile G devices can record video and metadata locally, within a camera or edge device.
- An option to enable the "Import from Device" service will appear in the **Camera Settings > Expert** tab for supported devices.
- Only camera or server offline periods that occurred after enabling this option will be imported automatically.

 **NOTE:** If this option is disabled, any offline periods that have not yet been imported will be lost and cannot be recovered later.

See also:

- [Disabling Recording of a Specific Stream](#)
- [Disabling a Secondary Stream](#)

Section 17.5 – Camera Stream Tuning

By default, DW Spectrum automatically determines the optimal settings that it will use to pull video streams from the camera. However, some cameras use their own proprietary settings that cannot be properly determined, which may cause streaming to be unstable.

This can be set manually. To access those settings, use the camera's context menu to open **Camera Settings > Expert > Media Streaming**.

 **IMPORTANT:** Do not change these settings without being sure of their potential impact on the Site's performance.

The following streaming settings can be manually specified:

- **RTP Transport** – By default, DW Spectrum automatically determines the optimal protocol (*Auto*).
- **Media Port** – **554** is the default port for RTSP communication.
- **Trust camera timestamp** – By default (disabled), the server applies its own timestamps in the Archive, overriding the data coming from cameras. However, if the stream is intermittent, the server may incorrectly apply timestamps and potentially affect browsing of Archive. This option will make the server trust timestamps coming from the camera, as long as the time difference between the server and camera is less than 10 seconds. In this mode, network delay doesn't affect the timestamp.

Also, the server may apply time settings to cameras to make sure the timestamps are synchronized. This is especially important for Edge cameras. See "[Time Synchronization between Servers and Cameras](#)".

Section 17.6 – Adjusting Average Bitrate

Some camera models do not yield the best setting when DW Spectrum tries to configure a target bitrate, resulting in poor image quality. In this case, adjust the device's bitrate calculation manually.

- ❗ **IMPORTANT:** This setting will significantly increase the bitrate. Use only if the picture quality is noticeably poor.

To Adjust Bitrate:

1. Open the **Camera Settings > Expert** tab.
2. Check Calculate bitrate per GOP instead of bitrate per second.
3. Apply changes.

 **NOTE:** This setting is ignored when "**Keep camera streams and profiles settings**" is checked. See "[Preventing DW Spectrum from Changing Manufacturer Settings](#)".

Section 17.7 – Forcing Motion Detection to a Specific Stream

DW Spectrum performs motion detection on the server by analyzing and decoding the secondary stream from a camera – usually a low-resolution stream. Occasionally, a camera will report its configuration incorrectly and swap the primary and secondary streams. If this occurs and the secondary stream is high-resolution, motion detection processing will create a very high CPU load.

To correct this, motion detection can be forced onto a specific stream.

1. Open the **Camera Settings > Expert** tab.
2. Check **Force motion detection for stream** and select **Primary** or **Secondary**.
3. Apply changes.

- ❗ **IMPORTANT:** Adjusting these settings can seriously affect server performance. See "[Dual Stream Processing](#)" for details.

Section 17.8 – Disabling Recording of a Specific Stream

In some circumstances, it may be necessary to disable recording of the primary or secondary stream.

For instance, it may make sense to disable recording of the primary stream to save storage space and instead set the recording type to "Motion Only" and "Low" quality. Or, if the secondary stream bitrate is too high, it may make sense to disable recording so that the DW Spectrum Server still performs motion detection, but does not record it.

To Disable recording of a specific stream:

1. Open the **Camera Settings > Expert** tab.
2. Check **Do not Archive primary stream** or **Do not record secondary stream**.
3. Apply changes.

Section 17.9 – Disabling a Secondary Stream

The secondary stream can be disabled entirely. This may be necessary, for example, for very old

cameras where the secondary stream has motion detection but does not support H.264 or H.265 codec. In this case it is helpful to reduce the demand on storage space by disabling the secondary stream.

 **NOTE:** If the resolution of the primary stream is larger than 1024x768, software motion detection will be disabled. If the primary stream resolution is lower than or equal to 1024x768, motion detection can be performed there.

To Completely Disable a Secondary Stream:

1. Open the **Camera Settings > Expert** tab.
2. Check **Disable secondary stream**.
3. Apply changes.

 **IMPORTANT:** This setting is unavailable if "Allow Site to optimize camera settings" is disabled. See ("[Dual Stream Processing](#)").

Section 17.10 – Camera and Server Time Synchronization

By default, all servers in a Site have the time synchronized (see "[Time Synchronization in a Multi-Server Environment](#)"). This ensures smooth Archive recording, Indexing and fetching.

By default, the server ignores the time on cameras. However, in some cases it may be necessary, especially for Edge cameras that record Archive to the internal storage. In this case, it is critical to have the camera time synchronized with the server.

To Push Time from a Server to a Camera:

1. Open the **Camera Settings > Expert** tab.
2. Uncheck **Time Settings > Keep Camera Time Settings**.
3. Apply changes.

Additionally, the server can be forced to use timestamps from cameras (may also be useful for Edge cameras). See "[Tuning up Camera Streaming](#)" for details.

Section 17.11 – Assigning Logical ID

The DW Spectrum Server provides the option to assign a six-digit *Logical ID* that can be used instead of the much longer *Camera ID*. The logical ID simplifies device identification when integrating with third-party Sites, and is necessary in environments with input devices that are not capable of entering the full camera ID. The logical ID can be used in API calls (including getting RTSP streams, etc.) to address cameras. If one is assigned, the logical ID is displayed on the *General* tab of *Camera Settings*.

To Assign a Logical ID:

1. Open the context menu for a camera and go to **Camera Settings > Expert**.
2. Enter a number in the **Logical ID** field.

Click the **Generate** button to discover and display the smallest number available in an established Site using 1 to 3 digit identifiers.

 **NOTE:** A logical ID can be assigned to a layout, see "[Configuring Layouts](#)".

To Remove a Logical ID:

Click the **Reset** button. This sets the logical ID to zero, which the server equates to having no logical ID.

Section 17.12 – PTZ Movement Speed

The PTZ speed setting changes how fast the pan or tilt action is completed. The minimum value is 0.1 and the maximum value is 1.0.

In **Camera Settings > Expert** tab, enable **Use different values for pan and tilt** if different speeds for pan and tilt are needed.

Section 17.13 – PTZ Position Presets

The PTZ presets setting decides which presets the server will use. Some cameras can't save or activate PTZ presets through DW Spectrum (*Site presets*) and must process such requests directly on the camera to function correctly (*native presets*).

Choose between two options in **Camera Settings > Expert** tab:

- *Use Site presets* – The preset profile and coordinates are saved in the server's Database. When the PTZ preset is activated, DW Spectrum sends the move request with the absolute coordinates.
- *Use camera native presets* – The preset profile and coordinates are saved in the camera itself. When the PTZ preset is activated, DW Spectrum sends the move request with the preset ID. The camera will check the preset configuration by itself and move to the position.

Part 18: Plugins and Analytics

DW Spectrum comes with plugins pre-installed for the most popular manufacturers devices. Plugins allow for built-in video analytics and DW Spectrum to properly communicate with one another. Usually, the initial set-up and configuration for built-in camera analytics must be done in the [camera's dedicated web page](#) or the 3rd party software's settings, but can be done in the desktop client for compatible cameras (see "[Analytics: Region of Interest \(ROI\)](#)" for details).

Section 18.1 – Plugin Integrations

Plugins are a type of integration that provides an enhanced data connection between DW Spectrum and specific devices. This enables the Desktop Client to receive analytical metadata directly from a camera and control settings using a common graphical user interface. This is similar to how [Web Page Integrations](#) provide a method for the Desktop Client to exchange data with external services.

Key Concepts

- DW Spectrum automatically installs a set of plugins for popular cameras from worldwide vendors.
- Plugin vendors, integration developers, and device OEMs provide installation and configuration instructions for their products.
- The Desktop Client will only show plugins and integrations when compatible devices are connected and authorized.
- The Integration vendor defines the level of functionality provided by their plugin and is responsible for application support.
- Integrations can be independently installed, updated, configured, and removed from a Site.
- Plugins directly access the [Event Rules](#) engine, APIs, and mediaserver SDK to provide custom analytics and data processing.
- Not all integrations are compatible with all DW Spectrum releases nor all device models and firmware versions.
- Camera and device response time will vary with network traffic and the computational capacity of each device.


 **NOTE:** Refer to vendor provided instructions and device-specific documentation for additional information.

Installing a Plugin

The *Stub Analytics Plugin* will be used in the installation example below, but applies to any camera plugin. The Stub Analytics Plugin is a sample plugin that attempts to utilize and demonstrate some of the features present in DW Spectrum and is included by default in the *plugins_optional/stub_analytics_plugin* directory.

To activate Stub Analytics Plugin perform the following steps:

1. Copy or move the plugin to the *plugins/* directory. For the Stub plugin, it can be found in the default *plugins_optional/* directory. The file name is *sample_analytics_plugin.dll* on Windows and *plugins_optional/stub_analytics_plugin/libsample_analytics_plugin.so* on Linux.
2. Restart DW Spectrum Server.
3. In the DW Spectrum desktop client, open a camera on the layout. Make sure the video starts playing.
4. Right-click the camera and select **Camera Settings**.
5. Click the **Plugins** tab.
6. Click the toggle to turn on/off the feature to be tested.

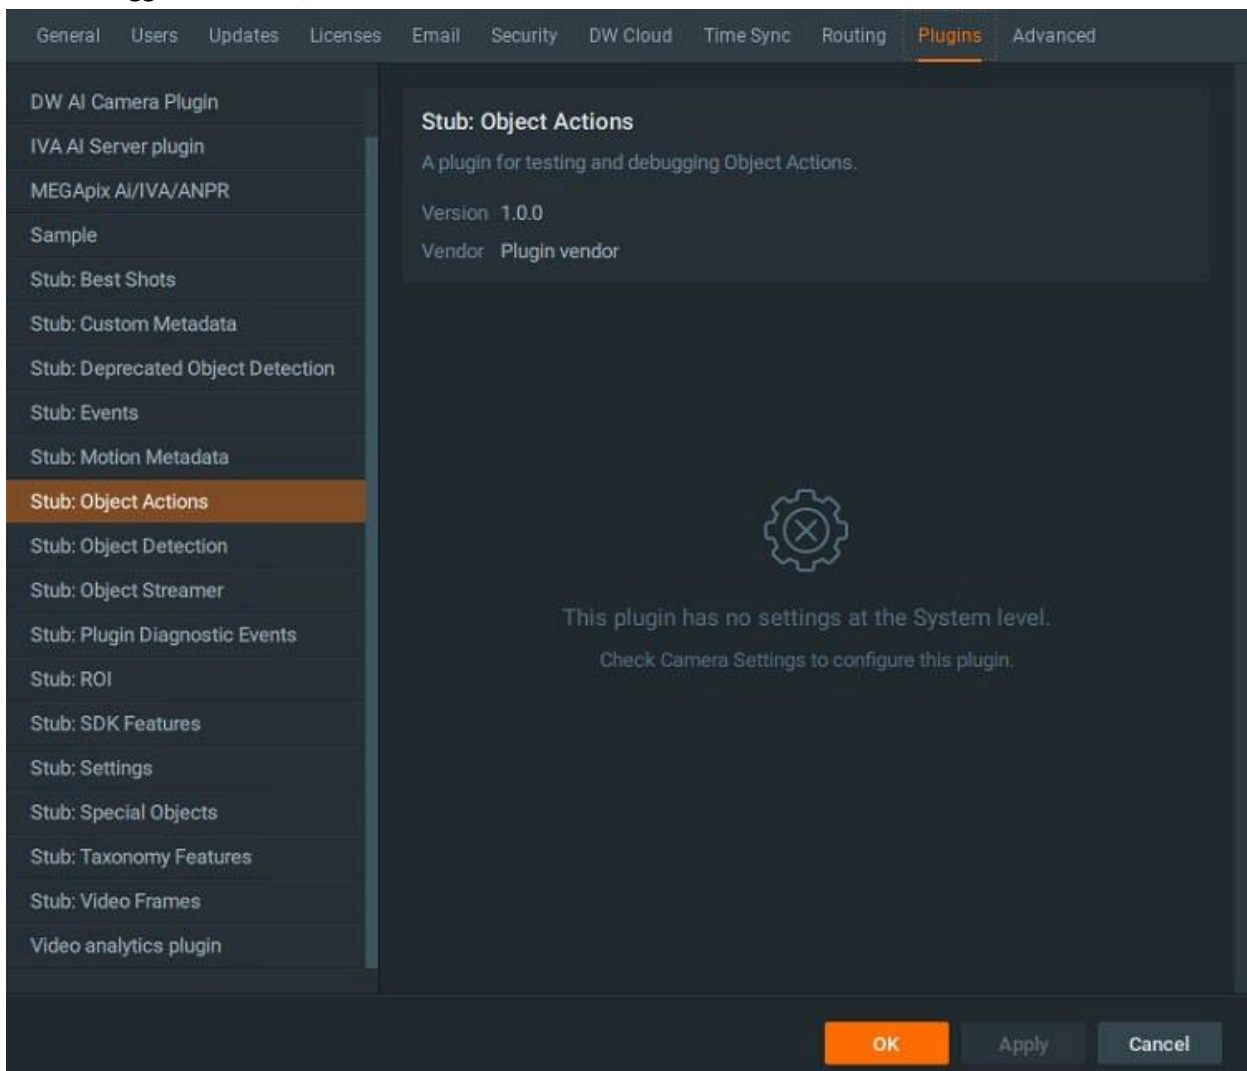

7. Apply changes.
8. Once a plugin is enabled for a camera, the server will feed video frames into the integrated video analytic engine for analysis.

For example, enabling *Stub: Best Shots* on a camera will generate a simulated object with a bounding box around it. This simulated object is detected by the analytics engine as it moves across the camera's stream and each detection shows up as a thumbnail in the [Objects](#) tab if the camera is open in a layout.

See [Analytics Event](#) for information on configuring events.

If an object is detected, the "[Analytics Object Detected](#)" event may be triggered.

 **NOTE:** Users can find and modify the plugin's Site-wide settings in the analytics tab on the Site administration dialog.

Additional available plugins:

- [Digital Watchdog Analytics](#)

Finally, DW Spectrum supports the [Region of Interest \(ROI\)](#) feature which allows configuring analytics from the desktop client rather than 3rd party software settings or cameras' web pages.

 **NOTE:** Currently, only **Stub Analytics** can be configured in the desktop client.

Section 18.2 – Region of Interest (ROI)

Region of Interest (ROI) is a feature found in cameras with built-in video analytics or third-party software products. Rather than various third-party software or cameras' web pages, the desktop client can be used to configure special functions on cameras like line crossing, perimeter intrusion, bounding boxes, and the minimum and maximum size of detected objects.

This can optimize resources for processing and analyzing video and make analytics setup more intuitive.

 **NOTE:** Currently, only **Stub Analytics** can be configured in the Desktop Client.

- Region of Interest (ROI) is a feature often found in cameras with built-in video analysis services.
- ROIs represents an area or line placed over the camera image is part of a defined event or detection alarm.
- A single camera can have multiple ROI and often each ROI has its own settings for sensitivity, time, direction of travel, etc.
- For many cameras the DW Spectrum Desktop Client can define ROIs and configure detection settings.
- Only one camera stream can be used with the ROI functionality.
- The [Analytics Event](#) rule can be used to trigger an [Action](#) based on data provided by an integration.

 **NOTE:** This section describes the basic ROI types available through the Stub integration. While these examples are like many integrations, each integration vendor defines the tools and settings available through the Desktop Client and directly through software embedded in the camera or device.

Common ROI Types Available in the Stub Integration

The Stub ROI integration provides the following use cases types as examples representing the options available in many integrations.

- The *exclusion polygon* is an area that will be ignored by any other Stub ROI that overlaps the same area on the camera image.
- *Polygons* are closed shapes of between three and six points that can be repositioned on the camera image.
- *Boxes* are four sided shapes created with a click and drag operation. Boxes have the same configuration options as polygons and they can be re-sized and repositioned, but they cannot be rotated and must contain 90-degree angles at each corner.
- *Lines* are limited to two-points of definition that typically include a direction of travel that is part of the event detection configuration.
- *Polylines* can contain multiple points and are often used to define an ROI that aligns with a unique physical environment that must be accommodated. A polyline can cross itself, but it will not create a closed shape and cannot be converted into a polygon.
- The *Size Constraint* function provides a minimum and a maximum bounding box. An object must be between the min

and max sizes to trigger a detection event. The min and max bounding boxes do not need to overlap – the minimum box must always be smaller than the maximum box.

Define a Region of Interest

The following outline generally applies to all Stub ROI types while respecting that not all ROI types have the same configuration options.

1. Open the context menu of a supported camera and select > **Camera Settings** > **Integration** to open the dialog.
2. Scroll through the available ROI types and locate the ROI type (Boxes, Lines, Polygon, Size) to be defined.
3. Enter an optional caption-label for the ROI to be displayed when the ROI shape is set to be displayed.
4. Click the empty camera-frame that contains the text "Click to add", or a currently configured ROI snapshot to enter ROI definition mode.
 - a. Select a color to be applied to the ROI graphics that will be placed over the camera image.
 - b. Place sequential ROI points to create a line or create and close a polygon – click and drag to create a box or to re-size min-max bounding boxes.
 - c. Click **Clear** to erase all points and start over, or click **OK** to save the ROI and close the definition dialog.
5. Checkbox to select if the ROI shape is *displayed on video* as an overlay.
6. Set any configuration options for the ROI being defined.

Add Additional Regions of Interest

The following steps apply to analytical models that support multiple ROIs.

1. Open the context menu of the camera containing the ROI and select > **Camera Settings** > **Integration** to open the dialog.
2. Locate the ROI to be configured.
3. Use the **+Add** and **-Delete** buttons to add or remove additional ROIs.
4. Repeat the steps to Define a Region of Interest described in the previous section.

Delete a Region of Interest

1. Open the context menu of the camera containing the ROI and select > **Camera Settings** > **Integration** to open the dialog.
2. Locate the ROI to be deleted.
3. Click on the trash can icon to remove the ROI – this cannot be undone.

Section 18.3 – ONVIF Analytic Integration

The Digital Watchdog analytics plugins are integrated into DW Spectrum using DW API version 4.0 or later. Different settings may be available depending on the type of analytics provided by the camera.

- The ONVIF Analytics Plugin integrates real-time analytics events from compatible ONVIF cameras directly into DW Spectrum.
- Only events are supported – objects and metadata are not supported.
- Requires cameras with ONVIF Profile M analytics capability.
- Some event types may not be recognized due to camera design or implementation.

Analytics Setup

1. Connect Camera: [Add an ONVIF-compatible camera to your Site](#).
2. Auto-Discovery: The plugin automatically detects available analytics event types from the camera.
3. Create Rules: Set up [Event Rules](#) to initiate [Actions](#) based on analytics events.

4. Automatic Subscription: The plugin subscribes to camera notifications when you create rules.

Part 19: Health Monitoring Metrics

In addition to the DW Spectrum [Server Monitoring](#) display, users with the *Site Health Monitor* permission can view detailed metrics using the Web Admin or Cloud portal.

Site health metrics are parameters of different components of the Site that provide valuable information about the state of each component. Metrics are aimed at helping investigate problems and tune performance. Below are some examples of the parameters available for each component type:

- [Alerts](#) – Site, server, camera, and storage related alerts. Event notifications are not shown here.
- [Site metrics](#) – The number of servers, camera channels, storage locations and users, etc.
- [Server metrics](#) – CPU/RAM usage, camera channels, server threads and network connections, etc.
- [Camera metrics](#) – Vendor, model, firmware and video quality settings, etc.
- [Storage Locations](#) – Capacity, read/write speed and issues, etc.
- [Network Interfaces metrics](#) – IP addresses and i/o rates, etc.

To View the Health Monitor:

1. Connect to a Site using the *Web Admin* or *Cloud Portal*.
2. Select the **Information** tab in the heading menu.
3. Select the component to monitor in the left panel.
4. Optionally, download the full report for offline review, record keeping, or sharing with technical support.



NOTE: All metrics are erased after the server has been restarted.

Section 19.1 – Cloud Connect Issue

Occurs when the server is the master-server and a selected cloud connection condition creates a trigger. This is a default event.

Advanced Parameters:

- *Cloud Database* – this event is triggered when a connection to the Cloud Database could not be established.
- *Cloud Server Socket* – this event is triggered upon a detected issue while listening on the server socket connection.
- *Cloud Mediators* – this event is triggered when a master-server is disconnected from all Cloud Mediators.
- *Cloud Relays* – this event is triggered when a master-server is disconnected from all Cloud Relays.



NOTE: If several values are selected, then the condition for the occurrence of an event works with the “OR” logic where the event occurs if any condition is triggered for at least one selected value.

- [Event Scheduling](#)

Section 19.2 – Alerts

Alerts are representations of metrics presented to the user once metrics pass a threshold where they reach values potentially detrimental to the Site.

Alerts can show what's wrong with the Site without needing to go into detail. Below are some examples of the alerts for each component type:

- *Site alerts* – Maximum number of servers or channels per Site reached.
- *Server alerts* – Offline event, high CPU/RAM usage, logging level status, encoding threads greater than 2, etc.
- *Camera alerts* – Camera offline event, IP conflict, frame drop, etc.
- *Storage alerts* – Storage inaccessible or offline, storage issue in the last 24 hours, etc.

 **NOTE:** All alerts (including aggregated alerts) are erased after the server has been restarted.

Section 19.2 – Site Metrics

The **Site** tab contains the following *Site-level* metrics:

- *Servers* – The number of servers in the Site
- *Camera channels* – The number of camera channels in the Site
- *Storage locations* – The number of storage locations in the Site
- *Users* – The number of users in the Site
- *Site Version* – The DW Spectrum Server version

Section 19.3 – Server Metrics

The **Servers** tab contains the following server-level metrics:

Server Availability

- *Status* – Current status of the sever (online/offline).
- *Events count: Server Offline (24h)* – Number of times the Server went offline in the last 24 hours.
- *Uptime* – Length of time the sever has been active.
- *Cloud master-server* (flag) – Is current server responsible for connecting to the Cloud (yes=true | no=false)
- *Cloud DB status* – the current Cloud DB state can be:
 - Connected when current server is the master-server.
 - {ErrorMessage} related to Cloud DB connection.
 - – (dash) when current server is not the master-server.
- *Cloud DB failures* – count of DB events in a rolling 24-hour window.
- *Cloud Socket status* – the current socket state.
- *Cloud Socket failures* – count of socket events in a rolling 24-hour window.
- *Cloud Mediator status* – the current Mediator state.
- *Cloud Mediator failures* – count of Mediator events in a rolling 24-hour window.
- *Cloud Mediator URL* – the current internet address of the Mediator.
- *Cloud Relay status* – the current Relay state.
- *Cloud Relay failures* – count of Relay events in a rolling 24-hour window.
- *Cloud Relay URL* – the current internet address of the Relay.

Load

- *Total CPU Usage (%)* – CPU usage of the entire machine.
- *CPU used by VMS Server (%)* – CPU usage of the DW Spectrum Server application.
- *Total RAM Usage* – RAM usage of the entire machine in GB.
- *Total RAM Usage (%)* – RAM usage of the entire machine as a percentage.
- *RAM used by VMS Server* – RAM usage of the DW Spectrum Server application in GB.
- *RAM used by VMS Server (%)* – RAM usage of the DW Spectrum Server application as a percentage.
- *Server threads* – Number of threads inside Server processes.
- *Camera channels* – Number of device channels in the Site.
- *Decoding threads* – The number of running decoding threads.

- *Decoding speed* – Total decoding speed in megapixels per second, including thumbnails encoding.
- *Encoding threads* -The number of running encoding threads.
- *Encoding speed* – Total encoding speed in megapixels per second, including thumbnails encoding.
- *Outgoing Primary streams* – The number of primary media streams that are being taken from the Server (including audio-only streams, such as from an I/O module).
- *Outgoing Secondary streams* – The number of secondary media streams that are being taken from the server.
- *Incoming connections* – Number of open incoming sockets, including UDT (TCP over UDP).
- *Outgoing connections* – Number of open outgoing sockets, including UDT (TCP over UDP).
- *Logging level* – The type of logging enabled on the server.

Info

- *Public IP* – Public IP of the server.
- *OS* – Operating System installed on the server.
- *OS Time* – Time as reported by the operating System.
- *VMS Time* – Time as reported by the DW Spectrum server application.
- *CPU Name* – Available manufacturer and model information for the CPU.
- *Cores* – The reported number of cores in CPU.
- *RAM* – Amount of RAM (GB) installed on the server.
- *Events count: Time Changed (24h)* – Number of times the server's time had to be synchronized.

Activity

- *Transactions per second* – Represents activity with resources settings and information being changed in the internal database (from a moving average over the last 60 seconds).
- *Event Rules activations per second* – Number of times Event Rules have been triggered (from a moving average over the last 60 seconds).
- *REST API calls per second* – Number of HTTP REST API per second (from a moving average over the last 60 seconds). This number does not include API calls for media streaming and data proxying between servers.
- *Thumbnails per second* – Number of thumbnails decoded per second (from a moving average over the last 60 seconds).
- *Active plugins list* – Numbered list of plugins that are currently working on the server.

Section 19.4 – Camera Metrics

The *Cameras* tab contains the following camera-level metrics:

- *Name* – Name of the device.

Info

- *Server* – Name of the Server the camera is connected to.
- *Type* – The type of device: Camera, Multi-Sensor Camera, Encoder, NVR, I/O module, or Horn Speaker.
- *IP* – IP address of the device.
- *Recording* – The recording status of the device: On, Scheduled, or Off.

Availability

- *Status* – The connectivity status of the device: Offline, Online, Unauthorized, or Server Offline.
- *Events* – Camera Offline (1h) – Number of times the camera went offline over the past hour.
- *Events* – Stream Issues (1h) – Number of times the stream had issues over the past hour.

Primary Stream

- *Resolution* – The resolution of the primary stream.
- *Actual FPS* – Frames Per Second (FPS) of the stream.
- *Avg FPS drop (10 min)* – Difference between the FPS being targeted and the actual FPS (average over the last 10 minutes).

Secondary Stream

- *Resolution* – The resolution of the secondary stream.
- *Actual FPS* – Frames Per Second (FPS) of the stream.
- *Avg FPS drop (10 min)* – Difference between the FPS being targeted (set in the Advanced tab) and the actual FPS (average over the last 10 minutes).

Storage Analytics

- *Archive* – Length of all archived footage associated with this camera.
- *Recording Bitrate (5min)* – Bitrate for the Camera archive (based on the last 5 minutes of recorded archive).

Section 19.5 – Storage Metrics

The *Storage* tab contains the following storage-level metrics:

- *Name* – Storage location path

Info

- *Server* – Name of the server the storage is installed on
- *Type* – Types of storage being used (local, smb, etc.)

State

- *Status* – Current status of the storage drive
 - Online – The storage drive is online and not disabled by the user
 - Disabled – The storage drive is online but disabled by the user
 - Inaccessible – The storage is offline
 - Server Offline – The server that the storage drive belongs to is offline
- *Issues (24h)* – Number of storage issue events within the last 24 hours

Activity

- *Read Rate* – Storage drive read rate per second (from a moving average over the last 60 seconds)
- *Write Rate* – Storage drive write rate per second (from a moving average over the last 60 seconds)

Space

- *Total* – Size of the storage in gigabytes (GB)
- *VMS Media (%)* – Amount of the storage space occupied by data (as a percentage)

Section 19.6 – Network Metrics

The *Network Interfaces* tab contains the following network-level metrics:

- *Name* – Name of the network interface

Info

- *Server* – Name of the server the network interface is installed on
- *State* – Status of the network interface: Up (active), or Down (disconnected or disabled in the OS)
- *IP* – IPv4 address of the network interface

I/O Rates

- *IN Rate* – The amount of data received on the network interface in megabits per second
- *OUT Rate* – The amount of data sent on the network interface in megabits per second

Part 20: Event Rules

An *Event Rule* is an event-action pair – when an event is detected, the related action is triggered.

An event rule is a one-to-one definition: a given event can have just one action. However, as many event rules as needed can be created. For example, an event that detects motion can be defined to send an email as an action, and a second event that detects motion on a camera creates a bookmark as an action.

- An *event rule* is a set of conditions that, when true, initiate a defined *action*.
- The [event type](#) selected defines the available parameters for both the event and the action.
- Create multiple rules using the same event conditions to initiate multiple actions for a singular event.
- An assortment of frequently used rules and actions are included with the DW Spectrum Desktop Client.
- [Lookup Lists](#) are a Site-wide set of values that enable multiple events and actions to be updated at once.
- Certain events will pulse-highlight the device initiating an action to gain the user's attention.
- Authorized users can create *event rules* and *actions* that use [HTTP methods](#) to interface with third-party services or Site (API) endpoints.
- Authorized users can create on-screen [Soft Trigger](#) events to test actions or enable users to manually start an action at their discretion.
- Most *event rules* and *actions* can be disabled, deleted, or set to only run on a defined, hourly [schedule](#).
- Event rules with invalid settings are flagged in the event list and invalid options are flagged in the [Event Rule Configuration](#) dialog.
- Most actions include an interval setting to limit the frequency of actions taken.

Event Rule Types

There are three types of event rules:

- *User events* – Custom defined for a wide variety of conditions, using the available events and actions.
- *Site-generated events* – Exist for notification of critical storage and connection issues; a user cannot configure or delete them.

- *Default Events* – Preconfigured events that run in the background whenever DW Spectrum is open. Default events are triggered by Site-level circumstances such as storage issues, license issues, device disconnection, etc.

Event Logging

Events are automatically recorded in the Site's Event Log (see "[Viewing Events Log](#)").

The "[Write to Log](#)" action can be used to write an event to the log without needing to perform an external action such as playing a sound, sending an email, setting a bookmark, etc.

Site Metadata

Site metadata (device ID, date/time, IP address) is available for use in select actions.

How to Open the Event Rules List

Use any of the following methods to open the *Event Rules* list and view a summary of all event rules.

- Open the main menu, select **Site Administration** > **General** tab and click the **Event Rules** button.
- Open the context menu from the Notifications panel and choose **Event rules**.
- Use the device context menu and select **Camera Rules** to display the rules that apply to that specific device.
- Click on the **Camera Rules** button in the **General tab of the Camera Settings** dialog.
- Press the hot-key combination of CTRL + E (Windows) or CMD + E (macOS).

Actions Available in the Event Rules List

The following actions are available within the dialog box for event rules.

- When no existing rules are selected, the **+Add Rule** button is available to open a blank [Event Rule Form](#).
- Click on any exiting rule to open the [Event Rule Form](#) where configuration changes can be made.
- The button to **duplicate** a rule is available only when one checkbox next to an existing event rule is selected.
- If multiple, existing rules are selected, the event [Schedule](#), delete, and enable/disable toggle is available.

Event Indicators in Layout

Due to their importance, or simply to make an event noticeable in a dense layout, certain events provide built-in visual indication when triggered. For critical events – storage issue or storage not configured, server failure or conflict, device disconnected, etc. – red outlines will radiate from the perimeter of the related item in layout. For other less critical events – motion on camera, input signal on device – yellow outlines will radiate from the perimeter of the related item. The server monitor also provides a similar visual indicator when a server issue is detected.

Turning Rules On or Off

- *Using the Event Rule List* – Once a rule is defined, it can be turned on or off using a checkbox in the event rules list. Turning a rule off means the event will not be detected and the corresponding action will not be performed.
- *Using the Schedule* – For any rule, detection of the event can be turned on or off in increments of one hour using a weekly calendar (see "[Event Scheduling](#)".)
- *Using Global Notification* – Notification of a rule occurrence can be turned on or off Site-wide (see "[Global Notification Settings](#)"). The rule is still on, but notifications are not sent when it triggers.

Resetting All Rules to Default

Rule configurations can be returned to their default settings:

1. From **Main Menu > Site Administration > Event Rules**.
 2. Click on **Restore all Rules to Default**.
 3. Click **Reset** to accept changes.
- ❗ **IMPORTANT:** All user-defined rules are discarded when default rules are restored.

Create a Rule

See "[Using the Event Rules List](#)" and "[Using the Event Rules Form](#)".

Delete a Rule

- **Right-click** on a single rule in the list and choose **Delete** from the context menu
- Use the **Delete** button at the top of the dialog.

❗ **IMPORTANT:** There is no confirmation prompt before a rule is deleted.

Section 20.1 – Supported Events and Actions

The following events and actions are supported:

<u>Events</u>	<u>Actions:</u>
User Events · Analytics Event · Generic Event · Input Signal on Device · Motion on Cameras · Plugin Diagnostic Event · Soft Trigger Default Events	· Bookmark · Device Output · Device Recording · Do HTTP(s) Request · Execute PTZ Preset · Exit Fullscreen · Open Layout · Panic Recording

· Devices Disconnected · Devices IP Conflict · License Issue · Network Issue · Server Conflict · Server Failure · Server Started · Storage Issue Site-Generated Events · Archive Integrity Check Failure · Email Address Not Set · Email Not Set for Users · Email Server Not Configured · Error while Sending Email · LDAP Sync Issue · Licenses not Configured · ReIndexing Archive Canceled · ReIndexing Archive Complete · Remote Archive Synchronization · Storage not Configured · Site in Safe Mode · Time Synchronization Issue	· Play Sound · Repeat Sound · Send Email · Send Mobile Notification · Set to Fullscreen · Show Desktop Notification · Show on Alarm Layout · Show Text Overlay · Speak · Write to Log
--	--

Section 20.2 – Using the Event Rules List

There are several ways to open the *Event Rules* dialog:

- Open the context menu from the notifications panel and choose **Event rules**.
- Open **Site Administration** > **General** tab and click the **Event Rules** button.
- Use the device context menu and select **Camera Rules** (i.e., *Device Rules*) to list just the rules that apply to that specific device.
- Click on the **Camera Rules** button in the **Camera Settings** (i.e., *Device Settings*) dialog.

Each row in the event rules list is a rule. A small dot in the left-most # column indicates that an event has unsaved changes.

#	On	Event	Source	Action	Target	Interval of Action
	☒	On Camera Disconnected	<Any Camera>	Show desktop notification	All Users	Every 30 seconds
	☒	On Services Issue	<System>	Send email	User admin has invalid email address	Every 6 hours
	☒	On Storage Issue	<System>	Send email	User admin has invalid email address	Every 1 day
	☒	On Server Certificate Error	<System>	Send email	User admin has invalid email address	Every 6 hours
	☒	On Camera IP Conflict	<System>	Show desktop notification	All Users	Every 30 seconds
	☒	On Server Conflict	<System>	Send mobile notification	Administrators	Every 6 hours
	☒	On License Issue	<System>	Send mobile notification	Administrators	Every 6 hours
	☒	On Server Certificate Error	<System>	Send mobile notification	Administrators	Every 6 hours
	☒	On Server Certificate Error	<System>	Show desktop notification	All Users	Every 30 seconds
	☒	On Plugin Diagnostic Event	<Any Camera>	Show desktop notification	All Users	Instant
*	☒	On Camera Disconnected	<Any Camera>	Show desktop notification	Administrators, Power Users	Every 1 minute

Event

When: Camera Disconnected

At: <Any Camera>

Schedule...

Action

Do: Show desktop notification

☒ Interval of action: No more than once per 1 Min

to: Administrators, Power Users

☐ Force Acknowledgment

Comments:

Restore All Rules to Default

OK Apply Cancel

Invalid Rules

If a rule is not configured correctly, it will be highlighted in red.

Filtering and Sorting the Event Rule List

The column headers can be clicked to sort rules in ascending or descending order by the values in that column. The **Filter** field applies to devices (**Source** column) only. Filter results refresh as characters are entered, and will include rules that apply to multiple devices if any one of the devices matches the criteria. Rules that apply to *<Any Device>* will never be filtered out. To disable filtering, clear the field.

Editing Rules from the List

The event rules list provides basic editing functions. Clicking on any parameter in the list opens a pull-down menu where that parameter can be edited. Right-clicking on any parameter opens a context menu where a **New** rule can be added, **Delete** the selected rule, or set a **Schedule** for the selected rule.

Editing Rules from the Advanced Settings Form

Rule parameters can also be configured using the **Advanced Settings Form** on the lower half of the dialog (see "[Using the Event Rules Form](#)").

Section 20.3 – Event Rule Form

The form opens in the lower half of the *Event Rules* dialog when a rule is selected from the list or when the *Add* button is clicked. It may include parameters not available in the *Event Rules* list.

Common Settings:

The follow setting and options are present for every event rule type while all other parameters are defined by the event type and action type selected.

- A title and comment field provides for unique labeling that can found using search tools.
- Each event rule form includes a slide-switch to enable or disable the event rule.
- Click the schedule icon to opens a matrix of days and full hour increments to set when the event rule will be active.
- Alert icons are displayed near invalid settings in the configuration dialog.
- The configuration dialog uses pull-down menus for key attributes and multiple-selection pick lists for devices and users.
- Selections may be lost when changing the event or action type to one that does not share the same options.

Adding an Event Rule from the Form:

1. Click the **Add** button (or **right-click** on an existing rule in the list and click **New** in the context menu). The form will open and a new line for the rule is added to the list.
2. Select the **Event** to be monitored and the **Action** to execute when that event occurs. Each requires one or more of these parameters:
 - For Events:
 - *When* – Click on this field in the form (or the **Event** field in the list) to select from the menu of events.
 - *Starts or Stops* – The presence of this parameter is dependent on the kind of event. Sets when the event is triggered.
 - *At* – Click on this field in the form (or double-click on the **Source** field in the list) to select one or more devices.
 - *Schedule* – Click on this button to open a calendar for "[Setting up Schedule for Tracking Events](#)".
 - For Actions:
 - *Do* – Click on this field in the form (or the **Action** field in the list) to select from a menu of actions.
 - *At* – The presence of this parameter is dependent on the kind of action. Click on this field in the form (or the **Target** field in the list) to select one or more devices that will execute the action. At least one device must be selected for a rule to be valid.
 - *To* – The presence of this parameter is dependent on the kind of action. Click on this field in the form (or the **Target** field in the list) to select one or more user groups as recipient of the action. At least one user must be selected for a rule to be valid.
 - *Interval of action and Fixed duration* – See "Instant, Interval or Fixed Duration Actions" in the below section.
3. Enter any desired remarks in the comments field.
4. Apply changes.

 **NOTE:** If one or more rules are not correctly defined, the error message "Some rules are not valid and may not work, OK?" will appear. Click **Yes** to disable the invalid rules (invalid rules remain in the list but the respective *On* checkbox will not be checked). Click **No** to allow invalid rules to be active (the respective *On* checkbox will be checked and the rule will be highlighted in red).
5. In the event rule list, set or clear the **On** checkbox to enable or disable the rule.

 **IMPORTANT:** Make sure notification for the event type is turned on in [Global Notifications](#).

Using Selection Lists in Event Rules

Event rules use selection lists to choose devices and users. Selection and filtering behavior, described in the next topic, is consistent in both.

Continuous or Instant Events

Some events may be continuous, some can only be instant, and some may be either (generic or analytics events).

- *Continuous* – Events that can occur continuously, such as a motion on a camera, require a state definition of either **Starts** or **Stops**.
- *Instant* – Events that occur instantly, without duration, such as a device being disconnected or a server starting. For generic and analytics events, instant events are labeled **Occurs**.

Instant, Interval or Fixed Duration Actions

The following parameters are available for most actions, depending on their intended behavior.

- *Interval of Action* – Check this box to limit the frequency with which an action will occur in response to an event. Enter an integer value (1 – 999) in the **No more than once per** field, and select a corresponding time

increment (*sec, min, hrs, days*). This feature is useful, for instance, with an action like show notification where the triggering event may be continuous, but it is only necessary to be notified periodically.

- *Instant* – Uncheck this option so the action will execute every time the event occurs.
- *Fixed Duration* – Check this option to specify how long an action will last, typically in response to a continuous event. Enter the duration in seconds. Zero is not a valid entry, and depending on the action there may be an upper limit to the duration.


Section 20.4 – Selection Lists in Event Rules

To Select Devices

For events, choose the device(s) that will trigger the rule. If no specific devices are selected (shown as <Any Device>), the rule will apply to all devices.

For actions, choose the device(s) that will respond to the event. At least one device must be selected for a rule to be valid.

- Drag and drop devices from the resource panel into the **At** field.
- Alternately, use the *Select Devices* dialog which lists all servers in the Site, and all devices attached to them:

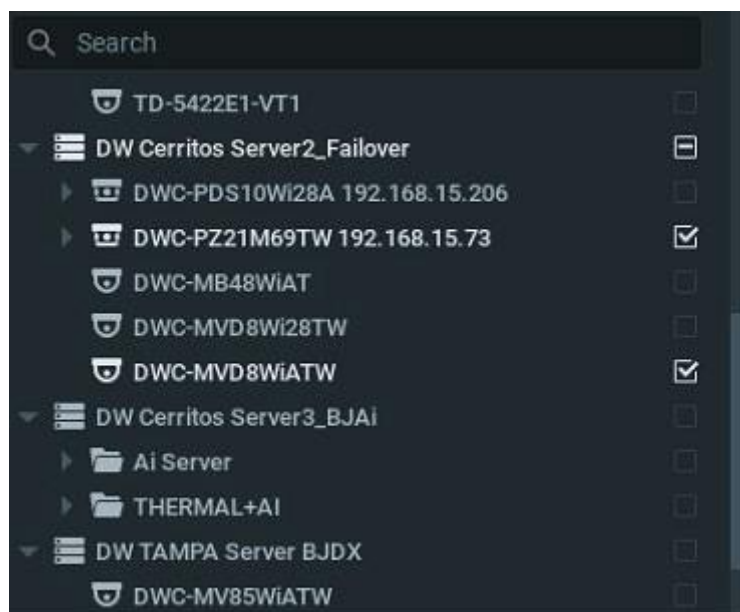

1. Click on the **At** field in the advanced settings form to open the *Select Devices* dialog.
2. Check the desired individual devices, or click a server's check box to select all devices on that server.
3. Optionally, use the **Filter** field to [search](#) for specific devices. All device parameter values (name, firmware, vendor, etc.) are searched. The results update immediately as characters are entered in the field.
4. Click **Apply** changes.

To Select Users

For events, select the user(s) the event will be available to. At least one user must be selected for a rule to be valid.

For actions, select the user(s) who will be recipients of the action. At least one user must be selected for a rule to be valid.

Use the *Select Users* dialog to select one or more users:

1. Click on the **To** field (alternately labeled *For*, *Available to*, *Play to users*, or *Speak to users*) in the advanced

settings form to open the *Select Users* dialog.


2. Check one or more users, user groups, or check **All users** to select all users in the Site.
3. To see individual usernames, enable **Show all users** (green) and check the desired individuals.
4. Use the [Search](#) field to locate usernames or groups that contain the characters entered. Filter results refresh as characters are entered.

The screenshot shows a dark-themed dialog box for selecting users. At the top is a search bar with a magnifying glass icon and the text 'Search'. Below the search bar is a section titled 'Roles'. The first item in this section is 'All Users' with a checkbox to its right. Below this is a list of roles, each preceded by a person icon and followed by a checkbox. The roles and their user counts are: Owner (2 Users), Administrator (115 Users), Advanced Viewer (468 Users), Viewer (13 Users), Live Viewer (56 Users), CERRITSO DEMO (1 User), CPROCAM (1 User), Custom-DC PSG (1 User), demo-ai (1 User), Demo3 (1 User), Dolphin (1 User), and DW-TECH (1 User). The checkboxes for 'Owner' and 'Administrator' are checked. At the bottom of the dialog is a toggle switch labeled 'Show all users', which is currently turned off. To the right of the toggle are two buttons: 'OK' (orange) and 'Cancel' (grey).

Role	User Count	Selected
All Users		☐
Owner	2 Users	☒
Administrator	115 Users	☒
Advanced Viewer	468 Users	☐
Viewer	13 Users	☐
Live Viewer	56 Users	☐
CERRITSO DEMO	1 User	☐
CPROCAM	1 User	☐
Custom-DC PSG	1 User	☐
demo-ai	1 User	☐
Demo3	1 User	☐
Dolphin	1 User	☐
DW-TECH	1 User	☐

To Select Layouts

For actions, choose the layout that will open in response to the event. The "Open layout" action allows only one layout to be selected. The "Set to fullscreen" and "Exit fullscreen" actions allow more than one layout to be selected, but the action will only take effect in the layout that is open at the time of the event being triggered.

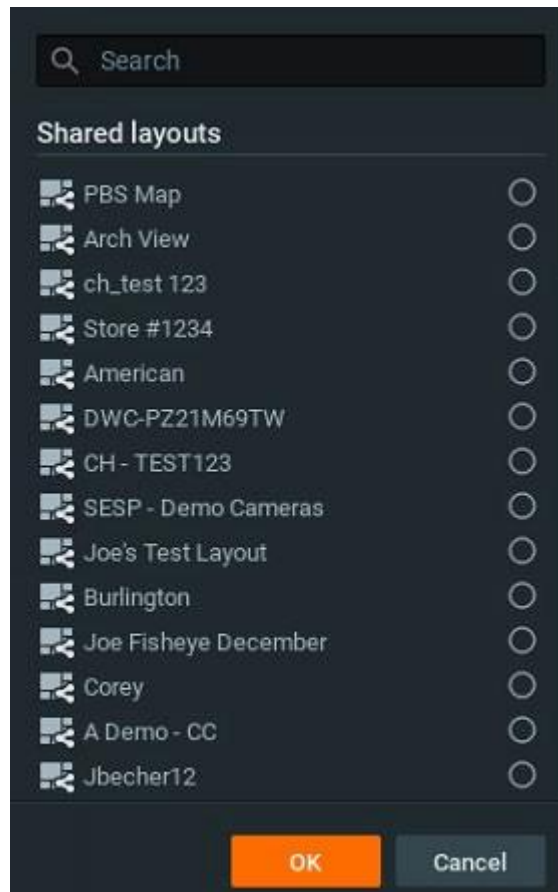


Section 20.5 – Event Scheduling

By default, event monitoring is active 24 hours a day, 7 days a week. If an event only needs to be monitored at certain times, it can be assigned to a schedule. Site-generated events cannot be placed on a schedule since they are always on.

 **NOTE:** A rule can be disabled entirely by unchecking the **On** box in the Event Rules list.

To Set a Schedule for an Event:

1. Select an event from the event rules list, and click on the **Schedule** button to open the dialog shown below.

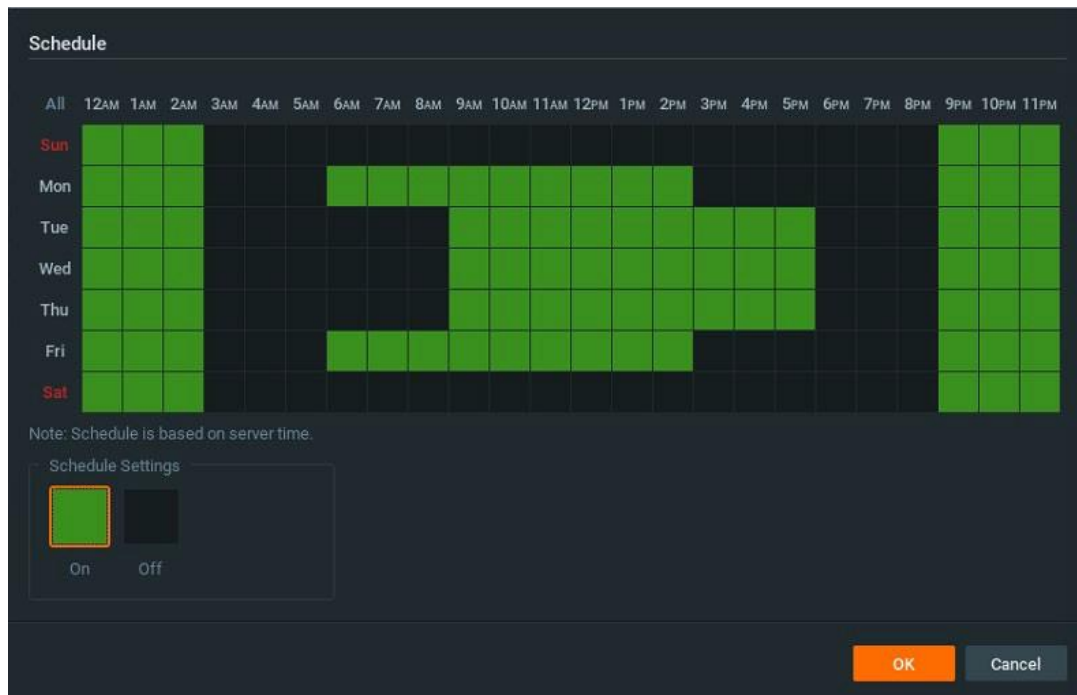

2. Click the **On** or **Off** button to determine monitoring behavior in specific 1-hour cells from 12AM to 11PM.
3. Click in a cell to apply the selected schedule setting to cells, or use these shortcuts to apply to multiple cells:
 - Click and drag to select multiple cells
 - Click the hour heading to select an entire column
 - Click the day of the week to select an entire row
 - Click **All** to select all cells
4. Click **OK** to accept or **Cancel** to discard changes.

Section 20.6 – Global Notifications

Notification of a particular event type or Site alert can be turned on or off globally. The notification setting does not affect event detection or action execution, only whether notifications are sent to the notification panel.

IMPORTANT: The window can be expanded to show all the options in the list.

To Show or Hide Notifications of a Particular Type:

1. Open **Main Menu > Local Settings > Notifications** or *right-click* any open space in the notification panel and select **Filter**.
2. Check **Show all notifications** so all events will display in the notification panel, or uncheck it to select individual notification types to display
3. Apply changes.



Section 20.7 – Viewing and Exporting the Event Log

Each event that occurs in DW Spectrum is stored in the event log and displayed in the "[Events Tab](#)". The event log makes it easy to navigate through past activity and diagnose device or server issues.

To View the Event Log:

1. Open **Main Menu** > **Site Administration** > **General** tab and click on the **Event Log** button.
2. Open the context menu by right-clicking anywhere on the notification panel, then choose **Event Log**.
3. Use the **Ctrl + L** shortcut.

Search the Event Log

Use the search box at the top right of the event log to search descriptions of all logged events using keywords.

Sort the Event Log

Events are displayed in the following columns. The column headers can be clicked to sort the log in ascending or descending order:

- *Date/Time* – Date and time the event occurred
- *Event* – The type of event
- *Source* – The resource that initiates the event: device (motion detection, input signal, etc.) or server (storage issue, server failure, etc.)
- *Action* – The action that is performed when the event occurs
- *Target* – The user or devices that receive the action
- *Description* – Any additional information. For motion detection events, the description includes a hyperlink that will open the device in a new layout and start playback of the event.

Filter the Event Log using the Header Menus

- *Start date* and *End date* – Select a day in each of these calendar fields to show only events that occurred during a particular period. The default display is the current day. Dates are shown in mm/dd/yy format.
- *Event type* – From the pull-down menu, select an event category (*Any Event*, *Any Device Issue*, *Any Server Issue*, *Analytics Event*, *Generic Event*), or specific type of event within those categories.
- *Device type* – Display events occurring on a particular device only (applies to Motion, Input and Device Issues).
- *Action* – Display only the events caused by a particular action.

Click the **Clear Filter** button to remove all filter conditions. Click the **Refresh** button to add any new log entries to filtered results.

Filter the Event Log using Event Fields

The context menu of an existing record can be used to filter the event log according to that record. For example, **right-click** on a specific record and choose **Filter Similar Rows** – only the events occurring on the same source and event will be displayed. To clear all existing filters, click **Clear Filter** at the top right or open the context menu on an existing record and choose **Clear Filter**.

View the Event Log for a Specific Device or Server

- *Device* – Open the device context menu and select **Check {device type} Issues**.
- *Server* – Open the Server context menu and select **Server Diagnostics**.

Other Event Log Functionality

Context menus in the event log provide different options, depending on the field (event, source, action, etc.) from which they are opened. The following options are available from the context menu for all fields:

- *Select All (Ctrl + A)* – Selects all entries in the log.
- *Export Selection to File* – Saves the selected data to an HTML or CSV text file.
- *Copy Selection to Clipboard* – Copies the selected data to the clipboard.

Context menus in the *Source* field provide several additional functions, depending on the device.

Click and drag the mouse or use **Ctrl + Click** or **Shift + Click** to select multiple entries and apply the

desired option to multiple events.

To Export Event Logs:

Technical support may request an event log. See "[Contacting Support](#)".

1. Open Main Menu > Site Administration > General > Event Log.
2. If necessary, filter by event or camera.
3. Select the events to be exported, or use the context menu to select all.
4. Open the context menu and choose **Export Selection to File**.
5. Choose the save location, enter a filename, and select the file type:
 - .html
 - .csv
6. Save the file.


Section 20.8 – Event Field Placeholders

When events are paired with the [Do HTTP\(s\) Request](#) action, they can contain parameters in the HTTP content section, which are replaced by the appropriate fields automatically.

Analytics Events

[Analytics Events](#) have four placeholders that can be used in the Do HTTP action:


- {event.cameraId} – Replaced by the selected camera's Camera ID.
- {event.cameraName} – Replaced by the selected camera's name (using the dropdown list next to "At").
- {event.eventType} – Replaced by the selected event type (using the dropdown list next to "Event Type").
- {event.eventName} – Replaced by the object or line name.

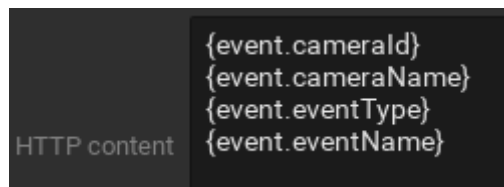

Generic Events

[Generic Events](#) have three placeholders that can be used in the Do HTTP action:

- {event.source} – Replaced by the content in the "Source contains" field.
- {event.caption} – Replaced by the content in the "Caption contains" field.
- {event.description} – Replaced by the content in the "Description contains" field.

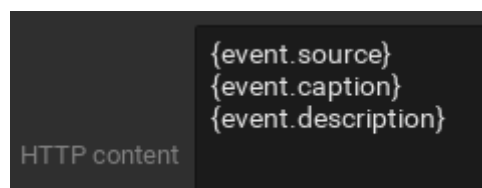

Example:

A generic event with the following data:

- Source – 3fa85f64-5717-4562-b3fc-2c963f66afa6
- Caption – Homepage

- Description – <https://www.google.com/>

The action for the above generic event is *Do HTTP(s) Request* with the following data:

- HTTP URL – <https://localhost:7001/rest/v1/webPages>
- HTTP Content – {"parentId": "{event.source}", "event.caption": "string", "url": "{event.description}"; "name": "{event.caption}"}
- Content type – MIME

When the generic event is triggered, the HTTP content for the *Do HTTP(s) Request* action will automatically change to the following:

```
{"parentId": "3fa85f64-5717-4562-b3fc-2c963f66afa6", "Homepage": "string", "url": "https://www.google.com/"}
```

Part 21: Tracked Events

The trigger for an action is an *Event*. Each event has its own parameters, and most events can be defined with "[Event Scheduling](#)" to control the days and times event detection is enabled.

Refer to the event description for more information:

- [Analytics Event](#)
- [Analytics Object Detected](#)
- [Archive Integrity Check Failure \(Site\)](#)
- [Server Certificate Error](#)
- [Devices Disconnected \(default\)](#)
- [Devices IP Conflict \(default\)](#)
- [Email Address Not Set \(Site\)](#)
- [Email Not Set for Users \(Site\)](#)
- [Email Server Not Configured \(Site\)](#)
- [Error While Sending Email \(Site\)](#)
- [Generic Event \(default\)](#)
- [Input Signal on Device](#)
- [LDAP Sync Issue](#)
- [Licenses Not Configured \(Site\)](#)
- [License Issue \(default\)](#)
- [Local storage is used for analytic and motion data \(Site\)](#)
- [Motion on Camera](#)
- [Network Issue \(default\)](#)
- [Plugin Diagnostic Event](#)
- [ReIndexing Archive Canceled \(Site\)](#)
- [ReIndexing Archive Complete \(Site\)](#)
- [Remote Archive Synchronization \(Site\)](#)
- [Server Conflict \(default\)](#)
- [Server Failure \(default\)](#)
- [Server Started \(default\)](#)
- [Soft Trigger](#)
- [Storage Issue \(default\)](#)
- [Storage Not Configured \(Site\)](#)
- [Site in Safe Mode \(Site\)](#)
- [Time Synchronization Issue \(Site\)](#)

Section 21.1 – Analytics Event

An *Analytics Event* occurs when DW Spectrum Server receives a special HTTP request from a device with built-in video analytics. If a camera has analytics enabled, DW Spectrum can render visual displays in a layout for the various types of analytics data received. Event metadata is also captured, and can be searched, filtered, and further analyzed.

 **IMPORTANT:** Analytics must be configured in the camera first to be detected by DW Spectrum.

For example, video analytics can detect when a vehicle has entered a certain area, zoom in on the license plate, and then perform license plate recognition. The corresponding event in DW Spectrum could render a bounding box of one color around the car, a bounding box of another color around the license plate, and trigger an email alert to security personnel. See "[Analytics Object Detected](#)" for more details about analytics events that specifically involve object detection (i.e. temperature detection is an analytics event with no object detection, but face recognition is an analytics event involving object detection).

Any number of video analytics devices can be connected to the Site, and for each device, any number of video analytic types can be enabled. Visualizations are captured and displayed as a bounding box in a user-specified color for each event or as a point for objects with a coordinate but no size. Once defined, an analytics event can be searched and filtered by entity type (notifications, bookmarks, events, motion, detected objects), by area as with motion search, by class or by attribute using unified text search of the caption and description fields, or by date interval. A counter shows the number of results that match the search criteria.

To Configure an Analytics Event:

1. Use the camera web page to confirm that analytics detection is properly configured and enabled in the device(s).

 **NOTE:** Some cameras can have their analytics detection configured in the DW Spectrum desktop client. See [Plugins and Analytics](#) for more information.

2. Open **Event Rules** and click the **Add** button to create a new rule.
3. Select **Analytics Event** from the **When** field.
4. Click on the **At** field to select the device(s) that will be generating the third-party analytics for the rule. In the *Select Devices* list, cameras that do not support analytics are highlighted in red.

 **NOTE:** Analytics integration works with certain camera models only, and event types differ from camera to camera. A warning notification will open if one or more of the selected cameras does not support analytics.

5. Choose the **Event Type** that will trigger the rule.

 **NOTE:** Each device will have a different set of available triggers depending on the analytic capabilities provided by the manufacturer. Only those available for the selected devices will be listed.

6. Optionally, use the *Caption* and *Description* fields to enter or filter attributes or metadata provided by the analytics device. Entries in these fields should match the corresponding fields in the HTTP request and are case sensitive. If the field is empty, it will always be considered a match.
 - *Caption* – Optional class value used to identify object type.
 - *Description* – Optional attribute value used to distinguish objects within a class.

Advanced Parameters

- [Event Scheduling](#)

Why Event May Work Incorrectly

- Request is filtered out. Edit or clear the *Caption* and *Description* fields and trigger the event again.

- [Global notification](#) for this event is disabled.

Section 21.2 – Analytics Object Detected

This is a narrower type of [Analytics Event](#) meant to be used specifically with video analytics providing object detection metadata. This event will allow such events to be appropriately categorized based on the object type selected, improving how it gets stored in the Archive for later retrieval when using the search function. See "[Plugins and Analytics](#)" for details.

Basic Parameters

- *At* – Click in this field to [select devices](#) to monitor; all devices that support object detection can be selected.
- *Object Type* – Depending on the analytics plugin being used, different selectable object types (e.g., car, human, bicycle, etc.) may be available.
- *Attributes* – Event will only trigger if names entered in this field match the attributes of detected objects in the objects tab.

The screenshot displays the configuration for an 'Analytics Object Detected' event. On the left, under the 'Event' tab, the 'When' dropdown is set to 'Analytics Object Detected'. The 'At' field shows '10 Cameras'. The 'Object Type' dropdown is set to 'Person'. The 'Attributes' field contains 'Gender=Woman Age=Adult'. Below this is a 'Schedule...' button. On the right, under the 'Action' tab, the 'Do' dropdown is set to 'Show desktop notification'. The 'Interval of action' is set to 'No more than once per 1 Min'. The 'to' field is set to 'Administrators, Power Users'. There is also a 'Force Acknowledgment' checkbox which is currently unchecked. At the bottom, there is a 'Comments' field.

In the example above, the analytics plugin should support face detection with the **Gender** and **Age** parameters to ensure the event is working.

Advanced Parameters

- [Event Scheduling](#)

Why Event May Work Incorrectly

- Event attributes are set incorrectly
- [Global notification](#) for this event is disabled.

Section 21.3 – Archive Integrity Check Failure (Site)

An *Archive Integrity Check Failure* event occurs when Archive files are removed, renamed, or otherwise manually changed; when a file has an incorrect timestamp, or if Archive backup does not complete successfully. The storage path where the problem was detected shows when the mouse hovers over the notification. This is a Site-generated event.

Users with Owner or administrator privileges will also receive a notification when attempting to view an altered Archive for the specific camera affected. The storage path where the problem was detected shows when the mouse hovers over the notification. More information – such as the exact file name – can be obtained from the server log files (see "[Collecting Logs](#)").

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.4 – Devices Disconnected (default)

A *Device Disconnected* event occurs if a device is disconnected for whatever reason (network issue, device malfunction, etc.). This is a default event.

Devices are considered disconnected if no data is received for 10 seconds. If a device is experiencing network issues for over a minute, then  appears next to it in the resource panel. Once data is received from the device, the status is automatically changed back to online.

Additional related events may occur that can help to investigate the issue:

- [Network Issue](#) – Indicates the network is unable to transfer data between the device and server, potentially the reason a device goes offline.
- [Server Failure](#) – If a server is down, all hosted devices will appear offline.
- [Camera IP Conflict](#) – If another camera with the same IP address enters the network, one of these two cameras will go offline.
- [Server Conflict](#) – If different servers on the same network access and pull data from the same cameras. Some cameras may drop offline because they are not able to provide several streams simultaneously.

Basic Parameters

- *At* – Click in this field to [select devices](#) to monitor, or use *<Any Device>* to monitor all devices.

Advanced Parameters

- [Event Scheduling](#)

Why Event may work incorrectly

- Too many devices are monitored, triggering too many events.
- Devices being monitored are offline.
- Action is not configured properly.
- [Global notification](#) for this event is disabled.

Section 21.5 – Devices IP Conflict (default)

A *Device IP Conflict* event occurs if another device with the same IP address has entered the network, resulting in one of the two devices going offline and generating a [Devices Disconnected](#) event. This is a default event.

Advanced Parameters

- [Event Scheduling](#)

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.6 – Email Address Not Set (Site)

An *Email Address Not Set* event occurs when a logged-in user does not have an email address configured in the Site and is therefore unable to receive [Email notifications](#).

This Site-generated event is disabled by default.

- User is notified that their email address is not configured.
- *Administrator* is notified that a user does not have an email address specified.

Click the notification to open the user's email settings dialog (see "[Changing User Settings](#)"). This notification will close automatically once the email address is set.

Email notifications cannot work if an [Email Server Not Configured \(Site\)](#). In this case, an [Error while Sending Email](#) notification will display.

Why Event may work incorrectly

- [Global notification](#) for this event is not enabled.

Section 21.7 – Email Not Set for Users (Site)

An *Email Not Set For Users* event notifies the administrator when one or more users do not have an email address specified and are therefore unable to receive [mail notifications](#).

This Site-generated event is disabled by default.

When an administrator receives notification that a particular user does not have an email address specified, they can click on the notification to open the [User Settings](#) dialog for that user. The notification will stop once an email address for the user has been set.

Why Event may work incorrectly

- [Global notification](#) for this event is not enabled.

Section 21.8 – Email Server Not Configured (Site)

An *Email Server Not Configured* event occurs if an Email Server is not configured. This is a Site-generated event.

By clicking the notification, the *Site Administration* dialog opens to the *Email* tab where an administrator can configure *Outgoing Email Settings*. See "[Configuring the Email Server](#)".

This notification will hide automatically once the email server is configured.

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.9 – Error While Sending Email (Site)

An *Error While Sending Email* event occurs when sending an email notification fails. This is a Site-generated event.

By clicking the notification, the *Mail Server* settings dialog will open (see "[Send Email](#)" for details). This notification will hide automatically once email is configured.

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.10 – Generic Event (default)

A *Generic Event* occurs when the server receives an HTTP request from an external Site such as an alarm Site, access control device, or monitoring Site. This is a default event.

DW Spectrum allows third-party Sites and devices to send an HTTP string known as a "createEvent" API call. The *createEvent* request must follow the proper format to be read by the server, and the event fields in the rule must match the corresponding fields in the HTTP request to be acted upon.

Together with the "[Do HTTP\(s\) Request](#)" action, which can send an HTTP request, bidirectional API communication between DW Spectrum and other software Sites can be created. A generic event can automatically replace the appropriate action parameter placeholders used in a "Do HTTP(s) Request" with the corresponding parameter's value. See "[Using a Server's Web Interface](#)" for more information.

 **NOTE:** Values in the event field are case-sensitive, and an empty string functions as a wildcard, where any value is considered a match.

Basic Parameters

Each request contains the following fields:

- *Source*
- *Caption*
- *Description*
- *Metadata* – Used to pass a device identifier that will specify devices the event is limited to (cameras, I/O modules, etc). To obtain the device identifier:

Open the device context menu and click Device Settings. In the General tab, the device identifier will be displayed as Camera/Device ID. The device identifier should be passed in the following format: {"cameraRefs":["<id>"]}. In HTML encoding it will look like this: {%22cameraRefs%22:[%22<id>%22]}.

 **IMPORTANT:** A device must be specified if the generic event is linked to a notification, and the "Force Acknowledgment" option is required. In this case, once the notification is acknowledged, a bookmark will be created and linked to the specified device. See "[Show Notifications](#)" for details.

- *Occurs/Starts/Stops* – This is an optional field for the "State". If there is no "State" field in the HTTP request, the event is considered **instant**. If specified, the event is considered **continuous**, and the rule requires a State=**Active** (Start) or State=**Inactive** (Stop) attribute. If a generic event containing State=**Active** is received, the resulting action will continue until the server receives a generic event with the same parameters that contains State=**Inactive**.

 **NOTE:** If a continuous action such as "device recording" or "repeat sound" is bound to an instant generic event (one without a State field), the rule will not work. (See "[Configuring Event Rules](#)" for more information about continuous and instant events.)

Example

http://127.0.0.1:7001/api/createEvent?source=%22Door%22&caption=%22Knock%20Knock%22&description=%22Visitor!%22&metadata={%22cameraRefs%22:[%22066fbf9c-2e11-a501-6e15-dfb0fb97c7cb%22]} This HTTP request:

- Sends data to a Server at IP Address 127.0.0.1 and Port 7001,
- *Source* – "Door"

- *Caption* – "Knock Knock"
- *Description* – "Visitor!"
- *State* – Not used, so it is instant
- *Device Identifier* – 066fbf9c-2e11-a501-6e15-dfb0fb97c7cb

Remember, fields in the generic event must match the corresponding HTTP request and are case-sensitive. For instance, for an event configured as Source "foo", Caption "bar", and Description "" (empty):

<u>An HTTP request with the following data WILL trigger a Generic Event:</u>	<u>An HTTP request with the following data will NOT trigger Generic Event:</u>
Source – "foo12345" (contains "foo")	Source – "Foo12345" (contains "Foo" instead of "foo")
Caption – "bartender" (contains "bar")	Caption – "batender" (does not contain "bar")
Description – (empty string means all values match)	Description – "Lorem ipsum dolor sit amet" (empty string means all values match).

Advanced Parameters

- *Omit Logging* – When checked, the generic event will not be added to the event log. This option allows an action that is triggered in rapid succession or with a very high frequency to be performed without a Database call or Database storage that would cause undesirable "spamming" of the event log. Even if the "Omit logging" checkbox is enabled, a generic event with a "Write to log" Action will still appear in the event log.
- see "[Event Scheduling](#)".

Why Event may work incorrectly

- HTTP request is not correctly written. Refer to the server API.
- Request is filtered out. Try clearing all fields (Source, Caption, Description) and trigger the HTTP request again.
- HTTP request is bound to a continuous type of action but does not contain the "State" field.
- A device is not specified but the event is linked to a notification and the "Force Acknowledgment" option is set.
- [Global notification](#) for this event is disabled.

Section 21.11 – Input Signal on Device

An *Input Signal On Device* event occurs if an input signal is detected on one or more device(s). DW Spectrum can detect input signals on any ONVIF-compliant devices that support receiving input signals.

Basic Parameters

- *When* – A signal can be continuous, so the event must be defined as occurring when input "Starts" or "Stops".
- *At* – Device(s) on which the input signal is detected. To specify devices, see [Selection Lists in Event Rules](#). Choose <Any Device> to detect input signals on all devices supporting that input.

 **NOTE:** A warning notification will open if one or more of the selected cameras does not support this event. These cameras will be highlighted in red.

Advanced Parameters

- *Input ID* – the I/O module port from which to take a signal (see [Setting Up I/O Modules](#)).
- [Event Scheduling](#)

Why Event may work incorrectly

- Too many devices are being monitored, causing too many events to occur.
- Devices that are being monitored are offline.
- Action is not configured properly.
- [Global notification](#) for this event is disabled.

Section 21.12 – LDAP Sync Issue (Site)

An *LDAP Sync Issue* event occurs when the LDAP server fails to synchronize with the Site. The event is inclusive of any issue that prevents successful LDAP synchronization, such as improperly configured proxy or connectivity issues.

- ❗ **IMPORTANT:** LDAP users will not be able to connect to a Site (see "[LDAP Users and Groups](#)").

Basic Parameters

- *When* – A Site defined trigger linked to the result of the LDAP synchronization routine
- *Do* – Only [Panic Recording](#) and [Repeat Sound](#) are not permitted actions for LDAP sync issue events.

Why Synchronization may fail

- Failed to connect to LDAP server.
- Failed to complete the synchronization within the timeout setting.
- No user accounts on LDAP server match the synchronization settings.
- Some LDAP users or groups were not found in the LDAP Database.
- Changes being made on LDAP server during synchronization.
- Incorrect LDAP configuration or misaligned attribute mapping.

Why Event may work incorrectly

- Action is not configured properly.

Section 21.13 – Licenses Not Configured (Site)

A *Licenses Not Configured* event occurs if no licenses are activated. This is a Site-generated event.

Cameras cannot be recorded if no licenses are configured. However, licenses are not required to view cameras. Click on the notification to open the license dialog. See "[DW Spectrum Licenses](#)".

The notification will hide automatically once at least one license is activated.

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.14 – License Issue (default)

A *License Issue* event occurs when a trial license expires, or when the server on which licenses are activated goes offline. This is a default event.

Camera streams cannot be recorded in the event of a license issue. Some analog cameras connected to encoders or I/O modules may remain viewable. Once recording has stopped, a license issue event generates a notification. The notification will list the cameras that are not being recorded. Upon clicking the notification, the license dialog will automatically open (see "[DW Spectrum Licenses](#)").

When a server goes offline, there is a 30-day failover period for the licenses that were in use, during which recording can continue. The server must be restored, or a new license must be activated during this grace period, or recording will stop on as many cameras as there are missing licenses.

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.15 – Local storage is used for analytic and motion data (Site)

A *Local storage is used for analytic and motion data* event occurs if a Site (OS) drive is used for analytic and motion data. This is a Site-generated event.

This event triggers a corresponding notification for administrators only when the desktop client connects to the Site. Upon clicking the notification, the storage configuration dialog will open. See "[Configuring Server and NAS Storage](#)" for details.

Advanced Parameters

- [Event Scheduling](#)

Why Event may not work correctly

- [Global notification](#) for this event is disabled.

Section 21.16 – Motion on Camera

A *Motion on Camera* event occurs when motion is detected on camera(s).

- ❗ **IMPORTANT:** Recording must be enabled on the selected cameras for this rule to be functional. See "[Setting a Recording Schedule](#)" for instructions on enabling and configuring recording.

Basic Parameters

- *When* – motion can be continuous so the event must be defined as occurring when motion "**Starts**" or "**Stops**". If no motion occurs for 3 seconds, the current motion event is considered stopped. When motion occurs again, a new motion event is generated.
- *At* – device(s) on which motion detection will be enabled. To specify devices, see [Selection Lists in Event Rules](#). Choose <Any Device> to detect motion on all devices.

 **NOTE:** A warning notification will open if one or more of the selected cameras does not support

motion detection. These cameras will be highlighted in red.

Advanced Parameters

- [Event Scheduling](#)

Why Event may not work correctly

- Recording is disabled for camera(s) that are being monitored.
- Motion mask is not set properly. See "[Setting up Motion Detection](#)".
- Too many cameras are monitored, triggering too many events to process.
- Cameras being monitored are offline.
- Action is not configured properly.
- [Global notification](#) for this event is disabled.

Section 21.17 – Network Issue (default)

A *Network Issue* event occurs when the network is unable to transfer data between a device and server, and packet loss is detected. That may cause the frame rate to drop on the affected device(s). If no frames are received from a device for 10 seconds, that device is considered offline. The [Devices Disconnected](#) event is then generated. This is a default event.

Advanced Parameters

- [Event Scheduling](#)

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.18 – Plugin Diagnostic Event

A *Plugin Diagnostic* event occurs when a DW Spectrum Server receives an event from a plugin device attached to the Site. Event metadata is captured, and can be searched, filtered, and further analyzed.

Basic Parameters

- *Source* – Select the triggering device in the **At** field.
- *Caption contains* – Optional class value used to identify object type.
- *Description contains* – Optional attribute value used to distinguish objects within a class.
- *Level* – Select one or more from the options *ERROR*, *WARNING*, or *INFO*.

Advanced Parameters

- [Event Scheduling](#)

Section 21.19 – Reindexing Archive Canceled (Site)

A *Reindexing Archive Canceled* event occurs when the Archive reindexing operation is canceled before it completes. This is a Site-generated event.

When a storage device or Archive file is moved, renamed, or deleted, Archive access can be restored by rebuilding the Index that maps physical storage locations for the Site (see "[ReIndexing and Fast-Scanning Archives](#)").

If reindexing is cancelled, the Site automatically generates the warning notification "*Rebuilding Archive Index is canceled by user*". It is highly recommended that Archive reindexing be restarted and allowed to complete, otherwise some or all of the Archived files may be inaccessible.

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.20 – Reindexing Archive Complete (Site)

A *Reindexing Archive Complete* event occurs when the Archive reindexing operation completes successfully. This is a Site-generated event.

When a storage device or Archive file is moved, renamed, or deleted, Archive access can be restored by rebuilding the Index that maps physical storage locations for the Site (see "[ReIndexing and Fast-Scanning Archives](#)").

When reindexing is complete, the Site generates the notification "*Rebuilding Archive Index is complete*".

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.21 – Remote Archive Synchronization (Site)

A *Remote Archive Synchronization* event occurs when remote Archive synchronization from an internal camera storage begins and completes. It is used for certain cameras that record directly to their own internal storage, which must be periodically downloaded to the DW Spectrum Site servers. This is a Site-generated event.

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.22 – Server Certificate Error (Site)

A *Server Certificate Error* occurs if the server's SSL certificate is unable to be verified. See "[Obtaining and Installing an Authorized Certificate](#)" and "[Server Certificate Validation](#)" for details.

Advanced Parameters

- [Event Scheduling](#)

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.23 – Server Conflict (default)

A *Server Conflict* occurs when different servers on the same network access data from the same devices. In this case, some devices may drop offline because they do not provide several streams simultaneously. This results in a [Device Disconnection/Malfunction](#) event. The notification message contains a list of the specific devices that are used by both servers. This is a default event.

Advanced Parameters

- [Event Scheduling](#)

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.23 – Server Failure (default)

A *Server Failure* event occurs when a server goes down, triggered by a hardware or software issue, or manual or emergency shutdown. When a server fails, all devices hosted on that server will go offline. This is a default event.

Advanced Parameters

- [Event Scheduling](#)

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.24 – Server Started (default)

Occurs when any server registered in the Site has started. This is a default event.

Advanced Parameters

- [Event Scheduling](#)

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.24 – Soft Trigger

This event type adds a button to one or more devices in layout. When a user clicks on a soft trigger button, the associated action is triggered. The event can be instant (triggers when the button is clicked),

or continuous (triggers if the button is held). Soft trigger buttons appear as a circular overlay in the lower-right region of an item and will display the contents of the **Name** field when the mouse cursor hovers over it.




For example, a soft trigger button to start and stop a bookmark recording when an operator sees suspicious activity, or a panic button that starts a siren when an emergency is detected.

In addition to making it possible for a user to initiate an action from a layout, a soft trigger that has a "[Perform HTTP Request](#)" action makes it possible to integrate third-party Sites and devices, and bundle multiple actions within an event, such as a soft trigger with an HTTP request to a 3rd party device that initiates one or more of the actions the device is capable of, such as "if temperature exceeds 110°F, close door."

Basic Parameters

- *At* – Select the device(s) that will show the soft trigger button. If *<Any Device>* is selected, then the button will be placed on offline devices as well.
- *Available to* – Select the users or user groups that are allowed to use the trigger.

IMPORTANT: To be able to trigger an event on a device, the user or user role must have input permission on the device. If they do not, the following warning appears:

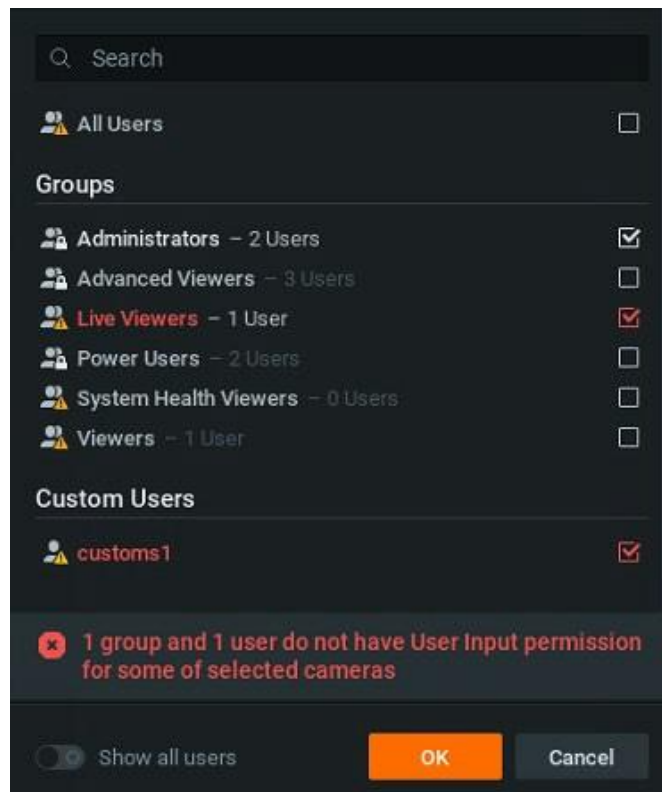

- *Name* – Enter a brief description of the event that will be triggered. Contents of this field are displayed when the mouse cursor hovers over the button.
- *Icon* – Select from the menu of available icons.

Advanced Parameters

- [Event Scheduling](#)

Why Event may work incorrectly

- Action is not configured properly.
- [Global notification](#) for this event is disabled.

Section 21.25 – Storage Issue (default)

A *Storage Issue* event occurs if the server is unable to write data onto one or more storage devices. This is a default event.

Storage issue may be caused by any of the following:

- *Hard disk malfunction.*

- *Insufficient rights* – The permission to write on disk or recorded folder may be restricted by the computer administrator.
- *Hard disk is too slow* – Too many cameras are attempting to record simultaneously, and the hard disk cannot respond quickly enough. It may be useful to add another hard disk drive.
- *Disk is full* – When available disk space reaches the threshold of reserved space – 10-30 GB for local storage, or 50-100 GB for NAS devices – the oldest data will be overwritten by new data. If available storage drops below this threshold, the server will write data to the disk but instantly erase it.
- *Site Drive is Full* – The partition on which the operating Site is installed has less than the required amount of free space (5GB for PCs or 1GB for ARM devices). It is highly recommended that space be made available as soon as possible to avoid loss of data and Site instability.

Advanced Parameters

- [Event Scheduling](#)

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.26 – Storage Not Configured (Site)

A *Storage Not Configured* event occurs when storage is not configured, or no storage device is selected (the recording flag may have been removed accidentally), making recording impossible. This is a Site-generated event.

This event triggers a "Storage is not configured" notification. Clicking the notification will open the storage configuration dialog. See "[Configuring Server and NAS Storage](#)" for details.

Advanced Parameters

- [Event Scheduling](#)

Why Event may not work correctly

- [Global notification](#) for this event is disabled.

Section 21.27 – Site in Safe Mode (Site)

A *Site in Safe Mode* event occurs when a Site is in safe mode, preventing changes from being saved. The only available option is to activate a license. This is a Site-generated event.

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Section 21.28 – Time Synchronization Issue (Site)

A *Time Synchronization Issue* event occurs when the server loses Internet access. A notification with the message "No server has Internet access for time synchronization." is displayed. This is a Site-generated event.

Clicking the notification will open the time synchronization tab in the Site administration dialog (see [Time Synchronization in a Multi-Server Environment](#)). This notification will close automatically once Internet access has been restored.

Why Event may work incorrectly

- [Global notification](#) for this event is disabled.

Part 22: Available Actions

The reaction to an event is an *Action*. Each action has its own parameters.

The common parameters *interval of action/instant* and *fixed duration* are described in "[Interval of Action](#)".

Refer to the specific action description for more information:

- [Bookmark](#)
- [Device Output](#)
- [Device Recording](#)
- [Do HTTP\(s\) Request](#)
- [Execute PTZ Preset](#)
- [Exit Full screen](#)
- [Open Layout](#)
- [Panic Recording](#)
- [Play Sound](#)
- [Repeat Sound](#)
- [Send Email](#)
- [Send Mobile Notification](#)
- [Set to Full screen](#)
- [Show Desktop Notification](#)
- [Show on Alarm Layout](#)
- [Show Text Overlay](#)
- [Speak](#)
- [Write to Log](#)

Section 22.1 – Bookmark

Creates a bookmark in the Archive of one or more cameras when an event occurs. See [Using Bookmarks](#) for details about bookmarks.



NOTE: Recording must be enabled on the selected cameras for bookmarks to be saved.

A bookmark is automatically named with the syntax *<Event> on <Device>*.

Basic Parameters

- *At* – Camera(s) for which bookmarks will be recorded. To specify cameras, see "[Selection Lists in Event Rules](#)". At least one device must be selected.
- *Also set on source camera* – Check to set the bookmark on the camera selected in the event.

Advanced Parameters

- *Fixed Duration* – The duration of the bookmark, applying to continuous events only, such as those with the

Starts or Stops attribute set (e.g., motion on camera, input signal on device, etc.). If unchecked, the bookmark will continue until the event ends.

- *Pre-Recording* – Specify an amount of time to include in the bookmark before the event occurs.
- *Post-Recording* – Specify an amount of time to include in the bookmark after the event occurs.
- *Tags* – Optional descriptors that can be added to help identify and search for bookmarks.

May be caused by

- All events
- [Notifications](#) with *Force Acknowledgment* enabled will create the bookmark once acknowledgment is complete.

Why Action may work incorrectly

- Recording is not enabled on a selected camera (see "[Setting a Recording Schedule](#)").
- Event is not configured properly.

Section 22.2 – Device Output

Generates output on a device when an event occurs, starts, or stops.

 **IMPORTANT:** Output must be supported on the selected devices.

Basic Parameters

- *At* – Device(s) on which output will be triggered. To specify devices, see [Selection Lists in Event Rules](#). At least one device must be selected.
- *Also trigger on source camera* – Check to send the output signal to the camera selected in the event.

 **NOTE:** A warning notification will open if one or more of the selected devices does not have an output relay.

These devices will be highlighted in red.

Advanced Parameters

- *Output ID* – The I/O module port ID to route signal to (see "[Setting Up I/O Modules](#)").

May be caused by

- Any event
- [Motion on Camera](#), [Generic Event](#), [Analytics Event](#), [Soft Trigger](#), and [Input Signal on Device](#) – synchronous output. Output stops when motion or input stops.

Why Action may work incorrectly

- Output is not supported on some devices.
- Event is not configured properly.

Section 22.3 – Device Recording

Starts recording on selected cameras when an event occurs.

The screenshot shows a configuration window titled 'Action'. It has a 'Do' dropdown menu set to 'Camera recording'. Below it is an 'at' field with a camera icon and the text '10 Cameras'. There is an unchecked checkbox labeled 'Also record source camera'. Below that is a checked checkbox labeled 'Interval of action : No more than once per' followed by a numeric input '1' and a 'Min' dropdown. Then there is a 'Quality:' dropdown set to 'Best' and a '30' FPS dropdown. Below these are 'Pre-Recording:' with a '1s' dropdown and 'Post-Recording:' with a '0s' dropdown. At the bottom is a checked checkbox labeled 'Fixed duration:' followed by a '5' dropdown and a 'Sec' dropdown.

Basic Parameters

- **At** – Devices to record. At least one device must be selected. To specify cameras, see [Selection Lists in Event Rules](#).
 1. Click on the **At** field to open the *Select Devices* dialog.
 2. Optionally, use the filter field to locate cameras (see "[Searching and Filtering in DW Spectrum](#)".)
 3. Check specific cameras to record or select all cameras on a server by checking the corresponding box. Cameras can be dragged and dropped from the resource panel into this field.
 4. Click *OK* to accept or *Cancel* to discard changes.
- **Also record source camera** – Check to record the camera selected in the event.
! IMPORTANT: At least one camera must be selected, and recording must be enabled on the selected cameras for this rule to be functional (see "[Setting a Recording Schedule](#)").
- **Interval of action** – Check to repeat no more than once per a given amount of time (to reduce the number of events), or uncheck for the action to be instant.

Advanced Parameters

- **Quality** – Select the desired recording parameter for these options: *Lowest, Low, Medium, High, Best*.
- **FPS** – Enter a frames per second value up to 30. The camera's maximum FPS will be used if the FPS value entered exceeds the camera's capability.
- Select one of the following:
 - **Pre-Recording** – For continuous events (those with *Starts* and *Stops* attributes), enter the number of seconds (up to 600) that Archive will begin prior to the triggering event. The higher the pre-recording time, the higher the server's RAM utilization will be.
 - **Post-Recording** – For continuous events (those with *Starts* and *Stops* attributes), enter the number of seconds (up to 600) that recording will continue after the triggering event.

OR

- **Fixed duration** – Records for a specified amount of time in seconds when the event occurs.

 **NOTE:** Fixed duration must be unchecked to use pre-recording and post-recording. They will only work when used with a generic event and an HTTP-request with the appropriate parameters enabled. Please visit our support portal to learn more about recording using DW Spectrum generic events.

May be caused by

- [Analytics Event](#)
- [Generic Event](#)
- [Input Signal on Device](#)
- [Motion on Camera](#)
- [Soft Trigger](#)

Why Action may work incorrectly

- Recording is not enabled on camera.
- Event is not configured properly.

Section 22.4 – Do HTTP(s) Request

Sends an HTTP/HTTPS request to a targeted external device or Site (floodlight switch, access control trigger, alarm Site, etc.) which can then be used in those devices or Sites to trigger additional actions. The request must follow the proper format to be read by the receiving device. HTTPS URLs are supported.

This action generates an HTTP GET, POST, PUT, or DELETE request in response to any event triggered in DW Spectrum. Together with the "[Generic Event](#)", which can receive an HTTP request as an event, bidirectional API communication can be created between DW Spectrum and other software Sites.

For example, a manufacturer has a restricted area with an ACS card reader at the entry point and cameras that monitor the area surrounding the entry point. DW Spectrum has a standard rule to send a notification when abnormal duration motion is detected in the entry area. If someone tampers with the card reader in an unauthorized attempt to enter the restricted area, DW Spectrum triggers one action to notify the surveillance center that motion is detected in the area, and a second HTTP request action to the manufacturer's call center server, which in turn runs a security procedure to activate an alarm and generate a phone call to factory floor security personnel.

Basic Parameters

- *Interval of action* – Check this box to limit the number of times the action will be triggered in a set number of **seconds, minutes, hours, or days**. Uncheck to trigger the action every time the event occurs.
- *HTTP URL* – The HTTP link to the external Site that will receive the request. Can also contain the request itself.
- *HTTP Content* – The body of the HTTP request, if needed. See "[Event Field Placeholders](#)" for details about the parameters that the appropriate event data can automatically replace.
- *Login and Password* – If required by the external Site, enter credentials for authentication.
- *Content type* – Enter the body type of the request. Select one of the following content format types according to the requirements of the receiving Site:
 - *Auto*
 - *text/plain*
 - *text/html*
 - *application/html*
 - *application/json*
 - *application/xml*

 **NOTE:** Auto selects the best format based on what is entered.

- *Authentication type* – Level of authentication required (*Auto* or *Basic*).
- *Request type* – Type of request. Select one of the following request types:
 - *Auto*
 - *GET*
 - *POST*
 - *PUT*
 - *PATCH*
 - *DELETE*

Why Action may work incorrectly

- Event is not configured properly.
- HTTP request syntax is incorrect or does not meet receiver requirements.
- External Site requires authorization and no or incorrect credentials were specified.

Section 22.5 – Execute PTZ Preset

Activates a *PTZ Preset* on a specific camera (see "[Saving and Restoring PTZ Positions](#)"). PTZ tours cannot be activated by an event.



IMPORTANT: At least one PTZ position must be defined on the selected camera for this action to be valid.

Basic Parameters

- *At* – Select one camera on which to activate preset.

Advanced Parameters

- *Interval of action* – Limit the number of occurrences in a set amount of time, or uncheck for a single, instant action.
- *PTZ Preset* – Choose from the PTZ presets defined for the selected camera. If no presets are configured, the menu will be empty.

May be caused by

- All events

Why Action may work incorrectly

- Event is not configured properly.
- Interval of action is too long, try "instant".

Section 22.6 – Exit Fullscreen

Exits full screen mode when an event occurs.

Basic Parameters

- *On Layout* – Select the layout(s) in which the full screen mode will exit.

May be caused by

- All events

Why Action may work incorrectly

- Event is not configured properly.

Section 22.7 – Open Layout

Opens a specific layout when an event occurs. For example, a shared layout can open for a single user, or a group, or a local layout can be opened for the user who owns it.

Basic Parameters

- Interval of action – Check to repeat no more than once per a set amount of time (to reduce the number of events), or uncheck for the action to be triggered instantly each time it occurs.

Advanced Parameters

- *Layout* – Select the layout that will open when the action is triggered. Only one layout can be selected. A local layout can only be shown to the user who owns it.

[Cross-Site Layouts](#) cannot be used

- If no user is selected, only shared layouts will be displayed in the *Select Layout* dialog
 - If exactly one user is selected, their local and all shared layouts will be displayed in the *Select Layout* dialog
 - If a local layout is selected that doesn't belong to the selected user(s), a message will indicate that
 - If a local layout is selected when more than one user is selected, a message will indicate that
- *Show To* – Select at least one user or user role for whom the layout will open (see "[Select Users dialog](#)")
 - If some selected users don't have access to the selected layout, a message will indicate that
 - If no selected users have access to the selected layout, a message will indicate that

May be caused by

- All events

Why Action may work incorrectly

- Event is not configured properly.

Section 22.8 – Panic Recording

Triggers *Panic Recording mode* when an event occurs. Panic recording switches recording settings for all cameras to maximum FPS and highest possible quality.

 **NOTE:** If recording is not enabled for a camera, panic recording cannot be activated. See "[Setting a Recording Schedule](#)" for instructions on enabling and configuring recording.

Basic Parameters

- *Interval of action* – Check to repeat no more than once per a given amount of time (to reduce the number of events) or uncheck for the action to be instant.

Advanced Parameters

- None

Why Action may work incorrectly

- Event is not configured properly. See event description for details.

Section 22.9 – Play Sound

Plays a sound when an event occurs.


Basic Parameters

- *At* – Device to play the sound on. (The device should support 2-way audio, see "[Using 2-Way Audio](#)".)
- *Also play on source camera* – Check to play sound on the camera selected in the event.
- *Interval of action* – Check to repeat no more than once per a given amount of time (to reduce the number of events), or uncheck for the action to be instant.
- *Play to users* – If checked, the sound will be played in the client application of the selected users.



IMPORTANT: Either *Play to User* or a camera for 2-way audio ("*at*") must be enabled for this rule to be valid.

- Select a sound from the dropdown menu:

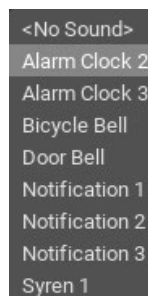

Advanced Parameters

- *Volume* – Drag the slider to increase or decrease volume of selected sound.
- *Test* – Preview the selected sound and volume level.
- *Manage* – Click to open the *Notification Sounds* dialog where the library of available sounds can be customized by adding, renaming or deleting sounds.
 1. Click **Add** to add a sound:
 2. Select the desired audio file. WAV, MP3, OGG, and WMA formats are supported. The maximum duration allowed is **30 seconds**.
 3. Set the duration in seconds the audio file will be played by changing the value in the *Clip sound up to* field.
 4. Choose *Custom Title* to name the selected sound. If not specified, the file name will be used by default.
 5. Apply changes.
 6. Click **Rename** and enter a new title to rename the selected sound.

7. Click **Play** to test the chosen sample.
8. Click **Delete** to delete the selected sample.

May be caused by

- All events

Why Action may work incorrectly


- Event is not configured properly.
- Sound is muted. Open any item in layout and check if the sound is muted. Volume settings are applied globally. See "[Adjusting Volume](#)".
- Too long an interval of action is set. Try "instant".
- Neither *Play to User* nor camera for 2-way audio is checked.

Section 22.10 – Repeat Sound

Plays a sound repeatedly when an event occurs.

Basic Parameters

- *At* – Device to play the sound on. The device should support 2-way audio, see "[Using 2-Way Audio](#)".
- *Also play on source camera* – Check to play sound on the camera selected in the event.
- *Interval of action* – Check to repeat no more than once in a set amount of time (to reduce the number of events), or uncheck for the action to be instant.
- *Play to users* – If checked, the sound will be played in the client application of the selected users. Those users are sent a special notification in the notification panel. If the user closes the notification, the sound will stop playing even if the event continues.
- *Drop down menu* – select a sound from the available options:

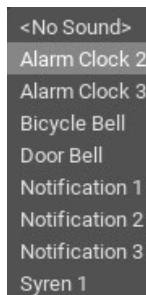

 **IMPORTANT:** Either *Play to User* or a camera for 2-way audio ("*at*") must be enabled for this rule to be valid.

Advanced Parameters

- *Volume* – Drag the slider to increase or decrease volume of selected sound.
- *Test* – Preview the selected sound and volume level.
- *Manage* – Click to open the *Notification Sounds* dialog where the library of available sounds can be customized by adding, renaming or deleting sounds.
 1. Click **Add** to add a sound:
 2. Select the desired audio file. WAV, MP3, OGG, and WMA formats are supported. The maximum duration allowed is **30 seconds**.
 3. Set the duration in seconds the audio file will be played by changing the value in the *Clip sound up to* field.

4. Choose *Custom Title* to name the selected sound. If not specified, the file name will be used by default.
5. Apply changes.
6. Click **Rename** and enter a new title to rename the selected sound.
7. Click **Play** to test the chosen sample.
8. Click **Delete** to delete the selected sample.

May be caused by

- [Analytics Event](#)
- [Generic Event](#)
- [Input Signal on Device](#)
- [Motion on Camera](#)
- [Soft Trigger](#)

Why Action may work incorrectly


- Event is not configured properly.
- Sound is muted. Open any item in a layout and check if the sound is muted. Volume settings are applied globally. See "[Adjusting Volume](#)"
- Too long an interval of action is set. Try "instant".
- Neither *Play to User* or camera for 2-way audio is checked.
-

Section 22.11 – Send Email

Sends an email to one or more users, or to additional addresses, when an event occurs. An *Email server* must be configured for DW Spectrum to send emails (see "[Configuring the Email Server](#)") and the users must have a valid email address in the DW Spectrum Site (see "[Changing User Settings](#)").


Basic Parameters

- Users the email should be sent to. Use the [Search](#) field to filter names.

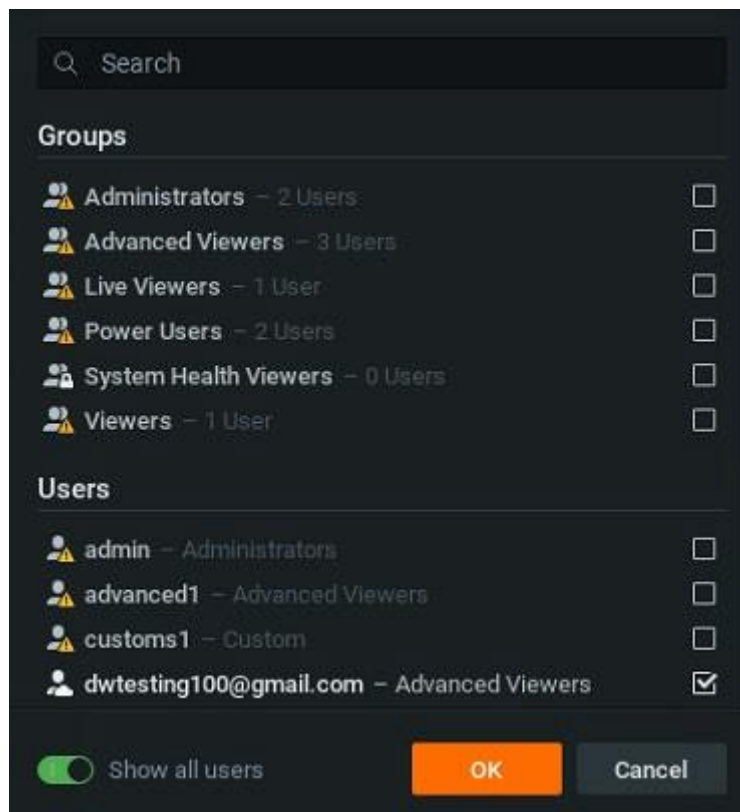

Advanced Parameters

- *Additional Recipients* – Additional email addresses to send notifications to. Separate multiple addresses with a semicolon (;) no spaces.

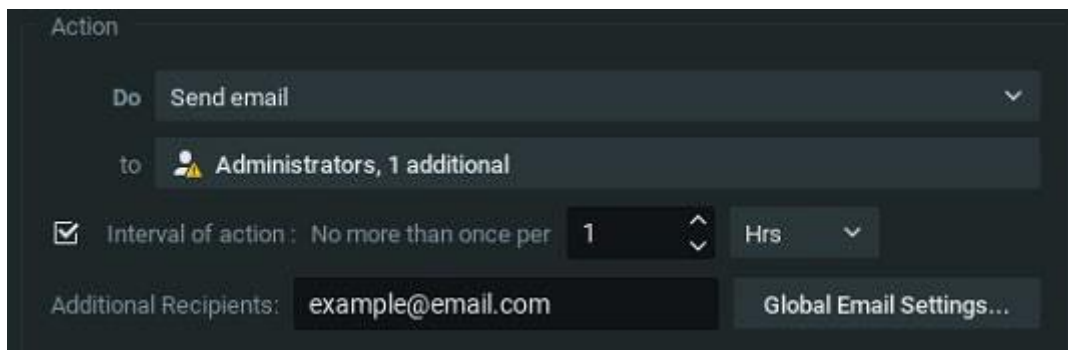

- *Interval of action* – No more than once per a given amount of time, or instant.
- *Global Email Settings* – Click to configure email server parameters.

May be caused by

- All events

Why Action may work incorrectly

- [Email Server is not Configured](#) – A notification will be generated (see "[Configuring the Email Server](#)").
- [Email is not Set for Users](#) – A notification will be generated.
- Event is not configured properly.
- Too long an interval of action is set.

Section 22.12 – Send Mobile Notification

Sends a push notification to a mobile device.

To receive push notifications, users must be logged in to the Cloud through the DW Spectrum mobile application (requires mobile client v20.1 or later). Users can receive push notifications from multiple Sites and turn on/off notifications for specific Sites.

Basic Parameters

- Users the push notification should be sent to. Use the [Search](#) field to filter names.

Advanced Parameters

- *Interval of action* – No more than once per a set amount of time, or instant.
- *Custom notification content* – Enter personalized notification **Header** and **Body** text to replace the default generated by the push notification.
 - *Add source device name in body* – Checked by default. Uncheck to prevent the source device name from being put in the notification body.

May be caused by

- All events

Why Action may work incorrectly

- Event is not configured properly.
- Interval of action is too long, try "instant" instead.

Section 22.13 – Set to Fullscreen

Opens the selected camera to full screen mode in the selected layout when an event occurs.

- ❗ **IMPORTANT:** This action works only if the layout selected in the rule is already open when the event occurs, and when the selected camera is on the selected layout.



Basic Parameters

- *Source camera* – Check to choose the camera selected in the event to open to full screen mode.
- *Camera* – Select the camera that will open to full screen mode.
- *On Layout* – Click to select the layout in which the full screen mode will launch.

May be caused by

- All events

Why Action may work incorrectly

- Event is not configured properly.

Section 22.14 – Show Desktop Notification

Sends a notification to the selected user(s). See "[Notification Panel](#)".

Basic Parameters

To – Select users who will see the notification

Advanced Parameters

- *Interval of action* – Limit notifications to a certain amount of time, to reduce the number of events. Uncheck so the action is instant and will occur whenever the event is triggered.
- *Force Acknowledgment* – The notification will remain in the notification panel until the recipient responds by clicking the **Acknowledge** button. Hovering over the acknowledge button opens a thumbnail that shows the device name and timestamp of the event. Clicking the acknowledge button opens a bookmark form.
 - The **Name** field is pre-populated with an event description but may be edited. A **Description** is required, **Tags** are optional.
 - Click **OK** to close the notification and create the bookmark.

May be caused by

- All events

Why Action may work incorrectly

- Some notifications are disabled.
- Event is not configured properly.
- Interval of action is too long. Reduce length or try instant.
- [Global notification](#) for this event is disabled.

 **NOTE:** *Show Desktop Notification* must be selected for any notifications intended to work with the [Cross Site Notification](#) feature.

Section 22.15 – Show on Alarm Layout

Launches the specified cameras in a special **Alarm Layout** tab with an "Alarm" title and icon. For example, a rule can be configured so that if motion occurs on camera 1, cameras 1, 2 and 3 will launch in an alarm layout. If several events are configured to show different cameras on an alarm layout for the same user, the corresponding cameras will be added with each event. If several events are configured to show different cameras on the alarm layout for different users, each user will see a separate alarm layout.



Basic Parameters

- Cameras to show an alarm layout.
 1. Right-click on the camera (in the resource panel or viewing grid) and select *Camera Rules* to open the *Event Rules Dialog*.
 2. Under the *Event* section (on the left side of the rule dialog) next to **When**, choose the target Site event (e.g. motion, soft trigger, etc.).

3. Next to **At** is the *Cameras* field, select at least one camera, then click *OK* (or *Cancel* to discard changes).
 4. In the *Action* section of the rule (on the right side of the rule dialog) in the *Do* field select *Show on Alarm Layout*.
- To select all cameras on a specific server, check the box corresponding to the server in the cameras field dialog. If desired, use the *Filter* box as described in "[Searching and Filtering in DW Spectrum](#)". Cameras can be dragged and dropped from the resource panel into *Cameras* field of this action.

Advanced Parameters

- *Interval of action* – Check to trigger the action no more than once in a set amount of time.
- *For* – Click to show the alarm layout to only certain users or user groups.
- *Force Alarm Layout opening* – Check this box to open the alarm layout as the active layout tab, regardless of what the users are currently viewing. If unchecked, the alarm layout will open as a new tab with the alarm title and icon, but it will not be the active tab.
- *Also show source camera* – If the event is triggered by a camera, check this option to always include that camera in the alarm layout.

May be caused by

- All events

Why Action may work incorrectly

- Alarm layout is not available to certain users or user groups.

Section 22.16 – Show Text Overlay

Displays text overlay on specific cameras when an event occurs, as shown below:



Basic Parameters

- *at* – Camera(s) to display text overlay on. To specify:

1. Click on *Select at least one camera* in the desired row on the *Alarm/Event Rules* form (see "[Event Rules](#)").
2. Check the cameras to display, then click *OK* (*Cancel* will discard changes).
 - *Use Source camera* – Check to show text overlay on the camera selected in the event.
3. To select all cameras on a specific server, check the corresponding box. To filter search, use the *Filter* box. Filter criteria is the same as [search](#) criteria. Cameras can be dragged and dropped from the resource panel onto the action's advanced settings form.

Advanced Parameters

- *Also show on source camera* – available only if the event is bound to cameras. If checked, when an event occurs text will be displayed on the source camera too. For instance, if the rule is set to show cameras 2 and 3 and an event occurs on camera 1, text will display on all 3 cameras. If unchecked, it will display only on cameras 2 and 3.
- *Display text for... Seconds* – If checked, the text will be visible for the specified amount of time. Can be unchecked for the following continuous events: [Motion on Camera](#), [Input Signal on Device](#), [Generic Event](#), [Analytics Event](#), [Soft Trigger](#). If unchecked, text will be displayed until the event stops.
- *Use custom text* – If not specified, the event description will be used as a text.

May be caused by

- All Events

Why Action may work incorrectly

- Event is not configured properly. See the event description for details.

Section 22.17 – Speak

Pronounces set text when an event occurs.

Basic Parameters

- *Speak the following* – Text to pronounce.
- *at* – Camera to pronounce the text on. Camera should support [2-Way Audio](#).
- *Also play on source camera* – Check to play sound on the camera selected in the event.
- *Speak to users* – If checked, the text will be pronounced to the selected users in the client application.

! IMPORTANT: Either *Speak to users* should be checked or at least one camera should be selected for 2-way audio, otherwise the rule will be invalid.

Advanced Parameters

- *Interval of action*: no more than once per certain amount of time (to reduce the number of events), or instant.
-

May be caused by

- All events

Why Action may work incorrectly

- Event is not configured properly. See event description for details.
- Sound is muted. Open any item in a layout and check if the sound is muted. Volume settings are applied globally. See "[Adjusting Volume](#)"
- Too long an interval of action is set. Try "instant".
- Either *Play to User* should be checked or a camera for 2-way audio should be selected.

Section 22.18 – Write to Log

Writes a record to the event log when an event occurs.

By default, all events mentioned in rules are written to the log.

Basic Parameters

- None

Advanced Parameters

- *Interval of action* – no more than once per certain amount of time (to reduce the number of events), or instant.

May be caused by

- All events

Why Action may work incorrectly

- Event is not configured properly.
- Interval of action is too long, try "instant" instead.

Part 23: Users and Groups

Users connect to Sites to view cameras, search Archives, interact with devices, and perform administrative tasks on a Site. Users are created with a user type that defines how they can interface with a Site.

Permissions granted either directly, or through group membership, define the actions a user can perform.

Groups provide bulk management of user permissions. There are two types of groups: built-in groups and custom groups. Built-in groups have preset permissions and attributes that cannot be changed,

while custom groups can be created and configured by administrators and power users. Changes made to a group will be applied to all users in the group, and all members of a group inherit permissions from every group of which their group is a member.

Users imported from a Lightweight Directory Access Protocol (LDAP) server will use their existing credentials to connect to a DW Spectrum Site. LDAP users can be configured as individual users with group memberships or LDAP groups can be imported and managed as a custom group (see "[LDAP Users and Groups](#)").


The list of users and groups can be accessed from the **Main Menu > User Management** dialog which has the following tabs:

- *Users* – see "[Managing Users](#)"
- *Groups* – see "[Managing Groups](#)"
- *LDAP* – allows to configure the integration with an LDAP server (see "[LDAP Users and Groups](#)").

 **NOTE:** The dialog to configure user and group permissions is the same (see "[Permissions Management](#)").

Section 23.1 – Managing Users

The following types of users are identified in lists with specific icons; grayed out icons are disabled users.

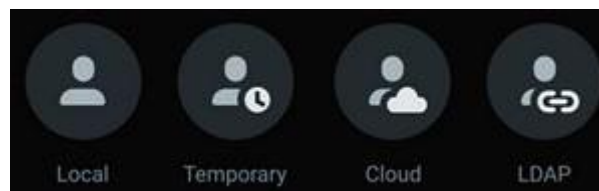

- *Local Users*
 - Reside in the Site where they were added.
 - Connect to the local Site using the *Desktop Client* or *Web Admin* interface.
 - Cannot use the *Cloud Portal* to access a local Site or a Cloud connected Site.
- [Temporary Users](#)
 - Local Users with limited permissions, a preset expiration date, and an optional session length limit.
 - Cannot be a member of any group with power user permissions.
 - Can use the *Desktop Client* and *Web Admin* to connect to a Site.
 - Cannot connect through the *Cloud Portal*.
 - Receive a URL to connect to a specific Site; no password is required, and the link can be used by anyone.
- *Cloud Users*
 - Reside in the Cloud and can exist without having access to a Site.
 - Use the desktop client, Web Admin, and Cloud portal to access Cloud connected Sites.
 - Can only access Sites that are connected to the Cloud.
- *Organization Users*
 - Managed at the organization level by the organization administrator.
 - Can be granted access to all Sites within the organization, or only a subset of Sites in the organization.
 - Displayed in user management dialogs – but their attributes cannot be changed.
 - Cannot be a member of any [Custom Permissions Groups](#).
- [LDAP Users](#)
 - Retain their username, password, and LDAP group memberships when imported into DW Spectrum.
 - Connect to Sites using their imported credentials and the desktop client or Web Admin.
 - Cannot log into a Site when the LDAP server fails to respond.
 - Can be directly granted permissions to resources and added to both built-in and custom groups to inherit permissions.

- Cannot be permanently deleted from DW Spectrum – they will be re-imported during each LDAP sync until removed from the LDAP server.
- Can be permanently disabled to maintain user related entries on the [Audit Trail of User Actions](#) (see "[Enabling and Disabling Users](#)").
- Will be disabled in the Site when a LDAP username is the same as an existing Site username. Existing Site users have conflict priority to prevent login issues.

See [LDAP Users and Groups](#) for configuration settings, warning banners, and related details.

Section 23.2 – Configuring Users

The primary method to access the user management controls is by opening the **Main Menu > User Management** dialog and switching to the **Users** tab.

There are also many user management controls that can also be accessed from screens displaying related user and group information.

Restrictions:

- Only administrators and power users can manage users.
- Power users cannot create or modify other power users (see "[Built-In Groups and Permissions](#)" and "[Managing Groups](#)").

There are different elements of user management:

- **Attributes** – Login, Name, Email, Status ([Enabled or Disabled](#)).
- **Permissions** – control access to Site settings and resources (cameras, devices, bookmarks, layouts, and Archives).

The following topics are structured around how to perform common user management tasks:

- [Adding Users](#)
- [Configuring Users](#)
- [Managing Temporary User Access](#)
- [Disabling and Enabling Users](#)
- [Deleting Users](#)

 **IMPORTANT:** Users can inherit permissions from groups and layouts and have special permissions on top of that. Always confirm user permissions are set as intended.

Section 23.3 – Adding Users

User type cannot be changed once set. A user must be deleted and added again to change user type.

- Only administrators and power users can add users.
- Regular users and temporary users can be added using the desktop client only.
- Cloud Users can be added using the Web Admin, Cloud portal or desktop client.
- User permissions can be assigned using the desktop client only.
- Permission groups can be assigned using the desktop client, Web Admin, and Cloud portal.

 **IMPORTANT:** Users will be added to a Site without access to Site resources if they are not a member of a permission group, or assigned permissions using the desktop client (see "[Configure Users](#)").

Adding a User using the Desktop Client

1. Open the *Add User* dialog by opening **Main Menu > Add > User**.
2. Set the user as either enabled or disabled (see "[Enabling and Disabling Users](#)").

3. Choose the [User Type](#).
 - *Cloud*: Enter the email address of the user to add. Cloud Users cannot be temporary users.
 - *Local*: Enter the following information.
 - Login
 - Full Name
 - Email address
 - Access type – Select **Regular** or **Temporary**
 - Set time limitations when adding temporary users (see "[Managing Temporary User Access](#)").
 - Provide and confirm a password when adding regular users.
4. Optional – Select the [Permission Groups](#) the added user will be a member of.
5. Click the **Add User** button to complete the process. Authentication may be required.

 **NOTE:** Copy and provide the temporary link to the intended user.

Adding a User using the [Web Admin](#) / [Cloud Portal](#)

1. Select **Settings** in the header menu.
2. Expand **Users** in the left panel navigation.
3. Click the **Add User** button.
4. Enter the email address of the user to add.
5. Optional – Select the [Permission Groups](#) the added user will be a member of.
6. Click **Add User** to complete the process. Authentication may be required.

 **NOTE:** Established Cloud Users will see the Site on their welcome screen and new Cloud Users will receive further instructions by email.

Section 23.4 – Configuring Users

Configuring users includes updating identity information, settings user permissions, and toggling the user status between [Enabled and Disabled](#). The user type of any user cannot be changed.

- Power users cannot configure administrators or other power users.
- The desktop client must be used to change temporary users and user permissions unless stated otherwise below:
 - All clients can modify the groups where the user is a member – not all users can be members of every group.
 - All users can be enabled, disabled, deleted (Local User) or removed (Cloud User) in the Web Admin and Cloud portal.
- LDAP Users:
 - Retain their username, password, and LDAP group memberships when imported into DW Spectrum.
 - Use their domain credentials to connect to a Site – these can only be changed on the LDAP server.
 - Can be added to built-in and custom groups to inherit [Resource Permissions](#) – LDAP groups memberships must be changed on the LDAP server.
 - Cannot be permanently deleted from DW Spectrum – they will be re-imported during each LDAP sync until removed from the LDAP server.
 - Can be permanently disabled to maintain user related entries on the [Audit Trail of User Actions](#) (see "[Enabling and Disabling Users](#)").

 **IMPORTANT:** LDAP users are still imported when there is already the same username in the Site – this may create access issues for all users sharing this username.

- Organization Users:
 - Can only be managed and changed by organization administrators using Cloud portal interface.
 - Are shown in the desktop client, Web Admin, and Cloud portal as locked users belonging to a [Built-In Permission Group](#).
 - Cannot be members of [Custom Permission Groups](#) created in the desktop client.

Configure a User in the Desktop Client

1. Open the *User Management* dialog by opening the **Main Menu > User Management** dialog and switching to the **Users** tab.
 - Optionally, refine the list of users by using the search box, filters, and column sorting options.
2. Click on a **User** to open the configuration dialog.
 - User configuration changes are limited to [Enabling and Disabling Users](#) when multiple users are selected.
3. Make changes in the *User Settings* tabs as outlined below.
 - The *General* tab configures user identity attributes (name, email) of non-LDAP Users.
 - The *Groups* tab selects which groups the user is a member of – cannot change LDAP group memberships.
 - The *Resources* tab is used to view and [Manage Permissions](#).
 - The *Global Resources* tab defines:
 - If the user is permitted to [view the Event Log](#).
 - If the user is permitted to generate [Events](#).
4. Click **Apply** to save edits and keep the dialog open, or **OK** to apply changes and close the dialog. Authentication may be required.

Modify a User using the [Web Admin / Cloud Portal](#)

1. Select **Settings** in the page header menu.
2. Expand the list of **Users** in the left panel.
3. Click on a user to open the configuration dialog.
 - Regular users can be enabled, disabled, or deleted – group memberships, name, password, and email can be updated.
 - Cloud Users can be enabled, disabled, removed from the Site, or have their group memberships changed.
 - Temporary users can be enabled, disabled, or deleted.
 - LDAP users can be enabled, disabled, and have their non-LDAP group memberships changed.
4. Configure available user attributes and click **Save**. Authentication may be required.

Section 23.5 – Managing Temporary User Access

Temporary users receive a unique URL link that provides access to a Site through either the desktop client or the Web Admin. The temporary user URL does not require a password and can be used by anyone (see [“Connecting as a Temporary User”](#)).

- Only administrators and power users can create or modify temporary users.
- Temporary users must be configured with a future expiration date.
- Temporary users can be added and configured through the desktop client only (except status).
- Temporary users can be members of any groups that do not include administrator or power user permissions.
- The [Audit Trail of User Actions](#) captures the activity of temporary users.

- Temporary users can be enabled, disabled, or deleted in the desktop client, Web Admin, and Cloud portal.
 - Disabling a temporary user disables the temporary link, but does not change the configuration of the temporary user.

Generating a Temporary Link

 **IMPORTANT:** Generating a link for a temporary user with an existing link will invalidate the existing link and close any open sessions.

1. Open the *User Management* dialog by selecting **Main Menu > User Management** dialog and switching to the **Users** tab.
 - Optionally refine the list of users by using the search box, filters, and column sorting options.
2. Open the user by doing one of the following.
 - Click on the username in the list.
 - Click the checkbox for the user and click the **Edit** icon.
 - Selecting multiple users will limit the edit dialog to batch [Enabling and Disabling of Users](#).
3. Click the **New Link...** button to open the *New Link* configuration dialog.
4. Select the date the link is *Valid Until*. Server date is used for this required value.
5. Check the *Revoke access after login* box to define an expiration timer that will start when the link is used (optional).
 - If *Revoke access after login* is selected, then a value between 1 and 999, in minutes, hours, or days must be provided.
6. Click the **Create** button. Authentication may be required.
7. Copy the link and provide it to the intended user (see "[Connecting as a Temporary User](#)").

Terminating a Temporary User Link

 **IMPORTANT:** This will quickly log the temporary user out of an active session.

1. Open the *User Management* dialog by selecting **Main Menu > User Management** dialog and switching to the **Users** tab.
 - Optionally refine the list of users by using the search box, filters, and column sorting options.
2. Open the user to modify by doing one the following.
 - Click on the username in the list.
 - Click the checkbox for the user and click the **Edit** icon.
 - Selecting multiple users will limit the edit dialog to batch [Enabling and Disabling of Users](#).
3. Click the **Terminate** button to disconnect the user and terminate the previously provided link.
4. Confirm and authenticate if prompted.

Section 23.6 – Enabling and Disabling Users


Enabled users can access the Site according to their permissions while a disabled user is prevented from accessing the Site by any method. Unlike [Deleting a User](#), disabling a user preserves existing user information in the Database and the user can again be enabled with previous permissions and settings unchanged.

- Administrators and power users can enable or disable users in the desktop client, Web Admin, and Cloud portal.
- Power users cannot enable or disable administrators or other power users.
- The [Audit Trail of User Actions](#) retains all entries for disabled users.
- Disabled users will be disconnected from the Site and email notifications will stop.

- Layouts created or shared by disabled users will remain available to other users.

Enabling and Disabling Users in the Desktop Client

1. Open the *User Management* dialog by selecting **Main Menu > User Management** dialog and switching to the **Users** tab.
 - Optionally refine the list of users by using the search box, filters, and column sorting options.
2. To disable or enable a single user:
 - Click on the username in the list, or select a single checkbox and click **Edit** to open *User Properties*.
 - Change the toggle to enabled(green) or disabled (gray).
3. To enable or disable multiple users at once:
 - Select the checkbox next to each user to enable or disable.
 - Click the edit button to open the multiple user enable or disable dialog.
 - Choose if all selected users are to be enabled or disabled.

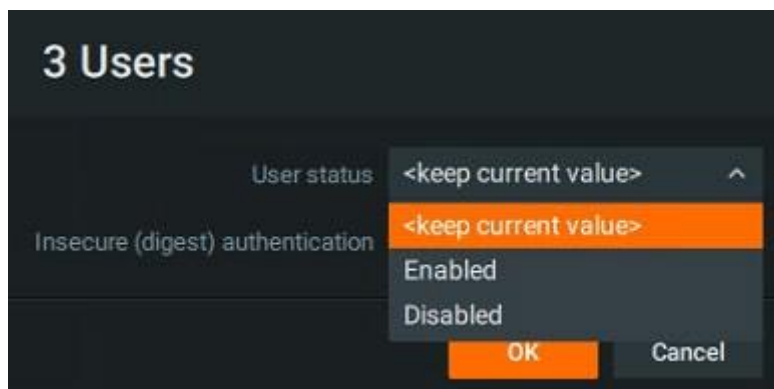

4. Click **OK** to apply changes. Authentication may be required. Disabled users will be disconnected from the Site.

Disabling and Enabling Users using the [Web Admin](#) / [Cloud Portal](#)

1. Select **Settings** in the page header menu.
2. Expand **Users** in the left panel menu.
3. Select a user to display user properties.
4. Change the toggle to enabled (green) or disabled (red).
5. Click **Save** to apply changes. Authentication may be required.

IMPORTANT: Disabled users will be disconnected from the Site.

Section 23.7 – Deleting and Removing Users

Local Users can be deleted from the Site they reside in while Cloud Users can only be removed from a Site. Removing a Cloud User from a Site does not delete the Cloud User account.

Deleting a user from a local Site is instantaneous, permanent, and complete. Deleting a user cannot be undone (try "[Disabling Users](#)" if the user data and history need to be kept).

- Administrators cannot be deleted or removed from a Site.
- Only administrators and power users can delete or remove users.
- Power users cannot delete or remove other power users, or their own account.
- Users can be deleted or removed in the desktop client, Web Admin, and Cloud portal.
- LDAP users cannot be deleted until the LDAP server is disconnected
- The desktop client can delete multiple users in one action.
- Deleting or removing a user will close all active sessions and prevent further access to the Site.

- [Audit Trail of User Actions](#) for deleted users will be permanently removed.
- Layouts available only to the deleted user will be removed from the Site.

! IMPORTANT: If "*Do not show this message again*" has been previously checked, there will be no prompt to confirm a user deletion and the action will be instant and permanent. To re-enable confirmations open **Local Settings > Advanced** and click the **Reset All Warnings** button.

Delete a User in the Desktop Client


1. Open the *User Management* dialog by selecting **Main Menu > User Management** dialog and switching to the **Users** tab.
 - Optionally refine the list of users by using the search box, filters, and column sorting options.
2. Do one of the following:
 - Click on the user to open the user settings and then click the **Delete** button on the right side of the dialog box.
 - Click the checkbox next to each user to be deleted, then click the **Delete** Icon in the banner.
3. Confirm if prompted. Authentication may be required.

Delete or Remove a User in the [Web Admin / Cloud Portal](#)

1. Select **Settings** in the page header menu.
2. Expand **Users** in the left panel navigation.
3. If needed, use the *Search* box to narrow the list of users.
4. Select the user to delete or remove, this will open the user settings dialog:
 - Click **Delete User** to delete temporary or regular users.
 - Click **Remove User** to remove Cloud Users from the Site.
5. Confirm if prompted. Authentication may be required.

Section 23.8 – Managing Groups

Groups are a powerful method to organize users and simplify [Permissions Management](#). There are three types of groups:

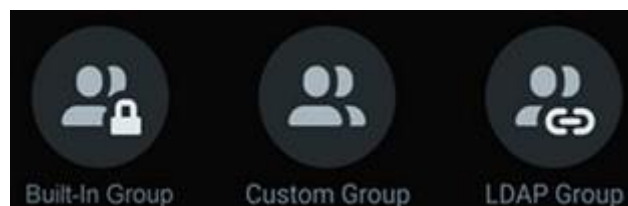

[Built-In Groups](#)

- Provide predefined access to settings and resources.
- Cannot be modified (see "[Built-In Groups and Permissions](#)").
- *Administrators* and *Power Users* are the only groups that can edit Site settings.
- A higher group will inherit the permissions of a lower group, in this order:
 - Administrator
 - Power users
 - Advanced viewers
 - Viewers
 - Live viewers
 - Site health viewers
- Can contain custom groups as members that inherit permissions from the built-in group.

Custom Groups

- Configured with custom [Permissions](#).
- Can be created and managed by members of the built-in *Administrators* and *Power Users* groups.
- Can be members of the built-in *Power User* group to access some Site settings (see "[Configuring Groups](#)").
- Members of a custom group inherit permissions when their group is a member of another group.
- Temporary users cannot be added to any custom group that inherits power user permissions.

LDAP Groups

- Can be imported with existing LDAP user members.
- Can be managed like a custom group, but their membership and group name can be changed on the LDAP server only.
- May have a duplicated group name if a similar group exists in the Site.

See [LDAP Users and Groups](#) for configuration settings, warning banners, and related details.

The following topics describe the operations that can be performed with groups:

- [Creating a Group](#)
- [Configuring a Groups](#)
- [Deleting a Group](#)

Section 23.9 – Built-In Groups and Permissions

The table on this page details the permissions available to each built-in group. Built-in groups cannot be renamed or modified.

Except for the administrator group, all built-in groups can be members of custom groups and custom groups can be members of built-in groups. This enables groups to inherit permissions from each other (see "[Configuring Groups](#)").

Action	Built In Groups					
	Administrator (Owner in 5.x)	Power Users (Admin in 5.x)	Advanced Viewers	Viewers	Live Viewers	Site Health Viewers
Configure Site Settings						
Edit Site Name	O	O				
Configure General Settings	O	O				
Install Site Updates	O	O				
Manage Licenses	O	O				
Activate Licenses	O	O				
Deactivate Licenses	O					
Create, Edit, Delete Regular Users	O	O				
Create, Edit, Delete Regular Groups	O	O				
Create, Edit, Delete Power Users	O					
Create, Edit, Delete Administrators						
Configure Email Server Settings	O	O				
Configure Security Settings	O	see " Security Level "				
Configure Time Synchronization Settings	O	O				
Configure Routing Settings	O	O				
Configure Plugins	O	O				
Create Site Backup	O					

Restore from Site Backup	O					
Manage Logs	O					
Update Site	O	O				
Merge Sites	O					
Connect Site to Cloud	O					
Disconnect the Site from the Cloud	O					

Audit Trail	O					
Configure Server Settings						
Rename Server	O	O				
Auto-detect built-in and USB camera	O	O				
Configure Failover (all settings)	O	O				
Detach Server (from Site)	O					
Delete Server (Resource Panel, not online Servers)	O					
Reset to Defaults	O					
Restart Server	O	O				
Add, Edit, Delete Storage Management	O	O				
Manage Analytic DB Storage	O	O				
ReIndex (Archive + Backup)	O	O				
Configure Backup Settings	O	O				
Pin Certificate (in case of certificate error)	O					
Cameras and Devices						
View Live all Camera and Devices	O	O	O	O	O	
View Live all Web Pages	O	O	O	O	O	
View Live all Server Health Monitors	O	O	O	O	O	
Audio Permission	O	O	O	O	O	
View Archive	O	O	O	O		
Manage Bookmarks	O	O	O			
User Input (PTZ, 2-Way Audio, Soft Triggers, I/O Buttons)	O	O	O			
Generate Events	O	O				
Edit Settings all Cameras and Devices	O	O				
Edit Setting all Video Walls	O	O				
View Event Log	O	O	O			
Edit Event Rules	O	O				
Edit Device Settings	O	O				
View Bookmarks	O	O	O	O		
Export Archive	O	O	O	O		
Other Resources						
View, Edit, Rename, and Delete Shared Layouts	O	O				
Create new Shared Layouts	O	O				
View all Web Pages, Integrations, Video Walls	O	O	O	O	O	
View Server Health Monitors (in Client)	O	O	O	O	O	O
Web Admin / Cloud Portal						
View Metrics & Alerts	O	O				O
View Monitoring & Graphs	O	O				O

View Monitoring & Logs	O	O				
------------------------	---	---	--	--	--	--

IMPORTANT: Many of the features and functions described in this manual are only available to users with the appropriate permissions.

Section 23.10 – Creating a Group

Site administrators and power users can use the desktop client to create, manage, and delete custom groups. Custom groups only grant permission to resources while some [Built-In Groups and Permissions](#) also grant permission to change settings. Custom groups can be nested within other groups, or contain [Built-In Groups](#) as members to inherit permissions.

Create a Custom Group in the Desktop Client

1. Open **Main Menu > User Management**.
2. Select the *Groups* tab within the *Site Administration* dialog.
3. Click the **Add Group** button to open the *New Group* dialog.
4. Enter the name of the new *Group*.
5. Enter an optional description of the *Group*.
6. Use the permissions group menu to select if the new group will be a member of any [Built-In Groups and Permissions](#) or [Custom Groups](#).
7. Click **Add Group** to create the group. Authentication may be required.

See "[Configuring Groups](#)" for information on granting resources to groups and managing group membership.

Section 23.11 – Configuring Groups

Groups are a powerful and efficient method to manage user permissions. Changes made to the group are applied to all group members. Groups inherit permissions when they are a member of another group, which in turn could be a member of another group.

- Administrators and power users can create, configure, or delete custom groups.
- Power users can create, configure, or delete custom groups that do not contain power users.
- Built-in groups only allow members to be added or removed.
- Groups can only be created, configured, and deleted using the desktop client.
- Changes to LDAP groups are stored in DW Spectrum and not pushed to the LDAP server.
 - LDAP group descriptions and resource permissions are configurable.
 - Non-LDAP users and groups cannot be members of an LDAP group.
 - Deleting LDAP groups within DW Spectrum is not permanent. A deleted LDAP group will be re-imported during the next LDAP sync.
 - LDAP group name and membership changes must be made on the LDAP server.
 - An LDAP group and non-LDAP group users can be members of the same Site group.
- The Web Admin and Cloud portal will display which groups of which a user is a member.
- The Web Admin and Cloud portal will not display all members of a group or group permissions.
- Changes can be saved on each tab, or on any tab after all changes are completed

Configure Groups:


1. Open the *Group Management* dialog by opening the **Main Menu > User Management** dialog and switching to the **Groups** tab.
 - Optionally, refine the list of groups by using the search box, filters, and column sorting options.

2. Click on a group to open the configuration dialog.
3. Use the tabs within the group configuration dialog to make changes.
 - The *General* tab configures:
 - The name of any custom group.
 - The description of any LDAP or custom group.
 - All permissions groups from which permissions are inherited.
 - The *Groups* tab provides:
 - A view and search function for all groups of which this group can be a member.
 - A selection checkbox next to each available group which toggles group membership.
 - Real-time display of all groups of which this group is a member.
 - A read-only view of LDAP groups of which the current LDAP group is a member.
 - The *Resources* tab provides:
 - A grid-view of permission types and available Site resources.
 - Indication of which permissions are granted, inherited, or not authorized.
 - A preview of cascading permissions that will be included with specific selections.
 - Hover-text that details from where permissions are directly inherited.

See "[Permissions Management](#)" for details.
 - The *Global Permissions* tab defines:
 - If group members are permitted to [view the event log](#).
 - If group members are permitted to generate [Event Rules](#).
 - The *Members* tab provides:
 - A detailed view of all group members, including users from nested groups.
 - Checkboxes to add or remove members from the group.

Section 23.12 – Groups Memberships Inheritance Example

In the following example:

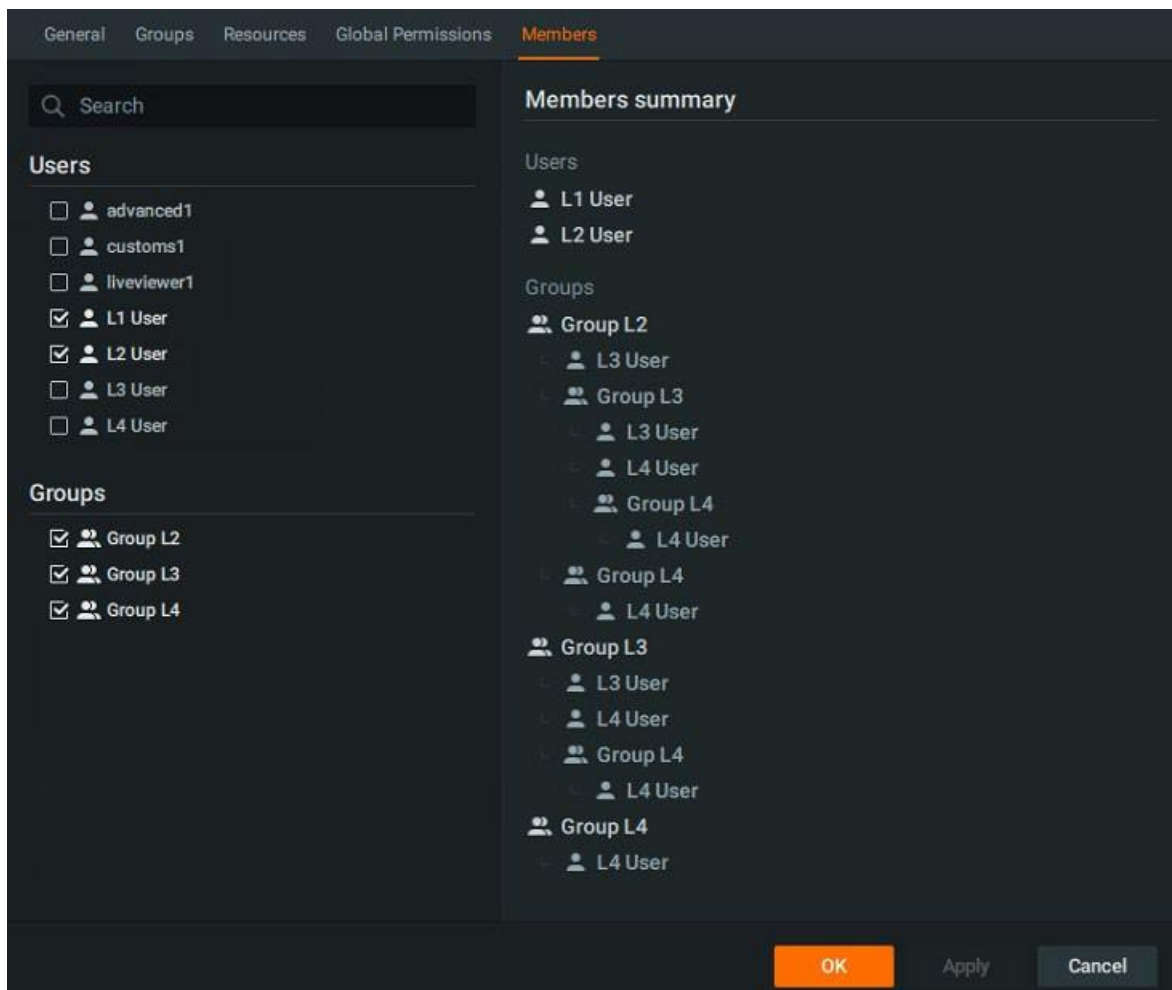

- *L1 User* and *L2 User* are directly assigned to **Group L1**.
- *L3 User* is a member of **Group L1** via membership in **Group L2** and **Group L3**.
- *L4 User* is a member of **Group L1** via membership in **Group L3** and **Group L4**; both being members of *Group L2*.
- **Group L1** will have the same User Members if **Groups L3** and **Group L4** are removed as members of **Group L1** since *L3 User* and *L4 User* are nested in *Group L2*.

! IMPORTANT: Be careful with nested groups as improper inheritance can cause unintended permissions granting and circular dependencies.

Section 23.13 – Deleting a Group

Built-in groups and permissions cannot be deleted. Custom groups can be deleted by administrators and power users using the desktop client.

Deleting a group will not delete user accounts that are members of the group. Members of the deleted group may see a change in the resources that are available to them if those same resources are not provided from another group membership or granted to the user directly.

Delete a Group

1. Open the *Group Management* dialog by selecting **Main Menu > User Management** dialog and switching to the **Groups** tab.
 - Optionally refine the list of users by using the search box, filters, and column sorting options.
2. Select the checkbox next to each group to be deleted.
3. Click on the **Delete** button to remove the group(s) from the Site.

4. Confirm or authenticate if prompted.

 **IMPORTANT:** A confirmation message will not be displayed if the *Do Not Show Again* option has been selected. Open **Main Menu > Local Settings > Advanced** and click the **Reset All Warnings** button to again show all confirmation prompts.

Section 23.14 – Permissions Management

Permissions can be configured for custom groups and individual users.

Configure Permissions for a Group

1. Open the *Group Management* dialog by selecting **Main Menu > User Management** dialog and switching to the **Groups** tab.
 - o Optionally refine the list of groups by using the search box, filters, and column sorting options.
2. Click on a group to open the configuration dialog.
3. Click the *Resources* tab to manage **Resource Permissions** or the *Global Permissions* tab to manage **Global Permissions**.

Configure Permissions for a User

1. Open the *User Management* dialog by selecting **Main Menu > User Management** dialog and switching to the **Users** tab.
 - o Optionally refine the list of users by using the search box, filters, and column sorting options.
2. Click on the username in the list, or checkbox and click **Edit** to open *User Properties*.
3. Choose the *Resources* tab to manage **Resource Permissions** or the *Global Permissions* tab to manage **Global Permissions**.

Global Permissions

Use the checkboxes to enable or disable the following:

- Permission to [View](#) the event log
- Permission to generate [Event Rules](#)

Resource Permissions

Granting permissions to resources is done by selecting the permission level (view live, Archive, manage bookmarks, etc.) a user or group will have to a resource. The resource configuration panel is the same when configuring users or groups.

- Devices – Cameras, I/O modules, etc.
- Web pages and integrations
- Server health monitors
- Layouts – may include all the above resources. Granting permission for a layout grants access to all resources placed on the layout
- Video Walls – configure video walls based on available resource permissions

The following rules are applied when managing resource permissions:

- Clicking on the heading row of any device will toggle all devices in the permission column.
- Permissions can only be granted, inherited, or not granted. There is no mechanism to block access to a

specific resource.

 
- Users and groups inherit the permissions from every group they are a member of.

Resource Control Icons

Provide permissions to selected resources:

- **Live View** – Access a live view only
- **View Archive** – Access the Archive (includes **Live View**)
- **Export Archive** – Export Archives (includes **View Archive**)
- **View Bookmarks** – Browse bookmarks (includes **View Archive**)
- **Manage Bookmarks** – View, create, edit, or delete bookmarks (includes **View Bookmarks**)
- **User Input** – Control PTZ, use soft triggers and 2-way audio (includes **Live View**)
- **Edit Settings** – Change the available settings (includes **User Input**)

Permission Status Icons:

	No permission granted to this Site resource.
	An explicitly granted (not inherited) permission to a resource.
	The total number of resources granted per permission type displayed in the column header.
	Permission to the resource is inherited through a layout granting permissions.
	Permissions are inherited from membership in one or more groups.

 **NOTE:** Hover the mouse cursor over the permission status icon in the panel to view inheritance details.
Hover the mouse cursor over the permission grid to see inheritance rules.

Permissions Panel Configuration Example:

The example below illustrates various combinations of resource permissions assigned to users and groups:

General Groups Resources Global Permissions							
Search		LIVE View Live	View Archive	Export Archive	View Bookmarks	Manage Bookmarks	User Input
Cameras & Devices		3	2	1	2	1	2
Cam-A							
Cam-B		✓	✓		✓		✓
Cam-C		✓	✓		✓	✓	✓
DWC-XSTD05MF							
Layouts		2	1	1			1
Health Monitors x2							
Lay-2 Cam-C + Wall		✓	✓	✓			✓
Layout 1 A-B Web Page		✓					
Web Pages & Integrations		3					
Home Page							
LDAP Wiki							
ONVIF							
Support		✓					
Weather							
Health Monitors		2					
DWC-XSTD05MF							
Server bootoo		✓					
Server MEGADESK							

- Cameras & Devices
 - Cam-A – Live view is inherited from Layout 1 A-B Web Page.
 - Cam-B – Live view, view Archive, view bookmarks, and user input to Cam-B are explicitly granted.
 - Cam-C – Export Archive permission is inherited from Layout Lay-2 Cam-C + Wall and all other permissions are explicitly granted.
- Layouts
 - No access to Health Monitor x2 Layout.
 - Lay-2 Cam-C + Wall layout does not permit any bookmark access.
 - Layout 1 A-B web page is limited to live view.
- Web Pages & Integrations
 - Inherited permission to view ONVIF Web Page from Lay-2 Cam-C + Wall.
 - Explicit permission to view Support Web Page.
 - Inherited permission to view Weather Web Page from Layout 1 A-B Web Page.
 - Site Health Monitors
 - Explicit permission to view Server.
 - Inherited permission to view Server MEGADESK inherited from SHM Group.

Section 23.15 – LDAP Users and Groups

LDAP integration allows a Site to import *Users* and *User Groups* from an LDAP server.

- Users must exist in the LDAP Database object tree, match the base selection, and not be disabled in the LDAP server to be imported.

- LDAP groups and users can be assigned permissions and placed in any existing Site groups, except the built-in administrator group (see "[Configuring Users](#)" and "[Configuring Groups](#)").
- LDAP groups have certain specifics in terms of configuration (see "[Configuring Groups](#)").
- LDAP users can access the Site using their LDAP username and password.
- LDAP users will not be able to log in while the LDAP Server is not available (see "[LDAP Sync Failure](#)").
- The following LDAP server types are supported:
 - Microsoft Active Directory
 - Open LDAP Server
 - JumpCloud
 - FoxPass

 **IMPORTANT:** LDAP users must have resource permissions granted (see "[Permissions Management](#)") or be added to a [Built-In Group](#) to do anything more than connect to a Site.

Setting Up LDAP Integration

To import LDAP users and allow them to connect to the Site, a connection must be established between DW Spectrum and the LDAP server. The LDAP server does not have to be a part of the same LAN the media server is on, but it must be available for the media server either by LAN or WAN.

- LDAP integration should be performed by, or in cooperation with, the network (domain) administrator.
- LDAP over SSL may require certificates on both the LDAP and DW Spectrum Servers.

 **NOTE:** When configuring LDAP integration, do not specify the domain's base distinguished name (DN) as a search base. Instead, specify the organizational units (OU's) underneath the base DN because it is not possible to filter on OU membership, but is possible to filter on group membership.

To retrieve all users that are members of a specified group, filter on the `memberOf` attribute. For example: `memberOf=CN=Security Users,CN=Users,DC=DOMAIN,DC=LOCAL`.

1. Select **Main Menu > User Management** and click the *LDAP* tab.

A **Configure** button is displayed when no LDAP information exists in the Site, otherwise the LDAP dialog displays the following summary information:

- Server
- Server status
- Most recent synchronization timestamp
- Number of users and groups retrieved

2. Click the **Edit** button below the summary information to open the *LDAP Connection Settings* dialog.

3. Enter the following information (consult with your network or domain administrator as needed):

- **Host:** (ldap:// or ldaps://)

 **IMPORTANT:** Any server URL must be a fully qualified domain name (FQDN). See https://en.wikipedia.org/wiki/Fully_qualified_domain_name for details.

- Login DN Password Options:


- Use StartTLS
- Ignore LDAP server certificate errors

4. Click the **Test** button to validate the server connection and credentials. One of the following messages will appear:

- Connection OK
- Cannot connect to LDAP server

5. Once the test is successful, click the **Apply** button to save the connection setting and return to the LDAP summary. Clicking **Cancel** will discard all settings entered and exit the *LDAP Connection Settings* dialog.

6. Click the **+ Add** button along the *Search Bases* heading to open the *Add Search Base* dialog. Enter the following information:
 - *Name* – often "Users"
 - *Base DN* – the starting point for LDAP searches and synchronization.
 - *Filter* – the users and groups from the base DN to be allowed (optional).
7. Click **OK** to close the dialog and return to the *LDAP* tab of the user management dialog.
8. Click **Apply** to save the search base parameters and retrieve user and group information from the LDAP server. The number of users and groups will update upon a successful retrieval.

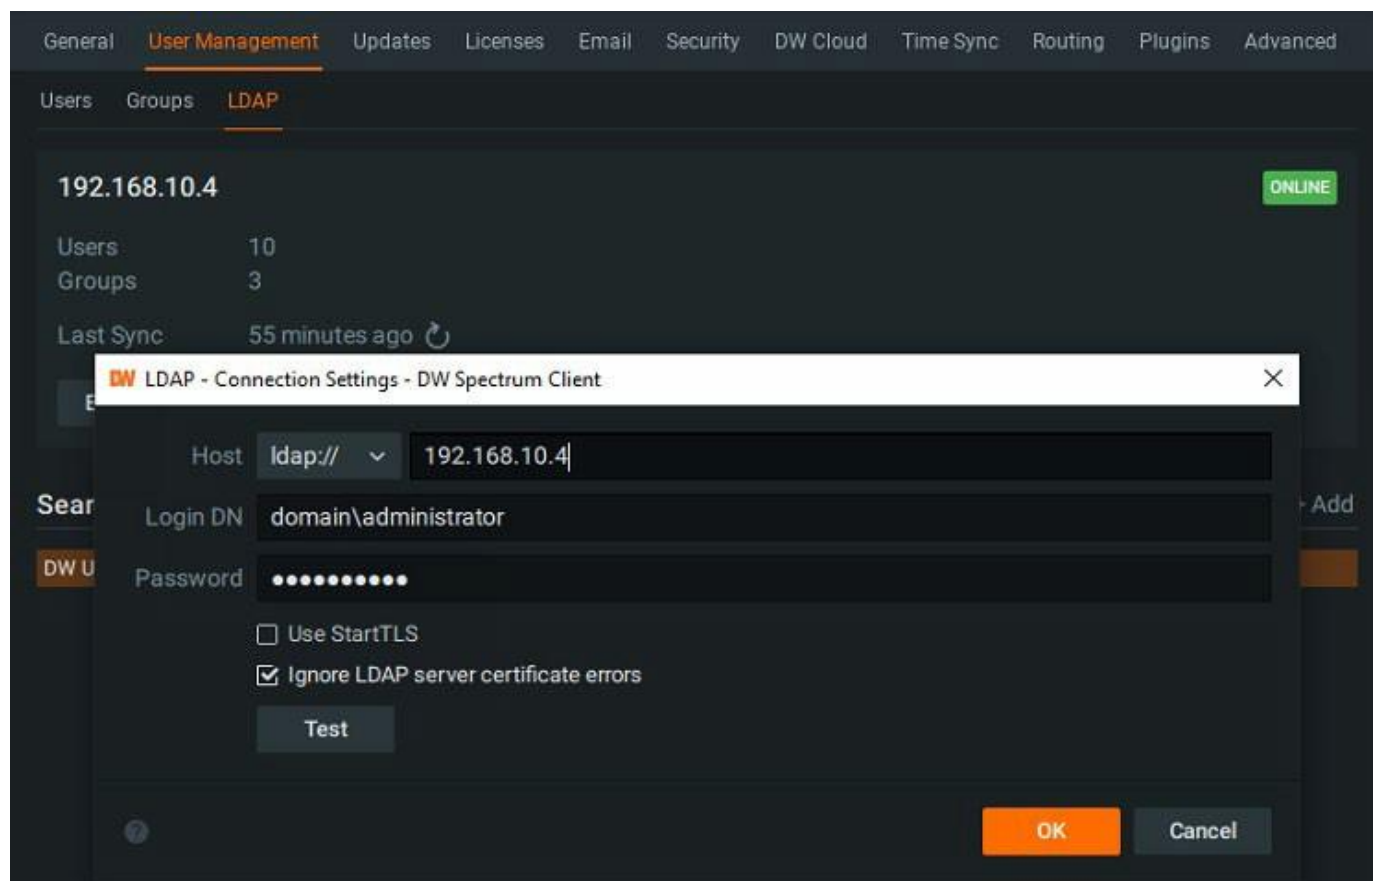

9. Optional – Click on *Advanced Settings* to review and change defaults for:
 - *Synchronize Users* – Always or only at login.
 - *Sync Interval* – a value from 1 to 9999999 in seconds, minutes, or days.
 - *Proxy Server* – select a specific server to connect to the LDAP server, or select *Auto*.
 - In auto mode, each server tries to connect to LDAP directly. If the connection fails, then every server in the Site will try to connect. If a specific server is selected, but is unavailable, the Site defaults to auto mode.
 - *Users* – Deselect *Auto* to provide a specific value. Use the checkbox to toggle *allow insecure (digest) authentication for imported users* option.
 - *Groups* – Deselect *Auto* to provide a specific *objectClass* value.
 - *Membership* – Deselect *Auto* to provide a specific *Group Members Attribute*.

Importing Users from LDAP Server

LDAP users and groups are imported immediately after the LDAP integration is completed and validated. Follow these steps to force an LDAP synchronization:

1. Open **Main Menu > User Management > LDAP** tab.

2. Below the user and group count is the *Last Sync* timestamp and a refresh icon.
3. Click the refresh icon to force LDAP synchronization. The refresh icon is not displayed when the sync interval in *Advanced Settings* is set to 1 minute or less.
4. Once imported, LDAP users can be enabled or disabled (see "[Enabling and Disabling Users](#)"), and assigned user permissions or placed in permission groups (see "[Configuring Users](#)").

 **NOTE:** LDAP users must successfully log into the desktop client one time before they can use the Web Admin.

Changing or reconfiguring LDAP Servers

Changing or reconfiguring the LDAP server integration can result in existing LDAP users becoming invalid and thus disabled in the Site. A warning banner and confirmation dialog appears when LDAP integration changes may disrupt the validity of existing LDAP users and groups.

Removing or Deleting an LDAP Server from the Site

Removing or deleting an LDAP server connection that has been synchronized at least once will remove all LDAP users and groups from the Site. All Site permissions and group membership configurations for LDAP users will be removed and all history for the LDAP users will be removed from the [Audit Trail of User Actions](#). This action cannot be undone.

1. Open **Site Administration** > **User Management** > *LDAP* tab.
2. Click on the **Disconnect** button near the **Edit** and **Advanced Settings** buttons.
3. Confirm to *Disconnect LDAP server and remove all LDAP Users and Groups*.

LDAP Warnings

The following warning may be displayed during LDAP configuration, testing, and update synchronization

- Remove existing LDAP Users and Groups:
 - This warning is displayed for any action that will force the removal of all existing LDAP users from the Site.
- **Disconnect LDAP Server** confirmation:
 - This dialog is displayed before disconnecting an LDAP server and removing all LDAP users from the Site.
- LDAP Server is offline:
 - This banner is displayed in the user management dialog for LDAP and includes a count of how many users are currently unable to connect to the Site.
- LDAP User Duplication:
 - This banner is displayed in the user management dialog when imported LDAP usernames conflict with existing usernames in the Site. Site accounts have priority and the duplicated LDAP usernames will be disabled.
- LDAP Digest Authentication:
 - An informational dialog is presented when changing the LDAP digest authentication settings if some users will also need their user configuration settings changed.

Section 23.16 – Audit Trail of User Actions

DW Spectrum tracks all user actions and records them to a log called the **Audit Trail**. To view this log, open **Site Administration > General** tab and click the **Audit Trail** button. The top panel provides filters and a search tool.

Initial display is with all sessions and cameras selected.

Audit Trail Filtering and Searching

- *Sort* – Data can be sorted in ascending or descending order by clicking on any column header.
- *Filter* – Type a filter criterion in the *Search* field on the top. Select a desired period using the *From* and *To* calendar fields.
- *Show/Hide actions by type* – Use the checkboxes at the top to toggle display of specific action types.
- *Update data* – Data may have changed since the log was opened. Click **Refresh** to update the display.
- *Export* – To export the log file, select the desired records and open the context menu to choose one of the following:
 - *Copy Selection to Clipboard* – So data can be pasted to another program (ex. Microsoft Excel or Google Docs).
 - *Export Selection to File* – Exports data as an *html* or *csv* file. Click on one or more individual checkboxes to filter the display.

Sessions					
☒	Session begins	Session ends	Duration	User	IP
☒	8/21/2024 3:43:41 PM			admin	192.168.101.22
☒	8/21/2024 12:56:10 PM			robertang@digital-watchdog.com	47.180.64.233
☒	8/21/2024 11:18:04 AM			myDW-agent_20jgLYrHXX	:1
☒	8/21/2024 11:18:03 AM			myDW-agent_20jgLYrHXX	:1
☒	8/21/2024 11:18:02 AM			admin	:1
☒	8/21/2024 11:18:02 AM			myDW-agent_20jgLYrHXX	:1
☒	8/21/2024 11:18:01 AM			admin	:1
☒	8/21/2024 11:17:42 AM			admin	:1
☒	8/21/2024 11:17:42 AM			admin	:1
☒	8/21/2024 11:13:48 AM			admin	:1
☒	8/21/2024 11:13:46 AM			admin	:1

Details			
Date	Time	User	IP
8/21/2024	3:46:20 PM	admin	47.180.64.233
8/21/2024	3:46:13 PM	admin	47.180.64.233
8/21/2024	3:46:00 PM	admin	47.180.64.233
8/21/2024	3:45:52 PM	admin	47.180.64.233
8/21/2024	3:45:43 PM	admin	47.180.64.233
8/21/2024	3:45:04 PM	admin	47.180.64.233
8/21/2024	3:44:51 PM	admin	47.180.64.233
8/21/2024	3:44:09 PM	admin	47.180.64.233
8/21/2024	3:44:00 PM	admin	47.180.64.233
8/21/2024	3:43:48 PM	admin	47.180.64.233
8/21/2024	3:43:41 PM	admin	192.168.101.22

There are two summary panels: **Sessions** and **Cameras**, with a related **Details** panel to the right. Columns in these tabs can be sorted in ascending or descending order. Use the checkboxes to select certain sessions or cameras, or check the box in the header to select all logged activities.

Sessions Tab

Provides a summary of activities during a user session, where a session is defined as the period between a user's log in and log out:

- *Session begins* and *Session ends* date and time
- Duration of session
- User ID
- IP address of the client the user logged in from
- Activity bar graph depicting the number of actions performed during a session. Hover the cursor over this graph to see the precise count of actions.

Cameras Tab

Provides a summary of devices used:

- Camera name
- IP address of the camera

- Activity bar graph depicting the number of actions performed with the camera(s) during the selected period

Details Tab

For both sessions and cameras, shows:

- *Date and Time* – When each action occurred
- *User* – The one who performed the operation
- *IP* – IP address of the client the user logged in from
- *Activity* – The action performed. For example, watching Archive, watching live, server updated, camera updated, exporting video, etc.
- *Description* – Details of the action performed (start/end times, number of cameras affected, Site version updates, etc.). There may also be a button for direct access to the activity performed. For example, watching activities can be expanded to show the relevant camera(s) and a *Play* button that launches the related Archive. Similarly, for the "Camera updated" activity, the *Camera settings* button opens the settings dialog of the device modified by the user.

Disabling Audit Trail recording

The audit trail is enabled by default.

Desktop Client

1. Open **Main Menu > Site Administration > Security** tab.
2. Uncheck the **Enable audit trail** checkbox.
3. Apply changes.

[Web Admin / Cloud Portal](#)

1. Open **Settings > Site Administration > General**.
2. Uncheck the **Enable audit trail** checkbox.
3. Apply changes.

Part 24: Layout Management

Layouts are an integral part of the DW Spectrum experience that provides a way to organize cameras, devices, and web pages for efficient access and viewing. Users can quickly switch between layouts to follow items of interest or to view an area from another perspective.

- There are three types of layouts:
 - User Layouts – can only be accessed by the user who created the layout
 - Shared Layouts – can be shared with other users of the Site
 - Cloud Layouts – may contain devices from multiple Cloud connected Sites
- Layouts are only accessible in the desktop client and cannot be viewed in the Web Admin or Cloud portal.
- A layout is an arrangement of up to 64 cameras, devices, web pages, and other elements placed on the viewing grid.
- Each layout is displayed within a separate tab on the desktop client and multiple layouts can be open simultaneously.
- A layout must be saved after it is created, otherwise it will be lost when the tab is closed, or the session has ended.
- Administrators and power users can share layouts with other users (see "[Creating and Sharing Layouts](#)" and "[Permissions Management](#)").
- Changes to shared layouts and Cloud layouts are propagated to all desktop client instances and users who

have permissions to the layout (see "[Layout Management](#)").

- An alarm layout is configured to open as a responsive action to a specific event (see "[Showing Cameras on Alarm Layout](#)").

Additional Layout Topics

- [Viewing Grid](#)
- [Layout Tabs](#)
- [Creating and Sharing Layouts](#)
- [Configuring Layouts](#)
- [Layout Backgrounds \(E-Mapping\)](#)
- [Saving and Locking Layouts](#)
- [Deleting Layouts](#)

Section 24.1 – Viewing Grid

The *Viewing Grid* is the empty background of cells into which items are placed to create a layout. Each layout is displayed in a separate tab of the viewing grid, allowing multiple layouts to be open at once.

The cells of the viewing grid are only visible when an object is moved or resized in the layout. When an item is being moved, a green cell indicates where it can be placed, red cells indicate where it cannot be placed.

The viewing grid has a default cell aspect ratio of 16:9, currently the most common aspect ratio of cameras on the market but will shift to the aspect ratio of the first item placed in a new layout. This is important to consider when designing a layout. Subsequent items added to the layout retain their native aspect ratio regardless of the aspect ratio of the viewing grid. However, the default aspect ratio for a layout can be changed using **Cell Aspect Ratio** from the viewing grid context menu.

It is also possible to control the size of the viewing grid cells for specific layouts; see "[Configuring Layouts](#)".

The viewing grid has a setting for the space between cells (*None*, *Small*, *Medium*, or *Large*) which is useful when a layout needs to be more compact. Access this control from the viewing grid context menu by choosing **Change Cell Spacing**.

The resolution of the items that are currently displayed (*Auto*, *Low*, *High*) can be controlled from the **Resolution** option in the viewing grid context menu (right-click on the camera tile).

Cell Spacing

This feature is used to change the spacing between items in a layout to be closer together or further apart.

For example, four individual single-sensor cameras that together form a 180-degree panoramic view would best be displayed without any space between cells.

To adjust the distance between items, open the viewing grid context menu and select **Cell Spacing**, or use **Ctrl +**

Mouse Wheel over the viewing grid. Options are *None*, *Small*, *Medium*, or *Large*.

Cell Aspect Ratio

Cameras provide video in a variety of aspect ratio formats. To populate layouts efficiently, DW Spectrum attempts to match the default aspect ratio of an item window to the aspect ratio of its contents.

The viewing grid adjusts to the aspect ratio of the first item added. To change the aspect ratio of an entire layout, right-click anywhere on the viewing grid, and use **Cell Aspect Ratio** from the context

menu to select from the available options (4:3, 16:9, 1:1, 3:4, or 9:16).

Layout Resolution

The resolution can be set for all items in a layout by right-clicking anywhere on the viewing grid, and using **Resolution** from the context menu to select from the available options (*Auto*, *High*, or *Low*). *Auto* allows each device to display at its own default setting. Once the resolution for an entire layout is set, the resolution of individual items can be set, in which case the layout resolution will display *Custom* to indicate that not all items are using the same resolution setting.

Section 24.2 – Layout Tab Controls

The display on initial Site launch is an empty viewing grid with tab name “New Layout*”. An asterisk next to a layout name, both on tabs in the navigation panel and the resource panel, indicates that the layout has unsaved changes. If a custom name is not used, the new tab name automatically increments by 1 (“New Layout 2”) until the user session ends.

A blank tab will always display when all layouts are closed. If too many tabs are open to display at once, use the “<” and “>” arrows in the navigation panel to scroll left and right through the hidden tabs.

Open a New Tab

- Right-click on any tab in the navigation panel and select **New Tab (Ctrl + T)** from the context menu.
- Go to **Main Menu > New > Tab**.
- Click on the **+** icon to the right of the last tab in the navigation panel.

Close a Tab

- Click on the **X** icon next to the tab name.
- Right-click on a tab to open the context menu and select **Close (Ctrl + W)**.

Close All but the Active Tab

- To close all tabs but the active one, open the tab’s context menu and select **Close All But This**.

Reposition a Tab

- Click and drag a tab name in the navigation panel to change its position.

When a user logs into DW Spectrum, all saved layouts to which they have access are listed in the resource panel.

Open an Existing Layout

- Drag and drop the layout from *Layouts* in the resource panel onto the viewing grid.
- Right-click on the layout in the resource panel and choose **Open Layout** (or press **Enter**) from the context menu.
- Right-click on an existing layout in the navigation panel and select **Open Layout** from the context menu to open a list of all layouts available to the current session.
- Click on the **V** icon to the right of the last tab in the navigation panel to open a list of all layouts available to the current session.

Selecting a layout that is already open will shift focus to that tab. Selecting a layout that is not currently open will open it in a new tab. Multiple layouts can be selected and opened, and each will open in a separate tab. (If a layout is already open it will not be reopened in a second tab.)

 **NOTE:** After DW Spectrum is closed, all saved layouts that are open will be restored when the user logs back in.



Section 24.3 – Creating and Sharing Layouts

A new Site is installed without layouts configured and will open to a blank [Viewing Grid](#). A new layout can be configured as a temporary one for the current session, saved to the current user for later recall, shared with other users of the Site, or saved as a Cloud layout that can contain devices from different Cloud connected Sites.

Create a New Layout

1. Click on the + icon in the navigation panel to the right of other open layouts or Site tabs.
2. [Configure the Layout](#) to meet the viewing needs.

Save a Local Layout

1. Right-click on the layout tab or the layout name in the resource tree to open the layout context menu.
2. Select **Save Layout** to save the layout using the current type and name (*New Layout #* if not changed previously).

OR

3. Select **Save Layout As** to save the layout as the current type under a new name.

 **NOTE:** A layout must be saved before it can be shared locally or converted to a shared layout.

Convert a Local Layout to a Shared Layout

1. Ensure the layout has been successfully saved and is displayed in the resource tree
2. Right-click on the layout in the resource tree to open the layout context menu.
3. Select *Convert to a Shared Layout* in the context menu. The layout icon will update to reflect that it is a shared layout.
4. The layout is now visible to administrators and power users who can share it with other users (see "[Permissions Management](#)").

Save a Layout as a Cloud Layout

1. Site must be connected to the Cloud.
2. Ensure the layout has been successfully saved and is displayed in the resource tree.
3. Right-click on the layout in the resource tree to open the layout context menu.
4. Select *Save as a Cloud Layout* in the context menu. This will **Save a Copy** of the layout as a *Cloud Layout* under the name provided.

Granting Permission to a Layout

1. Ensure the layout has been successfully saved and is displayed in the resource tree.
2. Administrators and power users can grant other users permission to the layout (see "[Permissions Management](#)").

Section 24.4 – Configuring Layouts

Items (devices, cameras, integrations, virtual cameras, web pages, local files, etc.) are placed on the viewing grid to create a **Layout**. A layout may contain up to 64 items, including more than one instance of an item.

Permission to access shared layouts are covered in topics about [Users and Groups](#) and [Permissions Management](#).

Section 24.5 – Set Aspect Ratio and Spacing

Right-click on the viewing grid of the layout to open the context menu and select one of the following layout configuration options.

- *Resolution* – set *Auto*, *High*, or *Low* resolutions for all cameras on the layout
- *Cell Aspect Ratio* – set the aspect ratio for all cameras on the layout
 - Cell aspect ratio is adaptive – it depends on the aspect ratio of the first item opened in the viewing grid. The default aspect ratio of 16:9 can be changed to other presets.
- *Cell Spacing* – set the amount of space between items on the layout; *None*, *Small*, *Medium*, and *Large*.

 **NOTE:** [Cell Spacing](#), [Cell Aspect Ratio](#), and [Layout Resolution](#) can be set universally for a layout or use the layout settings dialog to adjust them manually.

Change additional Layout Settings

Do one of the following:

- Right-click an empty space in the layout and select *Layout Settings...*
- Right-click on a layout in the resource panel and select *Layout Settings...*

Settings on the *General* tab:

- Locked slide toggle – See [Locking Layouts](#).
- Minimum Grid Size – Enable this parameter to control item size and placement more precisely. When an item is added to the layout, it is always scaled to fit into one cell of the viewing grid. As more items are added to the layout, the size of the cell, and the item inside it, are adaptively reduced so that all items can fit in the display. When Minimum Grid Size is enabled, the absolute cell size can be set, where the greater the value in the *Width* and *Height* fields, the more cells there are in the grid. The larger the number of cells in the grid, the smaller each cell is, and therefore the more flexibility in positioning items.
- Logical ID – enter a custom ID number or use the up and down arrows to define the layout ID for quick API and integration identification and access.
 - Generate – Will assign the next available, incremental ID number, starting with 1 if no other layouts are in the Site.
 - Reset – Clears the logical ID field.

Settings on the *Background* tab are described in [Layout Backgrounds](#).

Section 24.5 – Selecting Items in Layout

Click an item in the layout to select and expand it. To bring it back to normal, click again. Once an item is selected, hold Shift and use the arrow keys to scroll through all items in the layout. Items can also be selected from the resource panel.

Multiple items can be selected; they do not expand but are outlined and given a colored overlay.

Select More than One Item

- Click and drag over items with a mouse to create a selection box.
- Use **Ctrl + Click** to toggle selection of successive items.
- Use **Ctrl + A** to select all items on a layout.



Rearrange Layout Items

To move an Item, simply click on it and drag it to a new position. The grid cell borders will be visible while the item is held.



If the desired cell position is already occupied, the items will be swapped. If swapping is not possible due to too great a difference in item sizes or aspect ratio, the target cell(s) will be marked red:



If a bigger Item is being replaced by a smaller one, they will swap sizes as well as positions.

All items in the layout can be moved together by clicking and dragging with right-click, including the background image if there is one.

Section 24.6 – Adding Items to Layout

To add items to the current layout, do one of the following:

- Double click on the item in the resource panel
- Right-click in the resource panel to open the context menu and select **Open**
- Drag and drop a device, web page or local file from the resource panel into a layout

 **NOTE:** Multiple items can be selected from the resource panel using the **Ctrl** or **Shift** keys.

- Open *Local file(s)* or *Folder*

New items will be scaled to occupy the available space in the layout. DW Spectrum adjusts the aspect ratio of the viewing grid cells according to the aspect ratio of the items in the layout to maximize use of display space. See "[Cell Aspect Ratio](#)".

 **IMPORTANT:** Viewer-level users and groups with similar limitations on their authority can add items but not save or update the shared layout. However, they can make their own layout from available cameras.

Open Items Directly into a New Tab

- Right-click on the desired item(s) in the resource panel and select **Open in New Tab** in the context menu.
- Drag and drop the selected item(s) from the resource panel and onto the navigation panel header.

 **IMPORTANT:** It may be difficult to locate and add each device manually. Use the search pane to help locate items (see "[Searching and Filtering in DW Spectrum](#)").

Configure a Layout Using Search

1. Create a new layout (see "[Creating and Sharing Layouts](#)").
2. Enter keywords into the search box. The search results will appear on the [Resource Panel](#) automatically.
3. By adding or deleting keywords from the search box, the items on the [Resource Panel](#) will vary.
4. Save the configured Layout.

Cross-Site Layouts

Additionally, devices from different Sites can be added. Some limitations apply:

- The devices must be connected to Sites that share a common Cloud account or organization.
- Users need permissions to view cameras that are placed on the layout.

To add a device from a different Site:


1. Find the desired Site in the resource panel.
2. Expand the desired Site, and add the necessary devices to the current layout as described above. Items from other Sites may already be in other cross-Site layouts in the resource panel. In this case, once added to the current layout, it will automatically turn into a cross-Site layout.

Once the layout is saved, a few restrictions will apply:

- It can only be displayed in the desktop client.
- Cloud Users can set up and save layouts but cannot share them to other users.

Cross Site layouts cannot be used with [Video Walls](#), [Showreels](#) or automated with [Event Rules](#) (the "[Open Layout](#)" action).

Cross-Site layouts are displayed in the resource panel as follows:

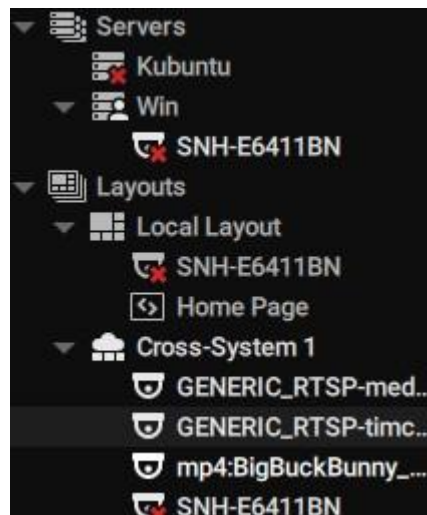

Section 24.7 – Removing Items from Layout

Remove an Item from a Layout

1. Open the desired layout.
2. Select the desired item in the layout.
3. Click the close icon  in the upper right-hand corner of the item to remove it.
4. To remove multiple items at once, use **Ctrl + click** to select the desired items, then right-click on any item to open the context menu and select **Remove from Layout** (or use the DEL button on a keyboard).

Remove an Item from a Layout Using the Resource Panel


1. In the resource panel, expand **Layouts** or **Users** and locate the desired layout.
2. Select the desired Item(s) under the specified layout.
3. Open the context menu and select **Remove from Layout** (DEL).
4. Confirm deletion by clicking Yes.

 **NOTE:** The size of all items may change depending on the position or number of remaining items.

Section 24.8 – Layout Background Images (E-Mapping)

User and shared layouts can be configured with a custom background image to facilitate layout organization or provide additional information to the viewer, such as a map or floor plan on which device thumbnails can be positioned to indicate their physical location. Users must be granted permission to access shared layouts (see "[Users and Groups](#)" and "[Permissions Management](#)").

 **NOTE:** Cloud layouts do not support background images – they will be removed when a layout is saved as a Cloud layout.

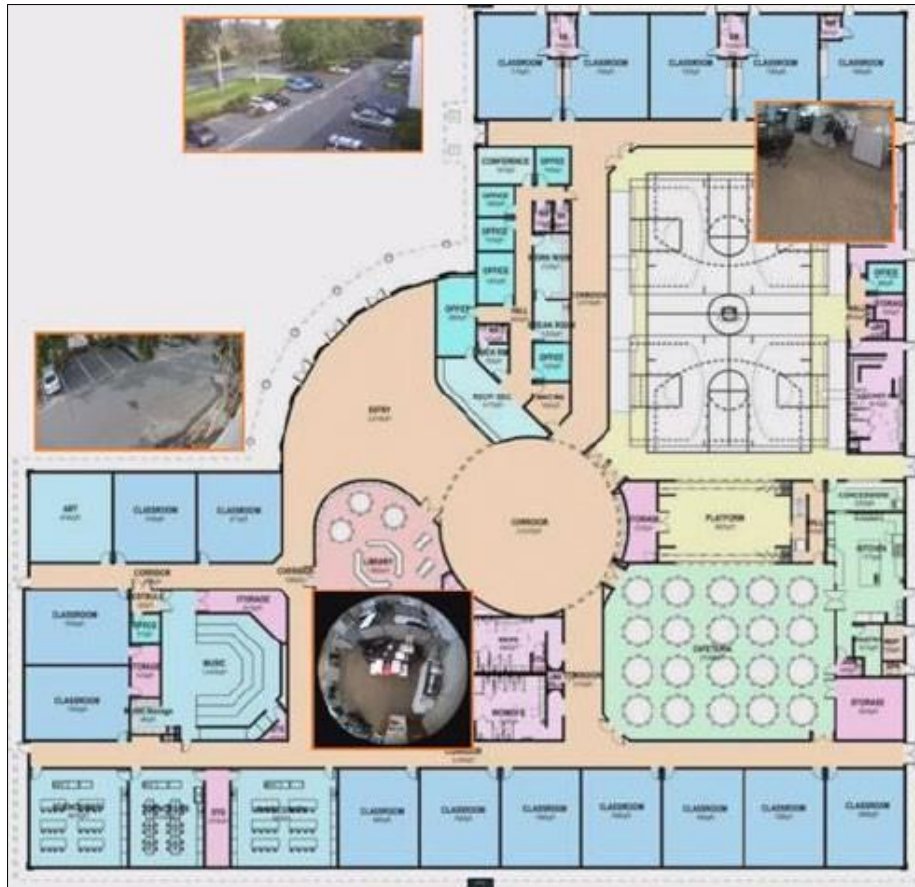

Add a Background Image

The starting layout can be empty, or already have items on it. If there are items already in the layout, they will be reduced to thumbnail size so they can be positioned as desired.

1. Open the desired picture in the layout using **Main Menu > Open > File(s) (Ctrl + O)**.
2. Right-click on the image and choose **Set as Layout Background** in the context menu. The image will be added, scaled to fill the entire layout area.
3. Alternatively, open **Layout Settings** from the viewing grid context menu for the layout, open the **Background** tab, then click on **<No picture>** to browse for a background image.

The image types accepted are displayed in the dialog.

Edit a Background Image

1. Open the layout with the background to be changed.
2. Right-click anywhere on the background and choose **Layout Settings** in the context menu.
3. Select the **Background** tab.
 - o Click **Browse** to select a new image file to set as background.
 - o Click **Clear** to remove the background image from the layout.

- Click **View** to open the background image in an editing application.
 - Check **Crop to monitor aspect ratio** to adjust the aspect ratio of the image according to the monitor aspect ratio. For instance, if the monitor resolution is 1920x1080 (16:9) and image resolution is 1920x1200 (16:10), then the image will be cropped on both top and bottom.
 - Use **Width** and **Height** to control the exact number of viewing grid cells the background image will span.
 - Use **Keep Aspect Ratio** to maintain the original aspect ratio of the background image while changing the width or height.
 - Use **Opacity** to control the translucence of the image (in percent).
4. Apply changes.
 5. Save the layout.

Section 24.9 – Resizing Items

To resize an item, click and drag the edge of an item in the layout to resize it. If resizing is possible, the new cells are highlighted in green:



If resizing is not possible, the cells will appear red:



In this case the best practice is to move the entire viewing grid by clicking and dragging and then resize the Item to occupy the available space, or move the desired Item away from other items, then resize it to occupy the available space.

Section 24.10 – Expanding Items to Fullscreen Mode

Fullscreen mode simultaneously expands a single Item to fill the entire layout, and hides all four sliding panels. When an item is expanded to full screen mode, only recorded fragments related to the selected Item are visible on the Timeline. Press the **ESC** key to exit full screen mode.

The Timeline can be pinned while in full screen mode to prevent it from automatically hiding. Exiting full screen mode with the Timeline pinned will pin the Timeline to all other cameras in the layout when entering full screen mode.

Toggle Fullscreen Mode on or off, Use One of the Following:

- Double-click or press **Enter** on an item in layout.
- Open an item's context menu and select **Maximize Item** to expand or **Restore Item** to return the full layout and panel display.
- Create an event rule using the action "[Set to Fullscreen](#)".

 **NOTE:** Use a [Tour](#) to loop through the full screen display of each item in the active layout.

Section 24.11 – Zooming an Item or Layout

Click anywhere on the layout background and use the "+" (in) and "-" (out) buttons to zoom the entire layout or use the mouse wheel to zoom the layout in and out centered on the cursor location.

Fit in View

- *Fit In View* scales the viewing grid so that all items in the layout are visible. It is a convenient way to restore a layout that has been zoomed or moved.
- Right-click on the layout background to open the context menu and select **Fit in View**.
- *Fit In View* is applied automatically when changing to *Fullscreen Mode* (see "[Expanding Items to Fullscreen Mode](#)").

Section 24.12 – Rotating an Item

There are several ways to rotate an item in a layout. A red directional arrow will indicate that the item is in rotation mode.



- Hold **Alt** and click and drag over an item. Release when the item is at the desired angle. Hold **Alt + Ctrl** and click and drag to limit rotation to increments of 30 degrees.
- Click and hold the **Rotate** button () , then move the mouse to rotate the item. Release when finished. Hold **Ctrl** while holding the **Rotate** button to limit rotation to increments of 30 degrees.
- Select **Rotate to** in the item's context menu to choose from the options *0, 90, 180 or 270 degrees*.

Section 24.13 – Creating a Zoom Window

The *zoom window* feature selects a rectangular region in an item's display to instantly open that selected region as a new zoomed-in item on the current layout. Any number of zoom regions can be created on an item, and a zoom region can be moved from one camera to another in the same layout. Zoom windows are saved with the layout, and can be especially helpful for viewing fish-eye camera output (see "[Dewarping Controls](#)").

 **NOTE:** Zoom windows set the camera's resolution to high.

Zoom regions on the source camera are editable, both by clicking and dragging inside a zoom region to reposition it, or the border of the zoom region to adjust its size. The related zoom window will dynamically adjust.

Closing a zoom window deletes the zoom region on the source item.

Configure a Zoom Window

1. Select a camera item.
2. Click on the **Create Zoom Window** icon () , then drag a rectangle over the desired area. A new zoom window item will open in the current layout.



Section 24.14 – Saving and Locking Layouts

A layout remains local and will only be available during the current session unless it is saved. Saving a layout saves the position and rotation of all items. Once a layout is saved, it is added to the resource panel under layouts and the names of the users who have access to it. Saved layouts that were open when a session closed will automatically reopen the next time a user logs in.

- Use *Save Current Layout* (**Ctrl + S**) to save the layout name with its current name (as shown in the tab header caption).
- Use *Save Current Layout As* (**Ctrl + Alt + S**) to enter a name.

Save a Layout

1. Right-click on the tab name in the navigation panel and select **Save Current Layout** or **Save Current Layout As** from the context menu.
2. Right-click on the viewing grid of the layout and select **Save Current Layout** or **Save Current Layout As** from the context menu.
3. Click on the desired layout in the *Resource Panel* and select **Save Current Layout As** to save it with a new name.

Lock or Unlock a Layout


A layout can be locked so that no changes at all are permitted until it is unlocked. This includes item rotation, cell spacing, aspect ratio or window zooming.

1. Right-click on the viewing grid of the layout to be locked and select **Layout Settings** in the context menu.
2. In the *General* tab, click the **Locked** toggle.
3. Click *OK* to accept or *Cancel* to discard changes.

Section 24.15 – Deleting Layouts

Delete a Layout from the Resource Panel

1. Select the layout to delete, or use **Shift + Click** to select multiple layouts in the [Resource Panel](#).
2. Open the context menu and choose *Delete* (or press the delete key).
 - If the layout is shared, click *Delete* again in the confirmation dialog.
3. The layout will be deleted from all clients and users in the Site.
 - [Locked Layouts](#) cannot be deleted.

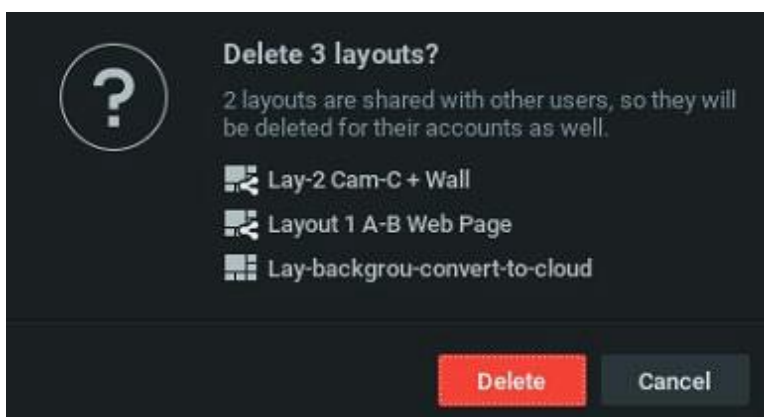

Section 24.16 – Video Wall Mode

Video Wall mode enables the DW Spectrum desktop client to remotely control a display on other monitors in the Site via a LAN, WAN, or an Internet connection.

A special video wall license is required (see "[DW Spectrum Licenses](#)"), and each license enables a video wall on up to 2 monitors (for example, 4 licenses can make a video wall on 8 monitors). When a video wall license is invalidated, the *Video Wall Failover* feature starts, providing a 7-day grace period to prevent any interruptions in the video wall, allowing enough time to resolve the license issue (see [Expired and Invalid License Keys](#)). A countdown will be shown until the video wall license key has been restored, or a new one is activated in its place. If no action is taken, the error message "Not enough licenses" will be shown, and the video wall will be disabled. Video wall failover is automatically enabled after the video wall is configured.

 **NOTE:** To be able to access, configure and control a video wall, a user must be assigned the related permissions (see "[Permissions Management](#)").

Layout and camera settings may be changed while editing the video wall screen, and settings are saved on the machine running the video wall.

The resolution of a camera in a video wall can be changed via the context menu, but the change must be made in the *Screen* under *Video Walls* in the resource panel, not in the standard layout.

Video walls do not display any overlays or performance alerts while a camera is in live mode, nor display the Timeline unless that option is enabled. However, the timestamp is always displayed when a video wall camera is in Archive mode. Backgrounds can be added, and logical ID's can be assigned to video wall layouts.

Video Wall Architecture

A *Video Wall Server* hosts the main Database of a *Video Wall Cluster*. Video wall displays can be connected to this server, allowing it to act as the *Video Wall Processor* as well. All computers that are part of the video wall cluster (clients and controllers) should be Cloud connected or otherwise able to connect to the server.

The *Video Wall Processor* is the computer to which video wall displays are connected, and depending on its configuration, can handle one or several displays. There is no limit to the number of video wall processors that can be combined in a video wall cluster.

A *Video Wall Controller* is any computer that can connect to and control a video wall. It can even be a laptop; the only requirement is that the video adapter should support OpenGL version 2.0 or higher.

To operate a video wall properly, DW Spectrum should be installed on every computer in the video wall cluster:

- Video Wall Server: Full installation
- Video Wall Processor(s): Client only installation
- Video Wall Controller(s): Client only installation

If all video wall components are installed on one computer, choose the full installation.

Initial video wall configuration is performed in several steps:

- [Configuring a Video Wall Display](#)
- [Switching to Video Wall Mode](#)
- [Controlling Video Wall Displays](#)

See also [Delete a Video Wall or it's Elements](#), or [Push an Operator's Screen to a Video Wall](#).

The number of displays available to any single computer is limited by the number of video outputs. To

extend the video wall, additional computers must be added to the video wall cluster. See "[Configuring Video Wall on Several Computers](#)".

Section 24.17 – Configuring a Video Wall Display

Use the desktop client running on the display computer to complete the following steps.


Create a New Video Wall

1. Open the **Main Menu** and choose **New > Video Wall**.
2. Enter a name for the video wall.
3. Apply changes.
4. The newly created video wall will be added to the resource panel.

Configure Video Wall Layout

To make a computer display part of the video wall, the following steps must be taken on that computer:


1. Right-click on the video wall in the resource panel and choose **Attach to Video Wall**.
2. DW Spectrum automatically detects, numbers, and previews the displays connected to the computer.

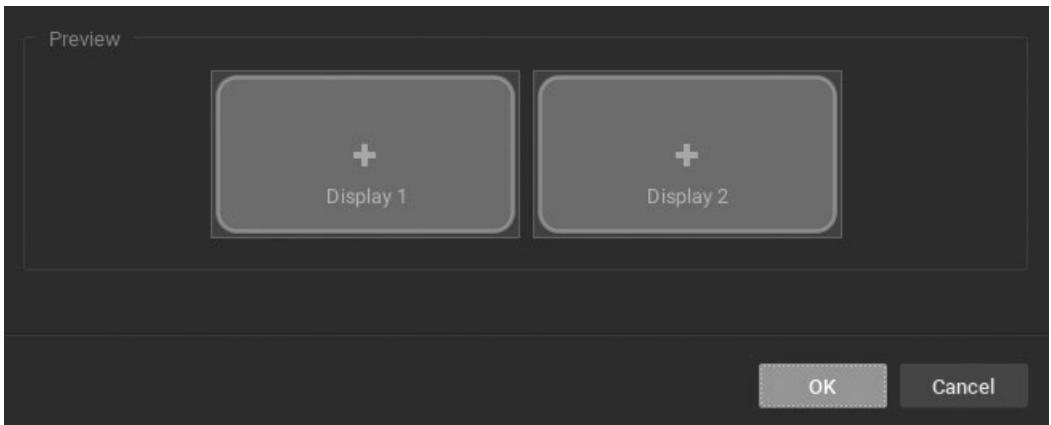

3. Click on an item in the dialog – it will change color and be retitled 'New Item'. Drag the edges to resize the item, click and drag in the center to reposition it, or click on the "X" in the upper-right corner to remove the screen.




4. Typically, one virtual screen represents one physical display, one virtual screen can be stretched across multiple physical displays:

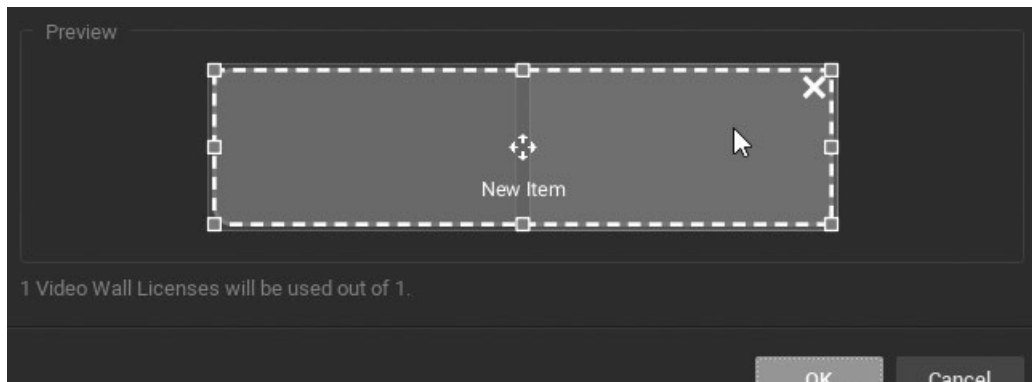

Or one physical display can contain multiple virtual screens, in various combinations:



5. Once the screens are arranged as desired, click OK to save the configuration.

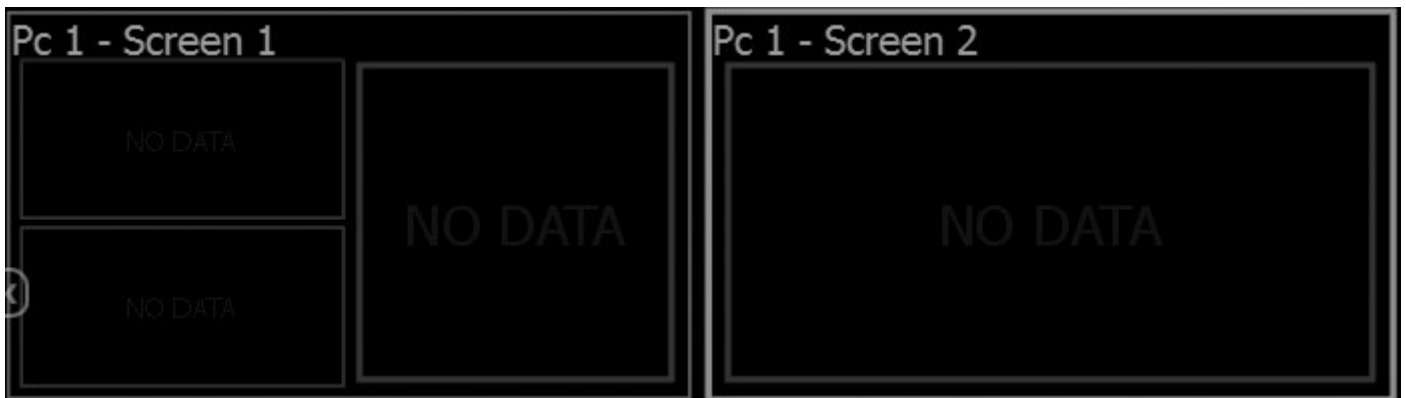

6. Drag and drop resources (devices, web pages, local files, etc.) from the resource panel into the video wall layout. Each virtual screen can hold a single device or an entire layout.

- To remove a resource from a virtual screen, right-click on it in the video wall layout and click *Clear Screen*.
- To simplify the calibration process, the identification information of a resource can be added to the corresponding physical display; right-click on the desired virtual display and click *Identify*.

 **NOTE:** [Cross-Site Layouts](#) cannot be used.



7. To save changes, right-click on the video wall in the resource panel and choose *Save Current Matrix*. The matrix will be added to the resource panel under the current video wall. Right-click to rename, load or delete it.
8. Right-click on the video wall in the resource panel and choose *Save Video Wall (Ctrl + S)*.

To finalize configuration, [switch the video wall processor to video wall mode](#). After a video wall has been started, the current configuration can also be changed on the video wall controller. To restore a video wall view, expand the video wall in the resource panel, right-click on a saved matrix and click *Load Matrix*.

Open Video Wall on a Video Wall Controller

- Drag the video wall onto the layout.
- Right-click on the desired video wall in the resource panel and click *Open Video Wall*.

Section 24.18 – Switching to Video Wall Mode

To switch to video wall mode, right-click on **Video Wall** in the resource panel and choose *Switch to Video Wall Mode* and click *Close* on the dialog window.

Several instances of the client will be launched. The client will be switched to video wall mode and become inoperable. Now, settings can be changed, and the video wall can be controlled only from the video wall controller.

Usually, video walls are controlled from a video wall controller, and the computers hosting the displays are easily accessible, so automatic switching to video wall mode is recommended.

1. Right-click on the **Video Wall** in the resource panel and choose **Video Wall Settings**.
2. Click on **Launch video wall when Windows starts** and click *OK*.

 **NOTE:** This option is available for Windows PCs only and is enabled by default.

To switch back from video wall to standard mode, close all client instances and relaunch the client once more. In this case, the operator won't be able to control displays connected to the video wall processor and the corresponding screens will be displayed in the resource panel as offline.

Section 24.19 – Configuring Video Wall on Several Computers

To increase the number of video walls, additional video wall processors must be added.

Add a Video Wall Processor

1. Run the desktop client on the PC to be added to the current video wall. Physical displays should be connected to this machine.
2. Right-click on the desired video wall in the resource panel and choose **Attach to Video Wall**.
3. Repeat all steps described in "[Configuring a Video Wall Display](#)".
4. Switch to **Video Wall Mode** (see "[Switching to Video Wall Mode](#)").
5. Repeat the steps above on each video wall processor.

Video wall mode will be extended and include displays connected to the newly attached video wall processors.

Section 24.20 – Deleting a Video Wall or Elements

To delete a video wall, right-click on it in the resource panel and click *Delete*, then click *Delete* in the confirmation dialog. This will delete all screens and configurations related to this video wall, and will stop the video wall on every video wall processor.

The Following Video Wall Elements Can Be Deleted:

- **Screen** – Right-click on a screen within a video wall in the resource panel and click **Delete**, then click **Delete** in the confirmation dialog. This stops the video wall in the corresponding physical display.
- **Matrix** – Right-click on a video wall matrix in the resource panel and click **Delete**, then click **Delete** in the confirmation dialog to delete a saved configuration.

Section 24.21 – Controlling Video Wall Displays

Users with the relevant permissions can change the layouts that are placed on a video wall.

When a video wall display is opened on the video wall controller, the user can control it like any other layout – change the layout, navigate through Archive, perform searches, etc. All changes made on the video wall controller are immediately displayed on the video wall itself.

The video wall controller's desktop view can be shown on the video wall. See "[Pushing Operator's Screen on Video Wall](#)".

Control a Video Wall

1. Use one of the following to open the video wall on the video wall controller:
 - Drag the video wall onto the layout.
 - Right-click on the desired video wall in the resource panel and click *Open Video Wall(s)*.



NOTE: It is not possible to open videos in this layout.

2. Double-click on the desired video wall screen to enter control mode. The layout of this screen will be opened and any necessary operations can be performed:

- [Adding Items to a Layout](#)
- [Removing Items from a Layout](#)
- [Selecting Items in Layout](#)
- [Moving and Swapping Items in Layout](#)
- [Resizing Items](#)
- [Cell Spacing](#)
- [Cell Aspect Ratio](#)
- [Creating a Zoom Window](#)
- [Working with Multiple DW Spectrum Windows](#)
- [Navigating through Archive and Live](#)
- [Pushing Operator's Screen on Video Wall](#)

All changes will be reflected *immediately* on the corresponding video wall display.

Section 24.22 – Pushing the Operator's Screen on a Video Wall

Windows only. DW Spectrum provides the ability to push the operator's screen to a video wall. This is done from the *Video Wall Controller*:

1. Open the video wall on the video wall controller by dragging the desired video wall from the resource panel onto the layout, or by right-clicking on the desired video wall in the resource panel and clicking *Open Video Wall*.
2. Right-click on the desired screen and choose *Push my Screen*. Everything displayed on the operator's desktop will be sent to the video wall screen, including sound.
3. To stop the broadcast, locate the desired screen in the resource panel or on the video wall layout, right-click and click *Clear Screen*.

Section 24.23 – Web Pages and Integrations

Webpage integrations in DW Spectrum allow for interaction with external services and the display of HTTP-based information within a layout cell, a scene, or a dedicated window. For instance, you could place a camera's embedded web-based configuration tools directly alongside its video stream. [Plugin Integrations](#) serve as data connectors that facilitate the exchange of analytical metadata and configuration settings between the Desktop Client and a specific camera.

DW Spectrum can display web pages in the layout using the built-in Chromium browser. This can be useful, for instance, for modifying camera parameters on an external web page, or to open an external Site such as access control or analytics while also performing surveillance monitoring. Additionally, a web page can be used to view videos and download files.

For convenience, login credentials entered on any website will be saved between browsing sessions unless the user manually signs out of the account before the end of a browsing session.

A web page or integration can be opened in a separate instance of DW Spectrum. Open the context menu and choose **Open in > Dedicated Window**.

Add a New Web Page Item

 **IMPORTANT:** Create web pages as integration if they need to interact with the Site client API.

1. Open **Main Menu > Add > Web Page** or right-click on the **Web Pages** icon in the resource panel and select "New Web Page".
2. In the dialog that opens, enter the destination **URL** and a common **Name** for the web page. The name will be displayed in the resource panel and on the header of the web page within the layout.
3. If needed, enable "Proxy this webpage via server" and select which server to use as the proxy for the web page. This setting makes web pages accessible on the server and accessible on the client computer.
4. The web page will open as a new item in the current layout and be added to the *Web Pages* section of the *Resource Panel*.

In a web page item, the *Show Info* option toggles the presence of the URL as a transparent overlay in the bottom left corner of the cell. Use the **Web Page Settings** option from the item's context menu to change the name or URL.

Add a New Integration

1. Open **Main Menu > Add > Integration** or right click on the *Integration* icon in the resource panel and select **New Integration...**
2. In the dialog that opens, enter the destination **URL** and a common **Name** for the *integration*, the **Name** will be displayed within the Integration folder in the Resource Panel and on the header of the integration within a Layout.
3. To make an integration accessible on client machines that do not host the server, select the advanced option to "Proxy this integration through the server" and select which server to use as the proxy.
4. The integration will open as a new item in the current *Layout* and be added to the integration section of the *Resource Panel*.

 **NOTE:** An integration may interact with the Desktop Client and request access to the user session. Contact support for additional information (see "[Contacting Support](#)").

Clear Browsing Data Saved Between Sessions

1. Open the **Main Menu**, open **Local Settings > Advanced** and click **Clear Local Cache**.
2. Restart the DW Spectrum desktop client.

Advanced Settings

The following settings are found in the *Advanced* tab within the web page and integration settings dialog, that is presented when creating a new entry or when opened by using the context menu on a web page or integration resource.

- *Allow opening web page without SSL certificate checking* – If enabled, DW Spectrum will not check the web page's security certificate. No warning will be shown if the certificate is not secure.
- *Proxy all requested contents* – If enabled, any service or device on the server's network can be accessed by the users of the web page. This setting is only available if "Proxy this Webpage via server" is enabled.
- Use the web page context menu to:
 - Toggle an overlay of the URL and toolbar controls (refresh, back).
 - Open the web page settings dialog.
 - Save the web page to a Site-accessible location.

Part 25: Playback in DW Spectrum

DW Spectrum provides viewing and playback of the following content:

- *Cameras* – Live and Archived footage.
- *I/O Modules* – Sound can be recorded from an I/O module with a microphone connected and played live or from Archive.
- *Local files* – Saved video and image files.

In addition to the internal dynamic resolution switching, use these manual adjustment features if there is image stuttering during live streaming, or too much time between actual action and displayed action in the live view:

- [Setting Item Resolution](#)
- [Setting Layout Resolution](#)
- [Configuring Live Buffer Size](#)
- [Double Buffering](#)
- [Disabling Blur for Intel HD Graphics](#)
- [Hardware Video Decoding](#)

There are several tools that make Archive search faster and easier:

- [Navigating and Searching Video](#)
- [Using Bookmarks](#)

This section also describes:

- [Playing Local Video Files](#)
- [Exporting Video](#)
- [Using Audio](#)
- [Taking Screenshots](#)
- [Tours](#) – Cycles display through items in a single layout
- [Showreels \(Tour Cycle\)](#) – Cycles display through multiple entire layouts

Section 25.1 – Setting Item Resolution

The default image quality for a single item in a layout can be overridden to, for example, reduce client CPU usage (set playback to low-resolution), or to enhance image quality for a given item (set playback to high-resolution).

Note that this setting is saved for each item individually, so the same device can play back at different resolution levels in different layouts. Alternatively, all the items in a layout can have their resolution set at once (see "[Setting Layout Resolution](#)").

Fullscreen mode and dewarp mode will always use the primary stream (see "[Fullscreen Mode](#)" and "[Dewarping Controls](#)" for details).

 **NOTE:** All image quality settings are dependent on the camera's primary/secondary stream settings in DW Spectrum and any inherent limitations the camera may have (see "[Dual Streaming](#)").

Specify Item Playback Resolution

1. Right-click on the item in layout to open the context menu and choose **Resolution**.
2. The default is **Auto**. Select **High** or **Low**.
3. Click the information icon **or use the item context menu Show on Item > Info (Alt + I)** to confirm the setting (see "[Image Display Controls](#)").

Section 25.2 – Setting Layout Resolution

Setting Layout Resolution Manually

The resolution for all items in a layout can be set at once. Right-click an empty space on the viewing grid, click **Resolution** in the context menu, and select **Low** or **High** – the default setting is **Auto**. The **Custom** setting appears when one or more items in the layout are set at a different resolution than the others, usually having been set manually. See "[Setting Item Resolution](#)".

Auto Pausing Video Playback

DW Spectrum also offers significant bandwidth savings with the option to automatically pause video playback after a set period of inactivity. To set this option, open **Main Menu > Local Settings > General** and check **Auto Pause Video**, then set the desired time interval (in minutes).

Section 25.3 – Configuring Live Buffer Size

On some cameras, live playback may stutter, or there may be a significant delay between actual actions and the action shown on the live view. For a better viewing experience, it may be helpful to adjust the live buffer size from the default of 500ms.

Open the **Main Menu > Local Settings > Advanced**, then adjust the **Maximum Live Buffer Length** to the smallest possible value that does not cause issues with the live view of all cameras.

- Larger buffer makes playback smoother but increases the delay between real time and the live display.
- Smaller buffer decreases the delay but can cause stutters on playback.

See also "[Double Buffering](#)" and "[Disabling Blur for Intel HD Graphics](#)".

Section 25.4 – Double Buffering

Some graphics drivers may have problems with OpenGL drawing, resulting in very high or even 100% CPU load. In this case, the issue may be resolved by disabling double buffering, which is enabled by default.

To disable double buffering, open **Main Menu > Local Settings > Advanced** tab uncheck the **Double Buffering** checkbox and restart the DW Spectrum client to apply the change.

Section 25.5 – Disabling Blur for Intel HD Graphics

In some situations, the client application may work incorrectly on certain computers where an integrated Intel graphic chip (Intel HD Graphics) is installed. This may result in a noticeable drop in framerate or incorrect video playback. In this case, it may help to disable the blur effect in client settings.

Open **Main Menu > Local Settings > Advanced** and check *Disable blur*, and click **Apply** or **OK**. The DW Spectrum client must be restarted for this change to take effect.

 **IMPORTANT:** Do not disable blur unless the graphic adapter is from Intel and there are noticeable graphics issues.

Section 25.6 – Hardware Video Decoding

The DW Spectrum desktop client running on the Windows and Ubuntu operating Sites can support hardware acceleration on the following Graphical Processing Units (GPUs):

- NVidia – Windows and Ubuntu Linux
- Intel – Windows only

Enabling hardware acceleration will free up CPU resources for other tasks and greatly benefit computers with low power hardware. By shifting the load from the CPU to the GPU, the client can decode very high resolution (e.g.

16MP, 32MP) cameras and streams for a greater number of Sites. This option is disabled by default.

Open **Main Menu > Local Settings > Advanced** and toggle the *Use Hardware Acceleration Decoding* checkbox to enable or disable it.

Section 25.7 – Navigating and Searching Video

Because an Archive may contain a significant volume of video data, the following search methods can minimize the time spent searching for a particular event or segment.

- *Timeline* – Speeds navigation through live and Archived footage. See "[Parts of the Timeline](#)" and "[Using the Timeline](#)".
- *Calendar* – Zooms the time to a selected date (see "[Using the Calendar](#)").
- *Motion Smart Search* – Selects a region on video, refines the Archive, and highlights fragments that include motion (see "[Performing Motion Smart Search](#)").
- *Thumbnail Navigation* – Small previews are displayed on top of the Timeline to help locate a particular image or event (see "[Using Thumbnails](#)").
- *Preview Search* – Select a region on the Timeline to view videos that represent a time period based on timestamps (see "[Preview Search](#)").
- *Bookmarks* – Select a segment of footage from a single device, give it a name, description and tags, and instantly export the bookmark (see "[Using Bookmarks](#)").


Section 25.8 – Parts of the Timeline

The Timeline provides a convenient way to navigate through live or Archive video and control display speed.

 **NOTE:** Timeline behavior is slightly different for Archive and live footage.

- *LIVE* – Switch the selected camera(s) to live playback mode.
- *SYNC* – Synchronize all items displayed in the current layout to the same date and time. When SYNC is enabled, the speed slider and LIVE button apply to all items in the layout. When SYNC is off, the speed slider and LIVE button apply only to the selected item. See "[Synchronizing Playback](#)".
- *Thumbnails* – Show or hide thumbnail images of the active device above the Timeline.
- *Calendar* – Opens a calendar option for Timeline navigation. See "[Using the Calendar](#)".

Timeline for Archive Display

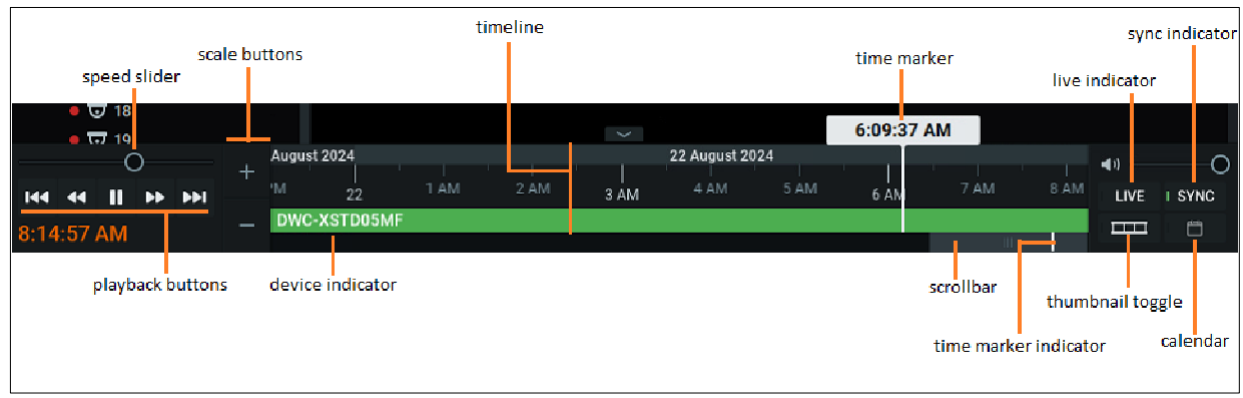

Timeline Scale and Position Controls

- *Timeline* – Controls navigation through Archive footage.
- *Time marker* – Indicates the current date and time of the selected video.
- *Scrollbar* – Quickly move along the Timeline. The scrollbar scales with the Timeline zoom level.
- *Time marker indicator* – Indicates where the time marker is relative to the scrollbar.
- *Scale buttons* – Use to scale date/time display from increments of 100ms to 1 month.
- *Thumbnails* – Click and drag the top of the Timeline to see a thumbnail view of the currently selected item (see "[Using Thumbnails](#)").
- *Device indicator* – Displays the name of the currently selected device, and also indicates Archive status, where bright green indicates a recorded segment, gray indicates no recorded footage, blue indicates a bookmark, and, if the *Motion* or *Objects* tab is active, red or yellow indicates regions where motion or objects has been detected, respectively. When a layout contains multiple devices, combined status for the unselected devices is shown in a very narrow bar beneath the larger bar.

Timeline Speed Controls

- *Playback buttons* – Start, stop, and control playback speed; click forward or reverse to jump 10 seconds.
- *Speed slider* – Provides additional control for playback speed.

Timeline Volume Control

See "[Adjusting Volume](#)"

Timeline for Live Display

By default, all devices display a live image when first opened in a layout. The last minute of the Archive is generally accessible in DW Spectrum. Usually, only the last several seconds will not be available for immediate playback (represented by diagonal stripes on the Timeline).



Section 25.9 – Using the Timeline

The Timeline itself and the scrollbar respond to a broad set of mouse wheel, mouse click, and button commands.

Click on the desired date and time on the Timeline to select it. If Archive exists at that point, the time marker is placed at that point. If not, the time marker jumps to the beginning of the next recorded segment. Playback will begin in real time if playback is active. If playback is paused, the time marker position and content remains static until the user clicks elsewhere on the Timeline.

If the desired point in time is not currently visible there are several ways to locate it.


Scroll the Timeline

- Click and drag the scrollbar to the desired position.
- Use **Ctrl + Scroll Wheel** over the Timeline or scrollbar.


Scale the Timeline

Scaling is centered on the cursor unless the cursor is at the very end of the Timeline, in which case scaling is anchored to that end point. The scrollbar scales with the Timeline to indicate how much of the total Timeline is currently visible on screen. The white time marker shows the location of the time marker in relation to the current Timeline display.

The scrollbar is small because only a small portion of the total Timeline is visible, and the scrollbar overlaps the time marker indicator because the time marker is currently visible

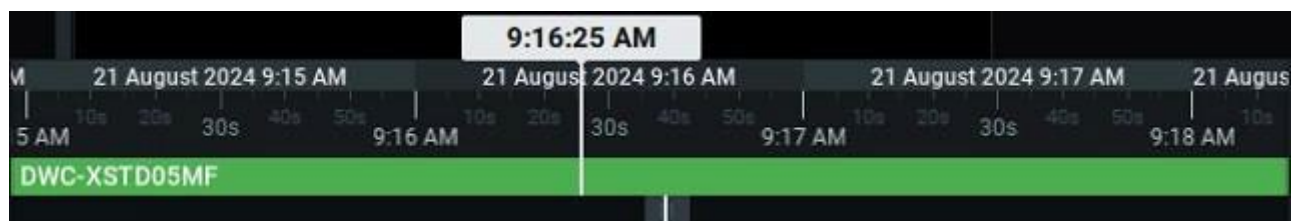

The scrollbar is large because a large portion of the total Timeline is visible, and the scrollbar does *not* overlap the time marker indicator, because the time marker (which is still at 8/20/2024) is not currently visible

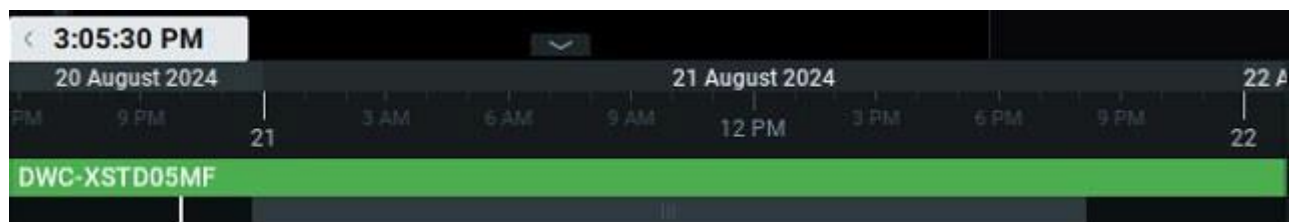

- Use the mouse wheel over the Timeline or scrollbar to zoom in (smaller time increments) or out (larger time increments).
- Click on the scale buttons to zoom in (+) or out (-) by 10%. Double-click to zoom by 20%.
- Click and hold the scale buttons for rapid zoom.
- Click in the scrollbar background area to scroll "screen by screen" in increments the size of the current display. Double-click to scroll by two screens.
- Double-click on the scrollbar to zoom out to the maximum available view.

During Playback

Press Z to rewind to the previous chunk.

- If the rewind button is pressed while in live mode, the mode will switch to Archive playback.
- If the fast forward button is pressed while viewing Archive, the display will switch to live mode once the current time is reached.
- Use the **Speed Slider** to temporarily change playback speed by clicking and dragging it to the right for fast forward or to the left for fast rewind.
 - The **Speed Slider** can also be set in 2x, 4x, 8x, and 16x increments. Release to return to 1x speed (during playback) or 0x (when paused).

 **NOTE:** When SYNC is enabled, the speed slider and LIVE button apply to all items in layout. When SYNC is off, the speed slider and LIVE button apply only to the selected device.

Control Playback Speed

Icon	Keyboard shortcut	Function
	Space	Toggle between play and pause
	Ctrl + →	Fast forward. Available speeds are 2x, 4x, 8x, and 16x
	Ctrl + ←	Rewind. Available speeds are 2x, 4x, 8x, and 16x
	X	Jump forward to the next recorded chunk
	Z	Jump backwards to the previous recorded chunk

When Paused

Icon	Keyboard shortcut	Function
------	-------------------	----------

	Ctrl + →	Jump to the next frame
	Ctrl + ←	Jump to the previous frame
	X	Jump forward to the next recorded chunk
	Z	Jump backward to the previous recorded chunk

The speed slider can be set to 0.25x, 0.5x, 1x, 2x, and 4x normal playback speed when playback is paused.

Select a Time Segment

- Click and drag on the Timeline.
- Hover over the Timeline and open the context menu to choose **Mark Selection Start** (shortcut [I]), then move to the end location and choose **Mark Selection End** (shortcut [J]).


The selection will be highlighted with blue. Once a segment is selected, click and drag the edges to adjust its length. The context menu can also be used to select *Clear Selection* or *Zoom to Selection*. Clicking outside the selected segment will clear the selection.

Section 25.10 – Using Thumbnails

Thumbnails are single snapshots taken from Archived video footage, providing a visual preview of footage to speed and simplify Archive searches. Hover the mouse cursor over the Timeline to see a thumbnail for that moment in the Timeline. [Windows only]

Open the Thumbnail Panel

- Select the desired device in layout then click and drag the upper edge of the Timeline to open the thumbnail panel.
- Click on the Thumbnail button () to show/hide thumbnails.

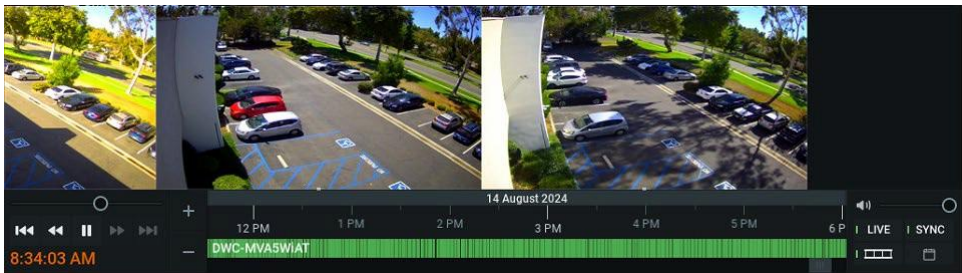

- The thumbnails will become larger, the higher that the frame is dragged away from the Timeline.
- A tiny dot near the bottom-center of each thumbnail indicates the exact moment the snapshot was taken. Click on a thumbnail to jump to the moment in Archive when it was taken.
- If no thumbnails are displayed, there is no Archive available for the selected camera during the visible period.
- To close the thumbnails, click and drag the upper edge of the thumbnails panel down or click on the thumbnail button ()

Section 25.11 – Synchronizing Playback

All cameras in a layout can be synchronized to a common playback date and time by enabling the

SYNC button (). When SYNC is on, the speed slider, playback controls (ex. search, fast forward, rewind), and LIVE button apply to all items in the layout. If no Archive exists for a given camera when devices are synced, that item displays "no data".

When SYNC is off, the speed slider, playback controls, and LIVE button apply only to the selected item. A different point in time can be viewed from each camera feed. Thin white lines on the Timeline will indicate the current position of each camera that has Archive. If no Archive exists for a given camera, that device will jump to live display.

Section 25.12 – Using the Calendar


The calendar is used to navigate the [Timeline](#). The calendar is toggled by clicking on the calendar icon in the lower right corner of the [Timeline](#). The calendar will overlay the notification panel and viewing grid when the desktop client window is of a small size.

Using Visual Accents on the Calendar

- An orange square outlines the current Site date.
- Date and time display on the calendar:
 - A green underline shows recordings are present for that day or time and the *Bookmarks*, *Notifications*, or *Alerts* tab is selected in the notification panel.
 - A red underline shows motion has been detected during that day or time and the *Motion* tab is selected in the notification panel.
 - A yellow underline shows objects have been detected during that day or time and the *Objects* tab is selected in the notification panel

Navigating the Calendar

- Click on the month and year header to open the month picker, or use the arrows to move forward or backward by a month.
- Click on a date and the Timeline will center on the selected date.
- Click on a time and the Timeline will center on the selected hour.
- **Ctrl + Click** to select beginning and ending dates or blocks of time to display.
- Quick jump buttons along the bottom of the calendar will select today (the current Site date), the past hour, the past 24 hours, the past 7 days, or the past 30 days.

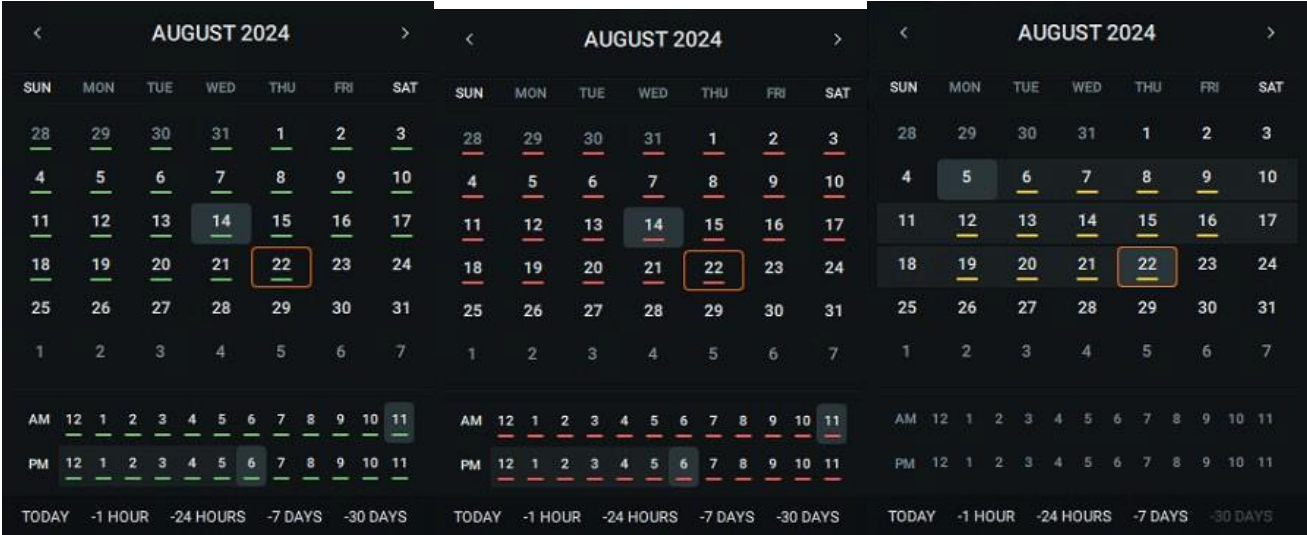

Section 25.13 – Performing Motion Smart Search


Motion Smart Search instantly searches Archive to discover and highlight the segments that contain motion in a user-selected region of a video image. Simply select the desired region and DW Spectrum will display all segments that contain motion throughout the Archive (scanning through a yearly Archive only takes a few seconds).

Motion smart search requires that the selected camera supports motion detection, and that DW Spectrum motion detection be enabled.


 **NOTE:** Motion smart search cannot be applied to motion mask regions, where motion detection has been blocked (see "[Setting up Motion Detection](#)"). However, if no area is selected, DW Spectrum returns results from the entire video region.

1. Open the camera's motion grid in one of the following ways:
 - o Use the  icon on the camera tile.
 - o Open the camera's context menu and choose *Show Motion/Smart Search*.
 - o Select the camera and press the **M** key.
 - o **Shift + Click and drag** to simultaneously enable motion smart search and select the desired region.

The motion grid will display as a gray overlay. Red cell outlines indicate that motion is detected:

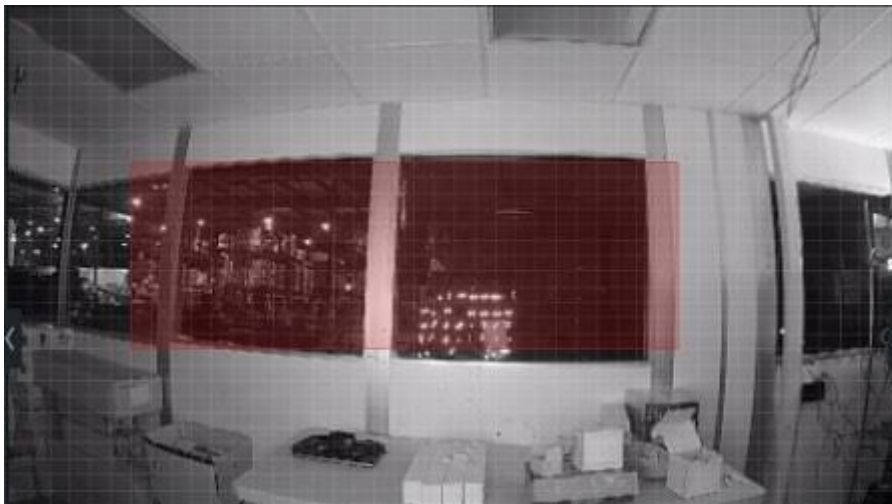

2. Click and drag to select the region where motion smart search should be applied or use **Ctrl + Click and drag** to select multiple areas.

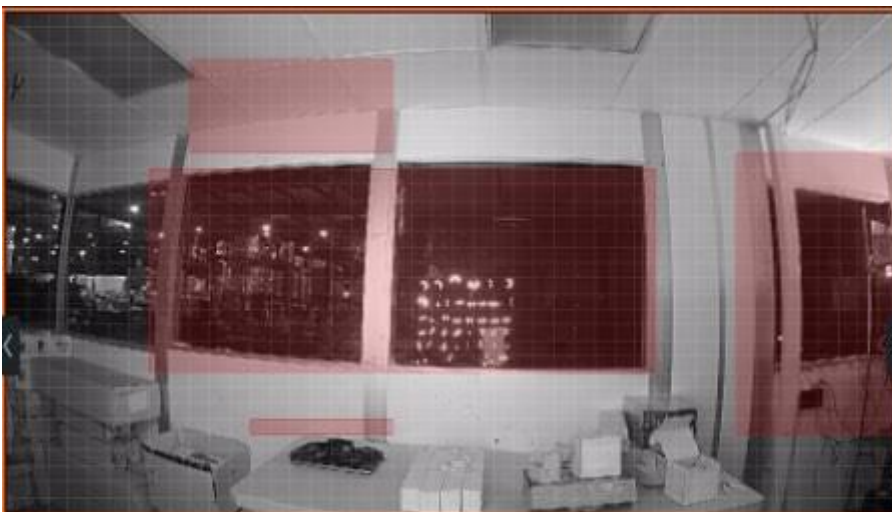

3. Once the region is selected, red lines will appear on the Timeline, each of which indicates an Archive period that contains motion in the selected region.
4. Scroll through the Timeline to quickly and easily locate motion in the Archive.
5. To disable motion smart search, clear all regions in the motion grid, toggle the  button, or use the context

menu option **Hide Motion/Smart Search (M)**.

Section 25.14 – Preview Search

This feature helps to search through data by breaking a selected time range into smaller segments of equal length and displaying these segments as separate items in a new layout tab. Unrecorded time segments are displayed as gray or an empty space on the Timeline.

Preview search can be used iteratively until the desired event is located.

For instance, a one-month period will be broken down into ten 3-day segments, the 3-day segments will be broken down into nine 8-hour periods, the 8-hour segments into eight 1-hour periods, and so on. It may therefore take three to five iterations to locate a given event within an initial period of several months.

To Perform Preview Search

1. Select the desired camera in layout.
2. Click and drag on the Timeline to select a period to search.
3. Right-click on the selection and choose **Preview Search** in the context menu. A new tab will open with multiple items each showing a still of the start of a segment, in order from upper left to lower right.



4. Click on an item to move the Timeline to the starting point of the segment shown in the still.
5. Click the play button to view the selected segment in that item.
6. Use the Timeline context menu to perform any of the available commands (clear or zoom to the selection, add a bookmark, export video, or perform another preview search).
7. Repeat the above steps as needed.

Section 25.15 – Viewing Archive from Deleted Cameras

When a camera has been deleted from the Site, access to its footage is lost. To make it available again, the Index that maps the relationship between Archive filenames and the physical location of the Archive files on the storage drive must be restored – see "[ReIndexing and Fast-Scanning Archives](#)".

After the Archive is restored, the deleted camera will be displayed in the resource panel again. Though the device will be marked offline and is not available for live video, it is possible to navigate through its Archive.

Section 25.16 – Using Bookmarks

A bookmark is footage in the Archive that is marked and named to make it easy to find and review. When the "[Bookmarks Tab](#)" of the notification panel is active, bookmarks for the selected camera appear as blue segments on the Timeline. When several items are open in a layout, the Timeline only displays bookmarks for the selected camera.

Hovering the cursor over a bookmarked segment on the Timeline opens controls for that bookmark.



	Plays the bookmark from the beginning
	Opens the <i>Bookmark</i> dialog where the name, description and tags can be edited
	Opens the <i>Export Video</i> dialog
	Deletes the bookmark

Bookmarks can be created manually on the Timeline (see "[Creating Bookmarks Manually](#)"), or created automatically as the action of an event rule (see "[Create Bookmark](#)"). The action of completing an acknowledgment in response to a notification also generates a bookmark of the triggering event.

The name, description and tag properties of bookmarks are searchable and editable (see "[Searching Bookmarks](#)"). Bookmarks are exported with the Archive of cameras, and can be exported and saved separately (see "[Exporting Bookmarks](#)"). When Archived footage is deleted, the associated bookmarks are deleted as well. Bookmarks can also be manually deleted (see "[Deleting Bookmarks](#)").

Play a Bookmark

- Hover over the bookmark in the Timeline and click the play icon (opens in the current layout).
- Double-click a record in the bookmark log (opens in the current layout).
- Open the context menu in the bookmark log and choose **Open in New Tab** (opens in a new tab).

Section 25.17 – Creating Bookmarks Manually

Create a Bookmark Manually

1. Open a camera with recorded Archive
2. Select a period of time to be bookmarked on the Timeline:
 - Click on the Timeline and drag the time indicator line to mark a segment, which will be highlighted with a blue overlay.
 - Right-click on the Timeline to open the context menu and select **Mark Selection Start** (shortcut [), then right-click on the desired end point, and select **Mark Selection End** (shortcut]).
1. Once a time segment is defined, it can be adjusted by clicking and dragging the edges of the blue block, or

removed entirely by clicking **Clear Selection** in the Timeline context menu.

2. Right-click in the blue highlighted area and select **Add Bookmark**.
3. In the *Bookmark* dialog that opens, enter a **Name**, **Description** and one or more optional – new or preexisting – **Tags**.
4. Click *OK* to accept or *Cancel* to close without saving.

Section 25.18 – Searching Bookmarks

The *Bookmark Log* is used to search for and edit bookmarks (see "[Searching and Filtering in DW Spectrum](#)"). The "[Bookmarks Tab](#)" also provides some search and filter operations.

Open the Bookmarks Log

1. Open the **Main Menu** and select **Bookmark Log (Ctrl + B)**.
2. Any of the columns (*Name, Camera, Start time, Length, Created, Creator, Tags, Description*) can be sorted in ascending or descending order. The bookmark log can be filtered as follows:
 - *Date* – Click on the pull-down arrow to open a calendar popup for the start (left date field) and end (right date field) date filter.
 - *Devices* – Click on **All Camera** to open the standard *Select Cameras* dialog, from which available devices, grouped by server, can be selected.
 - *Search* – Text entered in this field yields any bookmarks containing those characters in their *Name, Description* and *Tags* fields, limited to 1000 results. Results can be cleared by clicking **Clear Filter**. See "[Searching and Filtering in DW Spectrum](#)" for more details.
3. The following operations can be performed from the *Bookmark Log* context menu:
 - *Open in New Tab* – opens a new layout tab and plays the highlighted bookmark (double-click).
 - *Edit Bookmark* – opens the *Bookmark* dialog where the *Name, Description* and *Tags* for the highlighted bookmark can be edited.
 - *Export Bookmark* – exports a video file containing the selected bookmark(s). Available for a single bookmark, or multiple bookmarks (see "[Exporting Bookmarks](#)").
 - *Copy Bookmark Text* – copy the selected bookmark's contents in text format.
 - *Delete Bookmark* – deletes the selected bookmark(s). Available for a single bookmark, or multiple bookmarks.

Section 25.19 – Exporting Bookmarks

Bookmarks are saved to Archive and can be exported like any other video. Use one of the following to locate a bookmark and open the **Export Video** dialog. Exported bookmarks can be viewed and manipulated in the same way as exported layouts. Note that bookmarks are included in exported video.

- Open **Main Menu**, choose **Bookmark Log**, right-click on the desired bookmark and select **Export Bookmark**.
- Use the Timeline to find the desired bookmark (see "[Searching Bookmarks](#)"), hover over it and click on the **Export Bookmark** icon in the bookmark dialog.

Use the *Export Video* dialog as described in "[Single Camera Export](#)".

To Export Multiple Bookmarks

1. Select the desired bookmarks in the *Bookmark Log* by using **Ctrl + Click** to select them one by one or **Shift + Click** to select all items between multiple clicked items.
2. Right-click on any of the selected items and choose **Export Bookmarks**.

3. Use the *Multi-Video* tab of the *Export Video* dialog that opens, as described in "[Multi-Video Export](#)".
 - Optionally, apply filters as described in "[Single Camera Export](#)".

Section 25.20 – Deleting Bookmarks

Bookmarks can be deleted individually from the Timeline or the *Bookmark Log* dialog.

Delete a Bookmark Using the Timeline

- Hover the mouse cursor over the bookmark to open its control dialog and click .
- Right-click on the bookmark and click **Remove Bookmark**.

Delete a Bookmark Using the Bookmark Log

1. Open the **Main Menu** and choose *Bookmark Log* (**Ctrl + B**).
2. Select the desired bookmarks by clicking and dragging, **Ctrl + Click**, or **Shift + Click**, open the context menu, and choose **Remove bookmarks**.
- 3.

Section 25.21 – Playing Local Video Files

DW Spectrum can browse and playback recorded videos within the desktop client or on the welcome screen without launching a Site.

Most major codecs and containers are supported, and DW Spectrum can browse local files from the welcome screen without connecting to a Site.

Local files include:

- [Files found in designated DW Spectrum Media Folders](#)
- [Recently opened local files](#)
- [Exported Files](#)
- [Screen Recordings](#)
- [Screenshots](#)

The local files list updates when a source folder is changed or a file in the folder is removed or added.

Browse and View Local Files from the DW Spectrum Welcome Screen

1. Open the **Main Menu** on the welcome screen and select **Browse Local Files**.
2. The DW Spectrum interface opens to a blank new layout, with all local files found in the specified media folders listed in the resource panel.
3. Files and new layouts can be added and arranged, and the Timeline can be used from this screen, but layouts cannot be saved.
4. To return to the Site connection page, go to **Main Menu** and select **Show Welcome Screen**.

Rename Local Files from the Resource Panel

1. Right-click on a local file to open the context menu.
2. Choose **Rename (F2)** to make the name editable.
3. Type the desired file name.
4. Press **Enter**.

Sound Stream Playback (for Local Files Only)

Video files that have a 5.1 sound stream require a special setting to play back on stereo speakers.

1. Open **Main Menu > Local Settings > Advanced** tab and check **Downmix Audio from 5.1 to 2.1**.
2. Click *Apply* to save changes, *OK* to save changes and close the dialog, or *Cancel* to discard changes.
3. The DW Spectrum client will need to be restarted for this change to take effect.

See [Timeline Navigation for Local Files](#).

Section 25.22 – Timeline Navigation for Local Files

Navigation through local files is very similar to navigation through recorded Archive, with the following exceptions:

- Items are not synchronized; **Sync** is always disabled.
- Files are not live; **Live** is always disabled.
- The Timeline does not display colored markers for any recorded regions.
-  and  buttons jump to the beginning or end of a file.

All other operations (seek, play, pause, fast forward, rewind, etc.) are available as described in "[Parts of the Timeline](#)".

 **NOTE:** If a layout contains both live streams and local files, the cameras are played back synchronously, and local files play back independently.

Section 25.23 – Configuring Local Media Folders

DW Spectrum automatically indexes the designated local media folders when it starts and displays them under *Local Files* in the resource panel.

The default media folders (customizable) are:

- Windows
 - C:\Users\<username>\Videos\DW Spectrum Media
- Linux
 - /home/<username>/Videos/DW Spectrum Media
- macOS
 - /Users/<username>/Movies/DW Spectrum Media

Add or Remove a Media Folder

1. Open **Main Menu > Local Settings > General** tab.
2. In the *Local Media Folders* section, click **Add** and choose the desired path.
3. To delete a media folder, select the folder from the list and click **Remove**.
4. Click *OK* when finished or *Cancel* to discard changes.

Open Local Files That Are Outside the Media Folders

To view local files that are not shown in the resource panel, use one of the following:

- Drag and drop a video file(s) or folder from Windows Explorer to copy it into the DW Spectrum viewing grid.
- Open the **Main Menu** and select **Open > Files (Ctrl + O)** then select the file(s) to be opened.
- Open the **Main Menu** and choose **Open > Folder** then select a folder to be opened.
- Right-click anywhere on the viewing grid to open the context menu, select **Open > Folder** then choose a folder.

Section 25.24 – Exporting Video

Files from a single device, bookmarks, and files from multiple devices synchronized for simultaneous playback can be exported from DW Spectrum. The export is performed separately, so other work can continue in DW Spectrum. As soon as the export is finished, the video will be available under *Local Files* in the resource panel. Exporting motion-only video ignores all gaps between motion events and stitches the separate motion events together to form seamless playback. Bookmarks are included if they exist in the exported video.

 **IMPORTANT:** Exported videos will only be available as local files until the current session ends! To make them available permanently, the exported videos must be saved to the DW Spectrum media folder (see [“Configuring Media Folders”](#)). Alternately, create and save a layout that contains the exported video(s). See [“Viewing Exported Video”](#) for more information.

Exported video in NOV or EXE format can be protected with a password, and/or exported in read-only mode, preventing any changes to the layout or item settings during playback. This protects the chain of custody and authenticity of exported video during investigations.

If a long segment is selected for export, the following warning message will appear: *You are about to export a long video. It may require over a gigabyte of HDD space and take several minutes to complete.*

The Following File Formats Are Supported

- **MKV** – Matroska (.mkv) is a more advanced format that may not be supported on some devices, such as home media players. Video and audio content are not limited to either H.264 or H.265. (Single camera only.)
- **AVI** – Audio video interleave (.avi) is more widely used, but limited to H.264. To view exported videos with other players, additional codecs may be required. If a codec is not allowed in the AVI format, a warning message will appear. (Single camera only.)
- **MP4** – MPEG-4 Part 14 (.mp4) is another advanced format that may not be played back on some devices, such as home media players. Video and audio content are not limited to either H.264 or H.265. (Single camera only.)
- **NOV** – A proprietary DW Spectrum media file (.NOV). Can only be opened by the DW Spectrum desktop client.
- **EXE** – A platform dependent executable bundle. The DW Spectrum client application is exported with the video file with the intent to distribute videos to users who do not have any codecs or media players installed. It can be opened without DW Spectrum installed on the computer, but video will be viewable only on Windows. When the executable is opened, the client launches and plays the exported video. These files can be edited, and motion detection and data processing in the recorded segments is retained.

 **NOTE:** Export is only available to users with the appropriate permissions. Export Archive permission is required for any export operation. See [“Built-In Groups and Permissions”](#) for details.

The Following Options Are Available

- [Adding a User Watermark](#) – Adds an overlay of the username to the video to identify the recording source.
- [Validating Exports](#) – Indicates any modifications that were performed to the footage being exported.
- **Read-only** – Multi-video files (EXE and NOV formats) can be exported with a read-only option.
- [Password Protected Export](#) – Multi-video files (EXE and NOV formats) can be exported with password protection.
- Other options (timestamp, logo, etc.) may be added to single-camera exports.

Section 25.25 – Single Camera Export

The following option and export overlays are available for *MKV*, *AVI*, and *MP4* export formats:

- Export Settings – Check the *Apply Filters* box to apply image filters (e.g. rotation, dewarping, image enhancement, etc.) from the source recording to the exported video.
- Add Bookmark Info – Check this box to apply the bookmark description to the exported video. Area width and font size can be changed. (Only available when [Exporting Bookmarks](#).)
- Add Timestamp – Adds a timestamp in Long (day of week, date, month, and year, hour:minute:seconds and UTC differential), Short (dd/mm/yyyy hh:mm), ISO8601, or RFC2822 format. Font size is also adjustable.
- Add Image – Browse for an image (typically a logo) to add to the exported video in the upper left corner. There are sliders for opacity and size.
- Add Text – Adds text, with settings for the width of the text field and font size.
- Add Info – Check the camera name box to add the camera's name. Check the export date box to add the export session's timestamp. Font size can be set.
- Rapid Review – Exports video at a higher playback speed than the original recording (see "[Rapid Review Export](#)"). Video must be at least 10 seconds long for this option to be available.
- ❗ **IMPORTANT:** Different codecs on the primary and secondary streams may cause playback issues. The video should be transcoded, or exported in a multi-video – EXE or NOV – format. See [Multi-Video Export](#) for details.

Export a Video Segment from a Single Camera

1. Select the desired item in the layout.
 2. Select the desired segment on the Timeline (see instructions for how to select a time segment in "[Timeline](#)").
 3. Right-click on the selected time segment to open the context menu and choose **Export Video**.
 4. Select the *Single Camera* tab in the **Export Video** dialog.
 5. Select a **Folder** where the file will be saved and enter a **Name** for the exported video.
 6. Select a **file format** from the pull-down menu.
 7. When available, check **Apply Filters** or select from the export overlays described above. Note that overlays are inserted at the upper left corner but can be clicked and dragged to any other position.
-  **NOTE:** Including filters or overlay options requires transcoding, which will increase CPU usage and export time significantly.
8. Click **Export**. A status dialog will display export progress as a percentage. Clicking **Stop Export** will cancel the operation so that no exported data is saved.

❗ **IMPORTANT:** An exported video will only be available as a local file in the resource panel until the client restarts. To make it available there for future sessions, save the exported video to the DW Spectrum media folder (see "[Configuring Media Folders](#)").

Section 25.26 – Multi-Video Export

Video and audio can be exported from the Archives of several cameras or bookmarks simultaneously (for instance, the last 10 minutes of recorded video from five different cameras).

 **NOTE:** Local files cannot be played back in a multi-video export. If a layout includes both cameras and local files, the local files will not be shown in the *Export Video* dialog and will not be exported in the resulting file. When a camera in the selection has no recorded Archive, it will be exported and "no data" will be shown when viewing the exported clip.

The exported files are saved either in a proprietary format that can be played by DW Spectrum (.nov), or as an executable bundle that can be viewed on any Windows computer (.exe). The proprietary

format has many benefits in comparison to single camera export: the exported multi-video layout can be navigated, manipulated, and searched like any other layout (see "[Synchronizing Playback](#)" and "[Smart Motion Search](#)").

 **IMPORTANT:** An exported video will only be available as a local file in the Resource Panel until the client restarts. To make it available permanently, save the exported video to the DW Spectrum media folder (see "[Configuring Media Folders](#)").

Export Multiple Items as One File

1. Open the desired layout.
2. Select the desired segment on the Timeline.
3. Right-click on the selected segment to open the context menu and choose **Export Video**.
4. Select the **Multi Video** tab.
 - Optional: check **Make read-only** to prevent the exported video from being edited.
 - Optional: check **Protect with password** to require a password to launch and view the exported file (see "[Password Protected Exports](#)" below).
5. Select **Digital Watchdog Media file (*.nov)** or **Executable Digital Watchdog Media File (x64) (*.exe)** format.
6. Select a **Folder** to export to and enter a file **Name**.
7. Click *Export* or *Cancel*.

Section 25.27 – Password Protected Exports

Exported EXE and NOV files can be protected with a password, which will be required to open the exported layout. To apply a password, use the **Multi-Video** tab of the **Export Video** dialog and check **Protect with password**.

Encrypted layouts are indicated in the local files list with a locked icon (.

 **NOTE:** The layout remains unlocked until the user session ends unless the *Forget Password* option is selected in the context menu, which closes the layout so that the password will be required to reopen it.

Section 25.28 – Rapid Review Export

The *Rapid Review* feature – sometimes called timelapse – exports video that plays back at a higher speed than the original recording. By specifying either the export playback speed or length of the video, the corresponding value and the *Frames interval* will adjust accordingly. Note that the source video must be at least 10 seconds long for this option to be available.

Apply Rapid Review Export

1. Select the desired device.
2. Select the segment to export and right-click the highlighted area to open the context menu. Click **Export Video**.
3. In the **Single Camera** tab, click on the **Rapid Review** button. (Rapid review is not available for the NOV format.)
4. The *Rapid Review* panel that opens to the right of the preview will show the **Initial video length** of the selected segment for reference. Set a value for each of the following:
 - *Exported video length* – Enter a duration in seconds or minutes. The lower the exported video length, the faster the playback will be.
 - *Speed* – Use the slider to set the speed increase from 10x to the maximum available value. (The maximum speed multiplier depends on the initial video length.)

 **NOTE:** The exported video length and speed values are related. The faster the playback speed and the higher the frame interval, the shorter the video will be.

Section 25.29 – Viewing Exported Video

Exported video clips are available under *Local Files* in the resource panel.

- AVI, MKV and MP4 files are shown as a single record.
- EXE and NOV files are contained in a folder, and will display in a new tab.
- Single camera and bookmark exports are displayed as a single item.

When a multi-video file is opened, it behaves like a standard layout and normal actions (arranging items, smart motion search, exporting video) can be applied.

Section 25.30 – Adding a User Watermark

To deter unauthorized or unwanted distribution of video recordings, a watermark can be added to video playback. The watermark consists of the username as a semi-transparent overlay repeated across the entire image. When enabled, it is not possible to view or export video without the watermark for any user except an administrator or Owner.

Enable Watermark on Exported Video

1. Open **Site Administration**.
2. In the **Security** tab, enable the **Display watermark with username over video** checkbox.
3. Click on the **Watermark Preview** button to adjust the opacity (0 – 100%) and the number of times the username is overlaid (1x1 array – 6x10 array) on the image.
4. Click *OK* to accept or *Cancel*.

 **NOTE:** Video still can be exported without a watermark via the Web Admin. However, the [Audit Trail of User Actions](#) can be used to trace the recording event and the responsible user.


Section 25.31 – Validating Exports

Export validation can determine whether video exported from DW Spectrum has been modified since being exported. An internal watermark is checked to verify the file is intact. Local files that were not exported from DW Spectrum cannot be checked – the watermark will be "not found".


Check the Watermark on an Exported Video

1. Open the desired video in layout.
2. Open the item's context menu and select **Check File Watermark (Alt + C)**.

3. A progress dialog will be displayed during the validation. If the file is in its original state, the check will succeed (Watermark Matched):

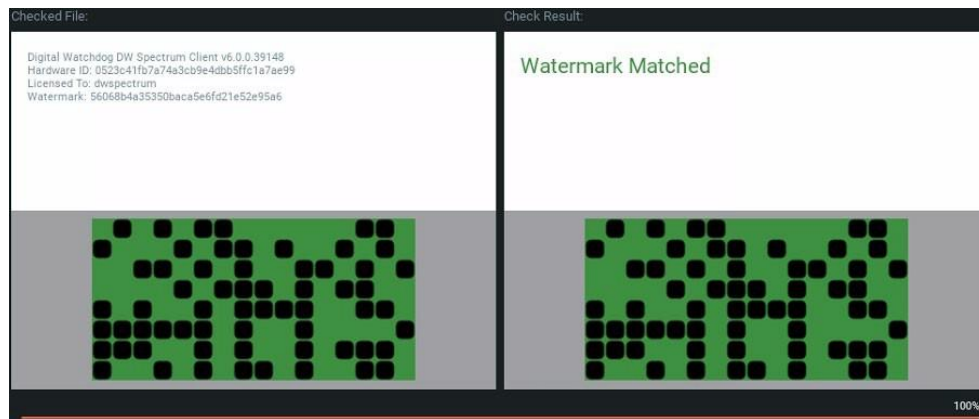

4. If the file was modified, the check will fail (Invalid Watermark):

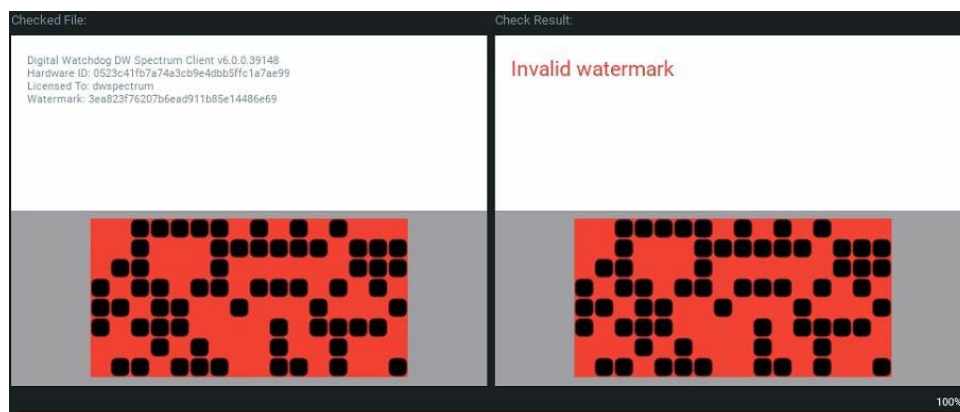

Section 25.32 – Audio in DW Spectrum

All audio is processed and recorded on the DW Spectrum Server and can be played back using one of the DW Spectrum clients. DW Spectrum desktop can play audio from all devices by enabling *Play audio from all cameras on layout* in [Local Settings](#). See ["Adjusting Volume"](#) for information about managing playback volume.

Audio allows users to have a better understanding of what is happening at the scene. In cases where a loudspeaker is present, it opens communication with people present at the scene (see ["Using 2-Way Audio"](#) for more information). Many third-party developers also offer analytics solutions involving sound detection to create events in DW Spectrum.

DW Spectrum supports audio from the camera's internal microphone or an external microphone through the camera's audio input. Alternatively, connect a microphone to an I/O device or use an all-in-one Site with built-in microphones.

Because each camera can timestamp both the video and audio, DW Spectrum can synchronize the two. For the best results, the following prerequisites need to be met: accurate synchronization timing in the RTSP stream of the cameras, appropriate network performance, and sufficient resources in the server-client environment.

The Following Audio Codecs Are Supported

- **AAC** – Advanced Audio Coding is an audio coding standard for lossy digital audio compression.
- **G.711 (u-Law/A-law)** – an ITU-T PCM speech coding standard providing toll-quality voice compression.
- **G.726** – an ITU-T ADPCM speech coding standard with half the bitrate of G.711.
- **MPEG Audio (MP1, MP2, and MP3)** – an audio coding standard for lossy digital audio compression.

Section 25.33 – Adjusting Volume

The volume level applies to the items with sound played back on the scene and the [Speak](#), [Play Sound](#), and [Repeat Sound](#) Site actions.

To adjust playback volume, use one of the following:

- Click and drag the **Volume Slider** to the right of the Timeline.
- Click on the volume slider and then adjust with the Mouse Wheel.
- Use **Ctrl + Up** or **Ctrl + Down** volume [Keyboard Shortcuts](#).

Click the speaker icon to mute or unmute audio, or use the [Keyboard Shortcut](#): **U**.

Section 25.34 – Using 2-Way Audio

2-way *audio* can be used with a microphone connected to a PC running the DW Spectrum client. Currently this feature is supported on the following devices:

- The entire Digital Watchdog camera line
- ONVIF compliant devices

An orange microphone button will appear on any device in the layout that supports 2-way audio and has it enabled, as shown below.



Manually Transmit Audio to a Device

- Press and hold the microphone button, and speak. Use the spectrum analyzer to check the level while the button is held. Release the button to end the transmission.
- An event rule or soft trigger can be configured to play sound or speak text on a device; see the [Play Sound](#), [Repeat Sound](#), and [Speak](#) topics for more details.

 **NOTE:** An error will appear when attempting to manually transmit audio with incorrect audio input parameters.

Configure 2-way Audio

1. Right-click the camera > **Camera Settings** > **General** tab.

2. Check the *Enable 2-way audio* checkbox and choose between the two options:
 - *Use this camera for audio output* – Use the current camera for audio output.
 - *Transmit audio stream to another camera* – Select a camera or device to use for audio output instead of the current camera.
3. **Apply** changes.

Section 25.35 – Taking Screenshots

DW Spectrum has a built-in *Screenshot* feature that simplifies still image capture of streaming devices and local video files to PNG or JPG output formats. If image enhancement and/or [Dewarping Controls](#) were applied to the source, they will be retained in the screenshot. Screenshot settings are retained as the default for the next screenshot.

Take a Screenshot from a Video

1. Select an item in a **Layout**.
2. Move to the desired position in the **Timeline** (see "[Parts of the Timeline](#)").
3. Click the **Screenshot** button .
4. In the **Save As** dialog that opens:
 - a. Chose a directory location
 - b. Enter a **Filename** or use the default file name (i.e. the device name appended with a timestamp).
 - c. Select one of the file types from the dropdown menu: *JPEG* or *PNG*.
 - d. To include the playback time, select a timestamp location from the dropdown menu or select *No Timestamp*.
 - e. To include the camera's name, select a camera name location from the dropdown menu or select *No camera name*.
 - f. Click **Save**.

Section 25.36 – Tours

Tours loop through each item in the viewing grid like a slideshow, opening each in full screen.

To start a tour, open the Viewing Grid context menu and select **Start Tour (Alt + T)**. To stop a tour, press **Escape** or double-click the mouse.

Set Item Display Length in a Tour


1. Open the **Main Menu** and select **Local Settings**.
2. In the **Look and Feel** tab, use **Tour Cycle** to specify the desired duration (in seconds). It is also possible to cycle through layout tabs – see "[Showreel \(Tour Cycle\)](#)".

Section 25.37 – Showreels (Tour Cycle)

Like [Tours](#), which cycle through single items in a layout in fullscreen, a *Showreel* cycles through entire layouts.

Configure a Showreel

1. Open the **Main Menu** and select **New > Showreel**.

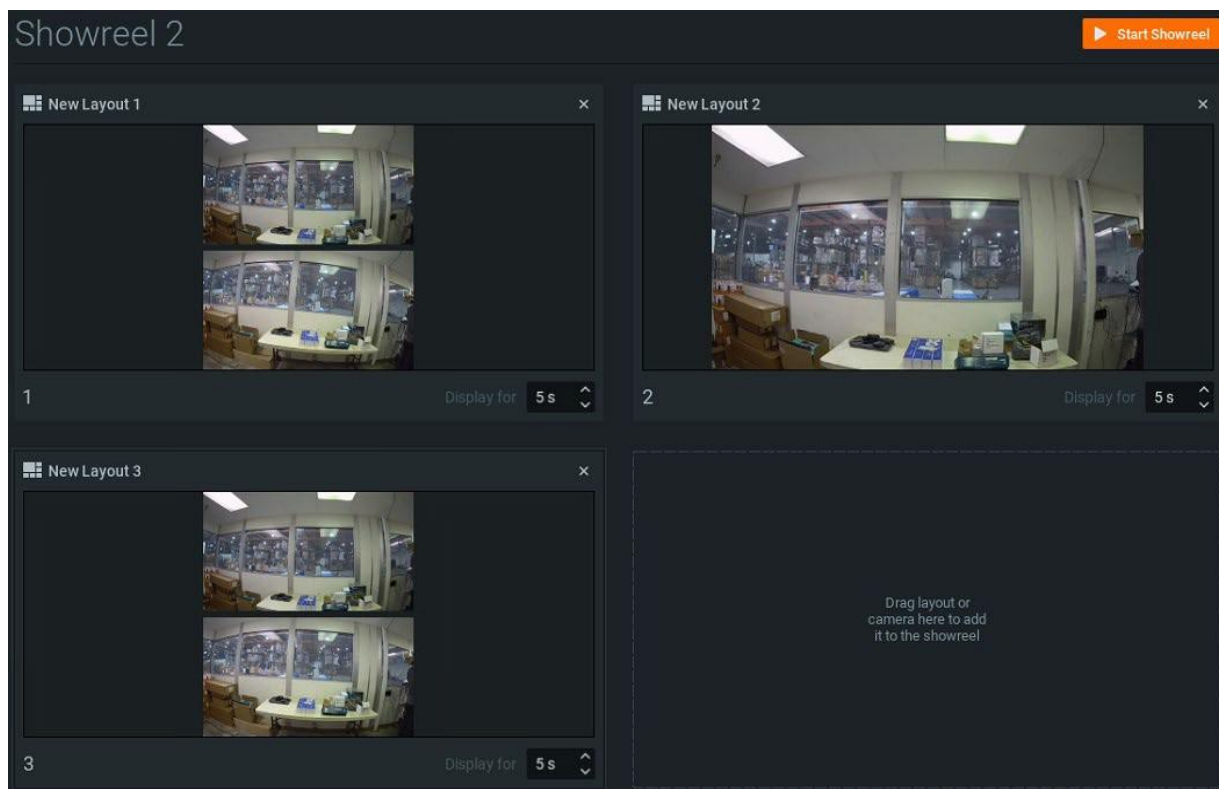

2. Drag any of the following resources into the Showreel cells:
 - Layout(s) from the resource panel ([Cross-Site Layouts](#) cannot be used)
 - Individual resources (cameras, local files, other devices, web pages) from the resource panel
 - Servers (monitoring item will be displayed) from the resource panel
 - External video files, or folders containing video files – right-click in an empty cell to open the showreel context menu and choose **Open > Files** or **Open > Folder**.
3. Click and drag cells to set the display order by repositioning them in the layout. (Showreel order is left to right, top to bottom.) Click the **X** in the upper right corner to remove a cell.
4. Use the scrolling *Display for* field to set the display time, in seconds (1 to 99), for each cell.
5. To manually control the showreel, open the context menu and check **Settings > Switch with Hotkeys**. Once the showreel is started, it can be cycled manually using the right arrow key to go forward and the left arrow key to go backwards. For automatic continuous cycling, check **Settings > Switch on timer**.
6. Showreels are displayed in the resource panel and can be opened, deleted, renamed or started using the resource panel context menu.

Display a Showreel

1. To start a showreel, click the **Start Showreel** button in the upper-right corner of the showreel layout, or open the showreel context menu from the resource panel and choose **Start Showreel** (shortcut **Alt + T**). To stop the showreel, press **ESC**.
2. Once a showreel is running, whether automatically or manually, use the right and left arrow keys to move through the cycle.

Part 26: Screen Recording

Desktop clients running on Windows can record the DW Spectrum screen to a file that may include audio. Screen recordings can be saved in the following formats:

- *MPEG4 Part 2 (Video)*
- *MP3 LAME Audio Codec (Stereo Audio)*
- *AVI (Container)*

 **IMPORTANT:** Screen recording is a CPU intensive task that may require changing the capture resolution and quality.

Section 26.1 – Setting Up Screen Recording

1. Open the **Main Menu** and choose **Local Settings**.
2. Click the *Screen Recording* tab to configure parameters:
 - *Temporary Folder* – The folder that stores temporary files. Files are stored during recording, then are copied to a specified folder to be saved.
 -  **IMPORTANT:** This folder must be accessible and writable.
 - *Screen* – If several monitors are installed, choose the desired one.
 - *Resolution* – Select screen resolution. The lower the resolution, the higher the performance.
 - *Recording Quality* – Select *Performance* for best performance. Select *Best* for best quality. Select *Average* to balance performance and quality.
 - *Disable Aero* – Select this option to turn off Windows Aero while screen recording is in progress. Selecting this option will enhance performance.
 - *Capture Cursor* – Select this checkbox to include the mouse cursor during recording.
3. Click *OK* when done or *Cancel* to discard changes.

Select an Audio Source

1. Click the *General* tab in **Local Settings**.
2. Select **First Source** and **Second Source**. Audio will be mixed from both devices. The best practice is to select the sound card as primary and a microphone as secondary source. In this case, both sounds from DW Spectrum (i.e. video clips) and microphone will be recorded simultaneously.

Configure an Audio Source

1. Set audio input card parameters in Windows and ensure the selected source is the default input device.
2. Test recording using the Windows Recorder or any other sound recording application.

Section 26.2 – Performing Screen Recording

1. To record the entire client screen, open **Main Menu** and select **Start Screen Recording (Alt + R)**.
2. Screen recording will begin in 3 seconds.
-  **NOTE:** See [Setting up Screen Recording](#) for instructions on setting up and testing an audio device.
3. To stop recording, open **Main Menu** and select **Stop Screen Recording (Alt + R)**.
4. Choose the desired file name and location and click *Save* (*Cancel* will close the dialog and data will not be saved). File and folder operations are performed in the same manner as in Windows Explorer. Once the file is saved, it will be available in local files.

 **IMPORTANT:** The screen recording will only be available as a local file until the client restarts. To make the screen recording available during future sessions, save the recorded video to DW Spectrum Media Folder or create and save a layout containing the video.

Part 27: Contacting Support

Some issues can be resolved without support, such as

- A camera that is not working properly can be diagnosed (see "[Diagnosing Offline Devices](#)"), and
- An Archive that is lost can be restored (see "[ReIndexing and Fast-Scanning Archives](#)").

 **NOTE:** This section and the following subsections apply only to Site administrators: [Collecting Basic Information](#), [Collecting Logs](#), [Providing Remote Access](#), and [Sending Anonymous Usage and Crash Statistics](#).

When posting an issue to support, describe the problem in as much detail as possible. At a minimum, please provide the version, hardware, and driver of the Site from the *About* screen (see "[Collecting Basic Information](#)"). Support may request additional information such as log files, network configuration, etc. (see "[Collecting Logs](#)" and "[Viewing and Exporting the Event Log](#)"), or ask for administrator login credentials as well.

For a more in-depth look at the state the Site is in, see "[Health Monitoring](#)". Health monitoring will display Site performance and error information. It will be helpful to include some of the information on that page when submitting a support request.

To expedite investigation, it may be useful to [provide remote access](#). If it is not possible to provide remote access for security reasons, or if an issue is difficult to replicate, a supporting video clip can help the support team understand and investigate the issue. Use the [screen recording](#) function to create a video clip, and attach the video to the support ticket.

If the issue is related to compatibility of a specific device, the support team might provide a specific build that can solve the issue. See "[Updating DW Spectrum](#)" for more information.

Section 27.1 – Collecting Basic Information

Open the **Main Menu** and select **About (F1)** to display product version, hardware, and driver information.

The *About DW Spectrum* dialog will display:

- Version and platform information
- A list of external libraries used
- Graphical Processing Unit (GPU) information
- Site servers
- DW Spectrum components and driver versions
- Customer support contact information

This data is required by the support team and should be provided in the support ticket in addition to other pertinent details. (Similar information can be acquired with standard Windows tools such as **ipconfig**, but *About DW Spectrum* is more direct and specific to the product).

Section 27.2 – Collecting Logs

Log files track the internal actions performed by DW Spectrum components. They are [add “a” here] crucial part in the process to help developers deeply understand the problem and causes.

The following logs may be requested as part of a support ticket:

- Site Logs
- Client Logs

- Update Logs

 **NOTE:** Desktop Client logs are disabled by default.

To manage log files:

- All: Main Menu -> Site Administration > Advanced > Logs Management.
- Client only: **Main Menu -> Local Settings > Advanced > Logs Management** (does not require to be logged into a Site).

Before downloading log files, it is necessary to understand log level – the amount of information that the Site components record to the log files.


Each component has the following log levels:

- **NONE** – no log files are written (default for the desktop client).
- **ERROR** – only errors and critical failures are written.
- **WARNING** – warnings (predefined messages from developers), errors, critical failures.
- **INFO** – same as **WARNING** plus informational messages predefined by developers (default log level for Servers).
- **DEBUG** – same as **INFO** plus auto generated messages about the actions performed by the application (recommended when reporting an issue).
- **VERBOSE** – same as **DEBUG** but records full track of everything that the application does (very large amount of data). Slows down the application so definitely not recommended for a long-term run. Might be requested by developers, so switch to this log level, collect the log files once the issue is reproduced and switch back immediately after.

Log level and additional parameters can be configured in Logs Management -> Settings:

- Client and server: select the components to be configured (It is not possible to configure logs on offline servers) and click **Settings**.
- Client only: Click **Settings** in **Local Settings > Advanced > Logs Management**.

The following settings can be configured:

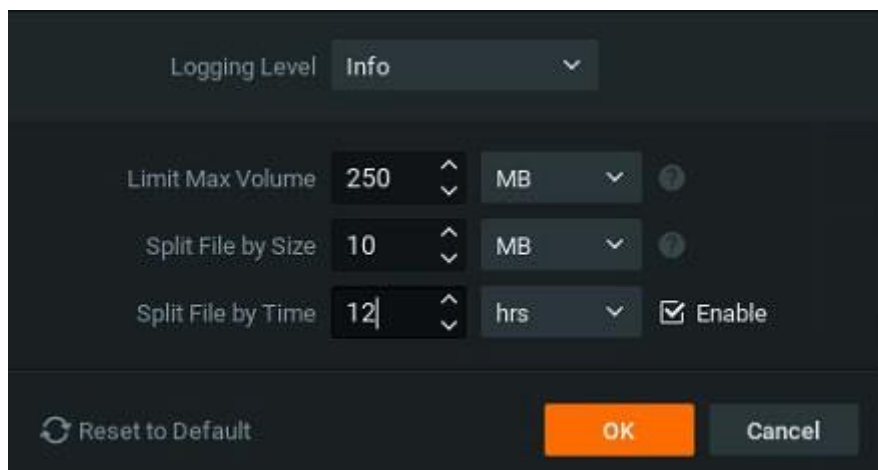

- **Logging Level** – explained above
- **Limit Max Volume** – the maximum total size of the log files. Once the size hits the limit, the oldest records will be erased.

- **Split File by Size** – size of a single log file. Once the size hits the limit, a new file will be created until the **Max Volume** limit is reached by all log files.
- **Split File by Time** – if enabled, a new file will be created once in a specified period of time (12 hours at the example above) until the **Max Volume** limit is reached by all log files.
- **Reset to Defaults** – to revert settings to the original ones.

The changes will be applied by clicking **OK**.

To view server logs in an external browser, right-click on the desired server in the resource panel and choose **Server Logs** from the context menu. The log will open in a web browser.

Obtain Server and/or Client Logs

1. Open **Logs Management**.
2. Select the components for which logs will be downloaded.
3. Click **Download**.
4. Choose the folder to which the log files will be saved.

Obtain Client Logs (alternative way)

1. Open **Logs Management**.
2. Click **Download**.
3. Choose the folder to which the log files will be saved.

Log files are downloaded as zip Archives with the following names:

- `client_<date> - <time>.zip` – client logs
- `<server_name> - <server_guid> - <date> - <time>.zip` – Server logs (for each server in the Site)

Server logs Archive contains the following:

- `Site_XXX.log` – Site events (licenses related events server start/stop, critical issues)
- `main_XXX.log` – Server events (everything else)

Section 27.3 – Providing Remote Access

The best possible way to help the support team investigate an issue is to provide remote access via one of the following applications:

- [TeamViewer](#)
- [Citrix GoToMeeting](#)
- VNC – [RealVNC](#), [TightVNC](#), or [UltraVNC](#)
- RDP – Windows Remote Desktop (requires public IP)

SSH access is natively available on Linux and Mac (requires public IP).

The support team requires a public IP address to properly investigate and diagnose issues with both the Site and cameras, so there must be a connection to the Internet.

Section 27.4 – Sending Anonymous Usage and Crash Statistics

DW Spectrum helps developers and support enhance the product by sending the following information anonymously:

- Events rules with details on all settings.

- Cameras with details for the vendor, model, firmware, max FPS, PTZ capabilities, etc.
- Information about saved layouts and the cameras they contain.
- License information – key, license type, camera count, expiration, etc.
- Media Server software information:
 - Version
 - Failover with max cameras
 - Status
 - SiteID
 - User access rights
- Features usage:
 - Button clicks for each camera widget button
 - Button clicks for each Timeline button (sync, calendar, play/pause, etc.)
 - Count of dialogs opened (per dialog) and opened tabs count
 - Preview search time and count
 - Percentage of time the window is in full screen mode
 - Motion search time and count
 - Percentage of time the window is active
- Total session time
- Internet network usage
- Client hardware information:
 - "OpenGLRenderer" (ex. GeForce GT 730/PCIe/SSE2)
 - "OpenGL vendor" (ex. NVIDIA Corporation)
 - "OpenGL version" (ex. 4.4.0 NVIDIA 331.113)

Statistics reports are sent once a month. This feature is enabled by default.

Disable Statistics Reports

This can be done during the [Initial Site Configuration](#). To do this later:

1. Open **Site Administration** and click the **General** tab.
2. Clear the *Send anonymous usage and crash statistics to software developers* checkbox and click **OK**.

D I G I T A L



DW® East Coast office and warehouse: 5436 W Crenshaw St, Tampa, FL USA 33634
DW® West Coast office and warehouse: 16220 Bloomfield Ave, Cerritos, CA USA 90703
PH: 866-446-3595 | FAX: 813-888-9262

www.Digital-Watchdog.com
technicalsupport@digital-watchdog.com
Technical Support PH:

USA & Canada 1+ 866-446-3595

International 1+ 813-888-9555

French Canadian: 1+ 904-999-1309

Technical Support hours: Monday-Friday 9 a.m. to 8 p.m. Eastern Time