

MEGApix Pano 8MP Ultra-Wide View Single-Sensor IP Bullet Camera


DWC-MBW8Wi2TX



User's Manual Ver. 08/26

Before installing and using the camera, please read this manual carefully.
Be sure to keep it handy for future reference.

Safety Information

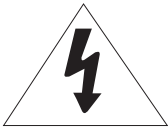

CAUTION

RISK OF ELECTRIC SHOCK.
DO NOT OPEN.



CAUTION :

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



Warning

This symbol indicates that dangerous voltage consisting of a risk of electric shock is present within this unit.



Precaution

This exclamation point symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

To prevent damage that may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.

WARNING

1. Be sure to use only the standard adapter that is specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product.
2. Incorrectly connecting the power supply or replacing the battery may cause an explosion, fire, electric shock, or damage to the product.
3. Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause excessive heat generation or fire.
4. Securely plug the power cord into the power receptacle. An insecure connection may cause fire.
5. When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury.
6. Do not place conductive objects (e.g. screwdrivers, coins, metal items, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects.
7. Do not install the unit in humid, dusty, or sooty locations. Doing so may cause fire or electric shock.
8. If any unusual smells or smoke come from the unit, stop using the product. Immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock.
9. If this product fails to operate normally, contact the nearest service center. Never disassemble or modify this product in any way.
10. When cleaning, do not spray water directly onto parts of the product. Doing so may cause fire or electric shock.

Precaution

Operating

- Before using, make sure the power supply and all other parts are properly connected.
- While operating, if any abnormal condition or malfunction is observed, stop using the camera immediately and contact your dealer.

Handling

- Do not disassemble or tamper with parts inside the camera.
- Do not drop the camera or subject it to shock or vibration as this can damage the camera.
- Clean the clear dome cover with extra care. Scratches and dust can ruin the quality of the camera image.

Installation and Storage

- Do not install the camera in areas of extreme temperature, exceeding the allowed range.
- Avoid installing in humid or dusty environments.
- Avoid installing in places where radiation is present.
- Avoid installing in places where there are strong magnetic fields and electric signals.
- Avoid installing in places where the camera would be subject to strong vibrations.
- Never expose the camera to rain or water.

Important Safety Instructions

1. **Read these Instructions.** - All these safety and operating instructions should be read before the product is installed or operated.
2. **Keep these Instructions.** - The safety, operating and use instructions should be retained for future reference.
3. **Heed all warnings.** - All warnings on the product and in the operating instructions should be adhered to.
4. **Follow all instructions.** - All operating and use instructions should be followed.
5. **Do not use this device near water.** - For example: near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement; near a swimming pool; etc.
6. **Clean only with a dry cloth.** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners.
7. **Do not block any ventilation openings. Install following the manufacturer's instructions.** - Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the product, and to protect it from overheating. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surfaces. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided and the manufacturer's instructions have been adhered to.
8. **Do not install near any heat sources such as radiators, heat registers, or other apparatus (including amplifiers) that produce heat.**
9. **Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.**
10. **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
11. **Only use attachments/accessories specified by the manufacturer.**
12. **Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**
13. **Unplug this apparatus during lightning storms or when unused for long periods.**
14. **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.**



Disposal of Old Appliances



1. When this crossed-out wheel bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream per laws designated by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about the disposal of your old appliance, please contact your city office, waste disposal service, or the shop where you purchased the product.



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Table of Contents

Introduction

Product and Accessories.....	4
Parts Names.....	5

Installation

Moisture Absorber Installation.....	6
Factory Reset.....	6
Installation.....	7
Cabling.....	8
Managing the SD Card.....	10

Network Setup

DW IP Finder.....	11
-------------------	----

Web Viewer

Login to the Camera.....	12
GUI Overview.....	13



Camera Settings

Settings > Video and Audio Setup.....	14
Settings > Camera Setup > Image Adjustment.....	21
Settings > Camera Setup > Exposure Settings.....	22
Settings > Camera Setup > Day and Night Settings.....	23
Settings > Camera Setup > Backlight Settings.....	24
Settings > Camera Setup > White Balance Settings.....	25
Settings > Camera Setup > Image Enhancement Settings.....	26
Settings > Camera Setup > Video Enhancement Settings.....	27
Settings > Network Setup.....	28
Settings > Trigger Action Setup.....	38
Settings > Event Setup.....	42
Settings > Record Setup.....	47
Settings > Security Setup.....	53
Settings > System Setup > System Information.....	60
Settings > System Setup > Firmware.....	62
Settings > System Setup > Date and Time.....	63
Settings > System Setup > DST.....	64
Settings > System Setup > Users.....	65
Settings > System Setup > System Log.....	66
Settings > System Setup > Factory Reset.....	67
Settings > System Setup > Restart.....	68
Settings > System Setup > System Open Source License.....	69
Settings > System Setup > Plug-in.....	70


Appendix.....	71
FAQs.....	78
Dimensions.....	79
Specifications.....	80
Warranty.....	81
Limits and Exclusions.....	82

Introduction - Product and Accessories

✦ Please check that the camera and all the accessories are included in the package.

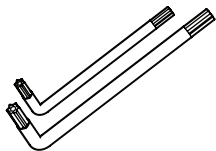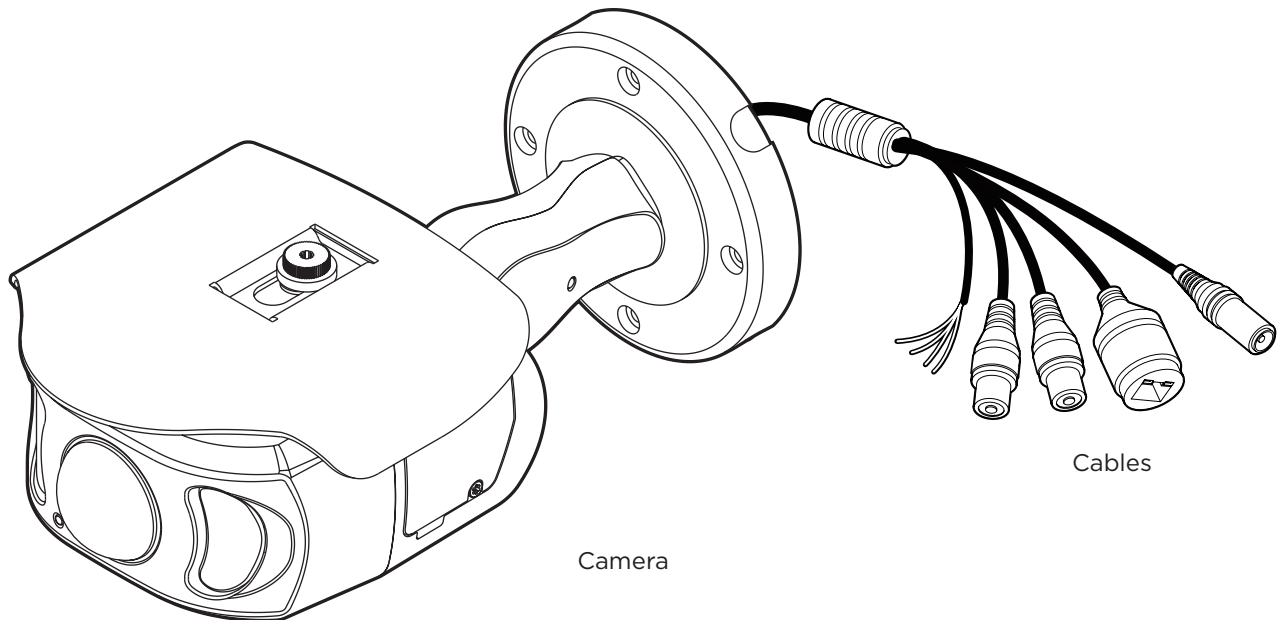

Star wrench
(T10, T20)




Screws and
plastic anchors -
4pcs




Test monitor
cable



Absorber installation
guide

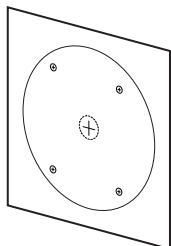

Mounting template
sheet

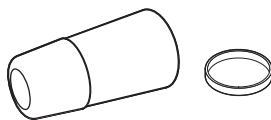

Waterproof cap
and gasket




Quick setup guide



Desi-Pak
(moisture absorber)


Introduction - Part Name

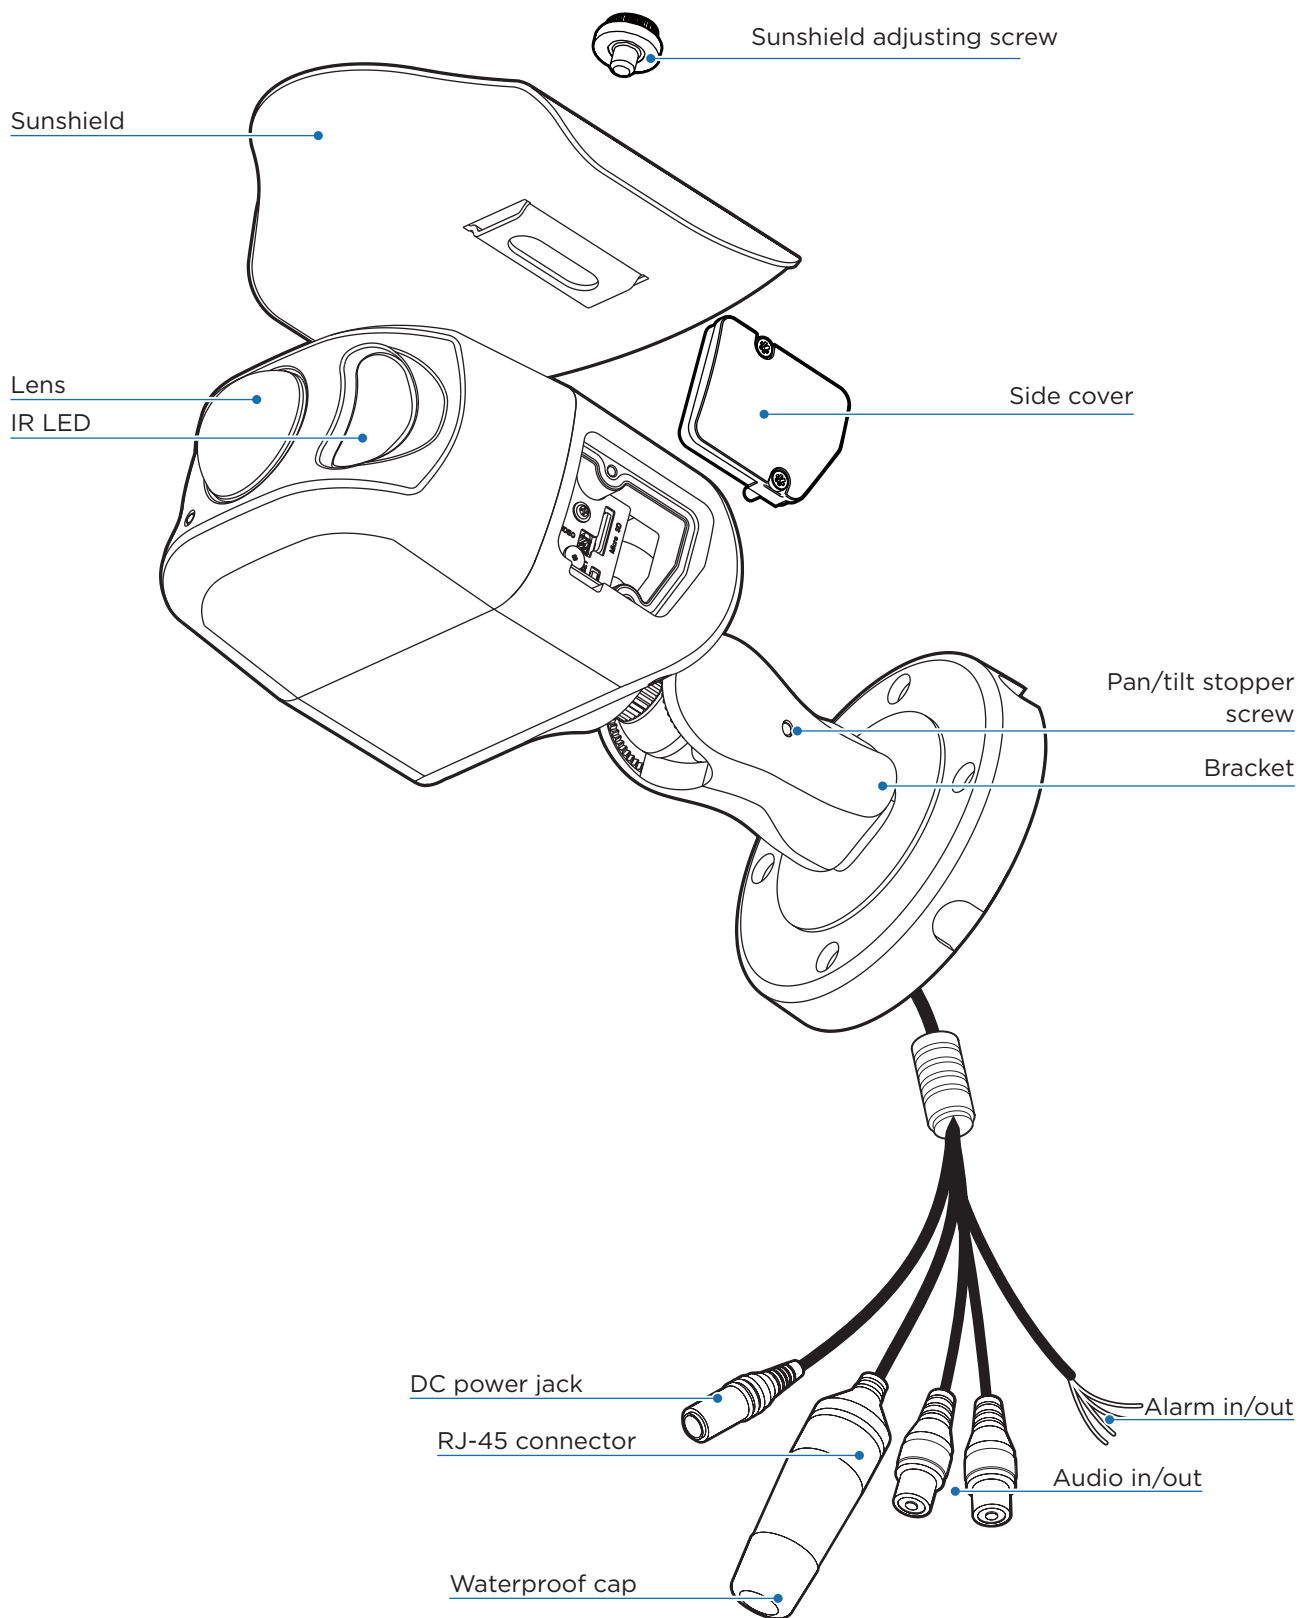

Installation - Installation

Before installing your camera, you have to read the following cautions.

1. The mounting surface must bear five times the weight of your camera.
2. Do not let the cables get caught in improper places or the electric line cover to be damaged. This may cause a breakdown or fire.
3. Install the Desi-Pack (moisture absorber) before completing the installation. The accessory Desi-Pack is provided in a sealed package and is used to prevent moisture (dew formation) caused by water entering the camera body when the cover is removed in the installation process.
 - Remove the Desi-Pack from its shipping packaging.
 - Open the camera's control panel located on the side of the camera.
 - Place the Desi-Pack in the location shown in the illustration below.
 - Close the camera control panel tightly.

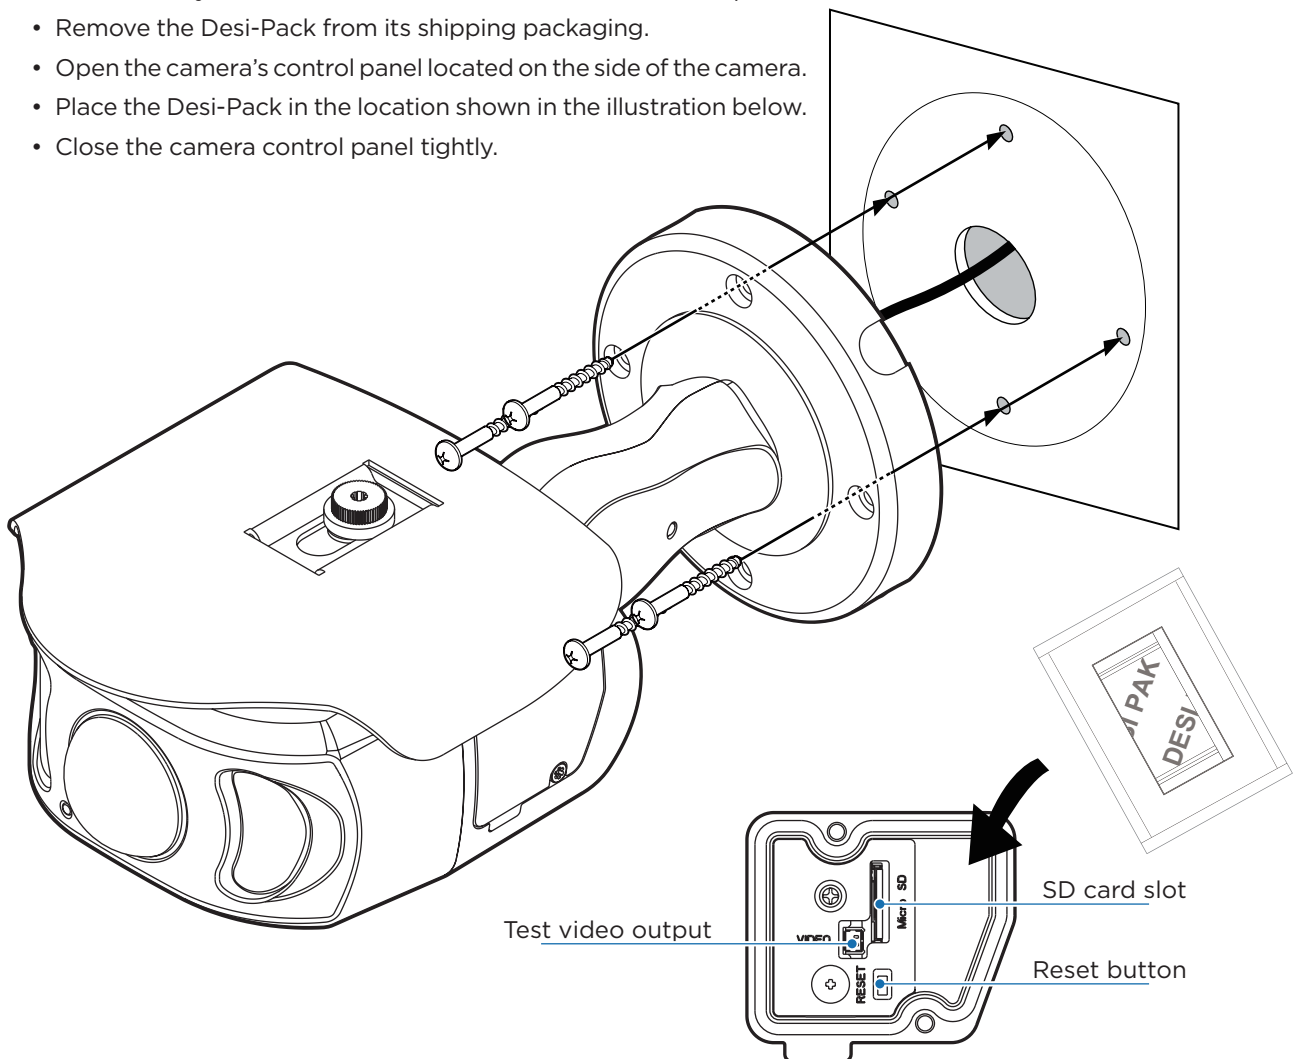

❖ Reset to the Factory Default

Press the reset button for 5 seconds to return the setup to the factory default.

❖ Warning:

If you press the 'Reset' button, you will lose all setting data. If needed, please, make a note for further installation.

Installation - Installation

Before installing your camera, you have to read the following cautions.


1. Using the mounting template sheet or the camera itself, mark and drill the necessary holes in the wall or ceiling.
2. Pass the wires through and make all necessary connections. See the next page for more information.
3. Once all cables are connected, secure the camera to the mounting surface using the included screws.

To use the camera's waterproof wiring:


- a. Install the LAN cable into (a).
- b. (b) will be assembled to (c) with a 1/4 turn.
- c. Thread (c) tightly to (b).

NOTE: To ensure moisture seal, make sure the o-ring is in place between **a** and **b**. In extreme environments use of an outdoor rated sealer is recommended.

NOTE: When using the waterproof cap, crimp the RJ45 connector after passing the cable through the waterproof cap.

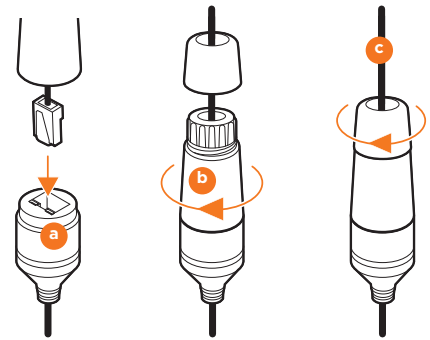

4. Loosen the pan and tilt stopper screw at the base of the camera's bracket to adjust the camera's view and position.

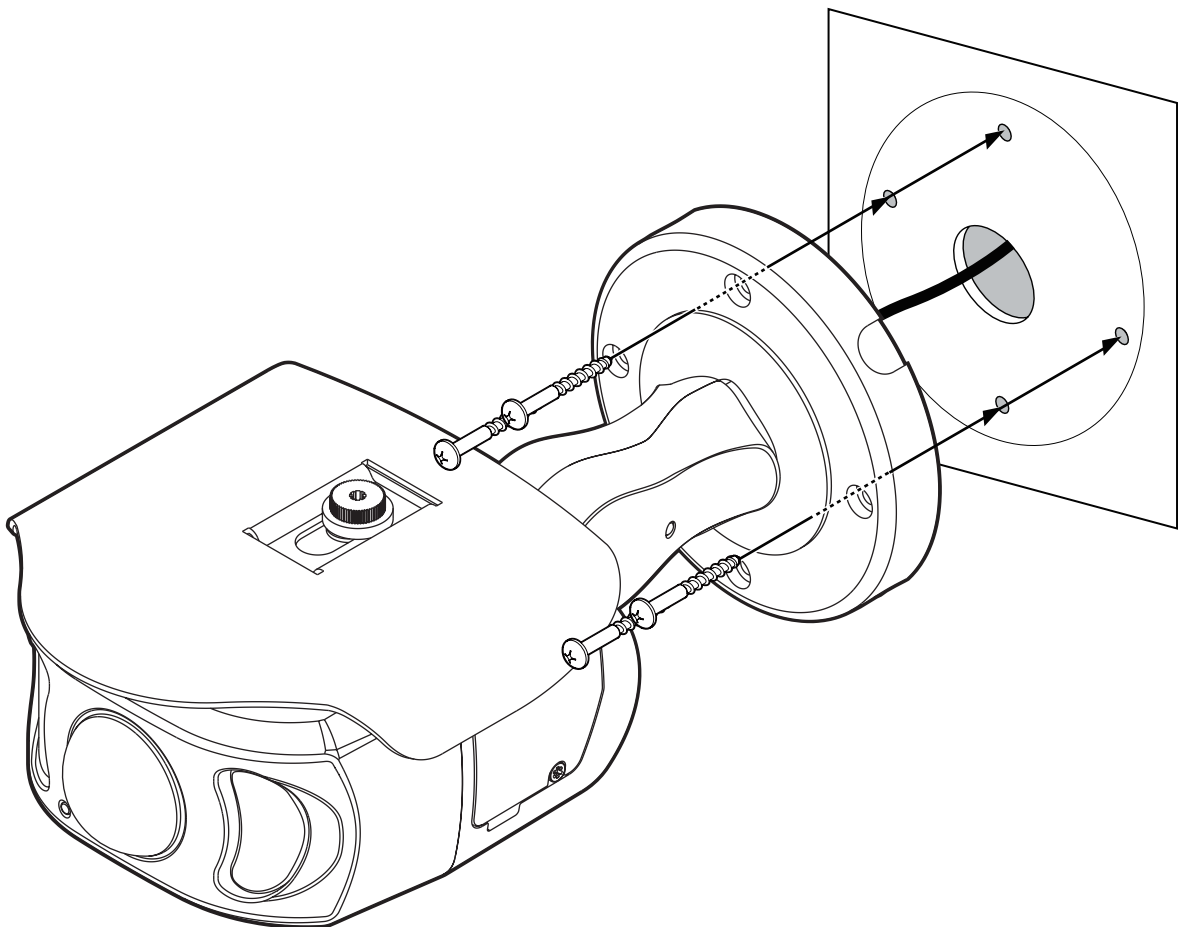

Installation - Cabling


Two Options

Use a PoE-enabled switch to connect data and power through a single cable and begin viewing and recording images instantly.

A non-PoE switch will require an adaptor for power transmission.

1. Using a PoE-Enabled Switch


The Camera is PoE-compliant, allowing transmission of power and data via a single Ethernet cable. PoE eliminates the need for the different cables used to power, record, or control the camera. Follow the illustration below to connect the camera to a PoE-enabled switch using an Ethernet cable.

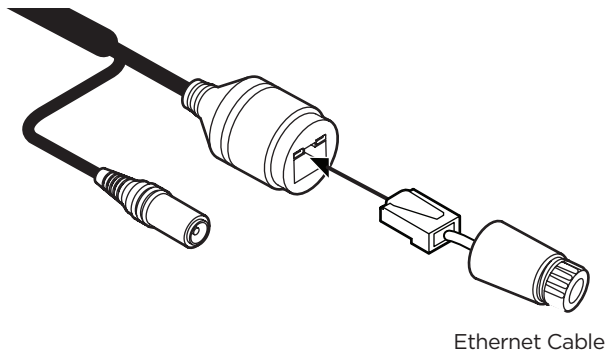


2. Using a Non-PoE Switch

If a PoE-enabled switch is not used, use a power adaptor for power transmission and a non-PoE switch for data transmission.

Follow the illustrations below to connect the camera without a PoE-enabled Switch.

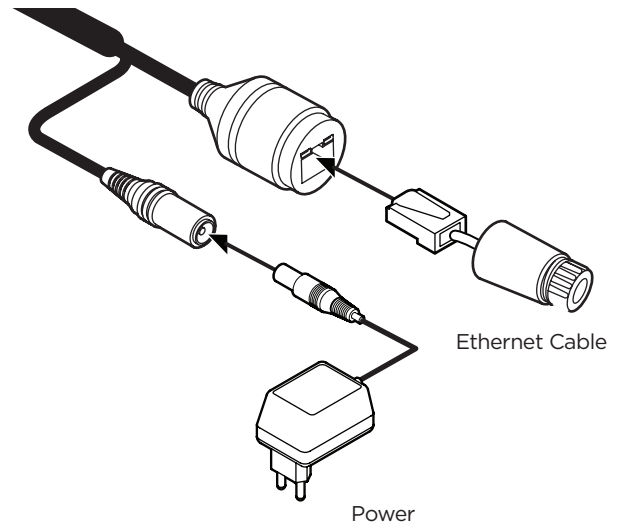

Installation - Cabling

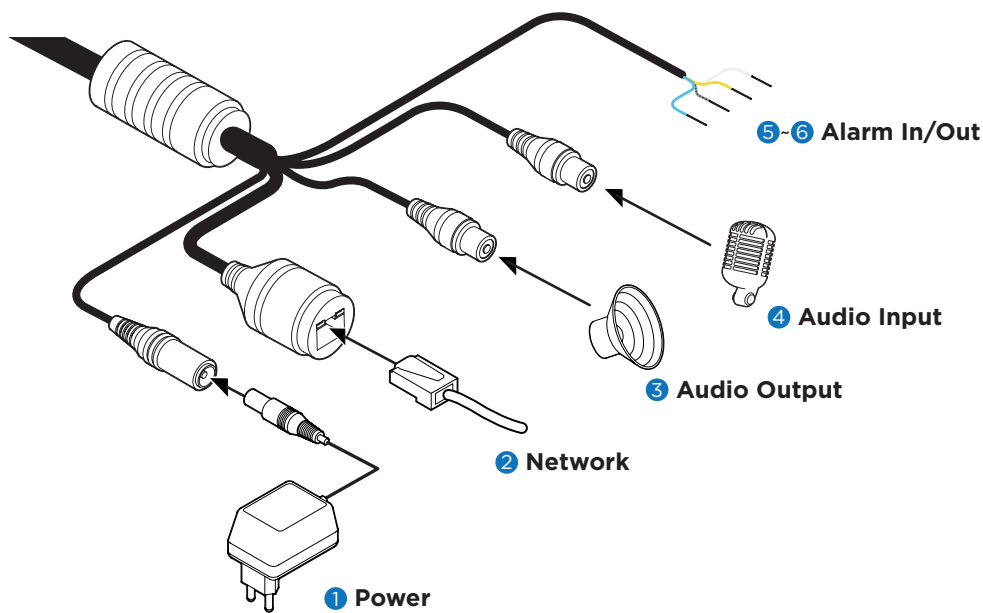

1 Power Connection

Please, check the voltage and current capacity of the rated power carefully.

Rate Power	Power Consumption	PoE
DC 12V	8.9W	IEEE 802.3af class3

2 Network Connection

Connect the crossover cable into the RJ-45.

3 Audio Output

Connect the 'audio out' port of the camera to the 'line in' port of the speaker.

- ⚠ If the speaker without the amplifier is connected to the audio out port, it doesn't work properly. Therefore, the speaker with the amplifier or the separate amplifier is needed.
- ⚠ Audio Out is available via the RTSP backchannel.

4 Audio Input

Connect the 'audio in' port of the camera to the microphone directly or to the 'line out' port of the amplifier connected with a microphone.


- ⚠ If the microphone is connected directly, the microphone with the embedded amplifier such as the condenser mic. needs to be used.

5 Relay/Alarm Output


Connects to the alarm lights, siren, or lamps and the sensor types are normally open and normally close.

6 Sensor/Alarm Input


The sensor/alarm input device's cable should connect to the yellow and white cables of the alarm cables.

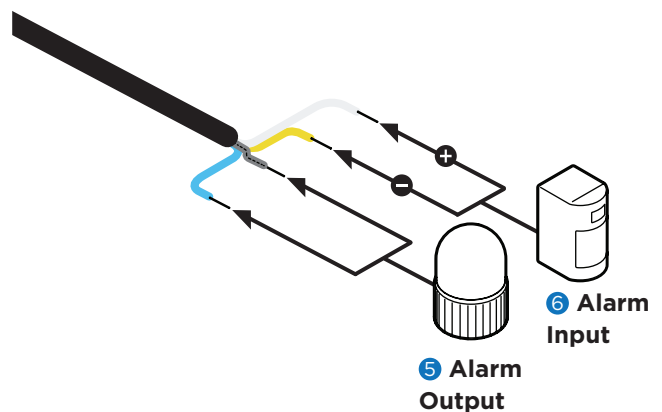

Installation - Inserting/Removing an SD Card

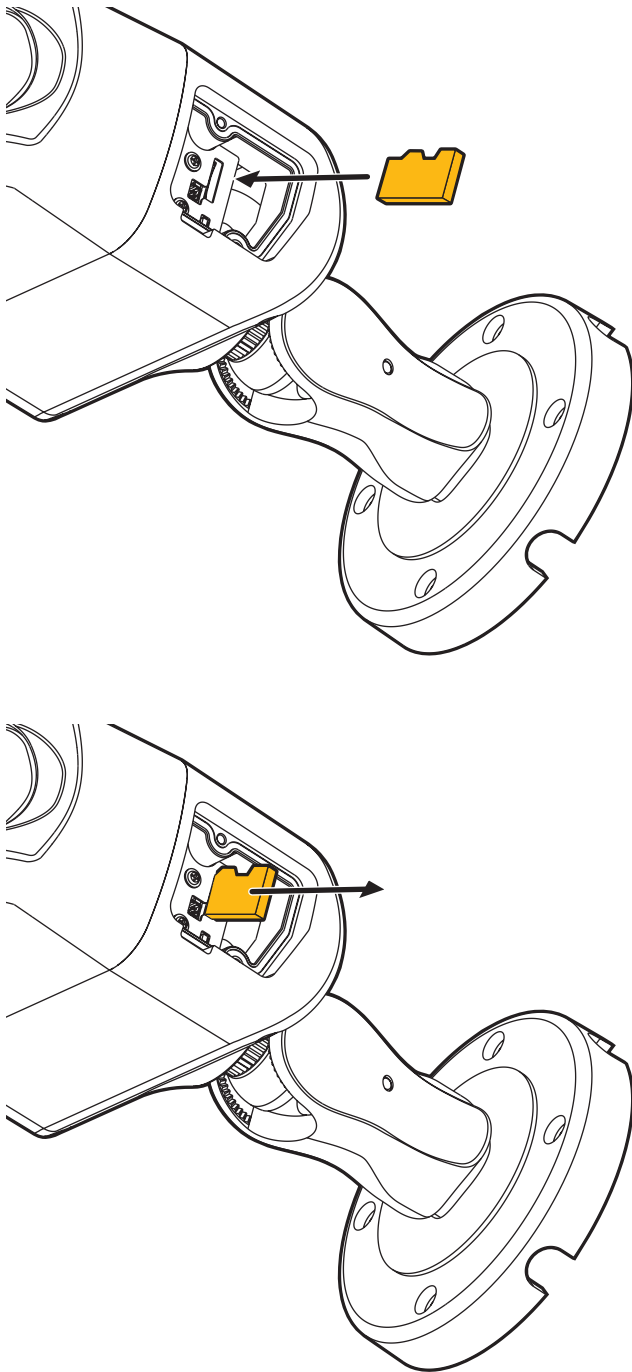

The memory card is an external data storage device that has been developed to offer an entirely new way to record and share video, audio, and text data using digital devices.

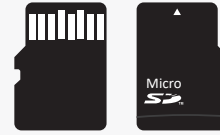

❖ Recommended SD card specification (not included)

- Type: Micro SD (SD/SDHC/SDXC)
- Capacity: Up to 1 TB / FAT32 format.
- Class: UHS-I U3 Class 10
- ❖ New micro SD card over 64GB must be formatted on the first use.
- ❖ File System Options
 - exFAT: Recommended for better file stability and compatibility with large files.
 - FAT/vFAT: Another option available, but it may offer lower file stability compared to exFAT.
 - Note: Using exFAT is recommended to maintain file reliability and integrity.

1 Inserting an SD Memory Card

Locate the SD card on the camera's control board, located on the side of the camera.

Insert the SD card in the arrow direction.

- ❖ Do not insert the SD card upside down by force. It may damage the SD memory card.

2 Removing an SD Memory Card

Gently press down on the exposed end of the memory card as shown in the diagram to eject the memory card from the slot.

- ❖ Pressing too hard on the SD memory card can cause the card to shoot out uncontrollably from the slot when released.
- ❖ If you have saved data in the SD memory card, removing the SD memory card before setting the record to OFF will cause damage to the data stored in the card.

Network Setup - DW IP Finder™

Thumbnail view

Select a network to scan: Local Area Connection [192.168.0.18]

Filter results: All

Scan network: Scan Devices

Show/hide thumbnail view: Refresh Thumbnail

Bulk IP assignment: Bulk IP Assignment

Bulk password assignment: Bulk Password Assignment

Firmware upgrade: FW Upgrade

DHCP status

Firmware version

Camera's uptime

Open IP configuration settings

Ping camera

Port information

Gateway address

Netmask address

Camera's MAC address

Part number

Camera's IP address

Camera's name

Thumbnail	Name	IP Address	Model	MAC Address	Netmask	Gateway	Port	DHCP	Version	Ping Test	IP Conf.	Uptime
	DWC-MPT230X	192.168.150.34	DWC-MPT230X	00:07:08:19:10:1A	255.255.255.0	192.168.150.1	80	Disabled	1.9.94-X2_release	Ping	Click	---
	DWC-MV44WA	192.168.150.40	DWC-MV44WA	00:0D:F1:21:53:8F	255.255.255.0	192.168.150.1	80	Disabled	A2.01.02_20180619	Ping	Click	28day 14hrs 1mins
	DWC-PZ21M69T	192.168.150.41	DWC-PZ21M69T	00:0D:F1:21:29:21	255.255.255.0	192.168.150.1	80	Disabled	A5.01.03_20180403	Ping	Click	39day 15hrs 54mins
	DWC-PV316W4	192.168.150.42	DWC-PV316W4	00:0D:F1:21:5C:AD	255.255.255.0	192.168.150.1	80	Disabled	S2.01.03_20180309	Ping	Click	56day 16hrs 46mins
	DWC-PFSM1TIR	192.168.150.61	DWC-PFSM1TIR	00:0A:61:1A:00:14	255.255.255.0	192.168.150.1	80	Disabled	-	Ping	Click	---
	DWC-PV9M2TIR	192.168.150.62	DWC-PV9M2TIR	00:0A:61:1A:26:E7	255.255.255.0	192.168.150.1	80	Disabled	-	Ping	Click	---
	DWC-MF4W4	192.168.150.63	DWC-MF4W4	00:0D:F1:20:FB:60	255.255.255.0	192.168.150.1	80	Disabled	A2.01.02_20180619	Ping	Click	28day 14hrs 0mins

- Go to <http://www.digital-watchdog.com> and search for 'IP Finder' on the quick-search bar at the top of the page.
- The latest IP Finder software will appear in the search results. Click on the link to download the file to your computer.
- The software will scan your network for all supported cameras and display the results in the table. Allow up to 5 seconds for the IP Installer to find the camera on the network.
- You can press the 'Refresh List' to search the network again, or filter the search results by entering a value in the filter box.
- Check the box next to 'Display Camera Thumbnail' to view a JPEG image of the camera's view next to the camera name on supported models.
 - The default network type of camera is DHCP mode.
 - If you have a DHCP server, it will automatically set the Camera IP.
 - Contact your network administrator for more information.
- To save the changes made to the camera's settings, input the username and password of the camera for authentication.
- If the camera needs to be rebooted after the settings were changed, press the 'Reboot' button. The camera will power cycle and will appear back in the search results once the reboot is complete.
 - Default username and password: admin/admin.
 - For security purposes, it is highly recommended to change your password after the initial setup.
- Click 'Save' to save changed values.
- To update the camera's firmware from the DW IP Finder™, click on the firmware tab, upload the firmware file and select the camera to update. You can update multiple cameras at the same time.

DW Camera Settings

Camera Name: DWC-MD421TIR

MAC Address: 00:0D:F1:20:A4:9E

IP Configuration Mode

☒ DHCP

☐ Static IP

IP Address: 192.168.1.101

Netmask: 255.255.255.0

Gateway: 192.168.1.1

DNS: 192.168.40.1

Ports

Web Port: 80

Control Port: 0

Video Port: 0

Audio Transmit: 0

Audio Receive: 0

Username: admin

Password: *****

Restore default camera configuration


View Camera Website

Apply

Reboot

Cancel

Web Viewer Screen - Basic Screen (Default)

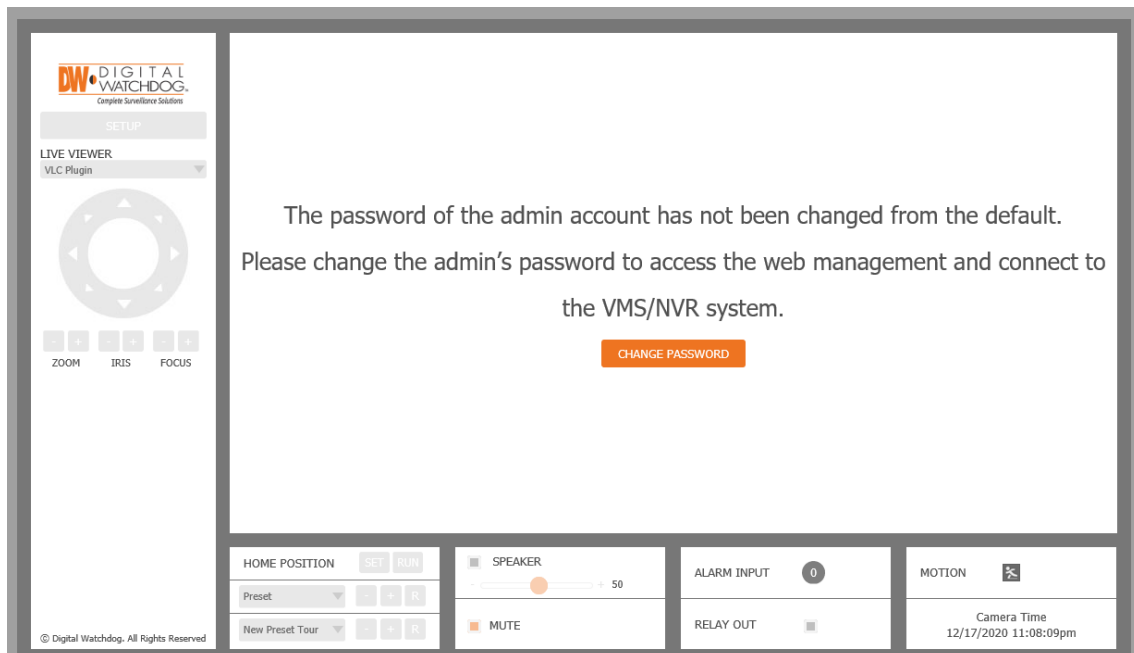

Password change is required at the initial connection in a factory reset state. The web client cannot be fully utilized until a new password has been assigned.


- 1 You cannot see the image, and the setup button is disabled.
- 2 Change the password with the CHANGE PASSWORD button.

- 3 After changing the password, login again by pressing the RE-LOGIN button.
 - Internet Explorer: After three failed attempts or the cancel button is clicked, you will experience a login fail.
 - Other Browsers: After the Cancel button is clicked, you will experience a login fail.

✳ Password Hint Page

- If you need help remembering the password for your user, input the username in the username field and press the hint button. If you added a hint for your password when setting it up, it will appear then.

Web Viewer Screen - Basic Screen

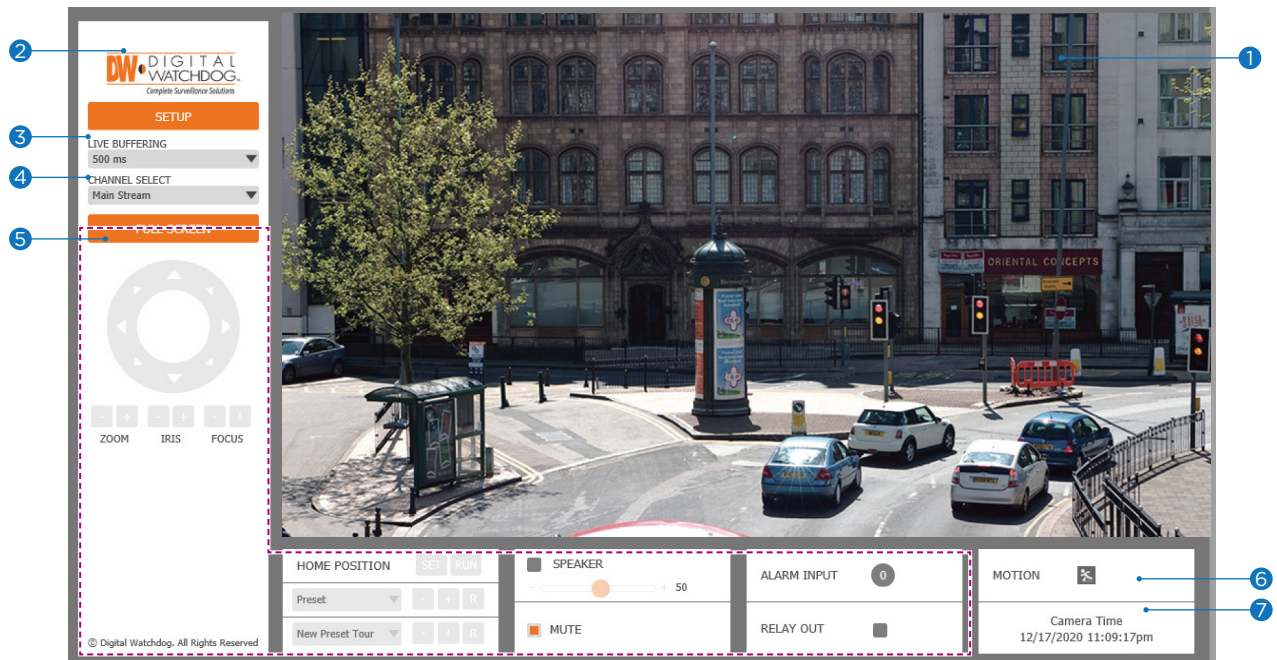

✖ The web viewer is optimized with Internet Explorer 10 (or above) and Mozilla Firefox.

✖ “If VLC is not installed or the VLC plugin is not supported (Chrome), ‘Live Buffering’ and ‘Channel Select’ (subjects 3 and 4 in the diagram) will display as ‘Live Viewer’. If so, select HTML5 (MJPEG) from the Live Viewer menu to view the video.

1 Live video display. This is the region for the live video stream from the camera.

2 Setup a popup button. Click it to open the Setup page to setup details of the IP camera like Video, Network, Events, System, etc. See the section ‘Setup’.

3 When the image is distorted due to a bad network connection, the stored image frames will display live images, depending on the set buffer time.

✖ Users will see the delayed images based on the set delay time.

4 Channel Select button. Select a stream produced from the camera between Stream 1 ~ 3 to display it in the live view screen.

✖ Refer the ‘Setup > Video & Audio > Video’ to setup the Video Stream.

5 Below “Menu” is supported per models.

PTZ Control - This camera model does not support zoom and focus.

Preset - Not supported.

Speaker Control - Enable/disable the audio stream from the camera and adjust the volume accordingly.

Alarm Input - If an alarm is triggered, the corresponding input number will be changed from dark gray to red.

Relay Out - Using this checkbox, read the relay output status and set or reset it manually.


6 **Motion** - Shows the motion event status.

✖ Event Alert Icon () appears if ‘Motion Detection’ is activated.

7 **Camera Time** - Display the camera time.

Setup - Video and Audio Setup

Video Configuration

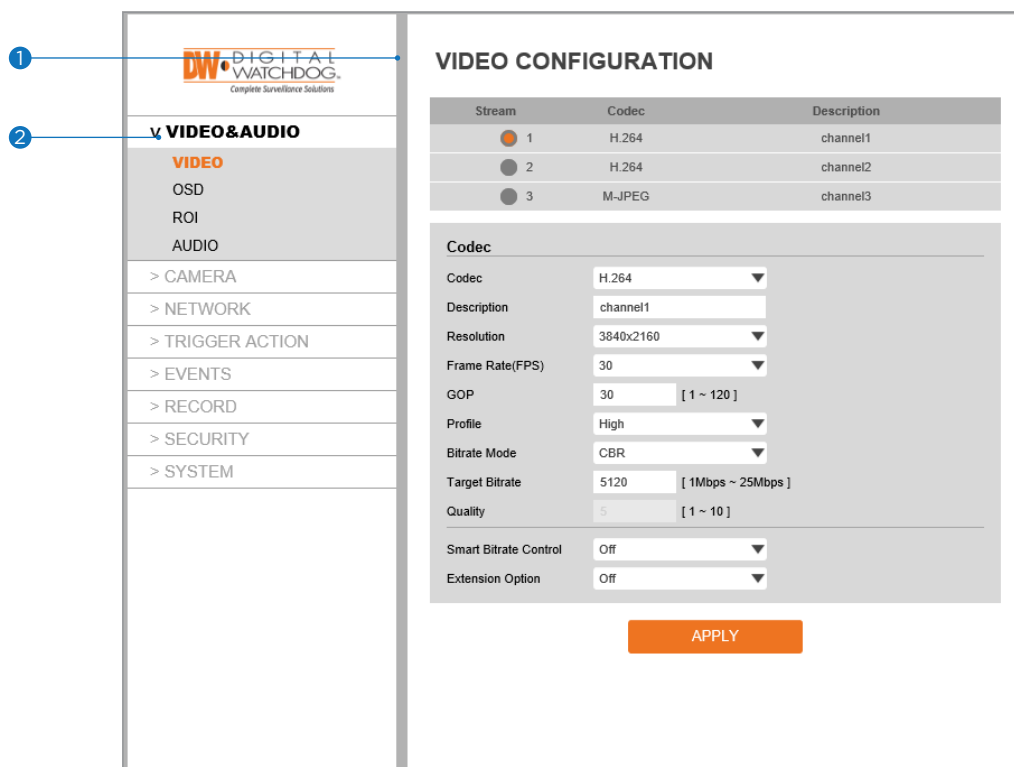

1 **Detail Page** - When you select an item from the menu, you can set the details for the selected item.

2 Setup Constitution

Video and Audio

[VIDEO, OSD, ROI, AUDIO]

Camera

[IMAGE ADJUSTMENT, EXPOSURE, DAY AND NIGHT, BACKLIGHT, WHITE BALANCE, IMAGE, VIDEO]

Network

[STATUS, NETWORK SETTING, AUTO IP, ONVIF, UPNP, DDNS, FTP, SMTP, SNMP, HTTP ACTION, RTSP INFORMATION]

Trigger Action

[ACTION RULES, IMAGE TRANSFER, RELAY OUT]

Events

[EVENT RULES, MOTION, TEMPERATURE, ALARM INPUT]

Record

[MANAGEMENT, RECORD LIST, STORAGE]

IVA - See the MEGApix IVA user manual for more information on this section

[ENABLE, RULES, COUNTERS, CALIBRATION, CLASSIFICATION, BURNT-IN ANNOTATION, TCP NOTIFICATION, HTTP NOTIFICATION, TAMPER, ADVANCED, LICENSE]

Security

[IP ADDRESS FILTER, RTSP AUTHENTICATION, IEEE 802.1x, HTTPS, CERTIFICATES, AUTO LOCK]

System

[INFORMATION, DIAGNOSTICS, CONFIGURATION BACKUP, FIRMWARE UPDATE, DATE AND TIME, DST, USER MANAGEMENT, LOG, FACTORY RESET, RESTART, OPEN SOURCE, PLUG-IN]

Setup - Video and Audio Setup

Video Configuration

VIDEO CONFIGURATION

Stream	Codec	Description
1	H.264	channel1
2	H.264	channel2
3	M-JPEG	channel3

Codec

Codec: H.264

Description: channel1

Resolution: 3840x2160

Frame Rate(FPS): 30

GOP: 30 [1 ~ 120]

Profile: High

Bitrate Mode: CBR

Target Bitrate: 5120 [1Mbps ~ 25Mbps]

Quality: 5 [1 ~ 10]

Smart Bitrate Control: Off

Extension Option: Off

APPLY

- ❶ **Live Video Channel Setup** - The video can be configured to various settings with a combination of codec and resolution. The camera performance should be considered when setting multiple channels, as the performance of the camera will be affected.

⚠ H.265 (HEVC) codec with a higher bitrate may cause unstable live streaming or reload the webpage.

- ❷ **Codec** - Choose the video codec. Depending on the selected codec, the subcategories may be changed accordingly.

- ❸ **Description** - Input the additional description of the selected channel. Max. 30 alphanumeric characters may be used, including spaces.

- ❹ **Resolution** - Select video resolution.

⚠ Available Frame Rate may differ even if the same codecs are in use.

<Resolution of Video Format>

QFHD	2560x1440 (4M)	1080p/i	720p/i	SVGA	768x432 (0.3M)	4CIF	VGA	640x360 (0.2M)	CIF
3840x2160	2560x1440	1920x1080	1280x720	800x600	768x432	704x576 704x480	640x480	640x360	352x288 352x240

- ❺ **Frame Rate** - Select the maximum Frame Rate.

⚠ Available Frame Rate can be different although the same codecs were set up.

Setup - Video and Audio Setup

Video Configuration

Stream	Codec	Description
1	H.264	channel1
2	H.264	channel2
3	M-JPEG	channel3

Codec	
Codec	H.264
Description	channel1
Resolution	3840x2160
Frame Rate(FPS)	30
GOP	30 [1 ~ 120]
Profile	High
Bitrate Mode	CBR
Target Bitrate	5120 [1Mbps ~ 25Mbps]
Quality	5 [1 ~ 10]
Smart Bitrate Control	Off
Extension Option	Off

APPLY

- 6 **GOP (Group of Pictures) Size** - Set up the number of frames (P-frame) which contain only changed information based on the basic frame (I-frame). Regarding videos with lots of movement, if you set the GOP size bigger, only the number of P-frames is bigger.

As a result, the video resolution will be low but 'File size' and 'Bit-rate' can be decreased.

⚙ **GOP (Group of Pictures) Size** -

I-frame and P-frame creation for MPEG4, H.264, and H.265 (HEVC) video compression. 'I-frame', also known as 'key-frame', refers to the complete image data for a specific video frame. 'P-frame' refers to the changes in the image in comparison to the previous video frame. As a result, the GOP consists of one I-frame and several P-frames. For improved video quality, use a lower number of P-frames for this setting.

- 7 **Profile** - The profile defines the subset of bitstream features in H.264, H.265 (HEVC) stream, including color reproduction and additional video compression.

⚙ H.264: Main, High / H.265 (HEVC): Main

Main - An intermediate profile with a medium compression ratio. Supports I-frames, P-frames, and B-frames.

High - A complex profile with a high compression ratio. Supports I-frames, P-frames, and B-frames.

- 8 **Bitrate Mode** - Select the bit rate control scheme of video compression from CBR (Constant Bit Rate) or VBR (Variable Bit Rate).

CBR - To guarantee the designated constant bit rate, the quality of the video is controlled in this mode. Therefore, the quality of the video is likely to be varying when network traffic is changing.

VBR - To guarantee the designated quality, the bit rate of the video stream is changed in this mode. Therefore, the frame rate of the video is likely to be varying when network traffic is changing.

⚙ This category will not appear if you select the codec.

Setup - Video and Audio Setup

Video Configuration

VIDEO CONFIGURATION

Stream	Codec	Description
1	H.264	channel1
2	H.264	channel2
3	M-JPEG	channel3

Codec

Codec: H.264
Description: channel1
Resolution: 3840x2160
Frame Rate(FPS): 30
GOP: 30 [1 ~ 120]
Profile: High
Bitrate Mode: CBR

9 Target Bitrate: 5120 [1Mbps ~ 25Mbps]
10 Quality: 5 [1 ~ 10]
11 Smart Bitrate Control: Off
12 Extension Option: Off
13 APPLY

9 **Target Bitrate** - If Bitrate Control is set to be CBR, you can set the Target Bitrate.

10 **Quality** - For VBR control mode, The Target Quality of the video can be setup.

11 **Smart Core** - Off / Smart.RC

12 **Extension Option**

Off - You cannot use the Extension Option.

SVC-T On - The H.264, H.265 (HEVC) SVC (Scalable Video Coding) is a video compression algorithm that enables effective and efficient transmission of video files over low bandwidth networks.

13 Click 'Apply' to save all settings.

Setup - Video and Audio Setup

OSD Configuration

The screenshot shows the 'ON SCREEN DISPLAY(OSD) CONFIGURATION' window. It contains two main sections: 'Date & Time' and 'User Text'. Each section has a radio button for 'Off' (orange) and 'On' (grey). Below these are input fields for 'Position X' and 'Position Y', both with a range of '[0 ~ 100]'. The 'User Text' section also has a 'Text' input field. A blue line with three numbered callouts (1, 2, 3) points to the 'Date & Time' section, the 'User Text' section, and the 'APPLY' button respectively.

ON SCREEN DISPLAY(OSD) CONFIGURATION

1 **Date & Time**
☐ Off ☐ On
Position X [0 ~ 100]
Position Y [0 ~ 100]


2 **User Text**
☐ Off ☐ On
Position X [0 ~ 100]
Position Y [0 ~ 100]
Text

3 **APPLY**

- ① **Date / Time** - Display the current time.
- ② **User Text** - Output the TEXT entered by the user. Support a maximum of 30 characters.
- ③ Click 'Apply' to save all settings.

Setup - Video and Audio Setup


Region of Interest Configuration

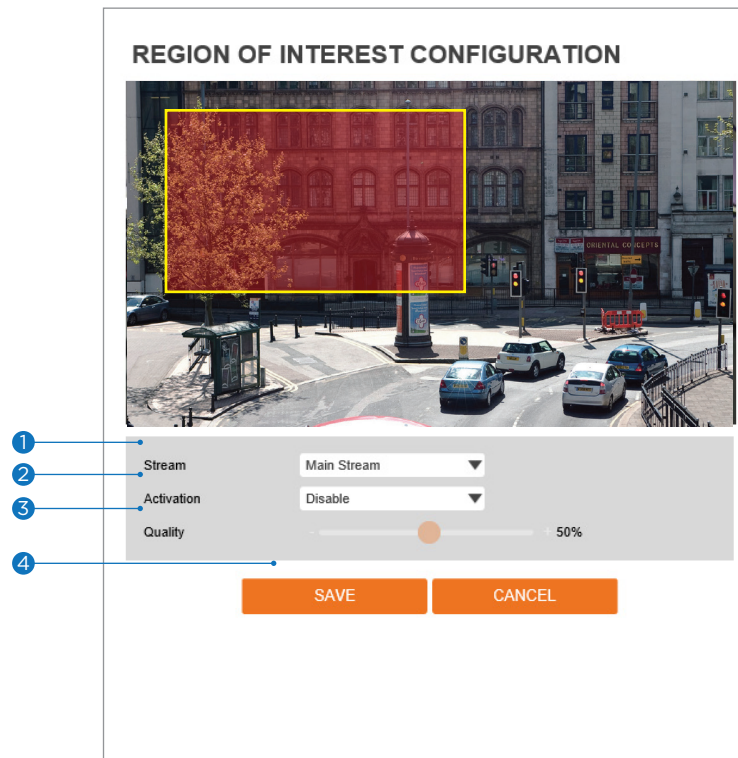

The region of interest function gives a more efficient picture quality for the indicated area to improve the qualities of movement in the scene without compromising the bandwidth.

- 1 **Stream** - Select the Stream.
 - ❗ Currently supports only H.264, H.265 (HEVC).
 - ❗ The function is not supported in the MJPEG codec.

The function is not supported in MJPEG codec.

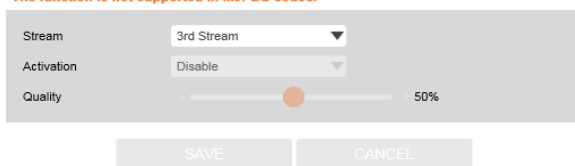

- 2 **Activation** - Enable or disable the region of interest function.
- 3 **Quality** - Set the quality of the set area.
- 4 Click 'Save' to save all settings.
 - ❗ Click 'Cancel' to return to the previous setting.

Setup - Video and Audio Setup


Audio Configuration

The screenshot shows the 'AUDIO CONFIGURATION' window. It contains a section titled 'Audio Encode' with three settings: 'Codec' (G.711 ulaw), 'Volume' (0), and 'Sample Rate' (8,000 Hz). Each setting is in a dropdown menu. Below these settings is an orange 'SAVE' button. Four numbered callouts (1, 2, 3, 4) point to the Codec, Volume, Sample Rate, and SAVE button respectively.

- 1 **Codec** - Select the Audio Codec.
⚙️ Currently, the camera supports codec G.711.
- 2 **Volume** - Select the Audio Volume from 0 to 10.
- 3 **Sample Rate** - Select the Audio Sample Rate.
⚙️ Currently, the camera supports 8000 Hz.
- 4 Click 'Save' to save all changes.

Setup - Camera Setup


Camera Image Adjustment

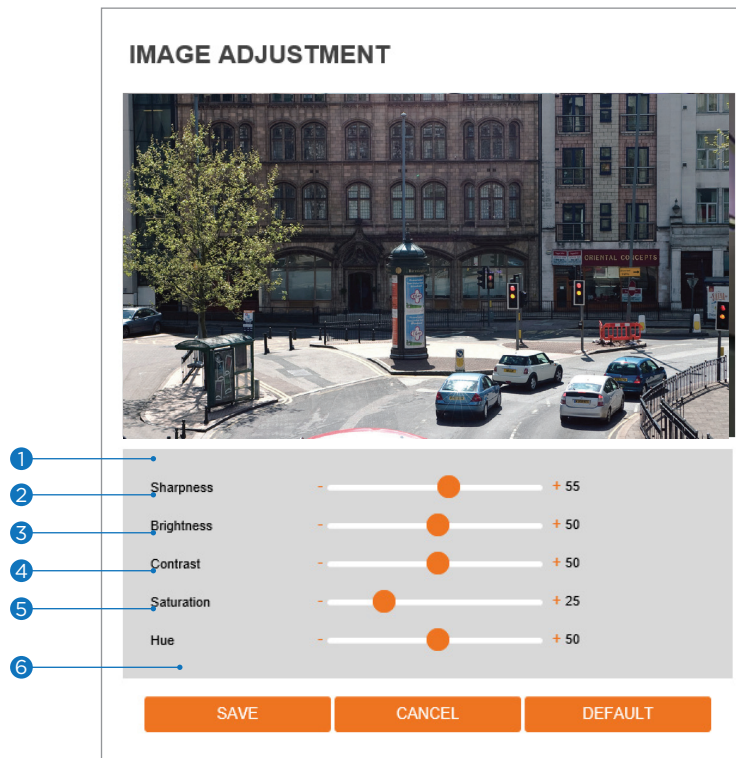

- ① **Sharpness** - The higher the number, the sharper the lines in the image will appear.
- ② **Brightness** - The higher the number, the brighter the image will appear.
- ③ **Contrast** - The higher the number, the stronger the contrast between colors in the image will appear.
- ④ **Saturation** - The higher the number, the more saturated the colors in the image will appear.
- ⑤ **Hue** - The higher the number, the stronger the hue in the image will appear.
- ⑥ Click 'Save' to save all settings.
 - ⌘ Click 'Cancel' to return to the previous setting.
 - ⌘ Click 'Default' to settings to the factory defaults.

Setup - Camera Setup


Camera Exposure Settings

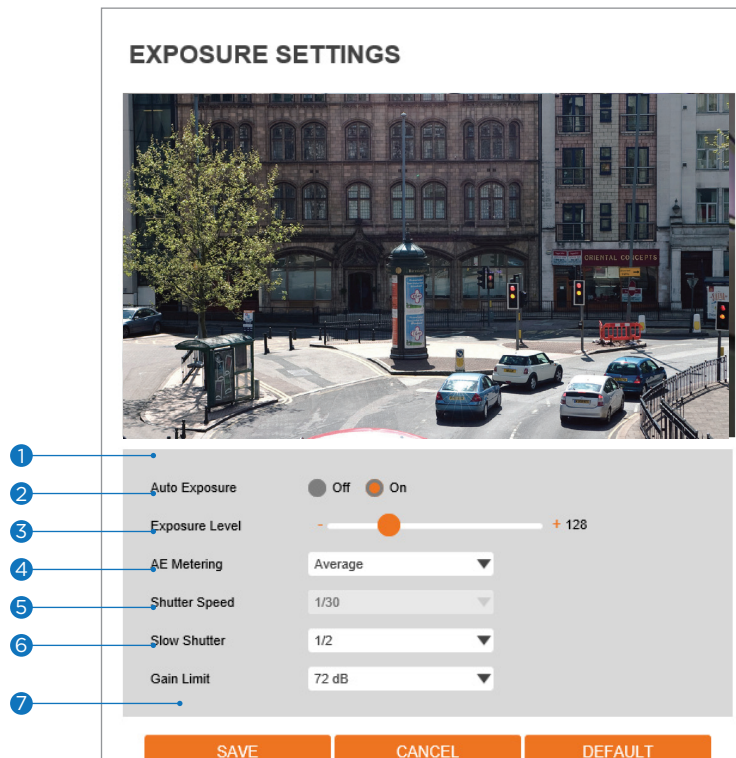

- 1 **Auto Exposure** - Automatic exposure (AE) automatically sets the aperture or shutter speed, based on the external lighting conditions for the photo.
- 2 **Exposure Level** - The higher the number, the brighter the image will appear.
- 3 **AE metering** - AE metering mode refers to how a camera determines the exposure.
- 4 **Shutter Speed** - If this speed is faster, the moving object can be photographed without the ghost effect. However, the picture can be dark if the lighting is insufficient.
- 5 **Slow Shutter Level** - Slow shutter Level lets you adjust the amount of light striking the sensor and essentially determines when the video sensor sends out its batch of data for processing.
- 6 **Gain Limit** - Adjusts image gain. The lower the value, the darker the image will appear.
- 7 Click 'Save' to save all settings.
 - ⌘ Click 'Cancel' to return to the previous setting.
 - ⌘ Click 'Default' to settings to the factory defaults.

Setup - Camera Setup

Camera Day and Night Settings

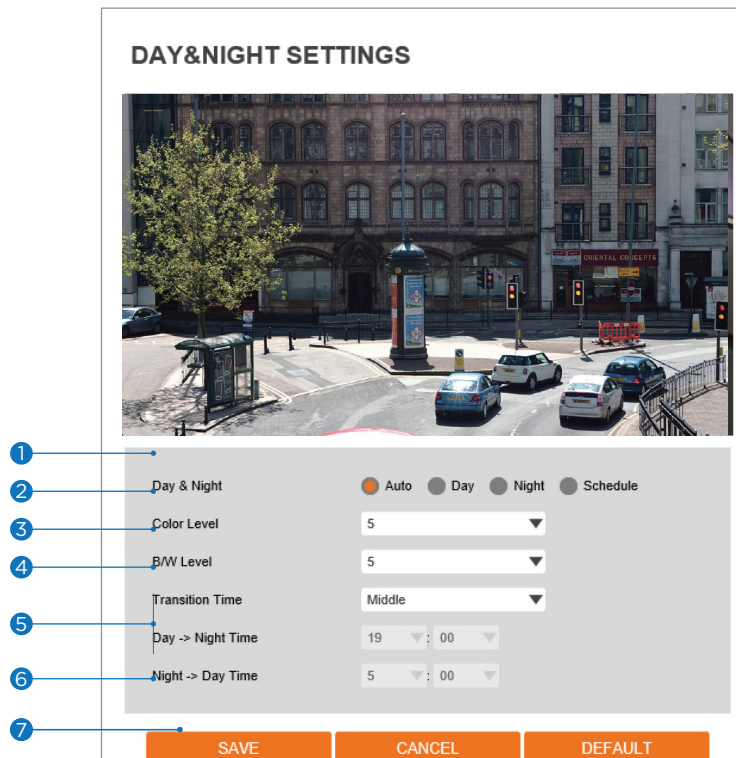

1 Day and Night

- **Auto:** In this mode, the IR cut filter is removed automatically depending on the light condition around.
- **Day:** In this mode, the IR cut filter is applied to the image sensor all the time. Thus, the sensitivity will be reduced in the dark light condition, but better color reproduction performance is obtained.
- **Night:** In this mode, the IR cut filter on the image sensor is removed all the time. The sensitivity will be enhanced in the dark light condition, but the image is black and white.
- **Schedule:** In this mode, Day/Night mode is converted accordance with the scheduled time.

2 **Color Level** - It is a level to change Night mode into Day mode when Day and Night mode is Auto.

3 **B/W Level** - It is a level to change Day mode into Night mode when Day and Night mode is Auto.

4 **Transition Time** - If it is set to Auto, to determine the rate at which Day/Night is converted.

5 If it is set to schedule mode, Set the time that Day/Night is converted.

6 **IR Mode** - turn the built-in IR LEDs on or off manually.


7 Click 'Save' to save all settings.

☒ Click 'Cancel' to return to the previous setting.

☒ Click 'Default' to settings to the factory defaults.

Setup - Camera Setup

Camera Backlight Settings

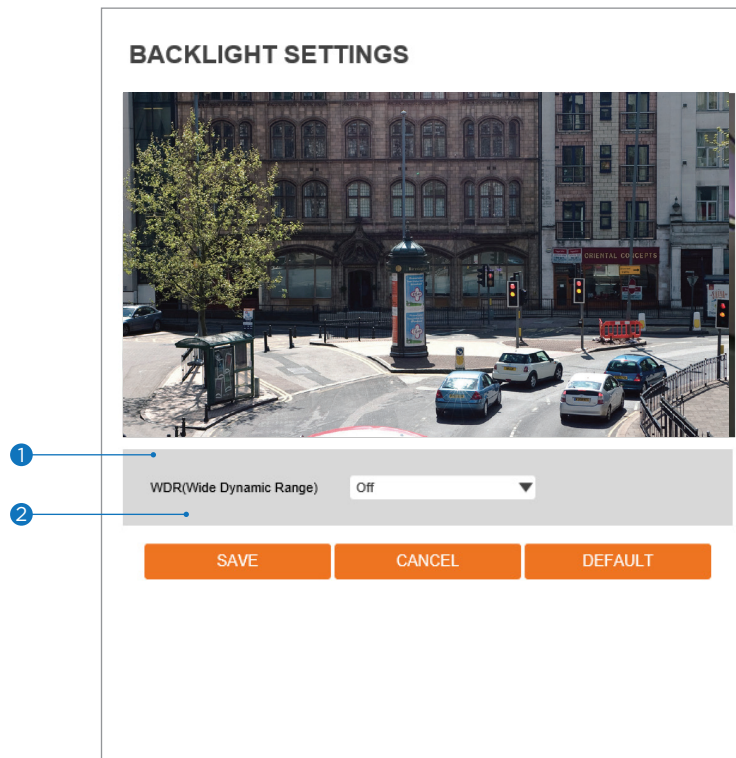


This feature is used when lighting conditions may cause detail loss in the camera's view due to high contrast.

- 1 **WDR (Wide Dynamic Range)** - Enable or disable the feature.
- 2 Click 'Save' to save all changes.
 - ⊠ Click 'Cancel' to return to the previous setting.
 - ⊠ Click 'Default' to change the settings back to their factory defaults.

Setup - Camera Setup


Camera White Balance

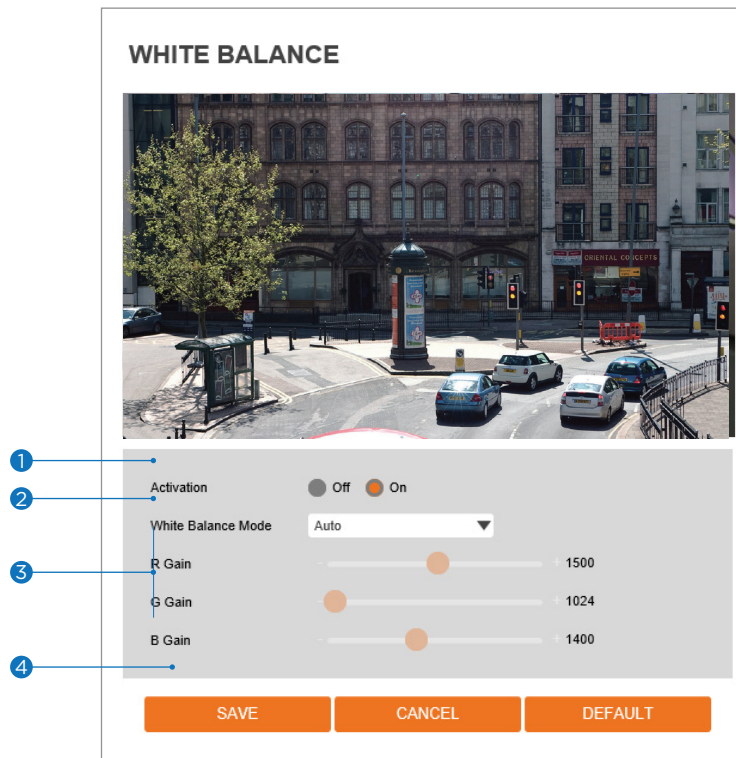

- ① **Activation** - Enable or disable the White Balance function
- ② **White Balance Mode** - Select White Balance depending on the lighting conditions.
- ③ **RGB Gain** - The R/G/B gain can be set only when the White Balance Mode is set to Manual.
- ④ Click 'Save' to save all settings.
 - ⌘ Click 'Cancel' to return to the previous setting.
 - ⌘ Click 'Default' to settings to the factory defaults.

Setup - Camera Setup


Camera Image Enhancement

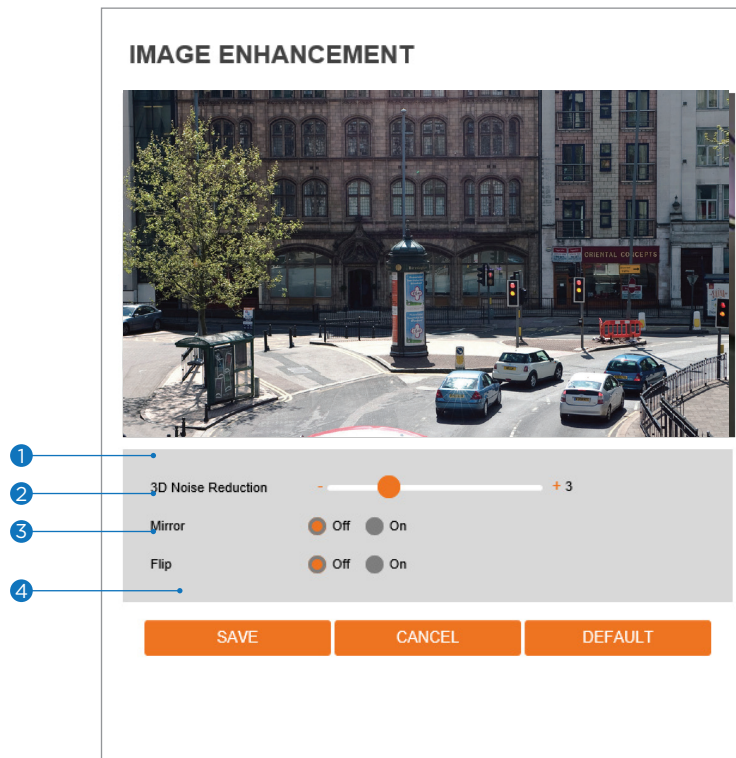

- 1 **3D Noise Reduction** - Reduce digital noise in low-light conditions, improving video quality.
- 2 **Mirror** - Reverse the video horizontally.
- 3 **Flip** - Reverse the video vertically.
- 4 Click 'Save' to save all settings.
 - ⌘ Click 'Cancel' to return to the previous setting.
 - ⌘ Click 'Default' to settings to the factory defaults.

Setup - Camera Setup

Video Enhancement

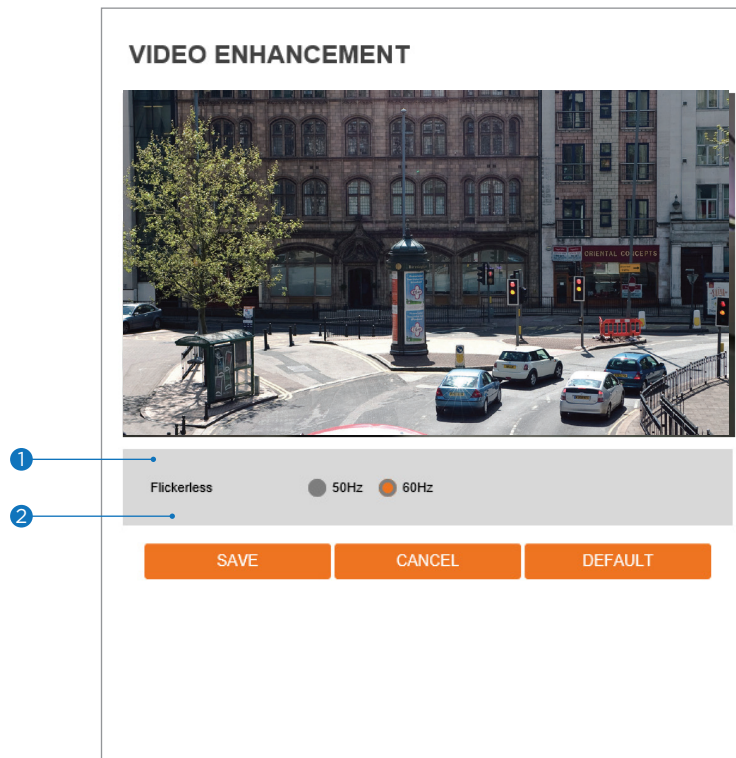

- 1 **Flicker** - In environmental situations where the camera's image appears to flicker, change the Hz values to improve the camera's image.
- 2 Click 'Save' to save the current settings.
 - Click 'Cancel' to return to the previous setting.
 - Click 'Default' to settings to the factory defaults.

Setup - Network Setup

Network Status

NETWORK STATUS	
MAC Address	00:0D:F1:21:96:3B
IP Address	192.168.1.14
Subnet Mask	255.255.0.0
Default Gateway	192.168.1.1
Preferred DNS Server	192.168.1.1
Alternate DNS Server	
HTTP Port	80
HTTPS Port	443
RTSP Port	554

This menu displays the camera's current network settings. To make any changes to the settings, you must go to the appropriate network settings tab.

Setup - Network Setup

Network Settings

The screenshot shows the 'NETWORK SETTINGS' configuration page. At the top, there's a 'Host Name' field with 'IPNC' entered. Below this is the 'Network Type' section with radio buttons for 'Static' (selected) and 'Dynamic'. The 'IP setup' section contains five input fields: 'IP Address' (192.168.1.14), 'Subnet Mask' (255.255.0.0), 'Default Gateway' (192.168.1.1), 'Preferred DNS Server' (192.168.1.1), and 'Alternate DNS Server' (empty). The 'Port Setup' section has three input fields: 'HTTP Port' (80), 'HTTPS Port' (443), and 'RTSP Port' (554), each with a default range in brackets. At the bottom right is an orange 'APPLY' button. Numbered callouts point to: 1. Network Type section, 2. IP Address field, 3. Subnet Mask field, 4. Default Gateway field, 5. Preferred DNS Server field, 6. Alternate DNS Server field, 7. HTTP Port field, 8. HTTPS Port field, 9. RTSP Port field, and 10. the APPLY button.

- 1 **Network Type** - Define the network IP address type. Select Static Mode for a fixed IP or Dynamic Mode for a dynamic IP address.
If you select Static Mode, enter the camera's IP Address, Subnet Mask, Gateway, DNS Server, and all ports.
If you select Dynamic Mode, the IP address will be assigned automatically by the DHCP network requirements.
If you click 'Apply', the system will reboot and you will have to reconnect the camera using the new IP address.
 - 2 **IP Address** - A unique string of numbers, divided into four octets (ranging from 0-255), used to identify the device over a network.
 - 3 **Subnet Mask** - Determines the range of IP address options within the network.
 - 4 **Default Gateway** - IP address of the forwarding host within the network; the IP address of the router that is most commonly used.
 - 5 **Preferred DNS Server** - Address of the decentralized system used to translate alphabetic names into IP addresses.
 - 6 **Alternate DNS Server** - Secondary address of the decentralized system used to translate alphabetic names into IP addresses.
 - 7 **HTTP Port** - The HTTP port can be set to the default 80 port or any value between 1025 to 60000.
 - 8 **HTTPS Port** - The HTTPS port can be set to the default 443 port or any value between 1025 to 60000.
 - 9 **RTSP Port** - The RTSP port can be set to the default 554 port or any value between 1025 to 60000.
 - 10 Click 'Apply' to save all settings.
- ⚠ If the network type is dynamic, the IP address is changed in the following cases. In these cases, the IP address needs to be searched again, and the camera needs to be reconnected:
- When the camera's power is switched off and on.
 - After firmware update, or when the camera is reset to its default settings and reboot.

Setup - Network Setup

Auto IP Settings

The screenshot shows a web interface titled "AUTO IP SETTINGS". It contains two main sections: "General Setting" and "Auto IP Settings Information".

1. **General Setting**: This section has a toggle switch for "Off" (orange) and "On" (grey). A blue line with the number 1 points to this section.

2. **Auto IP Settings Information**: This section displays two fields: "UNIQUE ID" with the value "4b231aca-7c6a-402d-86ae-1195558826d0" and "AUTO IP ADDRESS" with the value "169.254.1.0". A blue line with the number 2 points to the "UNIQUE ID" field.

3. **APPLY Button**: An orange button labeled "APPLY" is located at the bottom of the settings area. A blue line with the number 3 points to this button.

- ① **General Setting** - Enable or disable the Auto IP Settings.
- ② **Auto IP Settings Information** - Display the camera's Unique ID and Auto IP address.
- ③ Click 'Apply' to save all settings.

Setup - Network Setup

ONVIF Settings

The image shows a web interface for ONVIF settings. At the top, the title 'ONVIF SETTINGS' is displayed. Below it, there are two main sections: 'Authentication' and 'Discovery mode'. The 'Authentication' section has three radio button options: 'None', 'WS-UserToken', and 'WS-UserToken + Digest'. The 'Discovery mode' section has two radio button options: 'Discoverable' and 'Nondiscoverable'. An orange 'APPLY' button is located at the bottom right of the settings area. Three numbered blue circles with arrows point to specific elements: circle 1 points to the 'Authentication' section header, circle 2 points to the 'WS-UserToken + Digest' radio button, and circle 3 points to the 'Discoverable' radio button in the 'Discovery mode' section.

1 Authentication

None: Allow access to the camera without ONVIF authentication.

WS - UserToken: Allow access to the camera with WS-User Token of ONVIF authentication.

WS - UserToken + Digest: Allow access to the camera with WS-User Token and Digest of ONVIF authentication.

2 Discovery Mode - Enable or disable discovery mode.

3 Click 'Apply' to save all settings.

Setup - Network Setup

UPNP Settings

The image shows a web interface for 'UPNP SETTINGS'. It contains two main sections: 'General Setting' and 'Device Information'. The 'General Setting' section has a radio button interface with 'Off' selected (indicated by an orange dot) and 'On' (indicated by a grey dot). The 'Device Information' section has a text input field labeled 'FriendlyName'. An orange 'APPLY' button is located at the bottom right of the settings area. Three numbered blue callouts are present: 1 points to the 'General Setting' section, 2 points to the 'Device Information' section, and 3 points to the 'APPLY' button.

- ① **General Setting** - Enable or disable the UPNP function.
- ② **Friendly Name** - Define the friendly name. Support a maximum of 30 characters and special characters.
 - Do not use: / ~ ! \$ () { } [] ; ,
 - Acceptable special characters include; @ . _ -
- ③ Click 'Apply' to save all settings.

Setup - Network Setup

DDNS Settings

The screenshot shows the 'DDNS SETTINGS' interface. It features two radio buttons: 'Disable' (selected) and 'Public DDNS'. Below these are input fields for 'Address' (containing 'www.no-ip.com'), 'Host Name', 'User Name', and 'Password'. An 'APPLY' button is at the bottom right. Three numbered callouts are present: 1 points to the 'Disable' radio button, 2 points to the 'Public DDNS' radio button, and 3 points to the 'APPLY' button.

❶ **DDNS Disable** - If it is selected, the DDNS service does not work.

❷ **Public DDNS** - To use public DDNS service, select a site address listed on the list. After filling out the Host Name of the site the setup is completed by entering the username and password registered in that DDNS site.

DDNS Provider
DynDNS
No-IP

⚙ If you setup DDNS properly, the IP address of your camera will be updated automatically whenever the IP address is changed or the system is rebooted.

⚙ If IP updating to the DDNS site is failed, the camera will keep retrying in 1min. interval.

❸ Click 'Apply' to save all settings.

Setup - Network Setup

FTP Settings

The screenshot shows the 'FTP SETTINGS' window. It has two main sections: 'General Setting' and 'Server information'. The 'General Setting' section has a toggle switch for 'Off' (orange) and 'On' (grey). The 'Server information' section contains several input fields: 'FTP Server Address', 'FTP Upload Path' (with a '/' character), 'FTP Port' (with '21'), 'User ID', and 'Password'. An orange 'APPLY' button is at the bottom. Numbered callouts point to: 1. General Setting toggle, 2. Server information section header, 3. FTP Server Address field, 4. FTP Upload Path field, 5. FTP Port field, 6. User ID field, and 7. Password field.

To transfer/save the image to the relevant sites through FTP, then FTP needs to be setup.

- ① **General Setting** - Enable or disable the FTP function.
- ② **FTP Server Address** - Define FTP Server IP Address. If the IP Address form is incorrect, a message box will be shown to try again.
- ③ **FTP Upload Path** - Define a path in FTP server to store video. For the path name, English Alphabets, numbers and special characters (/ ~ ! @ \$ ^ () _ - { } [] ; ,) can be used.
- ④ **FTP Port** - Define the FTP Server Port. If the port is not appropriate, it is impossible to access to FTP Server.
- ⑤ **User ID** - Define User ID to access the FTP Server. Fill out the correct User ID registered in the FTP Server.
- ⑥ **Password** - Define Password to access the FTP Server. Fill out the correct Password registered in the FTP Server.
- ⑦ Click 'Apply' to save all settings.
☒ Refer to the above image for example.

Setup - Network Setup

SMTP Settings

The screenshot shows the 'SMTP SETTINGS' configuration page. It is divided into three main sections: 'General Setting', 'Account information', and 'Mail Contents'.
1. 'General Setting' has a radio button for 'Off' (selected) and 'On'.
2. 'Account information' has a 'Mode' section with 'PLAIN' (selected) and 'SSL/TLS' radio buttons.
3. Below 'Mode' are input fields for 'SMTP Server Address', 'PORT' (with '25' as a hint), 'User ID', 'Password', 'E-Mail Sender', and 'E-Mail Receiver'.
4. 'Mail Contents' has a 'Title' input field and a 'Message' text area.
5. At the bottom of 'Mail Contents' is a checkbox labeled 'Contains detailed event information'.
6. At the very bottom are two orange buttons: 'TEST' and 'APPLY'.
Numbered callouts 1 through 11 point to these specific elements: 1 to the 'Off' radio button, 2 to the 'Mode' label, 3 to the 'SMTP Server Address' field, 4 to the 'PORT' field, 5 to the 'User ID' field, 6 to the 'Password' field, 7 to the 'E-Mail Sender' field, 8 to the 'E-Mail Receiver' field, 9 to the 'Title' field, 10 to the 'Message' text area, and 11 to the 'TEST' button.

To send/save the image to the relevant sites by Email, SMTP needs to be setup.

- ① **General Setting** - Enable or disable the SMTP function.
- ② **Mode** - Select the security mode of SMTP from Plain or SSL / TLS. After checking the account setup of your SMTP Server, you may select one.
- ③ **SMTP Server Address** - Define the SMTP Server Address. If the IP Address form is incorrect, a message box will be shown to try again.
- ④ **Port** - Define the Port used in the Plain or SSL / TLS security mode in the above.
- ⑤ **User ID** - Define the User ID to access the SMTP Server. Fill out the correct User ID registered in the SMTP Server.
- ⑥ **Password** - Define the Password to access the SMTP Server. Fill out the correct Password registered in the SMTP Server.
- ⑦ **E-Mail Sender** - Define the e-mail address of the E-Mail Sender. It will be displayed as the sender when the camera sends an E-mail.
- ⑧ **E-Mail Receiver** - Define the e-mail address of E-Mail Receiver. It will be displayed as the Receiver when the camera sends an E-mail.
- ⑨ **Title** - Define the title of the E-Mail when the camera sends an E-mail.
※ The title of the Email is limited to 40 characters including the spaces.
- ⑩ **Message** - Define the contents of E-Mail when the camera sends an E-mail. The message of the E-mail is limited to 40 characters including the spaces.
- ⑪ Click 'TEST' to send a test message 'APPLY' to save all settings.

Setup - Network Setup

SNMP Settings

The image shows a web-based configuration interface for SNMP settings. It is divided into two main sections: 'SNMP v1/v2c' and 'SNMP v3'. In the 'SNMP v1/v2c' section, there are radio buttons for 'SNMPv1' and 'SNMPv2c', both currently set to 'Off'. Below these are text input fields for 'Read Community' (containing 'public') and 'Write Community' (containing 'private'). There is also a radio button for 'SnmpTrap' (set to 'Off'), a text field for 'TrapAddress' (containing '0.0.0.0'), and a text field for 'TrapCommunity' (containing 'public'). The 'SNMP v3' section has a dropdown menu for 'Mode' set to 'Read'. Below this is a radio button for 'Activation' (set to 'Off'). Further down are text fields for 'Read Name' (containing 'root'), a dropdown for 'Security Level' (set to 'no auth, no priv'), a dropdown for 'Authentication Algorithm' (set to 'MD5'), and a text field for 'Authentication Password'. At the bottom right of the interface is an orange 'APPLY' button. Numbered callouts 1 through 9 point to specific elements: 1 points to the 'SNMPv1' radio button, 2 to the 'SnmpTrap' radio button, 3 to the 'Mode' dropdown, 4 to the 'Activation' radio button, 5 to the 'Read Name' field, 6 to the 'Security Level' dropdown, 7 to the 'Authentication Algorithm' dropdown, 8 to the 'Authentication Password' field, and 9 to the 'APPLY' button.

❶ **SNMPv1/SNMPv2** - Select the SNMPv1/SNMPv2 option and type the names of Read and Write communities.

SNMP trap can be used to check periodically for operational thresholds or failures that are defined in the MIB.

❷ **SNMP Trap** - Enable or disable the SNMP trap.

SNMPv3 contains cryptographic security, a higher security level, which allows you to set the Authentication password and the Encryption password.

❸ **Mode** - Select either Read or Read/Write mode.

❹ **Activation** - Select mode to enable or disable.

❺ **Read/Write name** - Define Read name and Write name.

❻ **Security Level** - Select one of no auth, no priv/auth, priv.

❼ **Authentication Algorithm** - Select MD5 or SHA as the authentication method.

❽ **Authentication Password** - The Authentication Password is encryption for authentication and is between 8 to 30 digits long.

❾ Click 'Apply' to save all settings.

Setup - Network Setup

RTSP Information


The screenshot shows the 'RTSP INFORMATION' configuration page. It is divided into several sections: 'RTSP Global Setting' with a 'Target Stream' dropdown set to 'Main Stream'; 'Session Timeout' with a 'Time Out' input set to 0 and a checkbox for '[Default: Off, 30~120]'; 'QoS Setting' with a 'DSCP' input set to 0 and a range '[0~255]'; and 'Rtp Multicast' with a 'MULTICAST' toggle set to 'Stop', and inputs for 'IP' (0.0.0.0), 'PORT' (0, range [1024~60000]), and 'TTL' (0, range [1~255]). An orange 'APPLY' button is below these settings. At the bottom, a table shows RTSP connection information with columns 'No', 'Remote IP', 'Port', and 'Type'. The table contains two entries: No. 1 with Remote IP 127.0.0.1, Port 44570, and Type UDP; and No. 2 with Remote IP 127.0.0.1, Port 44554, and Type UDP. A '+' button is at the bottom right of the table.

No	Remote IP	Port	Type
1	127.0.0.1	44570	UDP
2	127.0.0.1	44554	UDP

- ① **Target Stream** - Select the stream you want to set.
- ② **Time out** - Set the RTSP time out.
 - ⊞ The session is disconnected after the specified time out.
- ③ **QoS Setting** - Set the quality of service to ensure data transfer performance.
- ④ **RTP Multicast** - Check RTP Multicast Start/Stop. To activate RTP Multicast.
 1. Click the “On” button.
 2. Enter accessible RTP Multicast IP, the port for video stream control, RTP packet TTL.
 3. Click the “Apply” button.
 - ⊞ It is possible to set each RTP Multicast for CH1-3.
- ⑤ Click ‘Apply’ to save all settings.
 - ⊞ Click this button when completed setup each channel.
- ⑥ It shows RTSP Connection information.

Setup - Trigger Action Setup

Action Rules Configuration

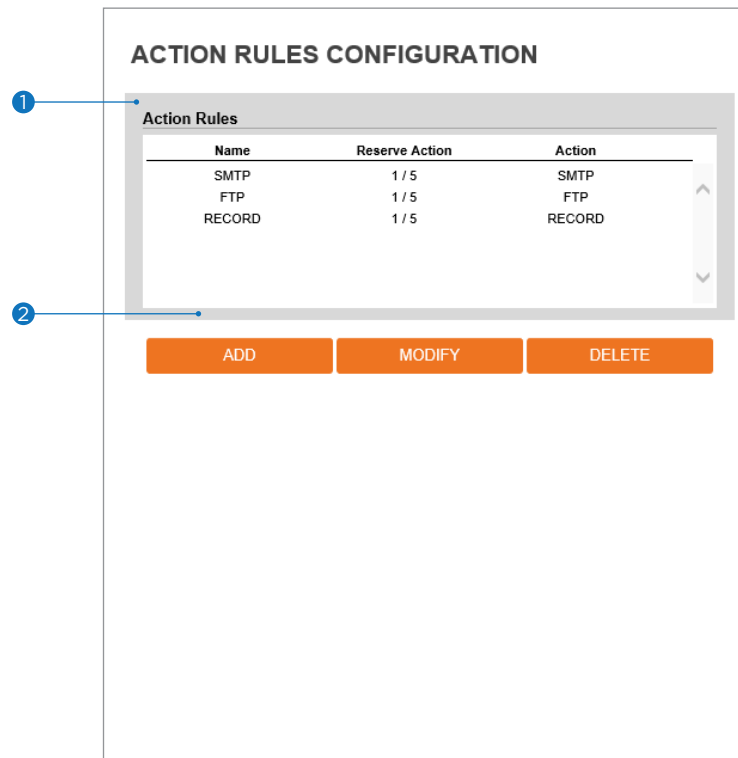

- ❶ **Action rules List** - It indicates the custom action rule information added to the Action rules list.
- ❷ Click 'Add' to add custom action rules.
 - ⊞ Click 'Modify' to modify selected items from the action rules list.
 - ⊞ Click 'Delete' to delete selected items from the action rules list.

Setup - Trigger Action Setup

Action Rules Add/Modify

The screenshot shows a web form titled "ACTION RULES CONFIGURATION". It has a "General Setting" section with a "Name" field containing "NewAction". Below this is a section with five rows, each labeled "Action1" through "Action5", each with a dropdown menu currently set to "NONE". At the bottom are two orange buttons: "SAVE" and "CANCEL". Three blue callout lines with numbered circles point to the "Name" field (1), the "Action3" dropdown (2), and the "SAVE" button (3).

- ❶ **Name** - Define the name of the action rules.
⚠ Input text cannot exceed the limit (3-15 characters).
- ❷ **Action1 ~ Action5** - Select the action to take If the event occurs.
- ❸ Click 'Save' to save all settings.
⚠ Click 'Cancel' to return to the previous menu.

Setup - Trigger Action Setup

Image Transfer Configuration

IMAGE TRANSFER CONFIGURATION

1. Add the FTP/SMTP action in the event rules menu.
2. When an event occurs, the images will be sent to ftp/smtp address .
3. Determine the image transfer speed and the duration of image transfer after/before an event.

1

Pre/Post Alarm Image

Number Of Image

2

Image Per Seconds(s) [1 ~ 5]

Pre-Alarm Duration

3

Second(s) [1 ~ 5]

Post-Alarm Duration

3

Second(s) [1 ~ 30]

Max. Number Of Image

30

☐ [Default: Off, 5 ~ 1000] (SMTP Only)

2

APPLY

- 1 **Pre/Post Alarm Image** - Image Transfer due to event is configured by setting the image transfer rate and Pre/Post alarm duration.

	Descriptions
Number of Images	Define the number of images transferred per second.
Pre-alarm Duration	Define the duration of the image transfer before an event.
Post-alarm Duration	Define the duration of the image transfer after an event.

- 2 Click 'Apply' to save all settings.

Setup - Trigger Action Setup

Relay Out Configuration


The screenshot shows a configuration window titled "RELAYOUT CONFIGURATION". It contains the following elements:

- 1** Points to the "Relay Output" dropdown menu, which currently shows "01".
- 2** Points to the "Mode" section, which has two radio buttons: "Monostable" (selected) and "Bistable".
- 3** Points to the "Idle State" section, which has two radio buttons: "Closed" (selected) and "Open".
- 4** Points to the "Duration" input field, which shows the value "1". To the right of the input is the text "Second(s) [1 ~ 30]".
- 5** Points to the "APPLY" button at the bottom of the configuration area.

- 1 Relay Output** - Select the Relay output.
 - ⚠ The number of relay outputs available depends on the camera model.
- 2 Mode** - Select the monostable/bistable for relay mode.
- 3 Idle State** - Select whether the contact is normally opened or is closed.
- 4 Duration** - Relay out is operated during the setting time.
 - ⚠ In monostable mode, this function must be set up.
- 5** Click 'Apply' to save all changes.

Setup - Event Setup

Event Rules Configuration

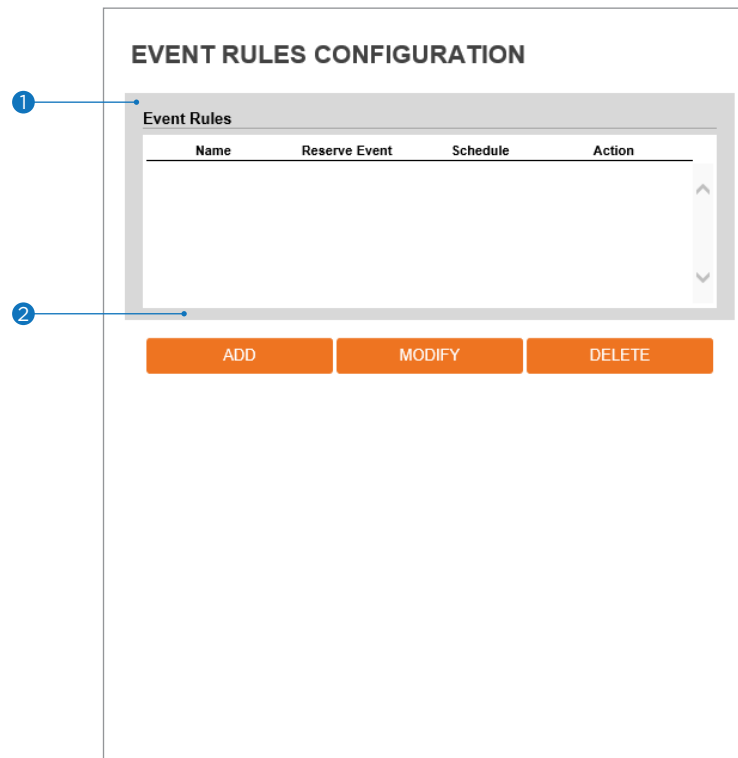

- ❶ **Event Rules List** - It indicates the custom Event Rule information added to the Event Rules list.
- ❷ Click 'Add' to add custom event rules.
 - ⌘ Click 'Modify' to modify selected items from the event rules list.
 - ⌘ Click 'Delete' to delete selected items from the event rules list.

Setup - Event Setup


Event Rules Configuration

The screenshot shows the 'EVENT RULES CONFIGURATION' form. It is divided into three main sections: 'General', 'Event Condition', and 'Action'. The 'General' section has a 'Name' field with the value 'NewRule'. The 'Event Condition' section has an 'Event' dropdown menu set to 'NONE' and a warning message: 'If "System Initialize" is selected, "Recoding" does not work.' The 'Action' section has a 'Rules' dropdown menu set to 'NONE'. At the bottom, there are two orange buttons: 'SAVE' and 'CANCEL'. Four numbered callouts point to these elements: 1 points to the 'Name' field, 2 points to the 'Event' dropdown, 3 points to the 'Rules' dropdown, and 4 points to the 'SAVE' and 'CANCEL' buttons.

- 1 **Name** - Define the Event rule name.
- 2 **Event** - Select the event among motion detection, network disconnection, illegal login detected, temperature critical, schedule, sensor detection.
 - ⊠ Click 'Cancel' to return to the previous setting.
 - ⊠ You need at least one event.
- 3 **Rules** - Select the action rule defined in the Trigger Action-Action rule menu.
- 4 Click 'Save' to save the current settings.
 - ⊠ Click 'Cancel' to return to the previous setting.

Setup - Event Setup

Motion Detection Configuration

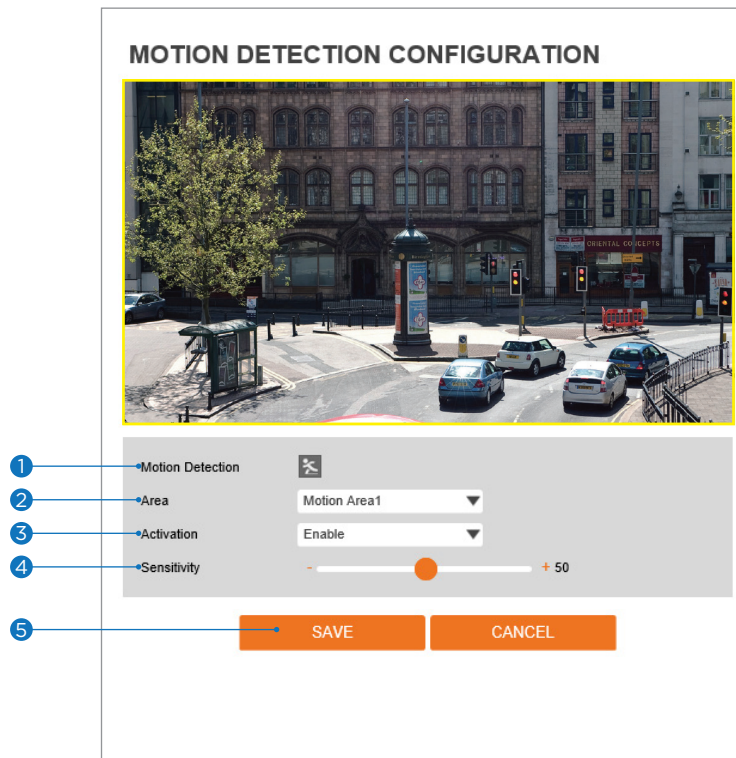

- 1 **Motion Detection** - It shows the Motion event status.
 - ☒ Event Alert Icon() appears if 'Motion Detection' is activated.
- 2 **Area** - Set the motion detected area. Click in the display window to draw the motion area.
 - ☒ You can set up to four areas.
- 3 **Activation** - Enable or Disable motion detection function.
- 4 **Sensitivity** - Define the sensitivity of motion detection.

If a high value is selected, it will detect very small motion while it becomes relatively insensitive when a low value is selected.
- 5 Click 'Save' to save all settings.
 - ☒ Click 'Cancel' to return to the previous setting.

Setup - Event Setup

Temperature

The screenshot shows a web interface titled "TEMPERATURE" with a "General Setting" section. This section contains three fields: "Mode" with a dropdown menu currently set to "Fahrenheit", "Threshold" with a text input of "150" and a range "[122 ~ 212]", and "Temperature" with a text input of "115 °F". Below these fields is an orange "APPLY" button. Four numbered blue circles with arrows point to these elements: 1 points to the Mode dropdown, 2 points to the Threshold input, 3 points to the Temperature input, and 4 points to the APPLY button.

- ① **Mode** - Select Fahrenheit or Celsius.
- ② **Threshold** - Define the temperature at which the event trigger occurs.
- ③ **Temperature** - It indicates the current temperature of the IP camera.
- ④ Click 'Apply' to save all settings.

Setup - Event Setup

Alarm Configuration

ALARM CONFIGURATION

Input Device Setup

☒ OFF ☐ A Normal Open Contact (NO) ☐ A Normal Closed Contact (NC)

APPLY

- ❶ **Input Device Setup** - Select input device type from OFF / N.O. / N.C.

	Operation
OFF	Ignore this input sensor.
NO	The contact is normally open and closed when activated.
NC	The contact is normally closed and open when activated.

- ❷ Click 'Apply' to save all changes.

Setup - Record Setup

Record Management

The screenshot shows the 'RECORD MANAGEMENT' interface. It includes a 'Record Global Setting' section with a 'Target Stream' dropdown menu currently set to 'NONE'. Below this is an orange 'SAVE' button. The 'RECORDING LIST' section contains a table with columns: Name, Enabled, File Type, Storage, and Continuous. The table lists two records: RECORD0 and RECORD1, both enabled, in MP4 format, stored on STORAGE1, with continuous recording turned off. Below the table is an orange 'MODIFY' button. Four numbered callouts point to these elements: 1 points to the 'Target Stream' dropdown, 2 points to the 'SAVE' button, 3 points to the 'RECORDING LIST' header, and 4 points to the 'MODIFY' button.

RECORD MANAGEMENT

Record Global Setting

Target Stream: NONE

SAVE

RECORDING LIST

Name	Enabled	File Type	Storage	Continuous
RECORD0	X	MP4	STORAGE1	Off
RECORD1	X	MP4	STORAGE1	Off

MODIFY

- 1 **Target Stream** - Select the channel you want to record video.
- 2 Click 'Save' to save the current settings.
- 3 **Recording List** - Display the information about the recording settings.
- 4 Click 'Modify' to modify the selected item in the recording list.

Setup - Record Setup

Record Configuration

The screenshot shows a 'RECORD MANAGEMENT' dialog box with a 'Record Settings' section. The settings are as follows:

- Enabled:** Radio buttons for 'Off' (selected) and 'On'.
- Storage Device:** Dropdown menu showing 'SDCard 1'.
- File Type:** Dropdown menu showing 'MP4'.
- Storage:** Dropdown menu showing 'SDCard'.
- Continuous:** Radio buttons for 'Off' (selected) and 'On'.
- Pre Duration:** Input field with '5' and a range '[0 ~ 5]'.
- Post Duration:** Input field with '5' and a range '[1 ~ 240]'.
- Buttons:** 'SAVE' and 'CANCEL' buttons at the bottom.

Numbered callouts (1-8) point to the following elements:

- Enabled
- Storage Device
- File Type
- Storage
- Continuous
- Pre Duration
- Post Duration
- SAVE button

- ❶ **Enabled** - Enable or disable this function.
- ❷ **Storage Device** - This option shows the SD card currently mounted on the camera.
- ❸ **File Type** - Select the recording file type.
 - ⚙️ Currently, the camera supports MP4 file type.
- ❹ **Storage** - Select the storage type. SD Card (Disabled) selection is not allowed.
- ❺ **Continuous** - If continuous mode is enabled, the camera will start recording automatically.
- ❻ **Pre Duration** - Define the duration of recording before an event.
- ❼ **Post Duration** - Define the duration of image transfer after an event.
- ❽ Click 'Save' to save the current settings.
 - ⚙️ Click 'Cancel' to return to the previous setting.

Setup - Record Setup

Recording List

The screenshot shows the 'RECORDING LIST' interface. It includes a 'STORAGE' dropdown menu (callout 1) currently set to 'STORAGE1'. Below it is a 'Filter' section (callout 2) with checkboxes for 'Date', 'Time', 'Event', 'Storage', and 'Sort'. The 'Date' filter shows a range from '12/18/2020' to '12/18/2020'. The 'Time' filter shows a range from '0 0 0' to '0 0 0'. The 'Event' filter is set to 'All', 'Storage' is set to 'All', and 'Sort' is set to 'Ascending'. Below the filter section are 'REFRESH' (callout 3) and 'FILTER' buttons. The main area is titled 'Event' (callout 4) and contains a table with columns 'Day', 'Time', 'Duration', and 'Event'. At the bottom are 'PLAY' (callout 5) and 'DOWNLOAD' buttons.


- ① **Storage** - Select the Storage from the available options.
- ② **Filter** - Select the date/time, event, sort, or storage format to filter the recorded video results.
- ③ Click the 'Refresh' button to refresh the search results as needed.
 - ⌘ Click 'Filter' to view the filtered recorded video.
- ④ **Recording List** - Display the information of the recorded video.
- ⑤ Click 'Play' to view the selected item in the list of the recorded video results.
 - ⌘ Click 'Download' to download the selected item.
 - When you click 'Download', the following window appears.
 - When downloading, please fill-up the purpose of the file download. The field is limited to 30 characters. (This information will be shown on the Log page with the download time).

The screenshot shows a dialog box for inputting the purpose of the file download. It has a title bar that says 'Input the purpose of the file download (max: 32 characters)'. Below the title bar is a text input field with a cursor. At the bottom right are 'OK' and 'Cancel' buttons.

- ⌘ When playing back recorded MP4 files with H.265 (HEVC) codec, the video may not play due to a performance issue of the VLC plug-in.

Setup - Record Setup

Recording Video

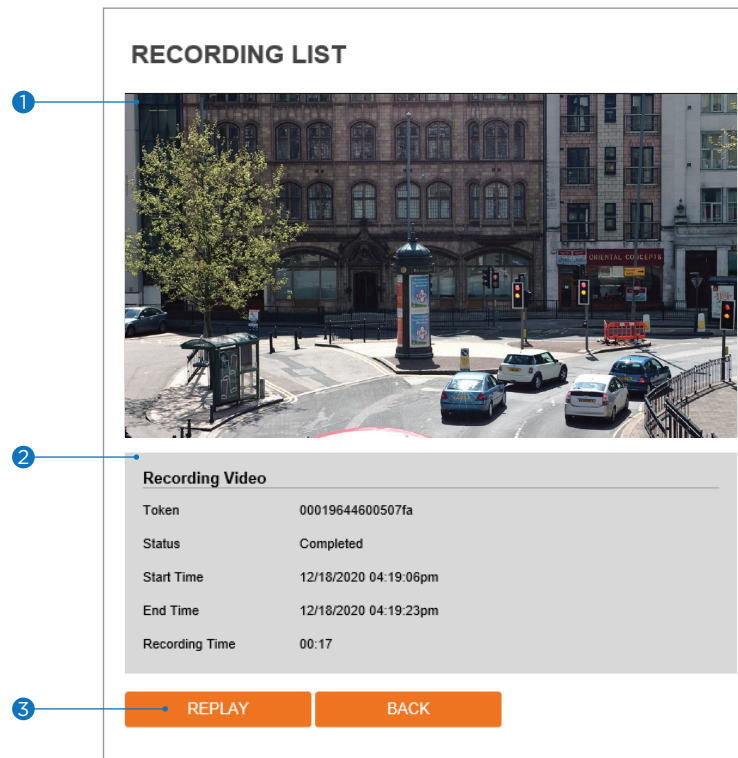

- 1 **Recording Video Viewer** - Play the recorded video.
- 2 **Recording Video Information** - Display information about the recorded video.
- 3 Click 'Replay' to view the recorded video again.
 - Click 'Back' to return to the previous menu.

Setup - Record Setup

Storage Configuration

STORAGE CONFIGURATION
Notice
1. If SD Card does not automatically mount, you must format for mounting SD card.

Storage List

Name	Mounted	Size	Used(%)	Available
SDCard1	0	59.6GB	0%	59.6GB

Display the SD card information mounted on the device.

☒ Select an item from the Storage List to configure its related functions.

Setup - Record Setup

Storage Configuration

STORAGE CONFIGURATION

Notice
1. If SD Card does not automatically mount, you must format for mounting SD card.

1 Storage Size 16MB / 59.6GB

2 Auto Delete NONE

3 Overwrite ☒ Off ☐ On

4 Unmount UNMOUNT

5 Format FORMAT

6 APPLY CANCEL

- ❶ **Storage Size** - Total capacity of SD card and the remainder of it are displayed.
- ❷ **Auto Delete** - Select the period for auto delete. The data stored before the set period will be deleted automatically.
 - ⚙ Delete all stored images older than the selected time.
- ❸ **Overwrite** - If ON is selected, once the SD card has less than 8MB storage available, new data will start to overwrite the oldest data. If OFF is selected, once the SD card has less than 8MB available, the camera will stop recording to the SD card.
- ❹ **Unmount** - Remove the SD card from the device.
- ❺ **Format** - Delete all contents stored on the SD card.
- ❻ Click 'Apply' to save all settings.
 - ⚙ Click 'Cancel' to return to the previous setting.

Setup - Security Setup


IP Address Filter Configuration

The image shows a web interface for 'IP ADDRESS FILTER CONFIGURATION'. It is divided into two main sections: 'General Setting' and 'Filtered IP Address'. In the 'General Setting' section, there is a toggle for 'IP Address Filter' (currently 'Off'), a dropdown for 'IP Filter Type' (set to 'Allow'), and an 'APPLY' button. The 'Filtered IP Address' section contains a list box for displaying filtered IP addresses. Below this list box is an input field for 'IP Address' with a '[Invalid]' status indicator, and two buttons: 'ADD' and 'REMOVE'. Six numbered callouts point to specific elements: 1 points to the 'General Setting' header, 2 points to the 'IP Address Filter' toggle, 3 points to the 'APPLY' button, 4 points to the 'Filtered IP Address' section header, 5 points to the list box, and 6 points to the 'IP Address' input field.

- ❶ **IP Address Filter** - Enable or disable this function.
- ❷ **IP Filter Type** - Select the recording IP filter type.
- ❸ Click 'Apply' to save all settings.
- ❹ **Filter IP Address** - Display the filtered IP address.
- ❺ **IP Address** - Define the IP address you want to apply the IP filter.
- ❻ Click 'Add' to add the IP address to the list.
 - ⌘ Click 'Remove' to remove the IP address selected in the list.

Setup - Security Setup

RTSP Authentication Configuration

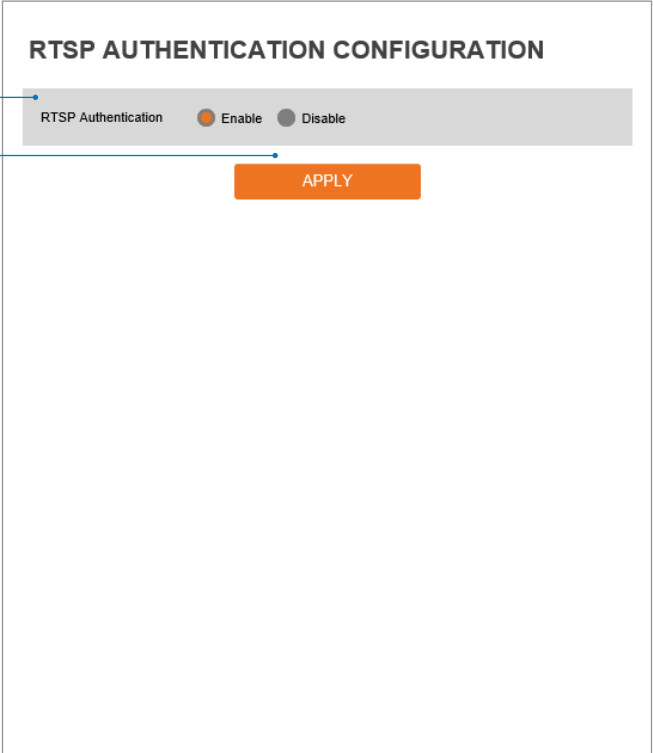

The image shows a web interface for 'RTSP AUTHENTICATION CONFIGURATION'. At the top, there is a grey bar containing the text 'RTSP Authentication' followed by two radio buttons: 'Enable' (which is selected) and 'Disable'. Below this bar, there is a large orange button labeled 'APPLY'. Two blue numbered callouts are present: callout '1' points to the 'RTSP Authentication' text, and callout '2' points to the 'APPLY' button.

- ❶ **RTSP Authentication** - Enable or disable the RTSP authentication.
- ❷ Click 'Apply' to save all settings.

Setup - Security Setup

IEEE 802.1X Configuration

The screenshot shows the 'IEEE 802.1X CONFIGURATION' page. It has a 'General Setting' section with the following fields: 'IEEE 802.1x' (radio buttons for On/Off), 'Protocol' (dropdown menu showing MD5), 'EAPOL Version' (dropdown menu showing 1), 'ID' (text input), 'Password' (text input), 'Retype Password' (text input), 'CA Certificate' (dropdown menu showing NONE), and 'Certificate' (dropdown menu showing NONE). An 'APPLY' button is at the bottom. Numbered callouts 1 through 9 point to these fields in order.

The feature is needed when connecting the camera to the network protected by the IEEE 802.1X.

- ① **IEEE 802.1x** - Enable or disable the IEEE 802.1x feature.
- ② **Protocol**
 - MD5: It provides one-way password-based network authentication of the client.
 - PEAP: It is similar to TTLS in that it does not require a certificate on the client-side.
 - TTLS/MD5: It does not require a certificate on the client-side.
 - TLS: It relies on client-side and server-side certificates to perform authentication.
- ③ **EAPOL Version** - Select the EAPOL Version.
- ④ **ID** - Type the ID to identify the client in the IEEE 802.1X authentication server.
- ⑤ **Password** - Type the Password to identify the client in the IEEE 802.1X authentication server.
- ⑥ **Verify** - Verify Password.
- ⑦ **CA Certificate** - Select the CA certificate required for TLS, TTLS, and PEAP authentication.
- ⑧ **Certificate** - Select the client certificate required for TLS authentication
- ⑨ Click 'Apply' to save all settings.

Setup - Security Setup

HTTPS Configuration


The screenshot shows the 'HTTPS CONFIGURATION' window. At the top, a message states: '1. If no certificates are available go to certificates to manage.' Below this, there are two main sections. The first section, 'Certificates', has a 'Certificate' dropdown menu currently set to 'NONE'. The second section, 'HTTPS connection Policy', contains three dropdown menus: 'WEB' set to 'HTTP and HTTPS', 'ONVIF' set to 'HTTP', and 'RTSP OVER HTTP' set to 'HTTP'. At the bottom right of the configuration area is an orange 'APPLY' button. Three blue numbered callouts are present: '1' points to the 'Certificates' section header, '2' points to the 'ONVIF' dropdown, and '3' points to the 'APPLY' button.

HTTPS encrypts session data over SSL or TLS protocols instead of using plain text in socket communications.

- ① **Certificate** - Select an installed certificate.
 - ⚙ If you cannot select a certificate, please install the certificate from the Security->Certificates menu.
- ② **HTTPS connection Policy** - Select one of "HTTP", "HTTPS", "HTTP and HTTPS" depending on the connected web, ONVIF, RTSP over HTTP.
 - WEB: "HTTP" "HTTPS" "HTTP and HTTPS"
 - ONVIF, RTSP OVER HTTP: "HTTP" "HTTPS" "HTTP and HTTPS"
- ③ Click 'Apply' to save all settings.
 - ⚙ When HTTPS mode is chosen, input https://<IP Address> to connect to the camera.

Setup - Security Setup

Certificates Configuration

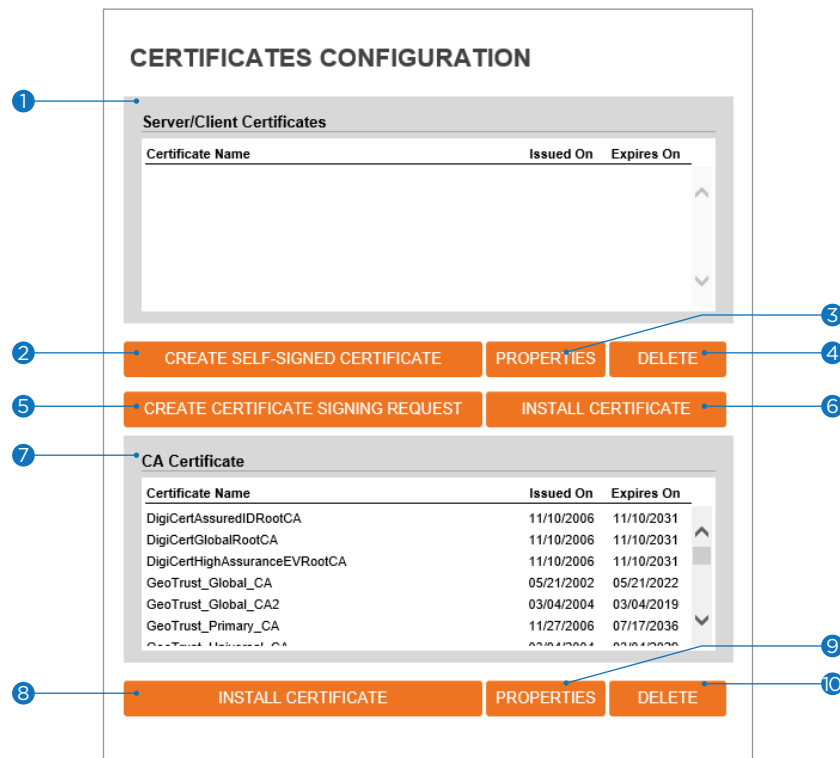

- ❶ **Server/Client Certificates** - Shows the installed certificates.
- ❷ **Create Self-Signed Certificate** - A self-signed SSL certificate is an identity certificate signed by its creator. But they are considered to be less trustworthy.
- ❸ **Properties** - Shows information about the selected certificate.
- ❹ **Delete** - Delete the selected certificate.
- ❺ **Create a Certificate signing request** - This is the encoded data that contains the necessary information for issuing the certificate.
⚠ They must be filled in when creating the CSR (Certificate Signing Request).
- ❻ **Install Certificate** - Install Certification
- ❼ **CA Certificate** - Shows the installed CA certificates.
- ❽ **Install CA Certificate** - Install Certification, see the detail page.
- ❾ **Properties** - Shows information about the selected certificate.
- ❿ **Delete** - Delete the selected CA certificate.

Setup - Security Setup

Certificates Configuration

The image shows a 'CERTIFICATES CONFIGURATION' dialog box with three main sections: 'Create Self-Signed Certificate', 'Install Certificate', and 'Install CA Certificate'. The 'Create Self-Signed Certificate' section has fields for Certificate Name, Expires On (mm/dd/yyyy), Country (US), State Or Province, Locality, Organization, Organization Unit, Common Name (192.168.1.14), RSA (4096), SHA (256), Alternative Hostname1, Alternative Hostname2, and Alternative IP. Below this are OK and CANCEL buttons. The 'Install Certificate' section has radio buttons for 'Certificate From Signing Request' (selected) and 'Certificate And Private Key'. It has fields for Certificate Name and Certificate File (with a 'Select File' button), and OK/CANCEL buttons. The 'Install CA Certificate' section has fields for Certificate Name and Certificate File (with a 'Select File' button'), and OK/CANCEL buttons. Numbered callouts 1-10 point to specific elements: 1 points to the 'Certificate From Signing Request' radio button; 2 points to the 'Certificate And Private Key' radio button; 3 points to the Certificate Name field in the 'Install Certificate' section; 4 points to the Certificate File 'Select File' button in the 'Install Certificate' section; 5 points to the OK button in the 'Install Certificate' section; 6 points to the CANCEL button in the 'Install Certificate' section; 7 points to the Certificate Name field in the 'Install CA Certificate' section; 8 points to the Certificate File 'Select File' button in the 'Install CA Certificate' section; 9 points to the OK button in the 'Install CA Certificate' section; 10 points to the CANCEL button in the 'Install CA Certificate' section.

Detail for Install Certification.


- ① **Certificate From Signing Request** - Select to install a signed certificate returned from the CA.
- ② **Certificate And Private Key** - Select to install Certificate And Private Key to install a certificate and private key.
- ③ **Certificate Name** - Enter a unique name to identify a certificate.
- ④ **Select File** - Choose the certification file.
- ⑤ **OK** - Request installing a certificate.
- ⑥ **Cancel** - Cancel install certificate and then back to certificates configuration.

Detail for Install CA Certification.

- ⑦ **Certificate Name** - Enter a unique name to identify CA certificate.
- ⑧ **Select File** - Choose a CA certification file
- ⑨ **OK** - Request installing a CA certificate.
- ⑩ **Cancel** - Cancel installing a CA certificate and then back to certificates configuration.

Setup - Security Setup

Auto Lock

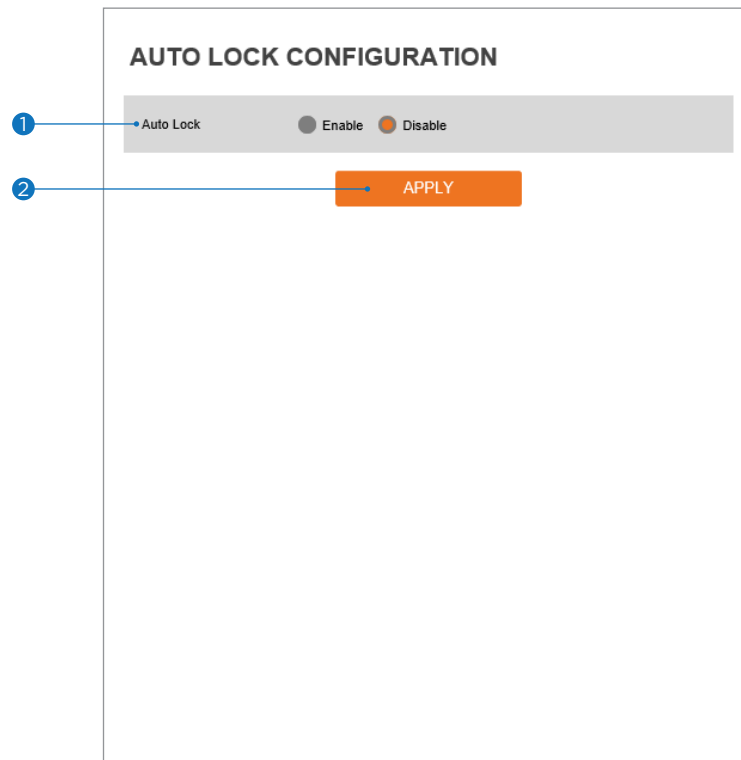

- ❶ **Auto Lock** - Enable or disable the Auto Lock function. When enabled, the system will lock itself for five (5) minutes after three (3) failed login attempts.
- ❷ Click 'Apply' to save all settings.

Setup - System Setup

System Information

The screenshot shows a 'SYSTEM INFORMATION' configuration window. It has two main sections. The top section contains input fields for 'Device Name' (with the value 'IP-Camera') and 'Location' (with the value 'unknown'). The bottom section is a table of system capabilities. To the left of the form, three numbered blue circles with arrows point to the 'Device Name' field, the 'Location' field, and the 'APPLY' button respectively.


SYSTEM INFORMATION	
Device Name	IP-Camera
Location	unknown
APPLY	
Model Name	NDE1-SLHH8
Manufacturer	IPNC
Max Resolution	3840 x 2160
Max Framerate	30 fps
Photo Resistor(CDS)	SUPPORT
Alarm In	SUPPORT
Relay out	SUPPORT
Audio	SUPPORT
Optical Zoom	NOT SUPPORT
Digital Zoom	NOT SUPPORT
PTZ	NOT SUPPORT

System Capability information.

- ① **Device Name** - You can define the device name.
- ② **Location** - You can define the device's location.
- ③ Click 'Apply' to save all settings.

Setup - System Setup

System Diagnostics

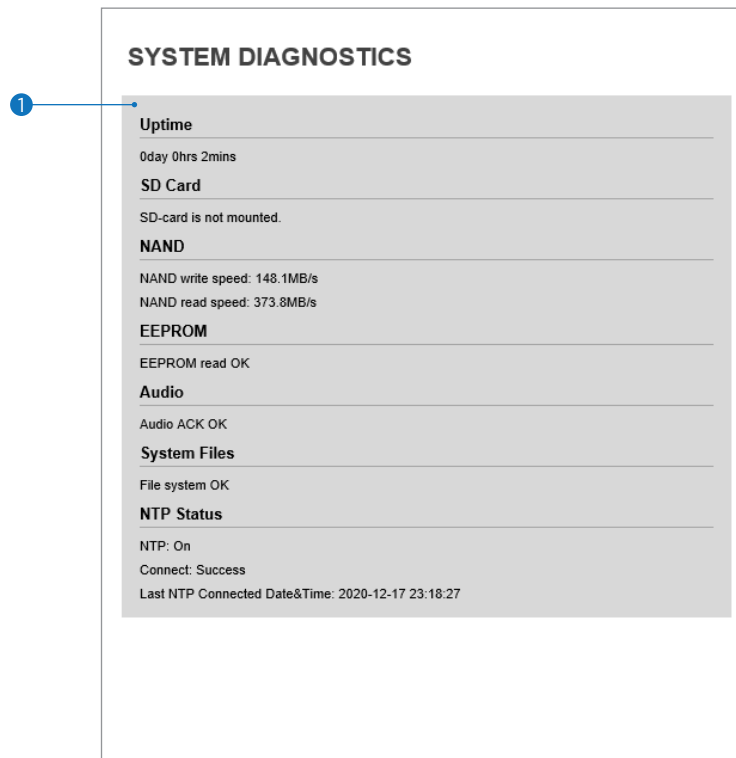

Shows basic hardware functions after inspection.

- ① Shows Uptime, SD card, NAND, EEPROM, Audio chip, Important file system, and NTP Status.

⚠ Warning:

If the camera is abnormally terminated, a download button will appear on the diagnostics page to download a file that allows you to check the error information you can.



Setup - System Setup

Configuration Backup

CONFIGURATION BACKUP

1 Mode ☐ Download ☐ Upload

2 Backup Key

APPLY

Use this page to import or export the camera settings.

- 1 Select to download or upload camera settings.
 - ⚠ The following settings are NOT included in the backup files: Network (except RTSP information), System > user management, PTZ settings (on PTZ models).
 - ⚠ Download: save the camera's current settings. Check the box next to 'Download', enter a backup key and click APPLY. The backup key can be any value. Remember the backup key, it will be required when uploading the file.
 - ⚠ Upload: upload configuration settings from another camera. Check the box next to 'Upload'. Enter the backup key for the configuration backup. Click 'Select File' to locate the configuration backup file and select it on your computer. The file name and upload status will appear. Click 'Apply' to start the upload. A popup window will appear when the configuration upload is complete.

CONFIGURATION BACKUP

Mode ☐ Download ☒ Upload

Backup Key

Select File

pconf_enc.tar

Ready to upload.

APPLY

⚠ **NOTE:**
The configuration backup download is available when accessing the camera directly from the web browser. If accessing the camera from the DW Spectrum IPVMS client, this feature is disabled.

⚠ **Warning:**
If the camera connection is abnormally terminated, a download button will appear on the diagnostics page to download and check the error information.

Setup - System Setup

Firmware Update

The screenshot shows a web interface titled "FIRMWARE UPDATE". At the top, there are three orange warning messages. Below them is a "Version Information" section with fields for "System" (2020.10.14_A10.2.2) and "Camera" (-). This is followed by a "Web update" section with a "Firmware File" label and a "Select File" button. A "START FW UPDATE" button is positioned below the "Web update" section. At the bottom is an "FTP user information" section with input fields for "FTP Server Address" (ftp.dwcc.tv), "FTP Port" (21), "User ID" (dwmpix), "Password" (masked with dots), and "FTP Upload Path" (/). At the very bottom are three buttons: "SAVE", "CANCEL", and "CHECK". Three blue callout lines with numbers 1, 2, and 3 point to the "Version Information" section, the "Select File" button, and the "START FW UPDATE" button respectively.

FIRMWARE UPDATE

1. Do not power off during update. It may cause fatal system damage.
2. If Explorer was closed abnormally or a user closed it accidentally while uploading firmware file, please try again after 30 seconds.
3. Please do not select other menus while updating firmware file.

1 • **Version Information**

System	2020.10.14_A10.2.2
Camera	-

2 • **Web update**

Firmware File

3 •

FTP user information

FTP Server Address	ftp.dwcc.tv
FTP Port	21
User ID	dwmpix
Password	*****
FTP Upload Path	/

1 Version Information - It shows the current Firmware Version in the system.

2 Web Update - Select the Firmware file on your computer by clicking the [Select file] button.

3 Start F/W Update - Click this button to start the update. Progress of uploading will be displayed using Progress Bar. If you assign the wrong file name, an error message will be shown.

Warning:

1. Do not turn off the power to the camera during the firmware update. Interrupting the update may cause the system to become unstable. Once the update is completed, the system will reboot automatically.
2. Make sure to check the 'Notice' shown on the screen.
If the firmware update is completed successfully, the camera will reboot and show the login window.

Setup - System Setup

Date and Time Settings

The screenshot shows the 'DATE&TIME SETTINGS' window. It is divided into three main sections: 'Time Zone Setup', 'Time Format', and 'Current Date & Time'. The 'Time Zone Setup' section has a dropdown menu for 'Time Zone' set to '(GMT-08) Pacific Time (US & Canada), Baja California' and an 'APPLY' button. The 'Time Format' section has dropdowns for 'Time Format' (set to 'mm/dd/yy') and 'Hour Clock Format' (set to '12H'), with an 'APPLY' button. The 'Current Date & Time' section shows the current date and time as '12/17/2020 11:21:01pm'. Below this is the 'New Camera Date & Time' section with three radio button options: 'Synchronize with my computer' (selected), 'Setup manually', and 'Synchronize with time server (NTP)'. The 'Synchronize with my computer' option shows a date and time of '12/18/2020 04:21:01pm'. The 'Setup manually' option shows date and time pickers. The 'Synchronize with time server (NTP)' option shows an 'NTP Server' dropdown set to 'pool.ntp.org'. A final 'APPLY' button is at the bottom of the window. Numbered callouts 1 through 7 point to the following elements: 1. Time Zone Setup title, 2. Time Format title, 3. Current Date & Time title, 4. Synchronize with my computer radio button, 5. Setup manually radio button, 6. Synchronize with time server (NTP) radio button, and 7. The bottom APPLY button.

- ❶ **TimeZone Setup** - Choose the time zone for the camera. It will be activated after clicking the 'Apply' button.
⚠ Before setting below 'New Camera Date and Time', set the correct time zone first.
- ❷ **Time Format** - Select the time format yy-mm-dd or mm/dd/yy.
- ❸ **Current Date and Time** - Current date and time setting in the Camera.
- ❹ **Synchronize with my computer** - Set the date/time using those of the PC currently connected.
- ❺ **Setup manually** - Set the date/time by typing manually.
- ❻ **Synchronize with time sever Time Zone (NTP)** - Choose the time server available to connect to the current camera. Date and Time will be updated automatically every hour when connected.
- ❼ Click 'Apply' to save all settings.

Setup - System Setup

DST Settings

The screenshot shows a web interface titled "DST SETTINGS". It contains two main sections: "General Setting" and "Date&Time Settings". The "General Setting" section has two radio buttons, "Off" and "On", with the "On" button selected. The "Date&Time Settings" section has two rows of dropdown menus. The "Start Time" row has dropdowns for "Mar", "Second", "Sun", and "2", followed by "o'clock". The "End Time" row has dropdowns for "Nov", "First", "Sun", and "2", followed by "o'clock". At the bottom of the form is an orange button labeled "APPLY". Three numbered blue circles with arrows point to the "General Setting" section (1), the "Date&Time Settings" section (2), and the "APPLY" button (3).

DST SETTINGS

1 • General Setting

☐ Off ☒ On

2 • Date&Time Settings

Start Time Mar ▼ Second ▼ Sun ▼ 2 ▼ o'clock

End Time Nov ▼ First ▼ Sun ▼ 2 ▼ o'clock


3 • APPLY

Daylight Saving Time (DST) is the practice of setting the clocks forward one hour from standard time during the summer months, and back again in the fall, to make better use of natural daylight.

- 1 General Setting** - Enable or disable the DST function.
- 2 Date and Time Settings** - Set the start time and end time that the DST applies.
- 3** Click 'Apply' to save all settings.

Setup - System Setup

Users Management

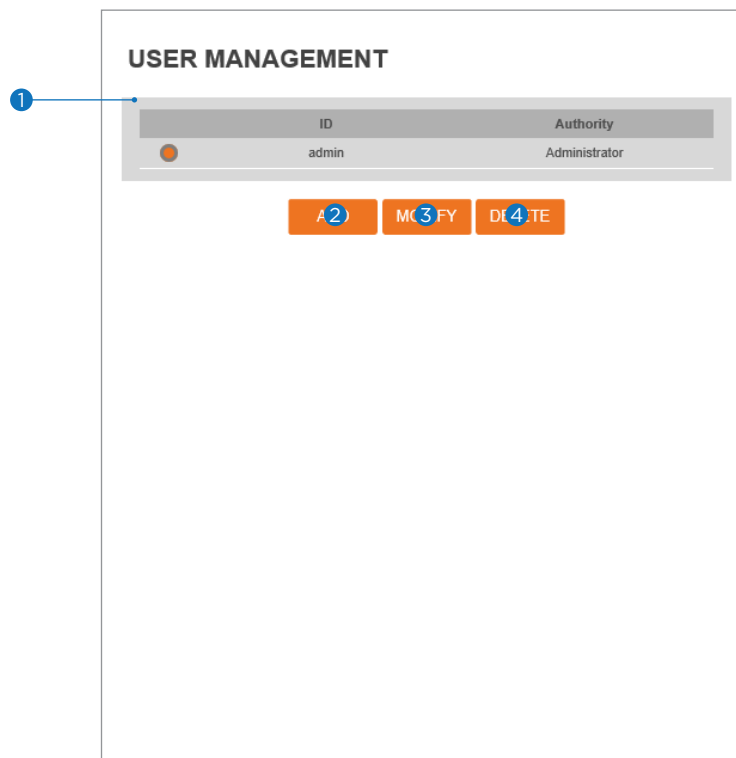

1 **Users** - List all the user accounts for authentication.

2 **Add** - Register a new user.

ID	Enter a new user ID. Admin already exists.
Password	Enter the user password. (Check the password)
Retype Password	Enter the user password again for verification.
Password Hint	Enter the password hint.
User Authority	Select Operator or Viewer. Viewer: Only monitoring is allowed. Operator: Most of the functions are allowed except 'Setup'.

- ⚠ The ID and Password are limited to 8 characters with at least two combinations of uppercase letters, lowercase letters, numbers and special characters.
Acceptable special characters are: ~ ! \$ ^ () _ - { } [] ; . ? /

Click 'Save' to save all settings.


- ⚠ Click 'Cancel' to return to the previous menu.

3 **Modify** - Modify the information of the user accounts registered. For the admin account, only the password can be modified.

4 **Delete** - Delete the selected user account. The admin account cannot be deleted.

Setup - System Setup


System Log

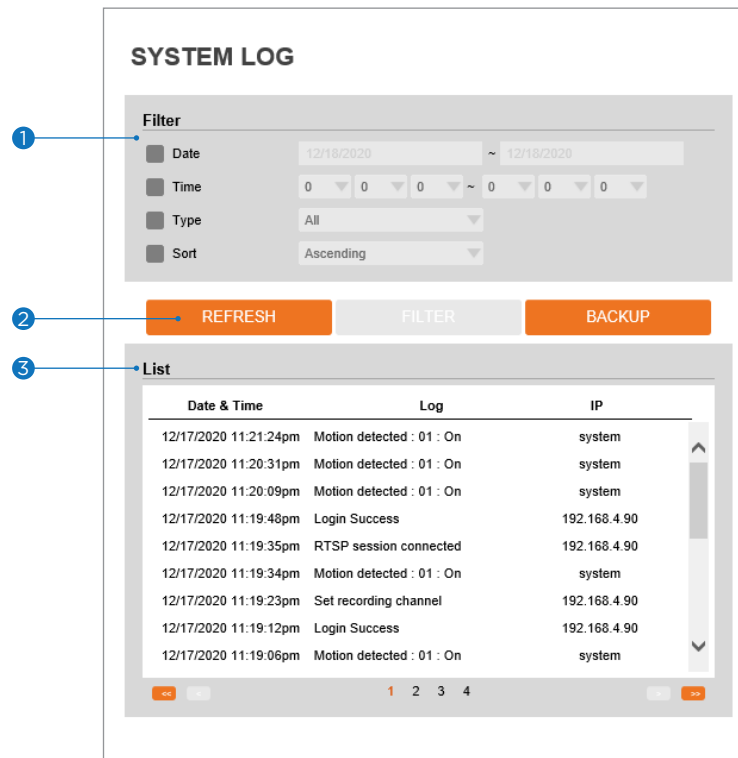

- 1 Filter** - Select a date, time, sort, or type of log to filter the log.
- 2** Click the 'Refresh' button to refresh the log list.
 - Click 'Filter' to view the filtered log.
 - Click 'Backup' to back up the filtered log.
- 3 System Log List** - The filtered log is displayed.

Setup - System Setup

Factory Reset

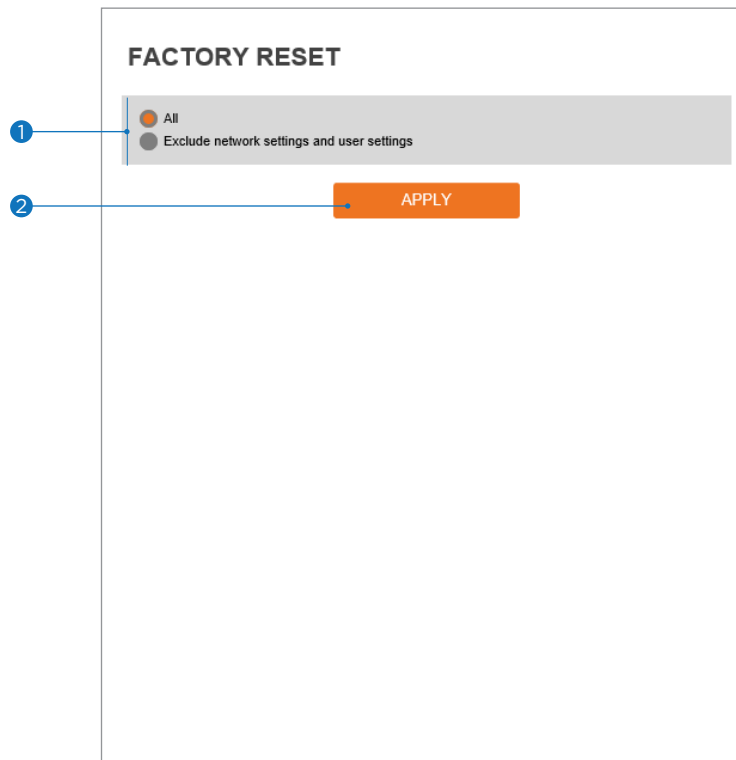

- ① **Reset to the factory defaults** - Return the setup to the factory default.


All - Reset all Settings to the factory defaults.

Except Network Settings and User Settings - Reset all camera settings to factory default except for the network settings.

- ② Click 'Apply' to save all settings.

Setup - System Setup

Restart

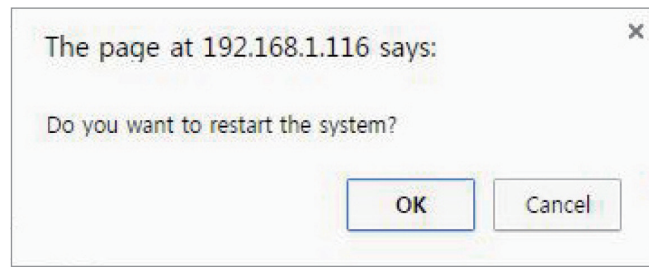

If you click the 'RESTART' menu, a message box will be shown to confirm. Click the 'OK' button to restart.

Setup - System Setup


System Open Source License

SYSTEM OPEN SOURCE LICENSE		
Open Source Name	Version	License
busybox	1.32.0	GPLv2
alsa-lib	1.1.6	GPLv2.1
libglib2	2.52.3	LGPLv2
libgnutls	3.6.2	LGPLv2.1
libjson-c	0.13.1-20180305	JSON License
libcurl	7.66.0	MIT/X derivate License
libffi	3.1	MIT License
libgcrypt	1.6.1	LGPLv2.1
libnl	3.4.0	LGPLv2.1
libogg	1.3.2	BSD-style License
libsamplerate	0.1.8	GPLv2
libselinux	2.7	Public domain
libsndfile	1.0.27	LGPLv2.1
libssh2	1.9.0	BSD
libtasn1	4.13	GPLv3

This menu shows a list of all the System Open Source License information in the camera, including Open Source Name, Version, License, etc.

Setup - System Setup

Plug-In

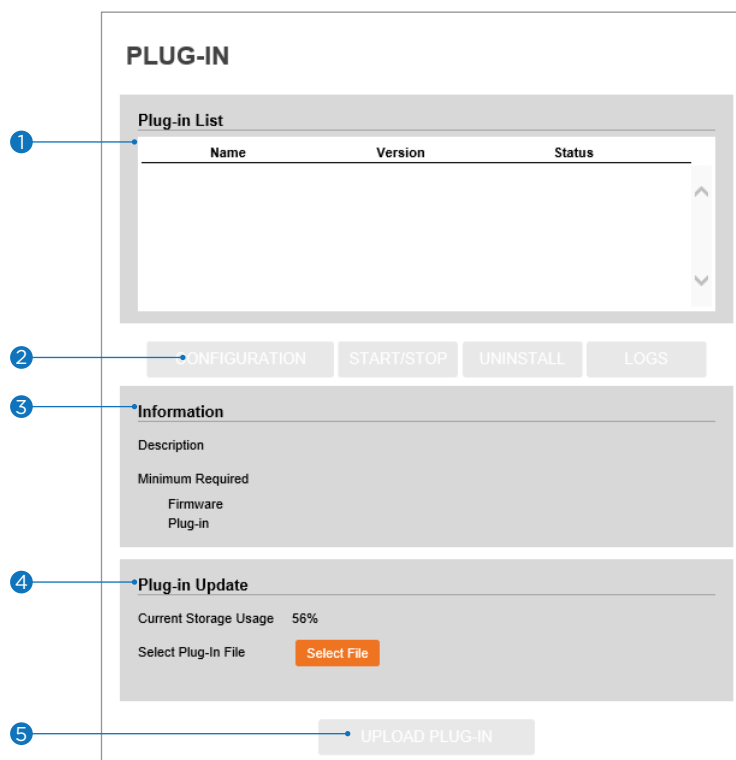

❶ **Plug-in List** - View all plug-ins currently installed on the camera.

❷ **Configuration** - Show the settings for the selected plug-in from the list.

Start/Stop - Start/stop the selected plug-in from the list.

Uninstall - Remove the selected plug-in from the list.

Logs - Download the log file for the selected plug-in from the list.

❸ **Information** - View additional information for the plug-in selected from the list.

❹ **Plug-in Update** - Once a plug-in is selected from the list, press the 'select file' button to upload a new plug-in file located on your drive.

⚠ Note the available local storage on the camera before updating a plug-in. You may need to remove some plug-ins to have enough storage for a new plug-in.

❺ **Upload Plug-In** - Once a new plug-in file is selected, click the 'UPLOAD PLUG-IN' button to start the update. The Progress Bar will indicate the uploading progress.

⚠ See the MEGApix® IVA™ user manual for more information on the analytics plug-ins, settings and activation.

Network Setup - Quick Start of Network Connection

Follow the steps below to complete the initial network setup.

- i** Do not power on the IP camera until instructed.
- i** Temporarily disable any proxy servers configured in Internet Explorer.
- i** If connecting the IP camera directly to a modem, power down and reset the modem. Leave the modem powered down until the camera's configuration is complete and the IP Camera has been connected to the modem.

- 1 Connect the IP camera to the configured network.
- 2 Open the DW IP Finder on a PC on the same network as the camera and search for the camera.

- i** If you have a DHCP server, it will automatically set the camera's IP address and network settings.
- i** If you do not have a DHCP server, the camera's IP address is set by default to 192.168.1.80 after one minute. In this case, the PC's IP address must be changed to match the camera's IP address settings to be able to access the camera.

- 3 If multiple cameras are added at the same time, each camera can be identified by its mac address.
- 4 Click on the camera's IP address and connect to the web page.
- 5 Default ID/password are both: admin.
- 6 Familiarize yourself with the viewer interface.
- 7 Install VLC to display live video.
- 8 The camera's IP address settings can be set to 'STATIC' from the DW IP Finder or the camera's web viewer by going to Setup -> Network -> Network Settings.
- 9 If the IP camera is connected to a network with a router, you must have port forwarding configured on your router to access the camera from outside the network.
- 10 After configuring port forwarding on your router (if necessary), access your IP camera by opening Internet Explorer and typing the IP address and web port assigned to the IP camera.

- i** Example: <http://192.168.0.200:8888>
- i** If your web port is 80, you do not need to specify the port in the address bar to access to your IP camera.

- 11 Access your IP Camera via the Internet (from a different network from the one your camera is):

If you use a static IP address assigned by your ISP:

1. Open Internet Explorer.
2. Type the address of the IP camera.
3. If you use a router, enter the routers' static IP and the web port number of the IP camera.

If you have a dynamic address provided by your ISP

1. Open Internet Explorer and go to your DDNS website.
 2. Register the IP camera.
 3. Reboot the IP camera.
 4. Give the DDNS server 10 minutes to locate your IP camera's IP information.
 5. Click the refresh button in Internet Explorer.
 6. After your camera is connected, select your camera.
-

Network Setup - DDNS Registration

If you have a DYNAMIC IP service from your Internet Service Provider (ISP), you cannot tell the current IP address of the IP Camera. To solve this problem, you must register with our DDNS service.

First, you must check if you are using dynamic addressing. If so, register your IP Video Server on our DDNS website before you configure, setup, or install the IP Camera.

Even though your IP is not dynamic, you will benefit by registering your device with a DDNS service. In this case, just remember 'hostname.dyndns.com/gate1' instead of a complicated series of numbers like `http://201.23.4.76:8078`.

For more details, contact our Support Center.

❏ To use a public DDNS called 'DynDNS' or 'no-IP', refer to the detailed information on how to use the service. (Visit: <http://www.dyndns.com> or <http://www.no-ip.com>)

Network Setup - Guide to the Network Environment

Please configure the IP Camera at the installation site. You must determine your network scenario to configure the IP Camera with the proper TCP/IP settings.

This tutorial will guide you through the process. Before actually configuring the IP Camera, determine settings to be applied. Record those settings to be used to configure your IP Camera for reference.

When configuring your IP Camera, treat the IP Camera as another PC on your network. You will assign it to several addresses and other TCP/IP properties to match your current network.

This step-by-step tutorial will teach what IP addresses and network configurations should be assigned based on the network scenario.

- 1 Before you begin, locate any information and settings received from your Internet Service Provider (ISP). You may need to refer to these IP addresses at a later time during the configuration.

Current TCP/IP Settings	
IP Address	
Subnet Mask	
Default Gateway	
Primary DNS Server	
Secondary DNS Server (Option)	

Static ☐ Dynamic ☐

i If you were not given any IP addresses or the ISP was responsible for the setup and installation of your Internet connection, go to step 2.

i If you are not using a router on your network, your 'Current TCP/IP Settings' (from the previous section) and 'Assigned IP Addresses from My ISP' will be exactly the same.

- 2 You must determine whether the IP address is STATIC or DYNAMIC. Contact your ISP to get a STATIC IP address for the camera.
- 3 Configure your IP Camera's TCP/IP settings for network connectivity by selecting Setup from the main interface and selecting TCP/IP located on the left of the setup screen.


- 4 If prompted for ID and password, use 'admin' for both entries. The default web port number is 80. If port 80 is blocked by the ISP, use a value between 1025 ~ 60000. If TCP port 80 is blocked, contact your ISP.

- 5 The following descriptions are several basic network scenarios. Determine which scenario describes your network. If your network does not match one of the scenarios below and you are unsure how to setup your IP camera, contact your network administrator.


i You cannot control the rectangular gray areas and only the ISP has access to the devices.

Network Setup - Setup Case A, B

Case A: Dynamic IP + Personal Router [Most SOHO]

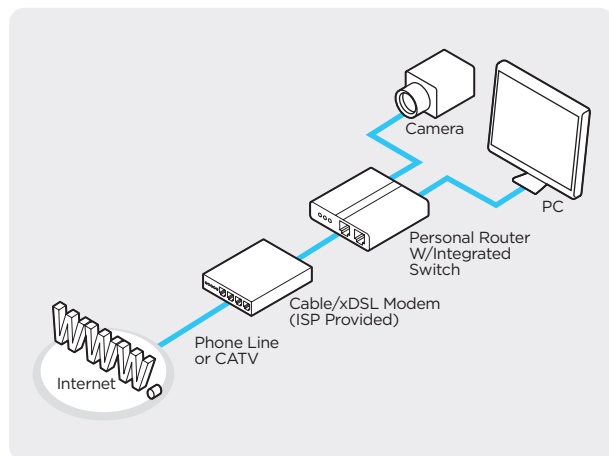

Case B: Static(Fixed) IP + Personal Router [Efficient]

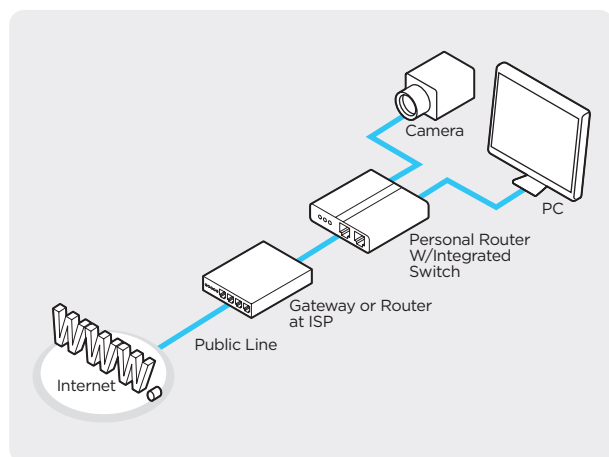

Configure your IP Camera's TCP/IP properties:

1 Network Type: STATIC (even though you have Dynamic IP from your ISP, use STATIC on the IP camera).

2 Internet Address: A private IP address such as 192.168.0.200 (example)

- 1 You need to assign an IP address to the IP Camera just as you do with PC.
- 1 The IP address you assign must be unique to your network and match your network as well.
For information on how to choose a unique IP and match your network, read the FAQ.
- 1 The IP address you assign must be a private IP.
For information on how to choose a private IP please, read the FAQ.

3 Subnet Mask: 255.255.255.0 (example)

- 1 You must use the same subnet mask as the one you noted under 'Current TCP/IP Settings'.

4 Default Gateway: 192.168.0.1 (example)

- 1 This IP address must be the IP address of your router. (private or LAN side)
- 1 Use the same Default Gateway you noted under 'Current TCP/IP Settings'.

5 Preferred DNS Server: Use the 1st DNS Server from 'Assigned IP Address from My ISP'.

- 1 If you did not receive any IP addresses from your ISP, contact the ISP and acquire the IP address of their DNS server.

6 DDNS Server: Use the DDNS server.


- 1 This is the same site you will register later to accommodate dynamic IP from your ISP.

7 Web Port: 8888

- 1 Do not use the default port 80 as this number must be changed.
- 1 Select a number between 1025 - 60000.

Network Setup - Setup Case C, D

Case C: Static(Fixed) IP [Dedicated line directly to the IP Camera]

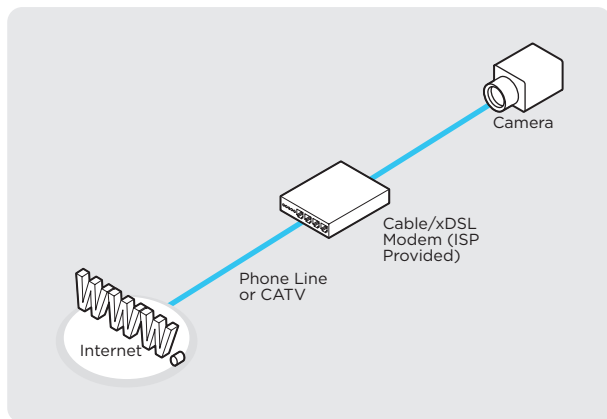

Configure your IP Camera's TCP/IP properties:

- 1 Network Type: STATIC
- 2 Internet Address: A static IP address received from your ISP such as 24.107.88.125 (example)

i You need to assign an IP address to the IP Camera just as you do with PC.

- 3 Subnet Mask: Subnet mask assigned from your ISP such as 255.255.255.240 (example)

- 4 Default Gateway: 24.107.88.113 (example)

i Use the assigned default gateway from your ISP.

- 5 Preferred DNS Server: Use the 1st DNS Server from 'Assigned IP Address from My ISP'

i If you have not received any IP addresses from your ISP, contact them to acquire the IP address of their DNS server.


- 6 DDNS Server: Use the DDNS server

i This is the same site you will register later to utilize our DDNS service.

- 7 Web Port: 80

i Select a number between 1025 - 60000.

Case D: Dynamic IP + DSL/Cable Modem [Connected directly to the IP Camera]

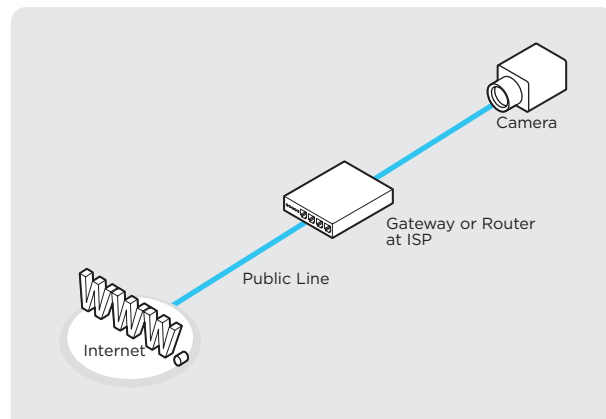

i To connect the IP Camera directly to a modem, power down and reset the modem. Leave the modem powered down until the IP camera's setup is completed and the IP camera has been connected to the modem. Then power on the modem, followed by the IP camera.

Configure your IP Camera's TCP/IP properties:

- 1 Network Type: DYNAMIC
- 2 DDNS Server: Use the DDNS server

i This is the same site you will register later to accommodate dynamic IP from your ISP.

- 3 Web Port: 80

i Select a number between 1025 - 60000.

Network Setup - Port Forwarding

After entering the correct TCP/IP settings, you are ready for 'Port Forwarding' (Cases A, B).

- 1 Use the table below to note your camera's TCP/IP settings for future reference. You may need this information to access your IP Camera and to configure 'port forwarding'.

IP camera TCP/IP settings	
IP address	
Subnet mask	
Default gateway	
Preferred DNS server	
DDNS server	
Web port	

- 2 After clicking 'Apply', the system will prompt for a reboot. Please allow the system 50 seconds to reboot and accept the changes. After 50 seconds, close the configuration screen. The view will display 'Trying to Reconnect'.
If the ACTIVE light on the IP Camera has gone off and is now back on again flashing, the IP Camera has rebooted. After the system reboots completely, remove the power supply from the unit and close Internet Explorer.
- 3 Return your PC/Laptop TCP/IP properties to their original settings.
- 4 Before installing the IP camera, you must perform port forwarding on your router (Cases A, B).
You will need to forward 1 port:
 - Web Port: All the ports will be forwarded to the IP address you assigned to the IP Camera.
In the example above, you would forward:
 - 8888 > 192.168.0.200

Network Setup - Starting IP Camera

After forwarding correctly the Web Port, through your router (if applicable), install the IP Camera in a proper location.

- ① Locate the serial number located on the label attached to the bottom of the IP camera, you will need this for DDNS registration.
- ② Connect the IP Camera to your router or cable/DSL modem (per your network scenario) via a Cat5/5e UTP Ethernet network cable.
- ③ Supply power to the IP camera.
- ④ After 1 minute, verify the IP camera indicators:
 - LINK: Flickering/Solid
- ⑤ After configuring port forwarding on your computer (if necessary), access your IP camera on your local network by opening Internet Explorer and specifying the IP address and web port assigned to the IP camera.

i Examples: <http://192.168.0.200:8888> or <http://24.106.88.123>

i If you left your web port as 80, you do not need to specify the port in the address bar to access the IP camera.

- ⑥ Access your IP camera via the Internet :

If you use cases B, C:

1. Open Internet Explorer.
2. Type the address of the IP camera.
3. If you use a router, enter the routers' static IP and the web port number of the IP camera.

If you use cases A, D:

1. Open Internet Explorer and go to your DDNS website.
2. Register the IP camera.
3. Reboot the IP camera.
4. Give the DDNS server 10 minutes to locate your IP camera's IP information.
5. Click the refresh button in Internet Explorer.
6. After your camera is connected, select your camera.

i The difference between B and C is that B needs to set the port forwarding.

i Since the type of DDNS differs from the service type, refer to the related service site.

Appendix

FAQ

1. My POWER light is not on?

Power is not being supplied to the unit. Please use the power supply shipped with the unit and verify that a power source is active from the attached power outlet used to connect the adapter. You can test this by plugging in any other electrical device and verify its operation. After using the power supply shipped with the product, check the power source, and reinserting the power connector into the IP Camera, please call our Support Center. The power supply may be defective.

2. My ACTIVE light is not flashing?

Verify the power supply to the unit. Power off the unit and back on again, wait 1 minute, if the ACTIVE light still does not begin to flash, you will have to set the unit to its factory default (THIS WILL DELETE ANY CONFIGURATION AND SET THE UNIT TO THE FACTORY DEFAULTS). Power on the unit and insert the end of a paper clip into the small recessed opening on the back of the unit. Use the clip to press the button located within that opening.

3. My LINK light is not flashing or solid?

Verify the cable connection. 99% of the time the cable's connection to the unit is causing this problem. Try using a different network cable or crossover cable (for PC connection only). Try reinserting the cable, if this still doesn't solve the problem call our Support Center.

4. I can access the video server on my LAN, but not from the Internet.

Verify that your router (if applicable) has port forwarding properly configured. If accessing from our DDNS service, verify the correct serial number. Firewall issues may prevent user access.

5. How do I open an MS-DOS or Command Prompt?

Start > (All) Programs > Accessories > Command Prompt

6. How do I find out my IP address information if my settings were automatically detected?

1) Open a Command Prompt
2) At the prompt type - "ipconfig / all" (without the quotes)
3) Near the end of the information supplied, should be your current IP address, subnet mask, default gateway and DNS servers

7. I can't connect!!

In the case of a connection failure.
Modem Reboot > Modem Reboot Finished > Router Reboot > Router Reboot Finished > IP Camera Reboot > IP Camera Reboot Finish > Verify DDNS and IP Camera connection, if applicable.

8. How do I "PING" an IP address?

1) Open an MS-DOS (or Command) prompt
2) At the prompt type - "ping xxx.xxx.xxx.xxx" (without the quotes and replace the "x" s with an IP address)
3) Press Enter

9. I'm accessing my video server remotely over the Internet and the video stream is choppy, is this normal?

Yes. The frames per second received remotely are determined by your bandwidth capabilities both at your site where the IP Camera is installed and your remote location. The lower of the two sites will determine how fast your video stream is received. It is recommended to have at least a 256Kb/sec upstream connection from the site where the IP Camera is installed. Lower speeds will operate properly but provide poor remote performance. The Faster the Internet connection at both ends, the faster the video stream.

10. How do I enable or check VLC on my browser

Internet Explorer

Open Internet Explorer > Tools on the menu bar > Internet Options > Security Tab > Custom Level > Scroll down and verify that you are prompted or have enabled plug-ins to be downloaded and executed. > click OK > restart browser.

Chrome


Open Chrome > Chrome menu settings > Advanced settings > Individual information - content settings > Run automatically

11. How do I reset the unit to factory defaults?

Refer to the previous functions page and find the reset button. Power ON the unit and use a paper clip to push the reset button within that opening. You should then see the ACTIVE light turn off and after a few seconds, the ACTIVE light will begin to flash, signifying a successful reboot. If the ACTIVE light does not turn off after depressing the reset button, please try holding the button in for a few seconds and releasing it. YOU WILL LOSE ALL DATA THAT HAD BEEN ENTERED PREVIOUSLY AND THE IP CAMERA WILL BE SET TO ITS FACTORY RESETS.

Specifications - Dimension

Unit: inches (mm)

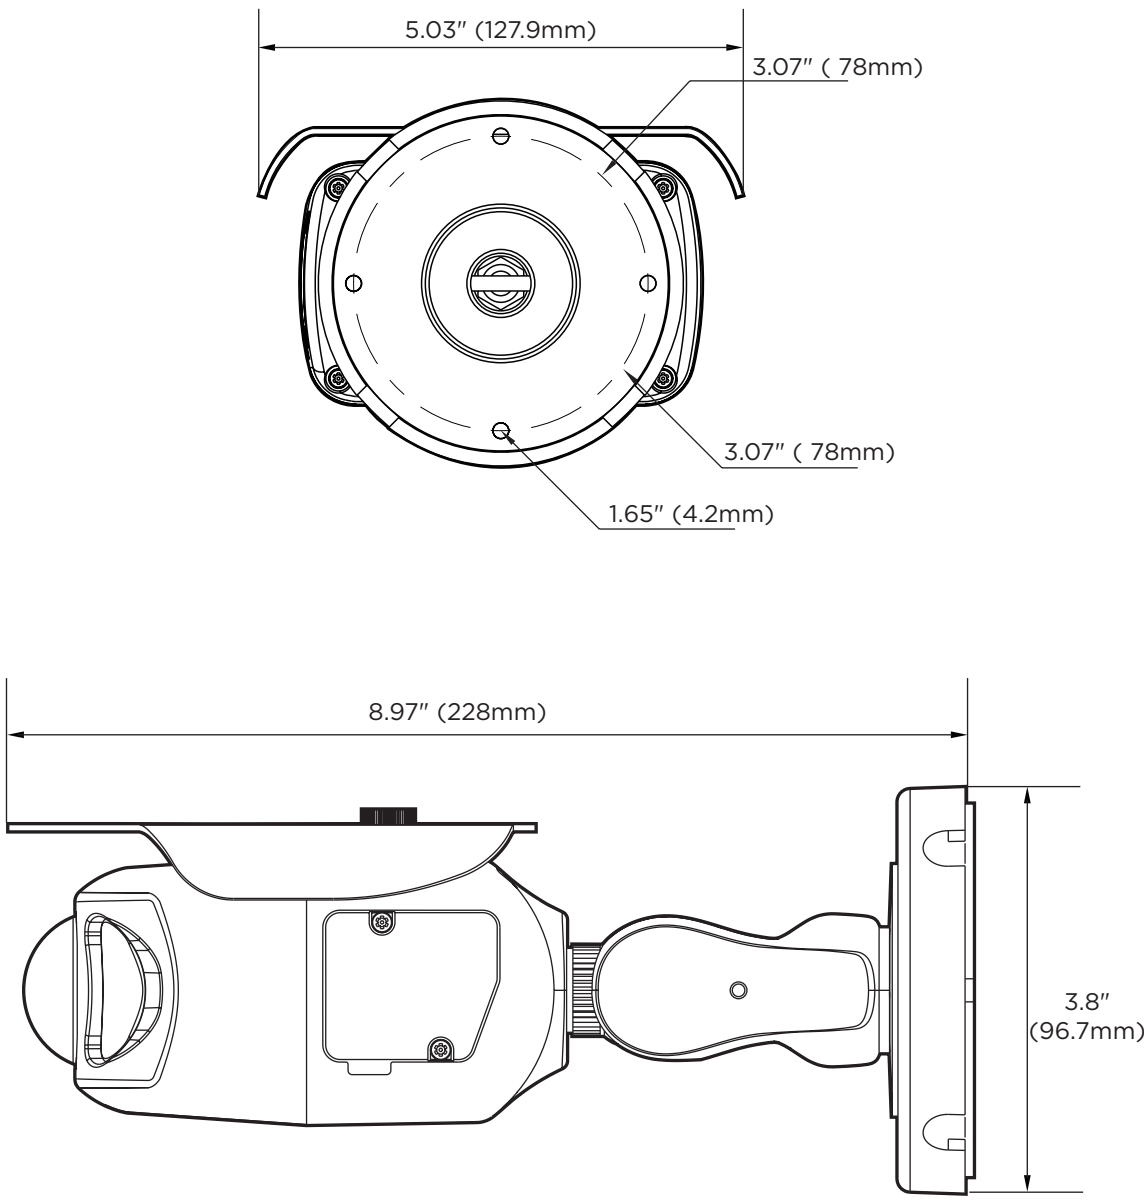

Appendix - Product Specifications

IMAGE	
Image sensor	8MP 1/1.8" CMOS sensor
Total pixels	3952 (H) x 2320 (V)
Minimum scene illumination	0.29 lux (color) 0 lux (B/W)
Test video output	Local video output CVBS 1.0V p-p (75Ω), 4:3 aspect ratio
S/N ratio	50dB
Maximum resolution	3840 (H) X 2160 (V)
LENS	
Focal length	2.3mm, F2.8
Lens type	Ultra-wide angle lens
Field of view (FoV)	Horizontal: 175°/Vertical: 80°
IR distance	100ft range
I/O	
Audio in/out and compression	1 input/1 output, G.711
Alarm in/out	1 input/1 output
OPERATIONAL	
Intelligent Video Analytics	Intrusion, line crossing, counting line, loitering, enter, exit, tamper, object removed, tailgating, direction, stopped, appear, disappear, object left, logical rules.* NOTE: object removed, tailgating, direction, stopped, appear, disappear, object left, and logical rules are available via IVA+ plugin update. For existing cameras, contact your DW sales representative for a complimentary update.
Shutter speed	1/15 - 1/32000
Slow Shutter	1/2, 1/3, 1/5, 1/6, 1/7.5, 1/10
Auto gain control	Auto
Day/night	Auto, day (color), night (B/W)
3D digital noise reduction	Smart DNR 3D-DNR
Wide dynamic range (WDR)	True WDR, 120dB
White balance	Auto
Mirror and flip	Yes
Alarm notifications	Sent via email, FTP, alarm output and SD card recording
Memory slot	Micro SD/SDHC/SDXC class 10 card (not included)
NETWORK	
LAN	1000Base-T (1Gbps)
Video compression type	H.265, H.264, MJPEG
Resolution	H.265, H.264: QFHD, 2.1MP/1080p, 720p, VGA, D1, CIF MJPEG: 2.1MP/1080p, 720p, 800x600, VGA, 768x432, D1, CIF
Frame rate	Up to 30fps at all resolutions
Video bitrate	100Kbps - 10Mbps, multi-rate for preview and recording
Bitrate control	Multi-streaming CBR/VBR at H.265 (controllable frame rate and bandwidth)
Streaming capability	Dual-stream at different rates and resolutions
IP	IPv4
Protocol	TCP/IP, UDP, AutoIP, RTP (UDP/TCP), RTSP, NTP, HTTP, HTTPS, SSL, DNS, DDNS, DHCP, FTP, SMTP, ICMP, SNMPv1/v2/v3 (MIB-2), ONVIF
Security	HTTPS (TLS), IP filtering, 802.1x, digest authentication
ONVIF conformance	Yes
Web viewer	OS: Windows 7, Windows 8, Windows 10 Browser: IE, Chrome, Firefox NOTE: Chrome is recommended for IVA configuration
Video management software	DW Spectrum
ENVIRONMENTAL	
Operating temperature	-4°F - 122°F (-20°C - 50°C)
Operating humidity	10-90% RH, (non-condensing)
IP rating	IP67-rated
Other certifications	UL listed, CE, FCC, RoHS
ELECTRICAL	
Power requirement	DC12V, PoE IEEE 802.3af Class 3 (Adapter not included)
Power consumption	DC12V: 8.9W, PoE: 12.3W
MECHANICAL	
Material	Aluminum bullet housing
Dimensions	5.03" x 8.75" x 3.8" (127.9 x 222.5 x 96.7mm)
Weight	(0.97 kg)
Warranty	5 year warranty

Warranty Information

Go to <https://digital-watchdog.com/page/rma-landing-page/> to learn more about Digital Watchdog's warranty and RMA.

To obtain warranty or out-of-warranty service, please contact a technical support representative at 1+ (866) 446-3595, Monday through Friday from 9:00 AM to 8:00 PM EST.

A purchase receipt or other proof of the original purchase date is required before warranty service is rendered. This warranty only covers failures due to defects in materials and workmanship that arise during normal use. This warranty does not cover damages that occur in shipment or failures which are caused by products not supplied by the Warrantor or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set up adjustments, improper antenna, inadequate signal pickup, maladjustments of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, rental use of the product or service by anyone other than an authorized repair facility or damage that is attributable to acts of God.

Limits and Exclusions

There are no express warranties except as listed above. The Warrantor will not be liable for incidental or consequential damages (including, without limitation, damage to recording media) resulting from using these products or arising out of any breach of the warranty. All express and implied warranties, including the warranties of merchantability and fitness for a particular purpose, are limited to the applicable warranty period set forth above.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights; you may also have other rights from state to state.

If the problem is not handled to your satisfaction, then write to the following address:

Digital Watchdog, Inc.
ATTN: RMA Department
16220 Bloomfield Ave
Cerritos, CA 90703

Service calls which do not involve defective materials or workmanship as determined by the Warrantor, in its sole discretion, are not covered. Cost of such service calls are the responsibility of the purchaser.





Complete Surveillance Solutions

DW® East Coast office and warehouse: 5436 W Crenshaw St, Tampa, FL USA 33634
DW® West Coast office and warehouse: 16220 Bloomfield Ave, Cerritos, CA USA 90703

PH: 866-446-3595 | FAX: 813-888-9262

www.Digital-Watchdog.com

technicalsupport@digital-watchdog.com

Technical Support PH:

USA & Canada 1+ 866-446-3595

International 1+ 813-888-9555

French Canadian: + 1-904-999-1309

Technical Support Hours: Monday-Friday 9 a.m. to 8 p.m. Eastern Time