


Flush mount for multi-sensor vandal dome cameras

DWC-MDSFM



WHAT'S IN THE BOX

Camera Mounting Screws		2	Quick Setup Guide		1
Safety Wire		2	Mounting Template		1
Eye Bolt		2			



NOTE: Download all your support materials and tools in one place

1. Go to: <http://www.digital-watchdog.com/resources>
2. Search your product by entering the part number in the **'Search by Product'** search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
3. Click **'Search'**. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.




INSTALLATION

- 1 Before the installation, remove the magnetic cover from the flush mount.
- 2 Using the mounting template mark and drill the necessary holes in the mounting surface.
- 3 Place the eye bolt in the center of the flush mount base and connect one of the safety wires between the eye bolt and the mounting surface.

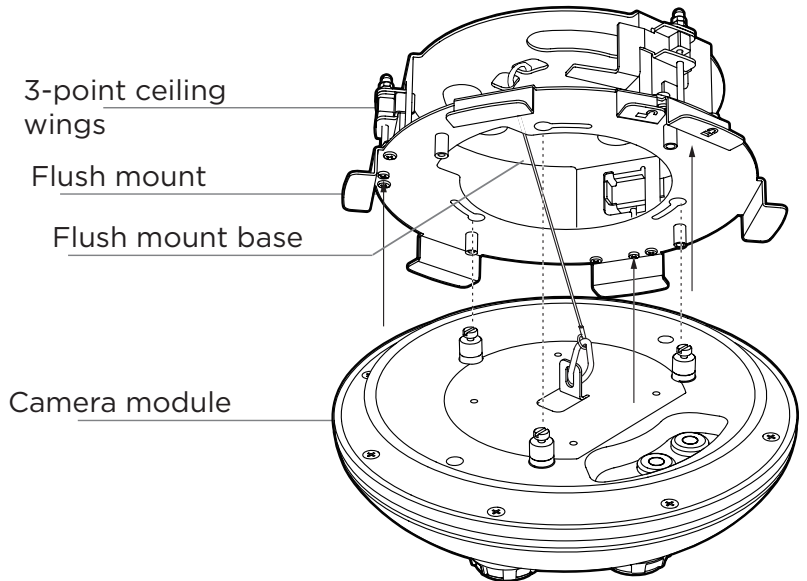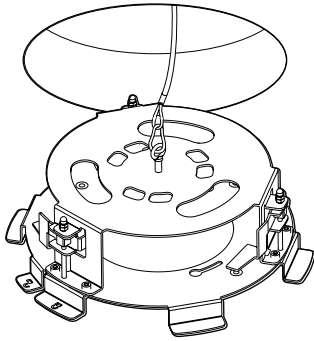

- 4 Adjust the 3-point in-ceiling wing using a screwdriver. Twist the screws to tighten and expand until the flush mount is secured to the mounting surface.

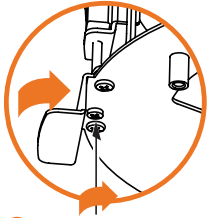

- 5 Affix the second safety wire at the bottom of the flush mount's base and connect the safety wire to the base of the camera.
- 6 To mount the camera to the mounting accessory, remove the dome from the camera base using the wrench included with the camera.

NOTE: Do not touch the lenses when handling the camera modules.

- 7 Pass wires through the flush mount base and make all necessary connections.
- 8 Secure the camera to the flush mount. Align the screws at the base of the camera with the mounting holes in the base of the mount. Follow the lock and unlock icons on the flush mount and rotate the camera clockwise to lock it into position.



- 9 Remove the protective film from the camera module lenses and the dome's protective film. Reassemble the camera's cover dome to complete the installation.

